

名称:外单名创优品 (国际部) A18说明书第二版 材质:128G双铜+风琴折 尺寸:642*90MM 料号:Y.047.0684

Specification

BT version: V5.0
BT Modulation: A2DP,AVRCP,HFP,HSP
Distance: 10m
Play time: 10H~12.5H

Call time: 15H~22H
Standby time: more than 15 days
Charging time: 2.5H
LED: Red& Blue

Battery: 3.7V 2200mAh
Pairing password: No need
Pairing: MINISO-A18

NO	Function	Status	Action	Sound
1	Turn on	Turned off	Rotate the Volume knob to the right until it is turned on	Voice prompt
2	Receive call	Incoming call	Press once to answer	No
3	Hang up	During call	Press once to hang up	No
4	Redial last number	Standby/ listening to music	Press twice to redial	No
5	Reject	Incoming call	Long press	Prompt
6	Increase volume	During call/ listening to music	Rotate the Volume knob to the right	Max. volume prompt

7	Decrease volume	During call/ listening to music	Volume knob to the left	No
8	Play/pause	Standby/ listening to music	Press Play/ Pause button	No
9	Previous song	Listening to music	Short press "Previous Song" button	No
10	Next song	Listening to music	Short press "Next Song" button	No
11	Turn off	Standby/ listening to music	Rotate the Volume knob to the left until it is turned off	No
12	Change mode	Standby/ listening to music	Short press Mode button	
13	Disconnect BT	Standby/ listening to music	Long press Play/ Pause button	

Accessories

1x Wireless speaker, 1x User Manual, 1x charging cable, 1x audio cable

Instructions

1. Mode button: Short press to change between BT, TF card and USB mode.
2. Previous song: Short press for previous song
3. Next song: Short press for next song
4. Play/Pause button: press once to play music, press once again to pause.
5. Receive call button: Short press to answer the call, Press once again to hang up, Long press to reject, Double press to redial the last number.
6. Turning on/off & Volume control: Rotate the Volume knob to the right until it is turned on; Rotate the Volume knob to the left until it is turned off; Rotate the Volume knob to the right to increase the volume; Rotate the Volume knob to the left to decrease the volume;
7. USB port: Can be connected with other device and play the music content from that device
8. TF card port: Compatible with TF cards and can play the music content from cards.
9. AUX port: Connect Φ3.5mm plug of the audio cable for audio signal
10. Charging light indicator: When charging, the red indicator light will be turned on, After being fully charged, the light will turn off.
11.DC 5V: insert charge cable into power interface with electricity power to charge the machine.

1 2 3 4 5 6

M M+ M- L

7 8 9 10 11

USB TF AUX 5V IN

www.miniso.jp

株式会社 名創優品産業
〒104-0061 東京都中央区銀座3-10-7
銀座京華大廈718
MINISO INDUSTRIES CO.,LTD.
CHUO-KU, CHUOH, TOKYO 104-0061, JAPAN

Designed by Japan, Made in China

CE RoHS

FCC ID: ZA9H-A18

MINISO JAPAN

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference, and
(2)This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.
Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
Consult the dealer or an experienced radio/TV technician for help.
RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

MINISO

PRODUCT MANUAL

使用說明書

WIRELESS SPEAKER

家庭影院款雙喇叭藍牙音箱

MODEL: A18

使用產品前請仔細閱讀本使用說明書，並請妥善保管。
PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT AND KEEP IT IN A SAFE PLACE.

尊敬的客戶

感謝您購買本公司音響產品
為了您能儘快熟悉操作本機，我們隨機配備了內容詳盡的用戶手冊，從中您可以獲取有關產品的介紹，使用方法，系統設置以及使用注意事項等內容，在您使用本產品前，請務必仔細閱讀本手冊及所有資料，這有助於您更好的使用本產品。
在編寫手冊時我們非常細心嚴謹，並認為本手冊所有提供的資訊是正確可靠的，倘若有疏漏之處，請多包涵並熱切指正，如果您使用產品過程中發現什麼問題，請及時與我們聯繫，謝謝您的合作。

注意事項

電池(電池包或組合電池)不得暴露在諸如日照、火烤或類似過熱環境中，如果電池更換不當會有爆炸危險，只能用同樣類型或等效類型的電池來更換

產品指示圖

8.TF接口
7.USB接口

9.AUX接口

10.充電指示燈

11.DC 5V

2.上一曲
1.模式

3.下一曲

4.播放/暫停

5.電話

6.開關/
音量-/音量+

藍牙模組技術:

產品參數

藍牙版本: V5.0
藍牙模組技術: A2DP,AVRCP,HFP,HSP
空曠距離: 10m
音樂時間: 10H~12.5H

通話時間: 15H~22H
待機時間: 大於15天
充電時間: 2.5H
LED: 紅藍

電池: 3.7V 2200mAh
配對密碼: 不需要
配對名: MINISO-A18

序號	功能	狀態	動作	聲音提示
1	開機	開機時	右旋轉音量旋鈕至開關	語音提示
2	接聽	來電時	按一下電話鍵	無
3	掛機	通話時	按一下電話鍵	無
4	重拔最後撥出號碼	待機/音樂時	雙擊電話鍵	無
5	拒聽來電	來電時	長按電話鍵	提示音
6	音量加	通話/音樂時	右旋轉音量旋鈕	最大音量提示音

所有配件

藍牙音箱*1 使用說明書*1 充電線*1 音頻連接線*1

功能操作介紹

1. 功能切換鍵:短按切換到藍牙、TF卡、USB其中一種模式
2. 上一曲:短按選擇上一曲
3. 下一曲:短按選擇下一曲
4. 播放暫停:短按一次播放音樂，再按一次暫停音樂
5. 電話接聽鍵:短按接聽電話，再按一次掛斷電話，長可按拒 絕接聽電話，雙擊可回撥最後撥出號碼
6. 開關機/音量加減:右旋轉音量旋鈕至開機，左旋轉音量 旋鈕至關機，開機後向右旋轉音量旋鈕可增加音量，向左旋轉 音量旋鈕可遞減音量
7. USB介面:可外接USB設備並播放裏面音頻檔
8. TF卡介面:可插入TF卡播放卡裏面的的音頻檔
9. AUX介面:可插入Φ3.5mm立體頭的音頻線外接音頻信號
10. 充電指示燈:插入電源線紅燈亮，充滿電時燈熄滅
11.DC 5V: 插入充電線並接通電源可對機器進行充電

1 2 3 4 5 6

M M+ M- L

7 8 9 10 11

USB TF AUX 5V IN

故障排除

音量太小了，怎麼解決:
向右旋轉音量旋鈕 音量加，向左旋轉音量旋鈕 音量減。
多久可以把電充滿?
2.5小時左右，(充滿後紅色指示燈會熄滅)
藍牙放歌斷斷續續的怎麼辦?
有可能電量不足、需要充電，或者超出使用範圍，避免靠近無線路由器等干擾源
藍牙連接不上怎麼辦?
一、保證音箱電量足夠;二、打開手機的藍牙功能且靠近音箱;三、機器開機後藍牙打開，在手機上找到MINISO-A18 點對對連接即可。
有線連接沒反應，插卡也沒反應?
保證音箱電足夠，AUX線電腦端接入正確 (一般為綠色孔) 旋轉旋鈕開機 可依次切換:藍牙-有線-插卡模式。

Dear Customer

Thank you for purchasing MINISO speaker. In order for you to get familiar with operating the machine as soon as possible, we provided the detailed user manual, from which you can read about the product introduction, usage, system settings and cautions. Before using this product, please read this manual, as it may help you better understand of this product.
We were very careful in the preparation of this manual, and we believe that all the information provided in this manual is correct and reliable. If there are any omissions, please kindly forgive and kindly correct. If you find any problems in the process of using the product, please contact us in time.

Caution

Keep the battery (battery pack or assembled battery) away from direct sunlight, fire and high temperature. There is a risk of explosion if the battery is not replaced properly, only replace it with the same type or equivalent type of battery.

Product

8. TF interface.

7. USB interface.

9. AUX interface.

10. Charging indicator.

11. DC 5V.

2. Last song.
1. Mode

3. Next song.

4. Play/Pause.

5. Phone.

6. Switch /
Volume - / Volume +.