



Soundmate

USER MANUAL

Wireless Speaker

LENRUE Official network : www.lenrue.com
Lenrueafterservice@outlook.com

 
Operation Guide

1. Power Button: Long press for 2 s, and the product will power on with the blue indicator light flashing. Enable your Wireless function of your smartphone, search wireless device and select "Soundmate" to connect. Long press for 2 s again, and the product will power off with all indicator lights off.
2. Play/ Pause Button: When streaming music, short press to pause or play music. When it has been paired to a smartphone and a call is coming in, short press to answer the call; but long press for 2 s to refuse the call. During the call, short press to end the call. Double press to redial last phone number you dialed.
3. Volume Down/ Previous Track: Short press the button "-" to decrease volume; Long press for 2 s to play the previous track.
4. Volume Up/ Next Track: Short press the button "+" to increase volume; Long press for 2 s to play next track.
5. Mic: You can have a call via the product when it's connected to your smartphone in wireless mode.
6. Charging Port: To charge, plug one end of the charging cable into the charging port and the other end into the mains.
7. Wireless Pairing Name: Soundmate

Note: When the product reconnects to the last paired device automatically, long press the Play/ Pause Button to disconnect the last paired device.

3

Package List



Wireless Speaker



Micro USB Charging Cable



3.5 mm Audio Cable



User Manual

Specification

Version	Wireless Range	Input
5.0	33 ft	DC-5V/1A
Play Time	Charging Time	Battery Capacity
8-16 hours	2-3 hours	3.7V/1500 mAh

1

True Wireless Pairing

- 1.Turn on two "Soundmate" speakers → Disconnect all devices with "Soundmate" → Double click "⊕" button on the top of either speaker into TWS Pairing Mode .



- 2.TWS Pairing will auto finish after "beep" → Click the Device name " Soundmate" to pair on.




Note: Double click "⊕" button on the top of either speaker to quit TWS Pairing Mode

4


蓝悦A52(亚马逊六人行)说明书 Y.047.0982

128g双铜，双面印刷，风琴折，
折后尺寸:120x75mm 展开后尺寸: 360x75mm

Diagram

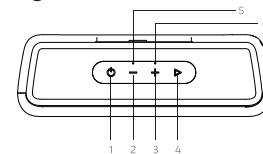

5
6
1 2 3 4

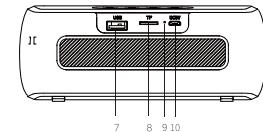

7 8 9 10

- | | |
|-----------------------------|--------------------------------|
| 1. Power Button | 2. Volume Down/ Previous Track |
| 3. Volume Up/ Next Track | 4. Play/ Pause Button |
| 5. Wireless Indicator Light | 6. Microphone |
| 7. USB Port | 8. TF Card Slot |
| 9. Charging Indicator Light | 10. Charging Port |

2

Alexa Connection

1. Disconnect wireless speaker with all device.
2. Put your wireless device in pairing mode.
3. Open the Alexa app.
4. Select Devices.
5. Select Echo & Alexa.
6. Select wireless Devices, and then Pair "Soundmate".

FCC STATEMENT:

Operation is subject to the following three conditions:

- (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
 - (3) This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
- Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

5

Note: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.