

**Doppio**

**DPF500 SIRIUS**

**User Manual**

# Contents

<b>Safety</b> .....	<b>4</b>
<b>FCC STATEMENT</b> .....	<b>6</b>
<b>Environment</b> .....	<b>8</b>
<b>1. Getting Started</b> .....	<b>8</b>
1.1 Getting to know your touch phone .....	8
1.2 Installing the SIM card, battery and storage card .....	9
1.3 Charging the Battery .....	10
1.4 Starting up the device .....	11
1.5 Status Icons .....	13
<b>2. Using phone features</b> .....	<b>15</b>
2.1 Turning the phone function on and off .....	15
2.2 Making a call .....	15
2.3 Answering and Ending a call .....	16
2.4 In-call options .....	16
2.5 Using call history .....	17
2.6 Call settings .....	17
<b>3. Setting on your device</b> .....	<b>17</b>
<b>4. Contacts</b> .....	<b>20</b>
<b>5. Messages</b> .....	<b>21</b>
<b>6. Internet</b> .....	<b>22</b>
<b>7. Multimedia</b> .....	<b>22</b>
7.1 Camera .....	22
7.2 Music .....	24
7.3 FM .....	25
7.4 Audio Recorder .....	25
<b>8. Other applications</b> .....	<b>25</b>

8.1 Calendar .....	25
8.2 Clock .....	25
8.3 Calculator.....	25
<b>9 Play Store.....</b>	<b>25</b>

## Safety

Never attempt to disassemble your phone. You alone are responsible for how you use your phone and any consequences of its use.

As a general rule, always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

Do not use your phone in damp areas (bathroom, swimming pool...). Protect it from liquids and other moisture.

Do not expose your phone to extreme temperatures lower than  $-10^{\circ}\text{C}$  and higher than  $+55^{\circ}\text{C}$ .

The physicochemical processes created by chargers impose temperature limits when charging the battery. Your phone automatically protects the batteries in extreme temperatures.

Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested).

**Electrical safety:** Only use the chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous; it would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.

**Aircraft safety:** When traveling by plane, you will need to switch your phone off when so instructed by the cabin crew or the warning signs.

Using a mobile phone may be dangerous to the operation of the aircraft and may disrupt the phone network.

Its use is illegal and you could be prosecuted or banned from using cellular networks in the future if you do not abide by these regulations.

**Explosive materials:** Please comply with warning signs at petrol station asking you to switch your phone off. You will need to comply with radio equipment usage restrictions in places such as chemical plants, fuel depots and at any location where blasting operations are under way.

**Electronic equipment:** To avoid the risk of demagnetization, do not let electronic devices close to your phone for a long time.

**Electronic medical equipment:** Your phone is a radio transmitter which may interfere with electronic medical equipment or implants, such as hearing aids, pacemakers, insulin pumps, etc. It is recommended that a minimum separation of 15 cm be maintained between the phone and an implant. Your doctor or the manufacturers of such equipment will be able to give you any advice you may need in this area.

**Hospitals:** Always make sure that your phone is switched off in hospitals when so instructed by warning signs or by medical staff.

**Road safety:** Do not use your phone when driving. In order to give your full attention to driving, stop and park safely before making a call. You must comply with any current legislation.

## FCC STATEMENT

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

- SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.
- Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.
- For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.0 cm from the body.
- Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

## Environment

**Packaging:** To facilitate the recycling of packaging materials, please obey the sorting rules instituted locally for this type of waste.

**Batteries:** Used batteries must be disposed at the designated collection points.

**The product:** The crossed-out waste bin mark affixed to the product means that it belongs to the family of electrical and electronic equipment.

To promote the recycling and recovery of waste electrical and electronic equipment (WEEE) and at the same time safeguard the environment, European regulations require you to obey the sorting rules instituted locally for this type of waste.

## 1. Getting Started

### 1.1 Getting to know your touch phone





### **1.2 Installing the SIM card, battery and storage card**

You need to remove the back cover before you install the SIM card, Micro SD card and the battery. Also, make sure power off your device before installing or replacing the SIM card, Micro SD card and the battery.

#### **To remove the back cover**

1. Make sure your device is turned off.
2. Firmly hold the device with both hands and the front panel facing down.
3. Position your fingernail of thumb in the small gap at the bottom-left corner of your phone and lift the cover up then remove it.

#### **To install the SIM card**

The SIM card contains your phone number, service details, and phonebook/message memory. Your device is supported both 2G、3G (WCDMA) and 4G SIM cards.

1. Remove the battery if it is installed.
2. Locate the SIM card slot, then insert the SIM card with its gold contacts facing down and its cut-off corner facing out the card slot.
3. Slide the SIM card completely into the slot.

#### **Note:**

- The phone can be supported the single SIM card only. The card slot will be supported 4G, 3G (WCDMA) or 2G SIM card.

#### **To install the battery**

Your device comes with a rechargeable Lithium-ion battery and is designed to use only manufacturer-specified original batteries and accessories. Battery performance depends on many factors, including network configuration, signal strength, and usage patterns.

Warning: To reduce risk of fire or burns:

- Do not attempt to open, disassemble, or service the battery pack.
  - Do not crush, puncture, short external contacts, or dispose of in fire or water.
  - Do not expose to temperatures above 60°C (140°F).
  - Replace only with the battery pack designated for this product.
  - Recycle or dispose of used battery as stipulated by local regulations.
1. Align the battery's exposed copper contacts with the battery connectors at the bottom part of the battery compartment.
  2. Insert the contacts side of the battery first and then gently push the battery into place.
  3. Replace the back cover.

**To remove the battery**

1. Make sure your device is turned off.
2. Remove the back cover.
3. Remove the battery from the battery groove.

**To install a memory card**

To have additional storage for your images, videos, music, and files, you can purchase a memory card and install it into your device.

1. Make sure that your device is turned off, and then remove the back cover.
2. Locate the memory card slot on the upper part of the exposed right panel.
3. Insert the memory card into the slot with its gold contacts facing down until it clicks into place.

Note: To remove the memory card, pull it out to eject it from the slot.

**1.3 Charging the Battery**

New batteries are shipped partially charged. Before you start using your device, it is recommended that you install and charge the battery. Some batteries perform best after several full charge/discharge cycles.

Note: Only the AC adapter and USB sync cable provided with your device must be used to charge the device.

Connect the USB connector of the AC adapter to the sync connector on your device, and then plug in the AC adapter to an electrical outlet to start charging the battery.

As the battery is being charged while the device is on, a charging icon appears in the title bar of the Home screen. After the battery has been fully charged, a full battery icon will appear.

Warning:

- Do not remove the battery from the device while you are charging it using the AC or car adapter.
- As a safety precaution, the battery must stop charging before it overheats.

#### **1.4 Starting up the device**

##### **Power on/off**

To power off your phone, press & hold POWER key. Release the key when the Phone options menu opens. Select 'Power off' and confirm.

To power on again, press & hold POWER.

##### **Silent mode**

To silence your phone quickly, press & hold the volume – button to zero volume.

Or on the Home screen, touch **(##)** and select Settings > Sound & notification. Select 'Silent' check box.

##### **Screen sleep**

After a period of inactivity, your screen will go to sleep (display will turn black).

In sleep mode, your phone uses less battery power. You can control this behavior:

Set screen timeout period

1. On the Home screen, touch **(##)** and select Settings.
2. Select Display.
3. Select Sleep. Select a time from the menu.


##### **Prevent sleep while charging**

1. On the Home screen, then touch **(##)** and select Settings.
2. Select Developer options.
3. Select 'Stay awake' check box.

**Lock screen & put phone to sleep**

Except when on a phone call, from any screen, press POWER (immediately). While not on a call, to lock your control buttons and screen from accidental touch activation, press POWER.

You can increase the security of your phone by setting Screen unlock pattern. Once set, in order to unlock your screen, you'll have to draw the correct unlock pattern. You can set your screen unlock pattern as follows:



1. On the Home screen, touch  and select Settings.
2. Select Security and then scroll down to Screen lock pattern section.
3. Set or change your unlock pattern by selecting Screen lock pattern, as applicable.
4. Follow the prompts to define your pattern.

Note: You must slide your finger along the screen to create the pattern, not select individual dots. Connect at least four dots.

If you want your pattern to be hidden as you draw it, clear 'Make pattern visible' check box.

**Home screen**

The Home screen is your starting point for using all the applications on your phone. You can customize your Home screen to display applications, shortcuts, and widgets as you like.

1. Touch the application tab  with your fingertip to reveal the application icons.
2. The Home screen actually extends beyond the screen width. On Home screen, slide your fingertip left and right along the screen to reveal the full width of the Home screen. This additional space gives you more room to customize Home with applications, shortcuts, and widgets.
3. Create Home screen shortcuts and widgets:
  - Touch the application tab  with your fingertip to reveal the application icons, slide your fingertip right to show the shortcuts and widgets.
  - Select an Application shortcut, a Shortcut to some of your saved information (such as a play list), a Widget (a clock or picture frame) for your Home screen.
  - The application, shortcut, folder, or widget appears on Home screen.

Tip: To create an application shortcut quickly, touch the application tab to reveal all the application icons, then touch & hold an application icon. Its shortcut is added to the Home screen; close the application tab to see it.

4. To remove a shortcut or widget from your Home screen, touch & hold the item to enter “move mode”. The application tab turns into a Trash button. Drag the item to the Trash button and release. You’ll know when your item is in the Trash because the item and the tab will turn red.

5. Move objects on the Home screen









- To move an icon or other item on the Home screen, you must first touch & hold it to enter move mode. The object will magnify when it’s ready to be moved.













- Without lifting your finger (or you’ll drop out of move mode), drag the object to the new position. To move an item to a section of the Home screen not in view, move it to the edge of the screen and hold it there for a moment. The screen view will shift; position the object and release.

### 1.5 Status Icons

#### Connection status icons

Along the top of your phone screen is the status bar. On the left side, icons will appear, notifying you of a new message, upcoming calendar event, or something else you should notice. On the right side of the status bar, you’ll see connection status icons.

	2G data connection		Email
	3G data connection		Playing song
	4G data connection		Vibrate mode
	SMS/MMS		WF service connected

	Call in progress		Wireless services are off (aeroplane mode)
	Missed call		Silent
	Call forward		Battery is low
	Alarm is set		Battery is very low!
	BLT is on		Battery is being charged
	Connected the PC		Connected the earphone

**Read your notifications**

When you see a notification in the status bar, touch the bar and slide your finger down the screen to open the list of notifications displayed in the sliding window. Ongoing notifications report activities such as call forwarding ON, current call status, song playing, etc.

Notifications report the arrival of new messages, calendar events, and alarms. You can clear notifications list by selecting 'Clear' notifications at the top of the notifications window.

To open the message, reminder, or other notification, you can touch the items. To close the notifications window, slide your finger up the screen.

**Notes:** On the home screen, touch the bar and slide your finger down to open the list of notifications displayed in the sliding window, such as aeroplane mode, WF, BLT, Data connection, Brightness, Audio Profile, you can open or close the selected function directly.


## 2. Using phone features

### 2.1 Turning the phone function on and off

#### To enable or disable aeroplane Mode

In many countries, you are required by law to turn off the phone while on board an aircraft. Another way to turn off the phone function is to switch your device to aeroplane Mode.

When you enable aeroplane Mode, all wireless radios on your device are turned off, including the phone function, BLT, and WF.

1. Touch --> Settings -> More... -> aeroplane mode.

2. Touch 'aeroplane mode' to enable or disable.

When you disable aeroplane mode, the phone function is turned back on and the previous state of BLT and WF are restored.


#### Adjusting the volume

Press Volume button on the right side of the phone to show the volume screen.


If the phone is in vibrating mode, the voice will be muted automatically and the device will vibrate when there is an incoming call.

### 2.2 Making a call

#### Calling a voice call

On Home screen, touch  -> Phone to enter the dial screen.

Touch the on-screen dial pad to enter a number, touch 'Delete' button to delete numbers you've entered. Touch & hold to delete all the numbers in the field.

To dial a number, touch 'Voice Call' button  to make a call. To end a call, touch 'END' button (Red icon).

1. Speed Dial tab: Select an entry listed in the log to call the number.

2. Contacts tab: Contacts with phone numbers are listed. Select a contact, and then select the phone number to dial the call.


### 2.3 Answering and Ending a call

When you receive a phone call, the incoming voice call screen will appear, allowing you to either answer or ignore the call.



1. To answer an incoming call, slide 'ANSWER' (Green icon) button rightward.
2. To reject a call, slide 'REJECT' button (Red icon) button leftward.

### 2.4 In-call options

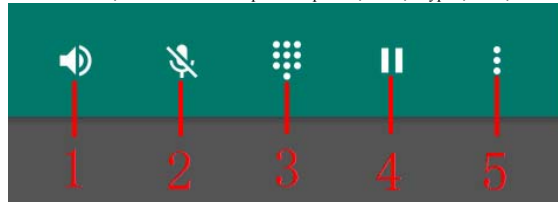

While on a call, reveal the in-call options: Speaker, Mute, keypad, Hold, End.





**1.Speaker:** While on a call, touch , start hands-free calling model, touch  again, close the hands-free calling model

**2.Mute:** To mute your side of the conversation, touch , if you want to cancel the mute, touch  again



**3.Keypad:** touch , enter the dial interface

**4.Hold:** To hold on the current call, touch , if you want to restore the call, touch  again



**5. Others:** If you need to add another call while on a call, touch , if you want to record the conversation, touch 




### 2.5 Using call history

1. The missed call icon  appears in the title bar when you missed a call.
2. Use 'Call history' tab to check who the caller was, or view all your dialed numbers, and received calls. To open 'Call History' tab, touch  then 'Call History' button in the right screen to enter the call history list.
3. Touch icon on the left at selected contact, then you can make to do the following options of call, edit number before call, send text message, add to contacts or remove from call history.

### 2.6 Call settings

On Home screen, touch , then touch , choose the setting menu to make the general setting and calling accounts setting

## 3. Setting on your device

Control phone-wide settings from the Home settings screen: touch  and select Settings.

### 3.1 Wireless & networks

#### WF

Turn on WF if you prefer to use WF for your data connection.

Open the WF settings screen, select it from the network list. Provide your user name or password if required.

#### BLT

• If BT is off, check BT to turn it on, you can open the BLT settings screen to:

- Rename your device.
- Pair or unpair with one of the BLT devices in range - You will be asked to type a PIN before pairing. Refer to the manufacturer's documentation for the PIN code.
- Rescan for devices.
- Displays the files received.

#### Data usage

Open and close mobile network, check data usage.

### More...

Aeroplane mode on/off: When aeroplane mode is selected, all wireless connectivity will turn off. This icon  will display in the status bar when aeroplane mode is selected.

### Mobile network

- Select data roaming capability.
- Select a wireless operator network - Scan for all available networks, or select a network automatically.
- Add or edit network Access Point Names (APNs) - Do not change this setting unless advised to do so by your wireless operator!

### **3.2 Device**

#### Display

Brightness Level: Select to open the brightness control, and then slide your finger along the brightness bar to set the level.

Sleep: Select to decide how long your phone must be inactive before the screen turns off.

#### Sound & Notification

Select one user profile and enter the following options:

Vibrate: Select to have your phone vibrate for incoming calls.

Volumes: Select to open the volume control, and then slide your finger along the volume bar to set an incoming call ring volume or alarm, playing back music, videos.

Voice/video ring tone: Select to decide on a ring tone to use for incoming calls. Note that you can override this setting for individual contacts in the Edit contact details screens.

Default Notification Sound: Select a ring tone to use for a notification (e.g., new message). Note that you can override this setting for new Calendar event notifications, text and multimedia message notifications. Go to the applications settings screens to select specific ring tones.

Dial pad touch tones: Select to have a tone sound when you use the on-screen Dialer.

Touch sound: Select to have a sound play when you select an item on the screen

either using touch.

#### Storage

View and manage the data storage on your phone.

Micro SD card: Monitor and manage the use of your Memory card from this screen:

1. View how much space you are using on your memory card.
2. Select to use your memory card as USB mass storage when your phone is connected to your computer (selected by default)
3. Unmount/eject your memory card from your phone. Note that when your phone is connected to your computer via USB, you cannot view pictures or play any media stored on the card from your phone.

Internal phone storage: Reports how much internal storage is free.

#### Battery

Check the battery usage and related function

#### Applications (Apps)

View all the applications stored on your phone and how much space they occupy. If you've installed an application, you can uninstall it from this screen.

Select a specific application to:

1. Clear your user data (if you have any associated with a particular application).
2. Disassociate the application with any actions.
3. Uninstall - If you've downloaded an application, you will be able to uninstall it from this screen by selecting Uninstall.

### **3.3 Personal**

#### Location

Select a source for determining your location.

Screen unlock pattern: Create a pattern you will be asked to draw before your screen will unlock. You can select to make the pattern visible or invisible as you draw it.

SIM card lock settings: Lock your SIM card for extra security. You can also change your SIM card PIN from this screen. If you don't know your SIM PIN,

you can obtain it from your wireless operator.

**Make Password Visible:** Select to have your password display as you type it.

**Unknown sources:** Select this check box if you want the ability to download applications from the Web. With this check box not selected, you will only be able to download applications from Google Play. To ensure your personal data and phone remain secure; it is recommended you not to select this check box.

#### Accounts

Turn on/off synchronization for all services.

#### Language & input

Change the language and text input setting, voice input and output setting.

#### Backup & reset

You can select to reset your phone to factory settings. This will erase all your data from the phone and require you to sign in and go through the setup screens to use any of the applications.

### **3.4 System**

#### Date & time

**Set time, time zone, and date:** Use Automatic unless you need to override the network values.

**Time format:** Select from 12 or 24 hour formats.

**Date format:** Select from a variety of formats.

#### About phone


**View your phone Status:** This screen lists a variety of information, including your phone number, the network you are currently using, the type of network, signal strength, whether you are roaming or not, any WF addresses you're connected to, and more.

View the model number and version information for your phone.

## **4. Contacts**

Learn how to create and manage the contact list. Save the contact name, phone number, E-mail address, etc.

#### 4.1 Add a contact

Touch  on the bottom of the contact list to add a new contact.

4.2 Enter contacts list, click on the search icon on the right side of the set button

Delete contact: choose one or more contacts to delete

Display contact: user-defined to display the contacts of SIM card and phone

Input& output: copy the contacts among the phones、SIM card、the memory card

Contact group: By creating a contact group, can manage multiple contacts, or send the message or E-mail to the group

Share the displayed contact: share shows contact by MMS, SMS, BLT share contacts, etc.

4.3 Select a contact, enter the contact interface, you can edit contact, make calls, send messages, delete contact and share contacts

## 5. Messages

Learn how to create and send SMS or MMS, how to view or management message has been sent or received.

5.1 Send message: enter the new message interface for editing message, enter the name or phone number, edit the message and click the send icon to send message

5.2 View message: enter the message interface can view all the messages

5.3 Message setting menu

Message feature is turned on: Change the default SMS application

SMS settings: change the delivery report, manage SIM card information, edit common phrases, short message service center, and message storage location

MMS settings: change the mass of information, send reports, read reports, allowed to return to read the report, automatic acquisition, roaming automatically acquire, build mode, MMS size restrictions, priority etc. MMS settings


Message notification settings: change notification prompt tone, vibrate mode, and a pop-up message notification, etc.

Basic Settings: Change the display settings, storage settings, cell broadcast settings, push information display settings and other basic settings

## 6. Internet

You can connect to the internet by SIM card data and WIFI

**6.1** Select the browser. Default home page open

**6.2** To access a specific web page, select the URL input field, enter the web address (URL), and then select 

**6.3** To return to the previous page, press the return key.

**6.4** Browse the Web, use the following features:

To reload the page, press the Option key ---> Refresh.

To stop browsing, press the Options button ---> Stop

To return to the main page, press the Option key → page.

To add the current web page as a bookmark, press the Options key → Save to bookmarks

To close the current web page, press the Options button → Close

To send web address to others, press the Option key → share page.

To search for text on a web page, press the Options button → Find on page

To view the bookmark page history, press the Options button → Bookmarks / History

To customize the browser settings, press the Options button → Settings

## 7. Multimedia


7.1 Camera

Learn the basic operation to capture and view photos and videos.

1. Taking picture

Select camera → enter the camera mode.


- The lens at the subject and make any adjustments.

- click  to take pictures which will be saved automatically.


## 2. Shooting Video

- Choose camera → go to shoot video mode.
- The lens at the subject and make any adjustments


- Click  to shoot video.

- Click  to finish the shooting which will be saved automatically.

## 3. Viewing photos or videos

- Click the icon in the bottom right of the viewfinder screen  to enter the viewing interface
- share pictures or videos via BLT and Information
- on the picture to edit, delete, cut, set a picture as contact picture and wallpaper
- Rotate pictures, view pictures or videos detailed information.

## 4. Camera settings

- Click the left corner icon  of the viewfinder screen to enter the setting interface
- viewfinder screen, camera and video personalize

## 7.2 Music

Using the music player to listen to your favorite music : -

### 7.2.1 Add music files to your phone :

You can add files to the memory card through the network to download or copy.

### 7.2.2 To copy files to the memory card:

- Insert a micro-SD card.

- Use the PC data cable as provided to connect the micro-USB jack on the phone and the computer.

When connected, there is a pop-up window on the PC.

- Open the folder to view files.

- Copy files from the PC to the micro-SD card.

### 7.2.3 Select Music :

- Select a music category → select the music file to play

### 7.2.4 Adding music files to a playlist :

- Select Music

- Select the artist / album / song label, tap and hold to add the artist, album or song, then on the pop-up menu, select Add to playlist, add one or more music files.

- Select the current playlist, add music files to the current playlist; or select New playlist, enter a name for the new playlist, select Save to create a new playlist and add music files.



### 7.3 FM

To listen to the music and news from the FM, please use earphone as the antenna.

### 7.4 Audio Recorder

Record the audio on audio recorder

## **8. Other applications**

### 8.1 Calendar

On calendar screen, choose Week, Month, Day or Agenda to switch screen mode.

Pressing Option to create new activity, refresh, search, show calendar and delete all the events as well as turn to setting.

### 8.2 Clock

Setting Alarm clock, time counter and stopwatch features.

### 8.3 Calculator

To do the basic calculation with the corresponding keypad.

### 9 Play Store

Downloading applications in Play Store.

---