

Thank you for purchasing the tablet PC and it is packaged with the following state of the art features and much more:

1 GHz Processor

7 Inch Full touch screen with Pinch Zoom

3G Dongle support via USB

HD Video Support

HDMI Support

Android 4.0(ICS)

HD Video (1080 Pixels, MPEG2/4, AVI, WMV, MOV)

Wi-Fi 802.11 b/g, USB 2.0

Front Camera (0.3 Mega Pixel) Rear Camera (2.0 Mega Pixel)and(0.3 Mega Pixel) Rear Camera (5.0 Mega Pixel)

Memory: 8GB/16GB Expandable up to 32 GB

Gravity Sensor/ Accelerator Sensor

# Contents

	<b>Welcome</b> .....	3
<b>1</b>	<b>Know your Device</b> .....	3
<b>2</b>	<b>Greeting started</b> .....	3
	2.1 Charging the Battery .....	3
	2.2 Switching on the Device .....	3
	2.3 Shut Down the Device .....	3
	2.4 Lock the Screen .....	3
	2.5 Unlock the Screen .....	3
	2.6 Change the Orientation .....	4
	2.7 Adjust Volume .....	4
	2.8 Status Bar .....	4
	2.9 Get Around .....	4
	2.10 Arrange and work with Applications .....	4
	2.11 Extended Home Screen .....	5
	2.12 Add Widgets .....	5
	2.13 View Toolkits .....	5
<b>3</b>	<b>Features</b> .....	6
	3.1 Change the Wallpaper .....	6
	3.2 Manage Accounts .....	6
	3.3 Why Use a Google Account .....	7
	3.4 Start Gmail .....	7
	3.5 Google Search .....	7
	3.6 Manage Downloads .....	8
	3.7 Manage Your Calendar .....	8
	3.8 Settings .....	8
	3.9 Connecting with PC .....	8
	3.10 Set the Language and Keyboard .....	8
	3.11 View Available Storage Space .....	8
	3.12 Date & Time Setting .....	9
	3.13 View About Device Information .....	9
<b>4</b>	<b>Accessing the Internet</b> .....	9
	4.1 Connect to Wi-Fi .....	9
	4.2 Connect Via SIM .....	9
	4.3 Set up Internet Connection via Ethernet Cable .....	9
	4.4 Connect to VPN .....	10
	4.5 How to Uninstall an Application .....	10
	4.6 Perform a Factory Reset .....	10
	4.7 Troubleshooting .....	10
	4.7.1 Device shuts down after startup .....	10
	4.7.2 Cannot copy file or play music .....	11
	4.7.3 The tablet is hanging with no response. How can I solve this? .....	11
<b>5</b>	<b>Taking Care of Your Device</b> .....	11



## 2.1 Charging the Battery

Please charge the device in the following conditions:

If the battery power is low or if the power icon shows no power

If Power button does not respond i.e. the device is not getting switched on.

Device automatically shuts down.

**Note:** Slight heating during charging is normal. When the charging icon becomes static, it indicates that the battery is full.

### Device Usage

Please charge the unit fully once in a month if it is not in use.

Remark: If the power is empty, the device will shut down automatically.

## 2.2 Switching on the Device

To switch on the device, long press and hold the power key. The system will boot and show the main screen.

## 2.3 Shut Down the Device

Long press the power key.

A dialog box will appear.

Select 'Power off' to shut down.

## 2.4 Lock the Screen


Short press the Power key to lock / unlock the screen.

## 2.5 Unlock the Screen

Depending on the screen lock setting, you might be required to:

Slide the lock symbol towards the unlock symbol.

Draw a pattern, or provide a PIN or password or Face Unlock or Voice Unlock.

Note: You can set your unlock method by tapping  > **Personal**> **Security**> **Screen Lock** and then choosing your desired method.

## 2.6 Change the Orientation

Your device has the capability to retain the orientation of the screen in horizontal view even when rotated by 90, or multiples of 90 degree.

## 2.7 Adjust Volume

Press the **Volume+**, **Volume-** icons to increase or decrease the volume of the device.

## 2.8 Status Bar







The status bar appears at the top right corner of the screen.

Displays Wi-Fi Status (if connected), Battery Status, time and Settings menu and so on.

## 2.9 Get Around

At the bottom of the screen, you will find three Navigation buttons. They are always available. No matter what you are doing with your device, you can always get back to the main Home screen or return to previous screens:

Icons	Name	Description
	Back	Opens the previous screen you were working in, even if it was in a different app. Once you back up to the Home screen, you can't go back any further in your history.
	Home	Use this key to return to the Home screen.
	Recent apps	Opens a list of thumbnail images of apps you've worked with recently. To open an app, touch it. To remove a thumbnail from the list, swipe it down.
	Menu	Lets you view the menu for accessing the various applications and functions of the tablet.

## 2.10 Arrange and work with Applications

To see all your apps, touch the **Apps** icon.

The **Apps** screen opens where you can see all your applications, including those downloaded from Android Market. You can move the app icons to any of your Home screens.

From **Apps**, you can:

**Move between screens:** Swipe left or right, or tap the right or left side of the screen (without touching any application).

**Place an app icon on a Home screen:** Touch and hold the app icon, slide your finger, and lift your finger to drop the icon in place.

**Explore your widgets:** Touch the Widgets tab at the top of any **Apps** screen.

**Get more apps.** Touch the **Play Store** icon.

To remove an app icon from the Home screen, touch and hold it, slide your finger toward the top of the screen or at the top left or the screen, and drop the app over the Remove icon. As shown in the figure picture:



### 2.11 Extended Home Screen

The Home screen consists of the 3 panels that extend beyond the display width to provide more space for adding shortcuts, widgets and folders.

Slide your finger horizontally across the screen to scroll to the left or right side panels.

### 2.12 Add Widgets

Widgets are like windows into your apps. They are available from the **Apps** tab for you to move onto your Home screens.

To see your widgets:

- 1 Go to **Apps** screen.
2. Touch **Widgets** at the top of the screen.

From the main Widgets screen, you can:

**Move between screens:** Swipe left or right

**Drag a widget to a Home screen:** Touch and hold the widget's icon, slide your finger where you want to place it, and lift your finger.

Drag an existing widget to the Cross icon to delete the widget from the Home screen.

You may be asked to make further choices before the widget activates. If there is no room where you dropped it, the widget would not get added to the Home screen.

### 2.13 View Toolkits

Pull down on the top left corner or on the top right corner of the screen to open the toolkit. The toolkits menu allows you to readily access some common or often used preferences and settings:



To expand the menu, swipe your finger down on the top right corner of the screen. The Toolkit pops up for you to set your preferences.



To close the toolkit menu, swipe your finger down from the lower of the screen.

 
Touch on the desired setting to set the preference.

Touch on the notification on the toolkit to view the notification.

### 3.1 Change the Wallpaper

Wallpapers are images from Gallery (pictures you shot with Camera, or stored in the memory card and so on), still images included with the system, and live images (such as an animation or a map that centers on your location). They take the place of the default background for your Home screens.

1. Touch and hold anywhere on a Home screen that is not occupied.
2. Click on the icon "WALLPAPERS", Choose a thumbnail pictures, then click on the top left corner to set as wallpaper.

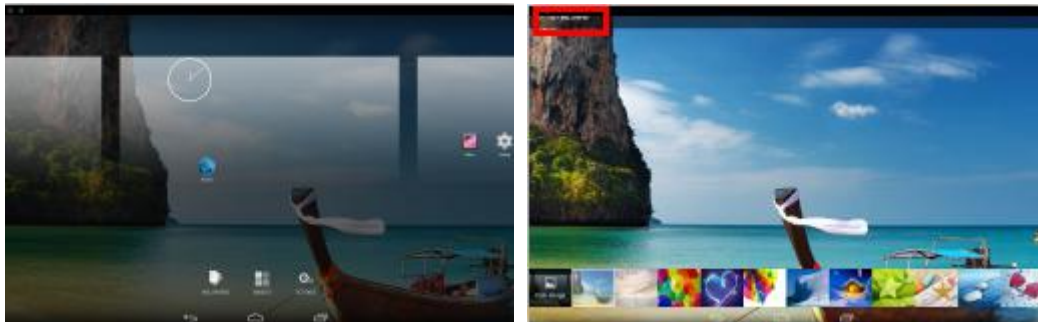


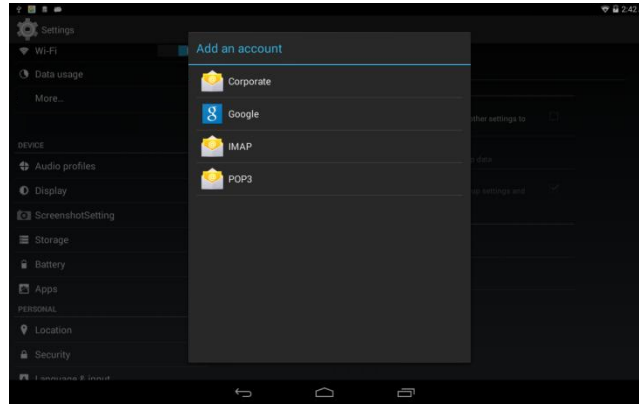 
Related settings

**Settings > Device > Display > Wallpaper**

### 3.2 Manage Accounts

You can set up a corporate, email, or Google account on your device. You can do this via the **Accounts & sync** settings screen:

1. From a Home or main menu screen, touch the Settings  icon.
2. Under **Personal**, touch **Accounts & sync** and then touch **Add Account**.



You may also be able to add other kinds of accounts, depending on your apps.

### 3.3 Why Use a Google Account

A Google account lets you organize and access your personal information from any computer or mobile device:

#### **Synchronize Gmail and calendar.**

When you sign in to your device with a Google account, your Gmail and Calendar are synchronized with the Gmail server.

#### **Use other Google services.**

Your Google Account also lets you take full advantage of any other Google apps and services that you may want to use, such as Gmail, Google Maps, Navigation, Android Market, YouTube, Messaging, and many more.

### 3.4 Start Gmail

You can use Gmail to read and write email from any mobile device or browser. All your email is always up to date and available no matter where you check it from.

But Gmail is not just about email. Your Gmail name and password signs you into to all Google apps and services, including Search, News and Weather, people, market, maps, navigation, places, talk, Calendar and downloads and many more.

1. To launch Gmail, touch the Gmail icon  on Apps screen.

The first time you launch Gmail, you are asked to sign in or create an account. You can sign in using any of your existing Gmail accounts to open the Inbox.

2. Touch the icons and menu along the bottom of the screen to archive, throw away, label, or perform other actions on that message.
3. Swipe left or right to read the previous or next conversation.

Note: You need to have Internet connectivity to access Google and all the other associated features described above.

Please refer to 'Accessing the Internet 错误! 未找到引用源。' section to know how to configure your Internet connection.

### 3.5 Google Search

Google Search can help you find anything you need on the web.

Touch the  icon on the all apps screen to access Google search.

As you type, suggestions from Google web search appear below the Search box.

### 3.6 Manage Downloads

Files, and other items you download using the browser or in other ways can be stored in the location of your choice.

Go to **Settings> Device> Apps** to view the applications and downloads on your tablet.

Tap on the application or download for actions such as move to SD card, clear data, disable, force Stop etc.

### 3.7 Manage Your Calendar


The Calendar app lets you view and edit your schedules.

Using an existing Google Account, the first time you open the Calendar application; it displays any existing calendar events from that Google Account on the web. As you edit events from any device or web browser, they are synchronized automatically across all the places you need them.


Touch the Calendar  icon to access the calendar.

To change the Calendar view, touch the date at the top and choose Day, Week, Month, or Agenda.

Swipe to scroll vertically or horizontally. In the Day or Week views, spread your fingers apart or pinch them together to zoom in or out.

Touch the  icon at the top right to set your calendar preferences and perform settings.

### 3.8 Settings

Press the settings  icon to access the system settings.

You can choose settings and preferences for:

**Wireless & Networks:** Turn on Wi-Fi, check data usage and so on.

**Device:** Set device preferences for sound, display, storage, battery information, apps and so on.

**Personal:** Set preferences such as Accounts & Sync, Location and services, Security, language and input, Backup and reset.

**System:** Settings such as date and time, accessibility, Developer options, view information about tablet.

### 3.9 Connecting with PC

Use the USB cable to connect the device to a PC or laptop, the device will pop up the USB connection menu. You can start transferring files through the portable device dialog that opens.

### 3.10 Set the Language and Keyboard

Tap **Settings> Personal> Language & Input** for keyboard, language, input methods, voice control, voice search, text-to-speech output, and pointer speed.

 
### 3.11 View Available Storage Space

1. Tap on **Menu >**  to access the Settings.

2. Tap **Storage** under **Device** section.

The storage details displays.



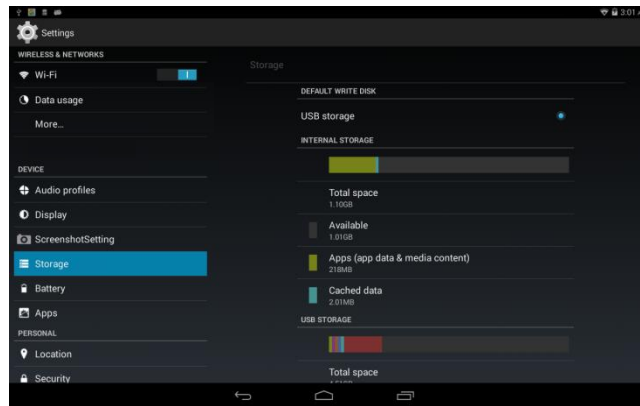

### 3.12 Date & Time Setting

Tap **Settings**> **System** > **Date & Time** for setting the time zone and time format.

### 3.13 View About Device Information

Tap **Settings**>**System**> **About Tablet** for viewing information about the Tablet PC.

For enjoying various features like Browser, Email, Gmail, Android Market, Google Search, Downloads and so on, you need to first configure your Internet connection.

For this, you can go to **Settings** and do one of the following:


Enable **Wi-Fi** (If you have a Wi-Fi network within range with the required credentials).

You can pick the available network from the list displayed.


Tap **More** and then configure any one of Ethernet, VPN, or Mobile Networks.

### 4.1 Connect to Wi-Fi

For connecting to Wi-Fi:

1. Tap on **Menu** >  to access the **Settings**.
2. Under **Wireless & Networks**, tap and enable **Wi-Fi**.
3. Tap the desired Wi-Fi service from the list.
4. Provide the **Wi-Fi** credentials for logging in.

You can also **scan** to search for Wi-Fi network or **Add Network** to add your Wi-Fi manually.

Tap  to set your advanced preferences.


### 4.2 Connect Via SIM

1. Tap **Menu**> **Settings**> **Wireless & Networks**> **More**.
2. Tap **Mobile Networks** and then check the **Data Enabled** option and tap the **Access Point Names** to select from the available list.

Note: If your SIM card is outside its circle, please checkmark the **Data Roaming** option.


### 4.3 Set up Internet Connection via Ethernet Cable

You can connect your device to the Internet via the Ethernet cable that you normally use for connecting our PC to the Internet. In the case of Tablet PC, you need a USB cable and USB LAN connector for this purpose.


1. Connect the USB cable with this device. Next, connect the other end of the USB cable with the USB LAN connector.
2. Connect your Internet service provider's Ethernet cable with the connector.
3. Tap on **Menu** >  to access the **Settings**.
4. Under **Wireless & Networks**, tap **More**.
5. Tap **Ethernet** from the list.
6. Follow the steps as suggested.

 
#### 4.4 Connect to VPN

You can use VPN to connect your device to the Internet.

1. Tap on **Menu** >  to access the **Settings**.
2. Tap **More** under **Wireless & Networks**.  
Since VPN is a secured network, you need to first set password for your tablet
3. Provide the required PIN/Password.
4. Add your network/server settings.


#### 4.5 How to Uninstall an Application

1. Tap on  to access the Settings.
2. Tap on **Apps** under **Device**. A list of applications will display.
3. Tap on the application to be uninstalled.
4. Tap **Uninstall**.

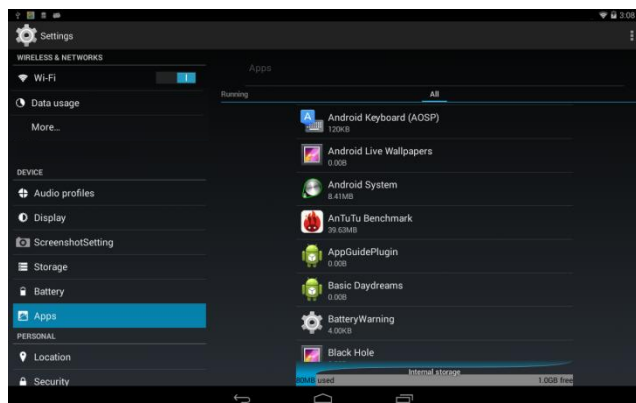

#### 4.6 Perform a Factory Reset

You can perform a factory rest of your device so that all the settings are returned to the settings original settings when you bought the device.

1. Tap on  to access the Settings.
2. Tap **Backup & Reset** under **Personal** section in settings.
3. Tap **Factory Data Reset**> **Reset Tablet**.

#### 4.7 Troubleshooting

##### 4.7.1 Device shuts down after startup

Power is not enough, please charge your device.

#### **4.7.2 Cannot copy file or play music**

Please check if the connection between the computer and the device is correct proper and correct.

Check whether the memory storage space is already full.

Check if the USB cable is not damaged or not

Check if USB is disconnected

#### **4.7.3 The tablet is hanging with no response. How can I solve this?**

Restart the tablet by long pressing and holding the power key.

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your device:

Do not store the device in high or cold temperature. Extreme temperatures can shorten the life of electronic devices and damage batteries.

Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits.

Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can get damaged.

Do not drop, knock, shake or bend the device. Rough handling can break internal circuit boards and fine mechanics.

Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.

Do not store your device near magnetic fields or allow your device to come in contact with magnetic fields for extended period of time as it may interfere with the electronic circuits and display.

Use manufacturer approved batteries, chargers, accessories and supplies.

### **Federal Communications Commission (FCC) Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generate, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

### **RF exposure warning**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

The equipment must not be co-located or operating in conjunction with any other antenna or transmitter.