 


USER MANUAL

 
1 Main parameters

Item No.: E526-003
Material: plastic and electronic components
Batteries: Car battery: 4.8V AA rechargeable battery;
Remote controller battery: 2 pcs of 1.5V AA batteries.

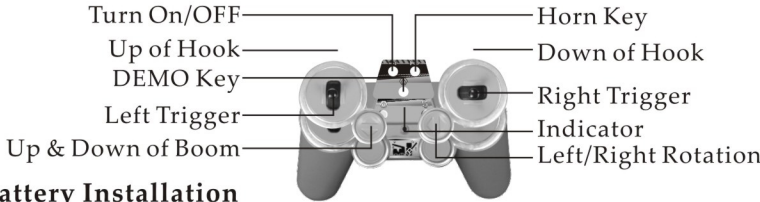

2 Battery Installation

- 1.Open the cover of battery case locates in the back of controller, inserts 2 pcs of 1.5V AA batteries into the battery case, and then screw the cover (Fig 2A).
- 2. Please screw out the cover at the back of car by screwdriver, open the cover as the arrow showed, insert 1pcs of 4.8 V AA battery, then screw the cover (Fig 2B).

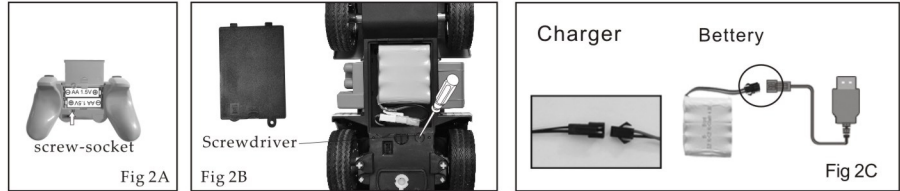


Notice: This product shall be charged for two to three hours.The supporting USB charger shall not be used for other devices other than this product.

3 2.4G Auto Coding


- 1.After installing the batteries on the car and the remote controller, turn on the power of both. There is a sound of DI from the car, and the indicator on the remote controller and the lights on the car would be flashing slowly. That means the car is in a state of coding, the auto-coding would be successful if the car with DI-DI sound.
- 2.Each remote controller could be only coded with one car. There is no any interference if auto-coding is success.
- 3.It could be re-auto-coded with other car or remote controller by turning off the power of both.

4 Basic Operation & Functions

 - 1.Turn ON/OFF
 - Press the ON/OFF key, there will be a start-up sound; to press the key again after starting. (Fig 3A)
- 2.Horn Key
 - To press the Horn Key on remote controller after starting the car, the car would emit a simulated sound.
- 3.Forward/Backward
 - To push the Left Handle forward/backward, the car would go forward/backward.(Fig 3B)

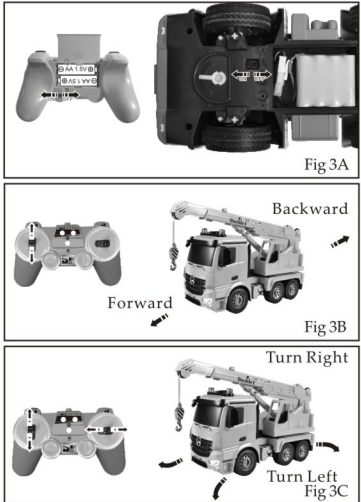

- 4.Turn Left/Right
 - To push the Left Handle forward/backward, Right Handle turns left/right, the car would turn left/right. (Fig 3C).
 - 5. 660 degree Rotation of Operation Station
 - After starting the car, to press the Left/Right Rotation, the Operation station would do a motion of left/right rotation with sound. (Fig 3D).
 - 6.Up&Down, In&Out of Crane Arm
 - After starting the car, to press the key of Up&Down of Crane Arm, the arm of the crane would raise up (come down) slowly; at the same time, the second arm would hand over (draw back) slowly with a series of mechanical sound. (Fig 3E)
 - 7.Up&Down of Hook
 - After starting the crane, press the Hook Up(Down) key, the hook of the crane would raise up (come down) slowly with a mechanical sound. (Fig 3E)
- These functions could be multiple used for simulating operation.

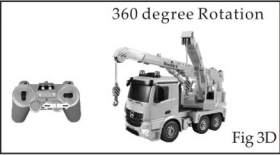 

5 Advanced Functions

- 1.Mute Switch
 - After starting the truck, to press the Horn key for a long time, the car could change to a mute condition. To press the Horn key again, it could be switched to the sound station.
- 2.DEMO Function
 - To press the DEMO key, the car could operate a series of the functions automatically; to exit this function through pressing any key.
- 3. Auto off
 - After turning on the remote controller, the car would be auto off without receiving any signal from the remote controller by 60sec.
- 4.Braking Function
 - When the car goes forward/backward, to change the direction directly, the car would be with braking sound and motion.
- 5.Multi-playing function
 - The product is remote controlled by 2.4GHz, so many cars could be played together by players.

6 Recharging

Notice: Please push the power switch to “OFF” position if the product will not be used for a long time. Take the batteries out of the remote controller and the truck for storing. Please charge the battery for 4 to 5 hours, 8 hours for initial use.

7 Notice

- 1.Don't play the toy on the road, select a safe place for operating to avoid dangerous.
- 2.Plays the toy in water may cause short-circuit damage. Please use the dry cloth to clean the car.
- 3.If abnormal speed or reaction, it may be because of insufficient battery power, please charge the battery.
- 4.The batteries should be charged under adult supervision. Please use the batteries recommended.
- 5.Please install the battery in a correct polarity.
- 6.Do not mix new and old batteries together, short-circuited.
- 7.Please charge the battery before initial use.
- 8.Please check the plug, case and other units of charger regularly to make sure that it is not broken.Don't use again if you find abnormality of the charger.
- 9.Please do not connect the product to different performance power.

Frequency bands : 2405MHz to 2475MHz
Maximum output power : -3.15dBm (for EU compliance)
Manu facturer : Doubleeagle Industry (China) Limited.
Address : Xingda Industrial Park, Chenghai District, Shantou City, Guangdong Province, China.
Importer : JAMARA e.K.
Address : Inh . Manuel Natterer
Am Lauerbühl 5 - DE-88317 Aichstetten Germany
CHOKING HAZARD-small parts, not for children under 3 years.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.