



 
# UO Cube Speaker S

**INSTRUCTION BOOK**

제품 사용 전 사용자 설명서를 잘 읽어 주시기 바랍니다.

KOREAN

## 구성품



UO Cube Speaker S




Micro USB 케이블



사용자 설명서

## 각 부의 명칭

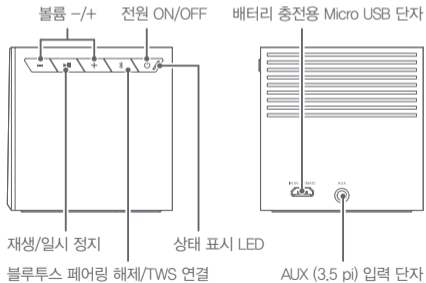 

## 전원 켜기/끄기

1. [⏻]를 길게 누르면 [Power on] 음성과 함께 LED가 파란색으로 점멸하며 전원이 켜집니다.
2. 전원이 켜져있는 상태에서, [⏻]를 길게 누르면 [Power off] 음성이 출력되고 전원이 꺼집니다.



## 블루투스 페어링 하기

1. 전원이 켜지면 자동으로 페어링 대기 모드로 전환됩니다.
  - LED: 파란색 점멸
  - 음성: Bluetooth Input Ready
2. 감지된 장치가 디바이스에 [SKT\_CS100-XXXXX]로 표시됩니다.
3. [SKT\_CS100-XXXXX]를 선택하면 페어링이 완료됩니다.
  - LED: 파란색 켜짐
  - 음성: Bluetooth Connected
4. 페어링 상태에서 [✳]를 길게 누르면 페어링이 해제됩니다.



! 최대 사용범위 : 10M

KOREAN

## TWS(True Wireless Stereo) 연결하기

TWS는 두개의 스피커를 연결하여 각각 왼쪽 채널과 오른쪽 채널로 분리하여 출력하는 기능입니다.

1. TWS로 연결하려는 두개의 스피커 전원을 켜 페어링 대기상태로 준비합니다.
2. 왼쪽 채널로 설정하려는 스피커의 [✳]를 누르면 연결 시작음과 함께 TWS 연결이 진행되고, 다른 스피커는 자동으로 오른쪽 채널로 설정되며 파란색 LED가 켜집니다.
3. 연결이 완료되면, 왼쪽 채널 스피커는 [Left Channel] 음성과 함께 파란색 LED가 점멸합니다.
4. 디바이스에서 검색을 하면 [SKT\_CS100-XXXXX] 왼쪽 채널 기기만 표시됩니다.

 


## TWS 및 블루투스 상태 초기화

1. [✳]를 길게 누르면 TWS 및 모든 블루투스 상태가 초기화됩니다.

## 외부기기 연결하기


- 오디오 케이블(3.5mm/별매품)을 이용하여 [AUX 입력 단자]와 외부기기를 연결합니다.

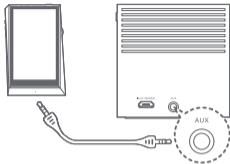

## 충전하기

- 스피커 뒷면의 [배터리 충전용 Micro USB 단자]에 함께 제공된 Micro USB 케이블을 이용하여 충전기/PC와 연결하면 충전이 시작됩니다.

 - 배터리 잔량 부족 : 적색 LED 점멸
- 충전 중 : 적색 LED 켜짐 ● 충전 완료 : 적색 LED 꺼짐

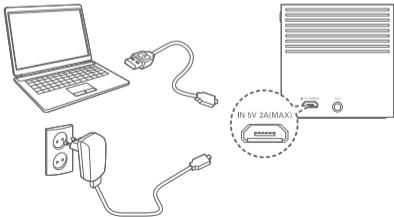

## 음악 듣기

- [+/-]를 눌러 볼륨을 조절합니다.
- 재생 중 [▶||]를 누르면 일시 정지하고, 다시 한번 누르면 재시작합니다.

## LED 사양

파랑색	블루투스 연결 상태를 표시
빨간색	배터리 상태를 표시
보라색	배터리 상태와 블루투스 상태를 동시에 표시

## 제품 사양

System Specification	
Speaker Unit	40mm X 1
Battery Capacity	2,000mAh
Operation Time	20 hours (When set Mid-range volume)
Charging time	4 hours
Dimension	60mm x 60mm x 60mm
IO Port Specification	
Power	microUSB maximum input current 5V 2A
Input	Bluetooth 4.0 / 3.5 pi Stereo Jack
UI Specification	
LED	1 LED (Blue, Red)
Button UI	Power on/off, Play/Pause, Volume UP/Down, Bluetooth/TWS Pairing

모델에 따라 제품의 외관 및 색상, 인쇄, 각인 내용이 변경될 수 있습니다.

## 품질보증서

- 보증서의 소정 항목에 기재되지 않은 사항이 없는지 확인해 주십시오.
- 서비스를 받으실 때에는 이 보증서와 함께 영수증을 꼭 제시하시기 바랍니다.
- 이 보증서는 재발행되지 않으므로 잘 보관하여 주시기 바랍니다.
- 제품 구입 후 반드시 내용을 기입하시고, 별도 보관하여 주시기 바랍니다.

## 보증서비스

제품 구입 후 1년간 고객센터에서 보증 서비스를 받을 수 있습니다.

### 보증서비스 제외

- 보증기간이 경과하였거나 보증기간 이내일지라도 고객 과실에 의한 고장, 파손 발생 시 수리비용을 부담해 주셔야 합니다. (충격 및 이물질 투입으로 인한 손실)
- 고객센터에서 수리한 내용이 아니라 개인적인 수리나 개조에 의한 고장 발생 시 수리비용을 부담해 주셔야 합니다.
- 액세서리 종류나 고장, 파손 상태에 따라 수리비용은 최대 새 액세서리 구입 비용과 동일할 수 있습니다.
- 이어폰 및 USB 케이블 등 케이블이 사용되는 액세서리의 경우 단선으로 인한 고장에 대해서는 무상 수리 또는, 리퍼비시 액세서리 무상 교환에 해당되지 않습니다.
- 천재지변에 의한 제품 손상 시 수리비용을 부담해 주셔야 합니다.

모델명	S/N		
성명	전화번호		
고객란	주소		
점명	전화번호		
주소			
판매점	판매일	년 월 일	판매자

고객 서비스 : (주)SK텔레콤

 
서비스 센터 안내 : 전국 어디서나 지역번호 없이 1670-0110

www.uo.co.kr 고객센터원 ➡ A/S 안내 및 신청 A/S 이용방법 안내

Please read the instruction manual before using this product.

ENGLISH


## Package Contents



U0 Cube Speaker S




 Micro-USB Cable






Instruction Manual
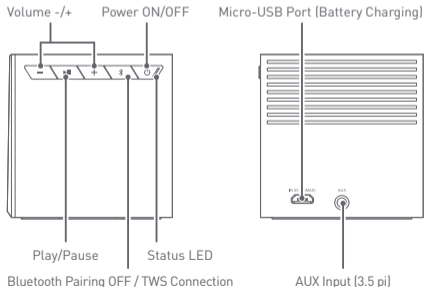 
## U0 Cube Speaker S at a Glance



 
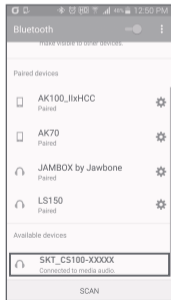 
## Power ON/OFF

1. Press and hold the [  ] button to turn on the device. The [Power On] sound will play indicating that the device is on, and the status LED will flash blue.
2. While the device is on, press and hold the [  ] button to turn off the device. The [Power Off] sound will play indicating that the device is off.

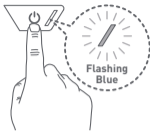

## Bluetooth Pairing

1. When the power is turned on, the device will automatically switch to pairing standby mode.
  - LED: Flashing Blue
  - Sound: Bluetooth Input Ready
2. When detected, the speaker will appear as [SKT\_CS100-XXXXX] on a Bluetooth-enabled device.
3. Select [SKT\_CS100-XXXXX] on your device to complete the pairing.
  - LED: Solid Blue
  - Sound: Bluetooth Connected
4. When paired, press and hold the [  ] button to disconnect from a Bluetooth-enabled device.




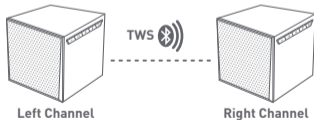 
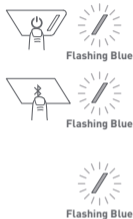 
! **Maximum Range: 10 m (32.8 ft.)**

## TWS (True Wireless Stereo) Connection

ENGLISH

TWS is a method of wirelessly connecting two independent speakers to output discrete stereo sound separately to the left and right channels.

1. Turn on the power of two speakers you want to connect via TWS to set them in pairing standby mode.
2. Press the [  ] button of the speaker you want to set as the left channel to begin the TWS connection process with the signal tone. The other speaker will automatically be set as the right channel, and the LED light will be solid blue.
3. When the connection is complete, the left-channel speaker will play the [Left Channel] sound, and the LED light will flash blue.
4. When you search for the speakers from a compatible device, only the [SKT\_CS100-XXXXX] left-channel speaker will be displayed.

 


## Reset TWS and Bluetooth

1. Press and hold the [  ] button to reset all TWS and Bluetooth settings.


## Auxiliary Input Connection

1. Use an audio cable (3.5 mm / sold separately) to connect an external device to the [AUX Input Port].

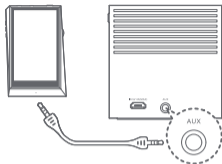

## Charging

 1. Connect one end (Micro-B) of the included Micro-USB cable to the [Micro-USB] port on the back of the speaker, and then connect the other end (type-A) to a charger/computer using to charge the device.
  - Low Battery: Flashing Red LED
  - Charging: Solid Red LED
  - Charged: Red LED Off

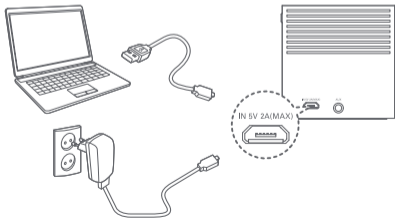

## Listening to Music

ENGLISH

- Press the [ + / - ] buttons to adjust the volume.
- Press the [▶||] during playback to pause and press again to resume.

## LED specification

<b>Blue</b>	Displays Bluetooth connection status
<b>Red</b>	Displays the battery status
<b>Violet</b>	Displays status of Bluetooth and battery at the same time.

## Product Specifications

System Specification	
<b>Speaker Unit</b>	40mm X 1
<b>Bater Capacity</b>	2,000mAh
<b>Charging Time</b>	20 hours [Wen set Mid-range volume]
<b>Operation Time</b>	4 hours
<b>Dimension</b>	60mm x 60mm x 60mm
IO Port Specification	
<b>Power</b>	micro USB maximum input current 5V 2A
<b>Input</b>	Bluetooth 4.0 / 3.5pi Stereo Jack
UI Specification	
<b>LED</b>	1 LED [Blue, Red]
<b>Button UI</b>	Power on/off, Play/Pause, Volume UP/Down, Bluetooth/TWS Pairing

The appearance of the product as well as the printed and engraved information may vary depending on the model.

## Warranty Card

- Make sure that all required information on the warranty card has been filled out.
- The warranty card and product receipt must be presented when requesting repair services.
- Do not misplace the warranty card since it will not be re-issued.
- Be sure to fill out all information after purchasing the product, and store it separately in a safe place.

## Warranty Service

Warranty service is valid for a period of one year from the date of purchase.

### Services Not Covered by Warranty

- A repair or service fee will be charged if the warranty period has expired or the repairs in question correspond to conditions for billable repairs even during a valid warranty period. (e.g. Damage due to impact or insertion of foreign objects.)
- A repair or service fee will be charged for product tampering or repairs/modifications by the user or an unauthorized service center.
- Depending on the failure, damage, or type of accessory, repair costs may be equal to the maximum cost of buying a new accessory.
- Damage or breakage of cable accessories such as earphones and USB cables is not valid for warranty coverage or free replacement with a refurbished unit.
- A repair or service fee will be charged for product damage caused by natural disasters.

<b>Model</b>	<hr/>				<b>S/N</b>
	<hr/>				
	Name				Phone
	<hr/>				
<b>Customer</b>	Address				
	<hr/>				
	Store Name				Phone
	<hr/>				
<b>Retailer</b>	Address				
	Date of Purchase	YY	MM	DD	Salesperson
	<hr/>				



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.