 
 


⚠ WARNING

 
Serious / minor injury or product / property damage can result if not handled as directed.

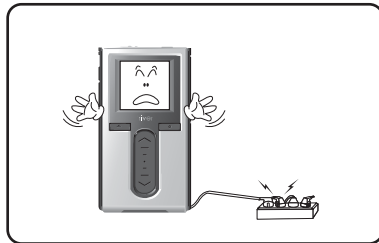

Do not let the AC adapter cable or other cables lie across walkways, to avoid accident or product damage.

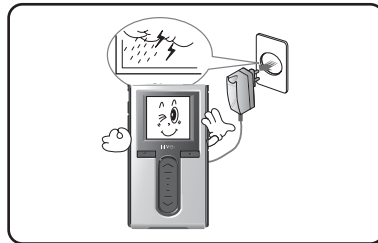

Promptly turn the power of the product off and disconnect the AC connector from the power outlet during electrical storms, to avoid product damage due to excessive current surges.

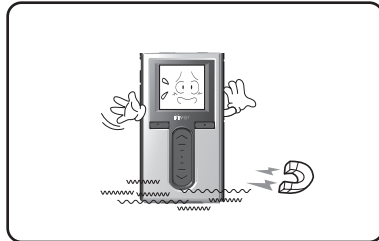

Do not place the product near sources of strong magnetism such as magnets, TVs, monitors, speakers, or hands free devices. The product uses a magnetic disk driver for data storage, and magnetic fields can damage the product.



While using earphones or headphones, do not use too high a volume or play for too long a period of time, to avoid damage to your hearing.

Use only the AC adapter included.

Using other AC adapters may cause malfunction. Some malfunctions are not repairable.

Connect the AC Adapter to rated power outlet types as described in the user manual only.

Connecting to other types of outlet may cause malfunction. Some malfunctions are not repairable.

Do not repair, disassemble or modify this apparatus at discretion. It might be damaged and not be repaired according to the level of damage.

Keep the product from getting wet from rainwater, drinks, medicines, or cosmetics. Wetting the product may cause malfunction. Do not turn the power off if this happens. Promptly swap with dry swab[not clear, and "swap" is not right] and ask for technical support. Some damage cannot be repaired.

External impact, lightning, power shorts or other events may damage the data stored in the product. The user is solely responsible for data backup and the company will not be liable for loss of stored data under any circumstances.

If Bad Sectors are generated in the HDD due to physical impact or other cause, the product may not function normally. Please use the scan disk program in the Windows operating system to fix the error.

Contents

Welcome	1
Copyright/Certification/Escape Clause.....	2
Warning	3
1. Before using the product	
1. Introducing the H10	9
2. H10 features.....	10
3. Contents.....	11
2. Getting started	
1. Names of parts.....	12
2. Connecting the product.....	15
3. Installing the software.....	28
3. Basic operation	
1. Getting up and running.....	36
2. Using the buttons	37
4. Useful features	
1. Playing music files.....	39
2. Listening to the FM radio.....	40
3. Setting preset channels	42
4. Recording.....	44
5. Using the text function.....	47
6. Viewing Image.....	50
7. Using the Browser Function.....	51
8. Searching music.....	53
9. EQ/SRS	55
10. Setting play mode	56
11. Managing music information files	61
5. Menu configuration	
1. Opening the menu screen.....	63
2. Menu Map	64
3. General.....	64
4. Display	68
5. Timer.....	70
6. Control.....	72
7. Mode.....	73
8. Sound	76
9. Record.....	78
Troubleshooting.....	82
Product Specification.....	83
Federal Communications Commission.....	84



Introducing the H10

The iRiver H10 series delivers superior sound and advanced features in an extraordinarily sleek design. It is designed with a large, color LCD, ultra-fast USB 2.0 music transfers, multi-codec support and a digital FM tuner. Plus, the H300 features a rechargeable battery that lasts up to 16 hours per charge making it the new standard in high-capacity music players.

The FM tuner included enables reception of FM radio broadcasting. And the product supports firmware upgrades to continuously refine the product's features via our website.

All these powerful features will enable you to have your best ever experience with an MP3 player.



H10 Features

- ◆ **2 inch color LCD display. Both icons and menus are in color.**
Superior color icons and menus previously unavailable are provided for a better user experience.
- ◆ **Supports super size data - 5GB**
The system can be used as high capacity portable storage with 5GB HDDs.
- ◆ **Data sharing without a PC - USB Host**
The system can connect directly to other portable USB devices such as digital cameras. No PC is required.
- ◆ **Fast file transfer - USB 2.0**
The system supports a 480 Mbps USB 2.0 interface to maximize the portable data storage feature.
- ◆ **Constant state-of-the-art performance - firmware upgrade**
Add new features or improve performance with continuous firmw are upgrades.
- ◆ **Images and Text are OK! - Text and image viewer**
View ebooks, lyrics, and stored Images with the Text Viewer and Image Viewer features.
- ◆ **Magnificent 3D sound - SRS WOW sound effect**
Experience the magnificent 3d and rich base sounds with the industry-recognized SRS WOW technology.
- ◆ **5 Preset and 1 User set equalizers**
Select one of the 5 preset EQs (Normal, Rock, Jazz, Classical, Ultra Bass) or set your own with the Uesr EQ.
- ◆ **FM radio at your convenience - Built in FM tuner and FM recording.**
Easy radio listening, with automatic search and frequency memory functions. Superior technology for searching reception while moving will enhance your experience.
- ◆ **Simple usage - Easy Navigation**
H10 supports a maximum of 2000 folders and 9999 files structure for easier search.
- ◆ **Easy recording - Record voice and external sound sources.**
Supports voice recording with high performance internal / external microphones, and sound recording connecting to external devices such as CDs, tape players, or radio receivers.
- ◆ **Connect external speakers - Supports an external output (Line-Out) feature**



Contents

Unpack the product and check the following contents.



 
H10




Remote Control



User's guide (Including Product Warranty Card), Quick start guide



Earphones and Earphone covers

 


AC Adapter




Carrying Case



 
Installation CD




External Battery Pack

 

USB Cable

 


Line In/Out Cable

 

USB Host Cable



 External Microphone



Cradle(H340 option)



[Note]

• Contents may be changed without notice.



Getting up and running

1 Connect the Remote Control and Earphones to the product.

2 Press the  button to turn the power on.



[Note]

- If the product is not responding, check if the HOLD switch is OFF. If the HOLD switch is set, the following message is displayed in the product.






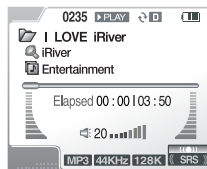 
3 See the initializing screen.






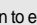





4 The playback standby screen is displayed.



5 Use the  button to playback a music file. Use the   buttons while playing to playback another music file.



[Note]

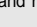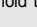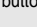


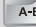
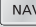




- Use the   buttons to control volume.
- Press the  button again to pause the playback.
- Press the  button to end the playback. The playback standby screen is displayed.
- Press and hold the  button to turn the power off.
- Press and hold the  button to open the function selection screen.
- Use the   buttons in the function selection screen to select a desired function. Press the  button to confirm the selection and run the selected function.
- If there are too many saved files, the time that the Playback Standby Display appears may be a bit delayed.



Using the buttons

Main System

Each button on the player may have multiple functions based on the mode the player is on (Recording, playback, etc.)

Item	Description
	<ul style="list-style-type: none"> • Turns the power on when the power is off. • Plays a music file in the playback standby screen. • Pauses the play while playing a music file.
	<ul style="list-style-type: none"> • Press and hold the button to turn the power off when the power is on. • Stops Playback. • Stop current recording in record mode.
	<ul style="list-style-type: none"> • Changes the repeat mode while in playback standby or playing. • Press and hold the button to open the functions screen. • Starts recording in the recording standby screen. • Pauses the recording during a recording.
	<ul style="list-style-type: none"> • Press and hold the button while in playback standby or playing to open the EQ Setting mode. • Changes EQ/SRS in the EQ Setting mode. • Press the button twice during playback for the section repeat function. Please see Page 57 for details.
	<ul style="list-style-type: none"> • Opens the Navigation screen during playback. • Press and hold the button while in playback standby or playing to open the Menu screen.
	<ul style="list-style-type: none"> • Increases volume while in playback standby, playing, or listening to radio.
	<ul style="list-style-type: none"> • Decreases volume while in playback standby, playing, or listening to radio.
	<ul style="list-style-type: none"> • Plays the previous title, when in playback. • Press and hold the button while playing to fast rewind. • Press the button and then hold it to the previous folder in playback standby display or while playing. • Select the previous channel when listening to radio.
	<ul style="list-style-type: none"> • Plays the next title when playing. • Press and hold the button while playing to fast forward. • Press the button and then hold it to the next folder in playback standby display or while playing. • Select the next channel when listening to radio.