



Getting up and running

1 Connect the Remote Control and Earphones to the product.

2 Press the  button to turn the power on.



[Note]

- If the product is not responding, check if the HOLD switch is OFF. If the HOLD switch is set, the following message is displayed in the product.






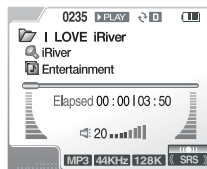 
3 See the initializing screen.






 





4 The playback standby screen is displayed.



5 Use the  button to playback a music file. Use the   buttons while playing to playback another music file.



   [Note]




 
 




- Use the   buttons to control volume.
- Press the  button again to pause the playback.
- Press the  button to end the playback. The playback standby screen is displayed.
- Press and hold the  button to turn the power off.
- Press and hold the  button to open the function selection screen.
- Use the   buttons in the function selection screen to select a desired function. Press the  button to confirm the selection and run the selected function.
- If there are too many saved files, the time that the Playback Standby Display appears may be a bit delayed.








Using the buttons

Main System

Each button on the player may have multiple functions based on the mode the player is on (Recording, playback, etc.)

Item	Description
	<ul style="list-style-type: none"> • Turns the power on when the power is off. • Plays a music file in the playback standby screen. • Pauses the play while playing a music file.
	<ul style="list-style-type: none"> • Press and hold the button to turn the power off when the power is on. • Stops Playback. • Stop current recording in record mode.
	<ul style="list-style-type: none"> • Changes the repeat mode while in playback standby or playing. • Press and hold the button to open the functions screen. • Starts recording in the recording standby screen. • Pauses the recording during a recording.
	<ul style="list-style-type: none"> • Press and hold the button while in playback standby or playing to open the EQ Setting mode. • Changes EQ/SRS in the EQ Setting mode. • Press the button twice during playback for the section repeat function. Please see Page 57 for details.
	<ul style="list-style-type: none"> • Opens the Navigation screen during playback. • Press and hold the button while in playback standby or playing to open the Menu screen.
	<ul style="list-style-type: none"> • Increases volume while in playback standby, playing, or listening to radio.
	<ul style="list-style-type: none"> • Decreases volume while in playback standby, playing, or listening to radio.
	<ul style="list-style-type: none"> • Plays the previous title, when in playback. • Press and hold the button while playing to fast rewind. • Press the button and then hold it to the previous folder in playback standby display or while playing. • Select the previous channel when listening to radio.
	<ul style="list-style-type: none"> • Plays the next title when playing. • Press and hold the button while playing to fast forward. • Press the button and then hold it to the next folder in playback standby display or while playing. • Select the next channel when listening to radio.

Remote Control


Item	Description
	<ul style="list-style-type: none"> • Turns the power on when the power is off. • Plays a music file in the playback standby screen. • Pauses the play while playing a music file. • Press and hold the button to turn the power off when the power is on.
	<ul style="list-style-type: none"> • Plays the previous title when playing. • Press and hold the button while playing to fast rewind. • Press the button and then hold it to the previous folder in playback standby display or while playing. • Select the previous channel when listening to radio.
	<ul style="list-style-type: none"> • Plays the next title when playing. • Press and hold the button while playing to fast forward. • Press the button and then hold it to the next folder in playback standby display or while playing. • Select the next channel when listening to radio.
	<ul style="list-style-type: none"> • Increases volume while in playback standby, playing, or listening to radio.
	<ul style="list-style-type: none"> • Decreases volume while in playback standby, playing, or listening to radio.





 
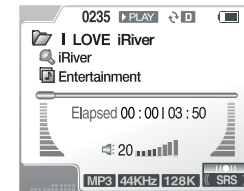 
Playing music files

Playing Music

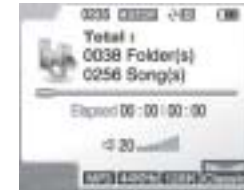







1 The playback standby screen follows the initialization screen when the power is turned on. Basic playback information, including the number of folders and music files, is displayed.



2 Start playing with the  button. Use the   buttons while playing to play another title.



[Note]

- Use the  buttons to control volume.
- Press the  button again to pause the playback.
- Press the  button to end the playback. The playback standby screen is displayed.
- Press and hold the   buttons while playing to fast forward or fast rewind the title.
- Press the  or  button twice and hold it to return to the previous folder or forward to the next folder.
- Please see Page 53 for the details on the music file search.
- Press the  button while playing to change the Repeat mode. Please see Page 53 for more information about Repeat modes.
- ID3 Tag information is displayed during the playback.
- Only MP3, OGG, WMA, and ASF, IRM files are supported.
- If a music file is damaged, the damaged section is skipped. If the file is seriously damaged, the file is skipped.



Listening to the FM radio

 
Listening to the FM radio

1 Press and hold the button to display the menu of player models.



2 Use the buttons to select the Radio icon then press the button to open the radio screen.

3 Press the buttons to select a channel. Press and hold the buttons to search for channels automatically. When a frequency is found, the radio will stay on that station until or is pressed again.

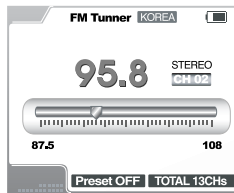

[Note]

- Press the button to switch between Stereo / Mono.
- In areas where the signal is weak, some channels may be unavailable, or reception may be poor.

 
Searching for a FM radio frequency

Manual Search

Press the buttons in the radio screen to change frequency by 0.1 MHz. Keep pressing the button until the desired channel is found.

Auto Scan

Press and hold the buttons to search for an available channel automatically. Hold the button until the desired channel is scanned.

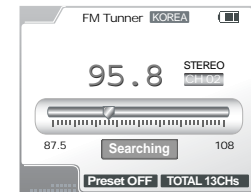


[Note]

- The AUTO SCAN and AUTO MEMORY functions do not work while Preset is ON.
- In manual search, using the buttons changes the frequency by 0.1MHz in Korea /U.S.A/Japan, and 0.05 MHz in Europe.

Preset Function

 1 Press the button in the radio screen to set the Preset ON.

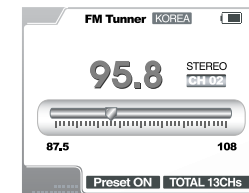


2 Press the buttons to select the next / previous channel. Use the buttons again until the desired channel is selected.



Setting preset channels


Manual preset

 - 1 Use the **NAVI** button in the radio screen to set the Preset OFF.
- 2 Use the **FM** buttons to select the desired channel then press the **A-B** button to display the channel number.
- 3 Press the **FM** buttons to select the desired channel number. Press the **A-B** button to set it. The number of preset channels are displayed as in the 'TOTAL XXCHs'. Press the **Cancel** button to cancel the saving. A Maximum of 20 channels can be set.

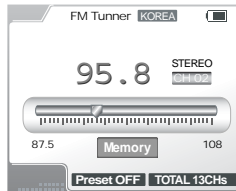

Auto Preset

 - 1 Use the **NAVI** buttons. Channels are in the radio screen to set the Preset OFF.
- 2 Press and hold the **A-B** buttons: you can see the frequency increasing. Channels are automatically scanned and saved in order in Preset.

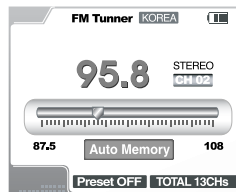

[Note]

- In area with weak signals, some channels may not be saved.

Deleting Preset Memory

- 1 Use the **NAVI** button in the radio screen to set the Preset ON. (Preset Listening Mode)
- 2 Use the **FM** buttons while the Preset is ON to select a preset channel to delete.
- 3 Press and hold the **A-B** button to delete the channel and display the next channel. Press and hold the **A-B** button again to delete the next channel.



[Note]

- If all preset channels are deleted, 'TOTAL 00CHs' is displayed, and pressing the **NAVI** button does not switch the system to Preset ON mode.

Recording FM radio broadcasting

- 1 Press the **Record** button while receiving FM radio to record it.
- 2 Press the **Record** button while recording to pause the recording. Press the **Record** button again to resume the recording.
- 3 Press the **Record** button while recording to end the recording.



[Note]

- Volume control is disabled while recording.
- The recorded file is saved as 'RECORD\AUDIO\TUNERXXX.MP3'