


Basic operation


Tuning FM stations

Push the NAVI/MENU button to the ◀◀ or ▶▶ direction to select desired station.

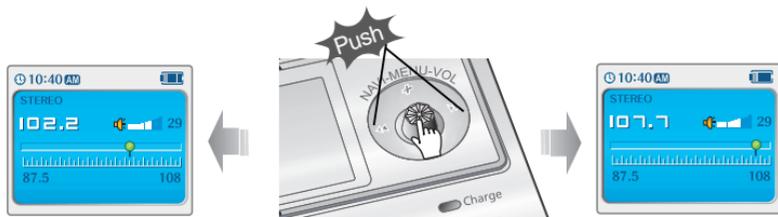

Selecting the FM stereo/mono


Press the STEREO/PLAY/STOP button to select Stereo/Mono.

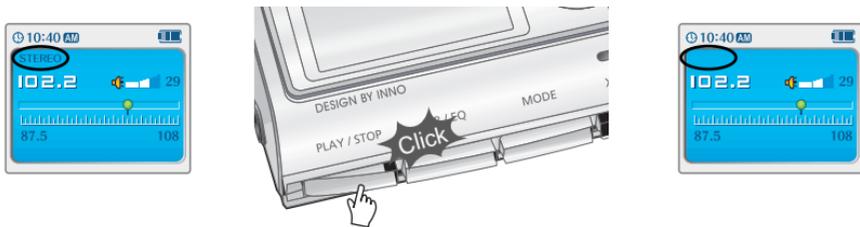


Basic operation

Menu Setup

You can adjust various function of the player.
After pushing and holding the NAVI/MENU button, adjust as following method.

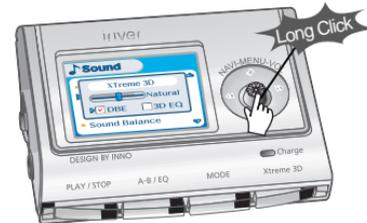


1. **Scroll between Menus** : Push the NAVI/MENU button toward ◀◀ or ▶▶ direction.
2. **Function Selection** : Press the NAVI/MENU button.
3. **Exit** : Press and hold the NAVI/MENU button or click the PLAY/STOP button.

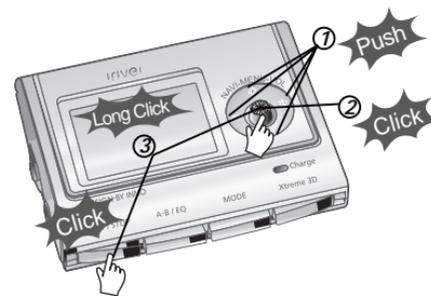


Listening to music


Playing music file

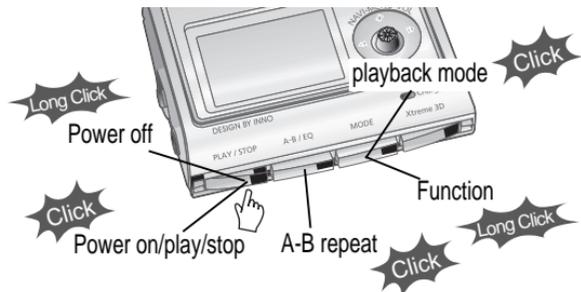

Adjusting the volume

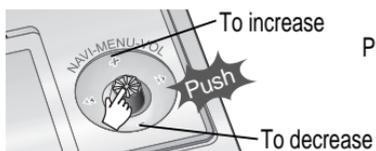

To select music file

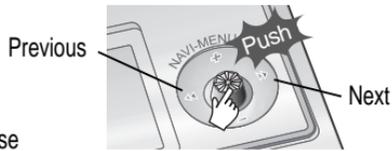

To play the folder




To fast forward/reverse




Listening to the FM radio

FM radio listening

- 1 Press and hold the MODE/REC button.
The current function appears on the LCD screen.

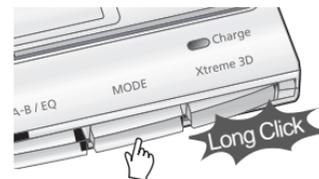

- 2 Push the NAVI/MENU button to the ◀◀ or ▶▶ direction to select FM radio.
Press the NAVI/MENU button to confirm.

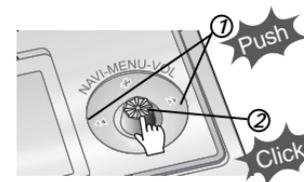

- 3 Push the NAVI/MENU button to the ◀◀ or ▶▶ direction to select FM station.




Listening to the FM radio

Programming station preset automatically

Automatically select stations and save them in sequential order.
(It only activates while the player is not in PRESET mode)


- 1 Press the NAVI/MENU button to cancel preset mode.
- 2 Press and hold the MEMORY(A-B) button. Automatically select stations and save them in sequential order.

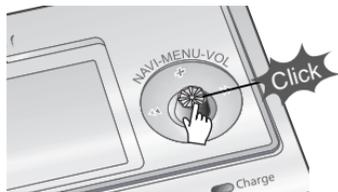

Note • Auto memory may not work within weak transmission areas.

Programming station preset manually

- 1 Press the NAVI/MENU button to cancel preset mode.
- 2 Push or long push the NAVI/MENU to the ◀◀ or ▶▶ direction to select FM station.

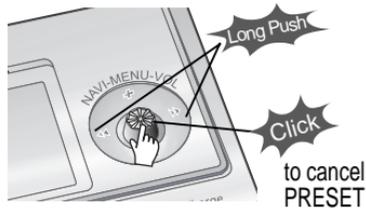

Listening to the FM radio


Programming station preset manually

- 3 Press the MEMORY/EQ(A-B) button. Automatically appears memory icon and a reserved number of the preset stations.



MEMORY CH 03
Reserved number of the preset stations.

- 4 Push the NAVI/MENU button to the ◀◀ or ▶▶ direction to select number of the preset.

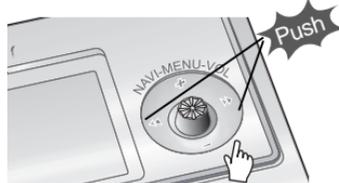

MEMORY CH 04
To select number of the preset stations.

- 5 Press the MEMORY/EQ(A-B) button to store.
Press the PLAY/STOP button to cancel.



• Up to 20 station can be stored.

Listening to the FM radio

Deleting preset station

- 1 Select the station to be deleted at preset mode.
- 2 Press and hold the MEMORY/EQ(A-B) button.



- The next station will appear when station delete is completed.
- Push and hold the memory button again if you also want to delete the next station.

Note

- FM Tuner reception may vary in different areas.
- While in Preset mode, auto scan and auto memory functions are not available.
- When the player doesn't have any preset stations, EMPTY will be displayed at preset mode then faded out.

To select stereo/mono


Press the STEREO/PLAY/STOP button to select Stereo/Mono.



Listening to the FM radio

Tuning stations automatically


Press the NAVI/MENU button to cancel preset mode.
Push and hold the NAVI/MENU button to ◀◀ or ▶▶ direction.
The frequencies are scanned automatically. When a broadcast is received, scanning stops.

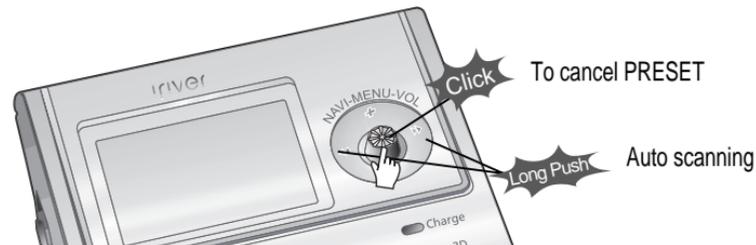

Recording the FM stations

Recording the FM stations


Press the MODE/REC button during FM reception.
The station will be recorded, the remaining recording time will be displayed on the LCD screen.

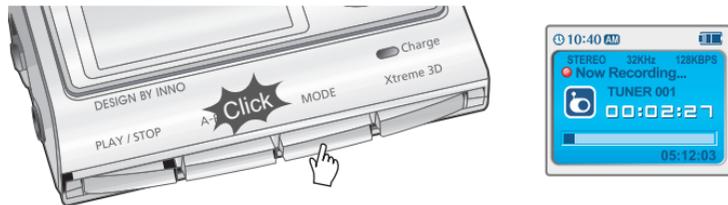

- Note**
- Volume can not be controlled while recording.
 - Recorded REC files can be converted to MP3 files using iRiver Manager. (Refer to iRiver Music Manager Instruction Manual)

To pause FM recording


- Press the PLAY/STOP button to pause the recording process.
- Press the PLAY/STOP button again to restart recording.

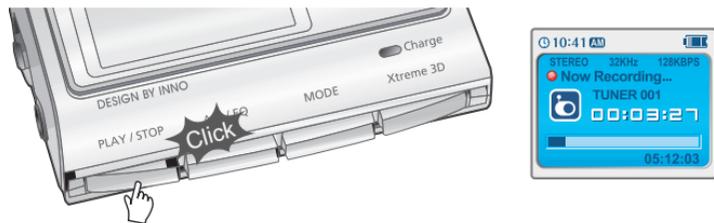

Recording the FM stations


To stop FM recording

- Press the MODE/REC button to stop recording.
- The recorded file is saved as TUNER000.REC.
 - It is saved in the RECORD folder.

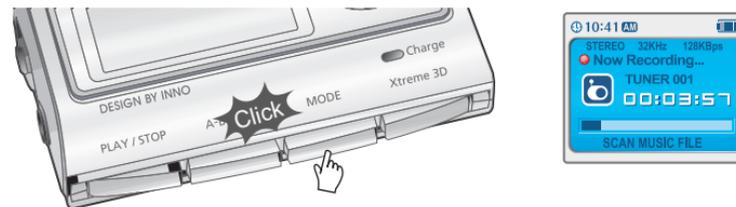

To play a recorded files


After changing to MP3 mode, select a Tuner file in the RECORD folder, press the PLAY/STOP button.

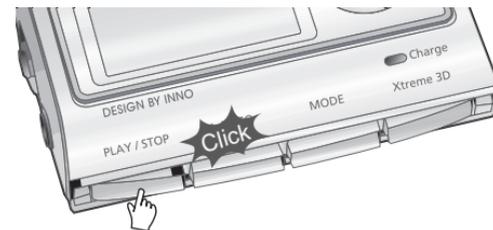


Recording voice

Recording voice


- 1 Press and hold the MODE/REC button to appear current function on the LCD screen.

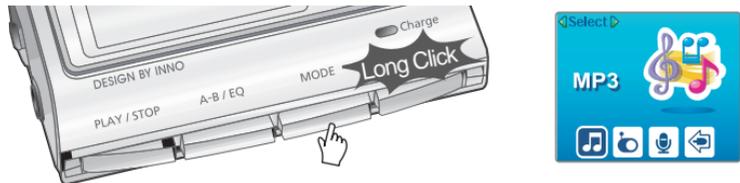

- 2 Press the NAVI/MENU button to the ◀◀ or ▶▶ direction to select Voice mode. Press the NAVI/MENU button (or PLAY/STOP) to go to Voice recording mode. (The recorder will be in standby mode.)

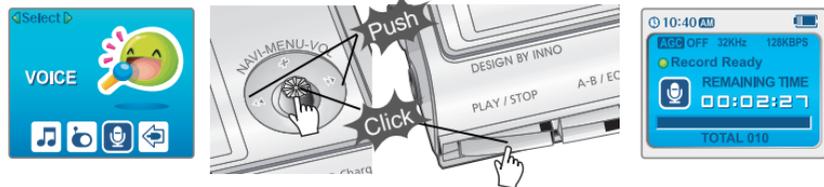


- 3 Press the MODE/REC button and to begin recording.

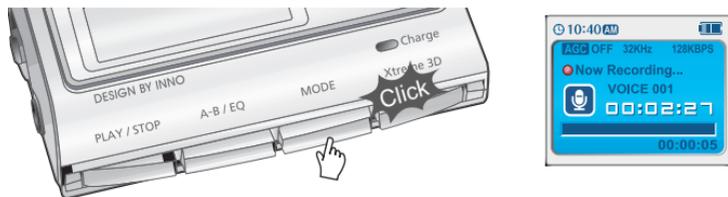

Recording voice


To pause recording voice

Press the PLAY/STOP button to pause the recording process. Press the PLAY/STOP button again to restart recording.

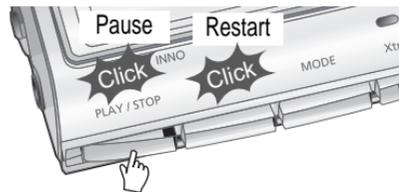

To play a recorded file


Press the PLAY/STOP button while stop mode.

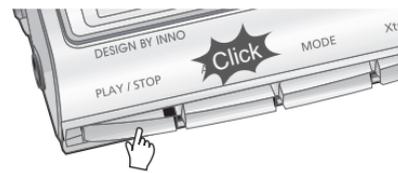

To stop recording voice

Press the MODE/REC button to stop recording.

Note: After stopping a recording, starting again will create a new voice file.

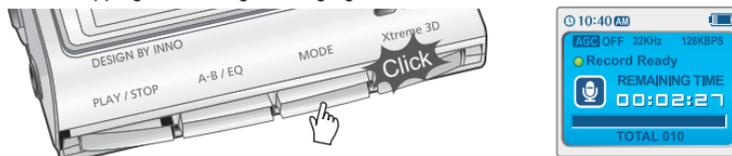


Note

- The recorded file is saved as VOICE000.REC in the VOICE folder.
- If "00:00:00" is displayed on the LCD, the player's memory is full. To record, delete files and/or folders on the player to make some space available. (Refer to page 5-3, Software Instruction Manual)
- Keep the player far away enough from the source to avoid distortion in the recording.
- The player can not record when the memory is full or the battery is low.
- Recorded REC files can be converted to MP3 files using iRiver Manager. (Refer to Software Instruction Manual)

Recording from an external audio source

Preparing Recording from an external audio source

- 1 Connect the LINE OUT jack of the external equipment to the LINE IN jack of the player.

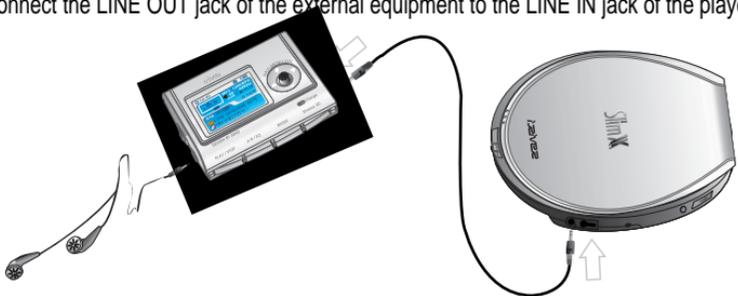


Note • When recording from external microphone, the set menu about Line-in recording also applied to recording from external microphone. (Refer to page 5-24/5-25)

- 2 Push and hold the NAVI/MENU button to enter to Setup Menu. Select "Control" by pushing the NAVI/MENU button toward ◀◀ or ▶▶ direction.
- 3 Adjust Line-in Recording Mode, Line-in Recording Volume, Line-in Auto-Sync and Line-in/External Mic on Control Menu. Refer to page 5-24/5-25 for details.


Recording from an external audio source

Recording from an external audio source


- 1 Press and hold the MODE/REC button. The current function is displayed.

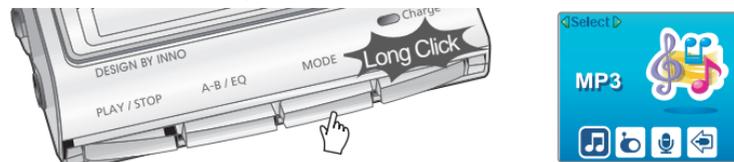

- 2 Press the NAVI/MENU button to the ◀◀ or ▶▶ direction to select Line In mode. Press the NAVI/MENU button (or PLAY/STOP) to go to recording standby mode.

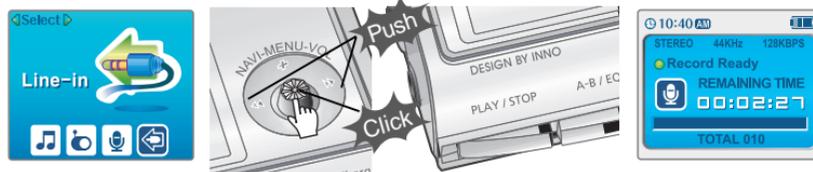


- 3 After playing the connected external equipment, press the MODE/REC button. Recording starts.

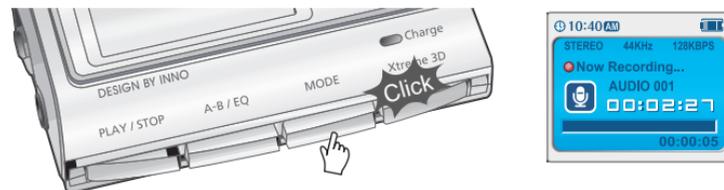

Recording from an external audio source


To pause recording from the External Source

Press the PLAY/STOP button to pause the recording process. Press the PLAY/STOP button again to restart recording.

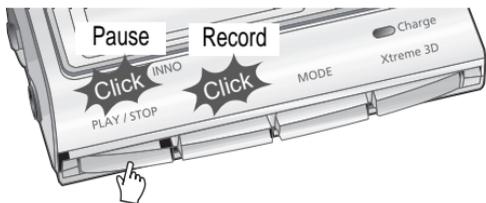

To stop recording from the External Source

Press the MODE/REC button to stop recording.

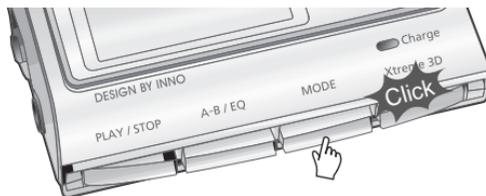

Note

- The recorded file is saved as AUDIO000.REC, AUDIO001.REC... in sequential order. Files are saved in the RECORD folder.
- Files recorded using an external microphone are saved as EXMIC000.REC.

Recording from an external audio source

To play a recorded file

- 1 Press the PLAY/STOP button at stop mode.



- 2 After pressing the NAVI/MENU button, select a recorded file using the VOL + or VOL - switch.



- 3 Press the PLAY/STOP button to play.



Searching the music files(Navigation)	5-1
Enjoying the sound equalizer(EQ)	5-4
Playback Mode	5-5
Playing in a favorite order(Program)	5-7
Customizing the function settings(Menu)	5-11
• Basic operation	5-13
• General	5-15
• Display	5-17
• Timer	5-19
• Control	5-22
• Mode	5-26
• Sound	5-29

Searching the music files (Navigation)


Navigation

Navigation is the function used for searching files. Navigate to locate tracks to play.

1 To search




2 Scroll between folders

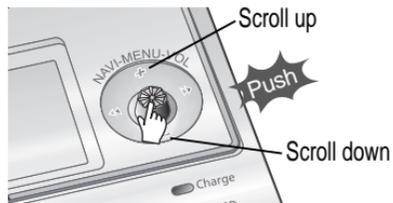


Searching the music files (Navigation)

Navigation

3 Select folder or scroll to upper folder

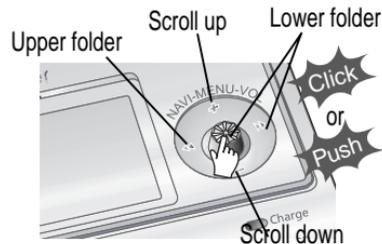

4 Select the file

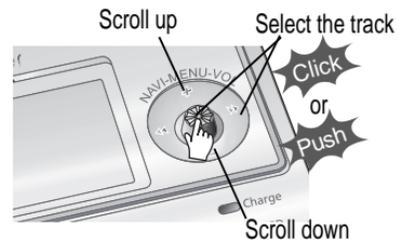

Note • According to file type displayed as follows :

-  ▷ MP3
-  ▷ IRM
-  ▷ ASF

-  ▷ OGG
-  ▷ REC
-  ▷ WMA


• **IRM (iRiver Rights Management)**

iRiver Rights Management is a digital music format. Please visit our web site for details about this music format.


Searching the music files (Navigation)

Deleting a folder or file

- 1 Press the NAVI/MENU button while the stop mode.
Push the NAVI/MENU button to the ◀◀ or ▶▶ direction to select a folder or file.

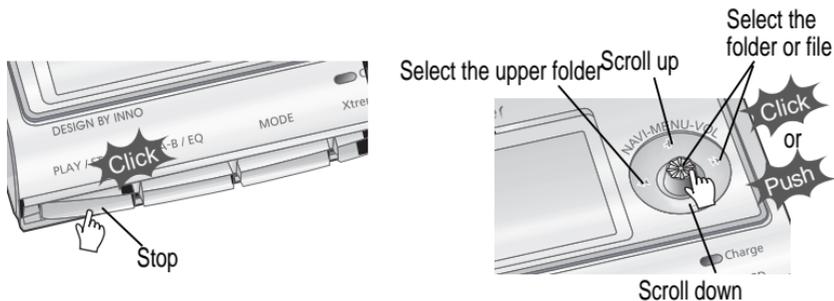

- 2 Click the "MODE" button. "Folder delete are you sure?" is displayed on the screen. Select "YES" by pushing the NAVI/MENU button to the ◀◀ or ▶▶ direction to delete. Then press NAVI/MENU button.

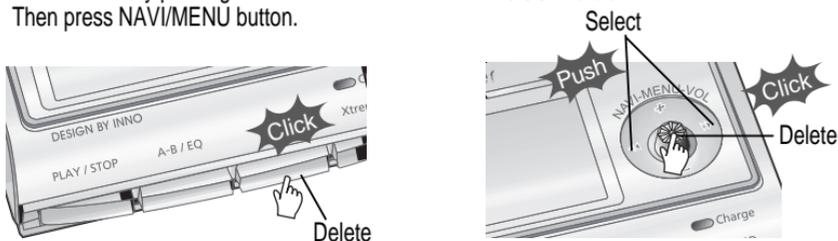


- Note**
- You can only delete a blank folder. In order to delete a folder, you must first delete the files in the folder.

Enjoying the sound equalizer (EQ)

EQ Mode

You can select EQ mode in accordance to the playing music genre.
Press and hold the MEMORY/EQ button to display the current EQ setting.
Then press the button repeatedly to choose a different EQ.

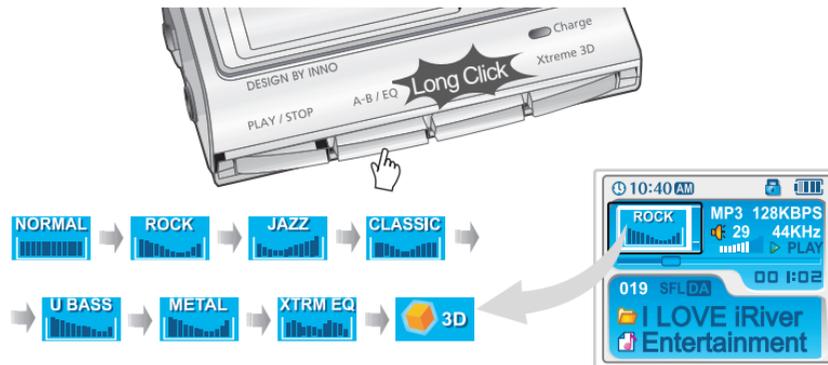


- Note**
- Please refer to the Function Control (Page 5-29/30) for configuring Xtreme EQ.
 - Please refer to the Function Control (Page 5-29/30) for configuring Xtreme 3D.

Playback Mode

Playback mode (Mode)

You can set various Repeat and Shuffle options by choosing these selections under Mode. Change the Repeat or Shuffle mode by pressing the varied pressing the MODE button. Please refer to the MODE function controls (page 5-26) for user-defined configuration.

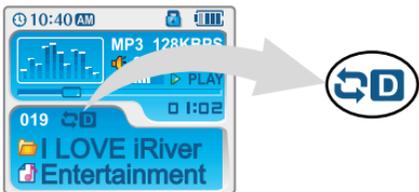

Plying repeatedly (Repeat)

	Play a single track repeatedly.
	Play all tracks in the folder and stop.
	Play all tracks in the folder repeatedly.
	Play all tracks in the player repeatedly.

Playing in random order (Shuffle)

	Randomly play all tracks in the player and stop.
	Play a single track repeatedly.
	Skip forward will select a new random track to play repeatedly. Randomly play all tracks in the folder and stop.
	Randomly play all tracks in the folder repeatedly.
	Randomly play all tracks in the player repeatedly.

Playback Mode

Intro


I **INTRO:** Plays the beginning 10 seconds of each track in sequential order.

INTRO HIGHLIGHT: Plays 10 seconds from 1 minute into each track in sequential order. You can set this function in the MENU function.

Repeating a specific segment (A-B repeat)

You can play a specific segment repeatedly(A-B repeat).

Press the A-B/EQ/MEMORY button once to select the beginning <A> point. Press the button again to select the ending point. A-B interval will be repeated.

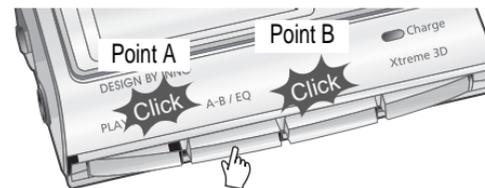


Playing in a favorite order (Program)

Activating program mode


Program mode: Create your own playlist.

- 1 Click the MEMORY/EQ button at Stop playback. The program list is displayed.
If the player has been programmed already, the current program list will display.

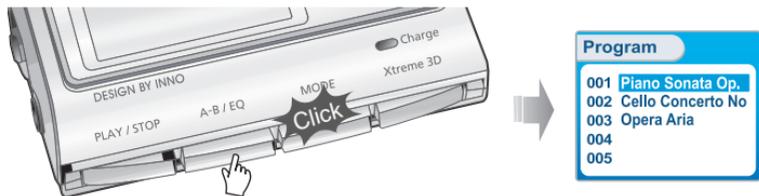

- Program mode is activated while in Stop Mode.
- Repeat A-B is activated while playing.

- 2 Press NAVI/MENU button, then select the music to program by using the VOL+, VOL - switch.

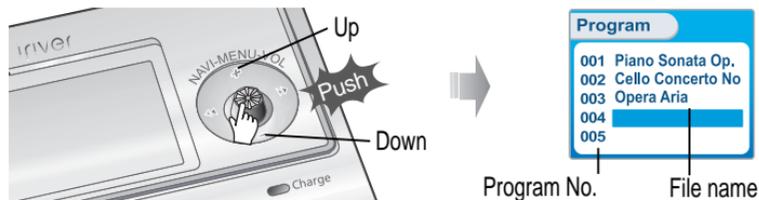


Program No. File name


Playing in a favorite order (Program)

Activating program mode

- 3 Press the NAVI/MENU button, then select the music to program by using the VOL+, VOL - switch.

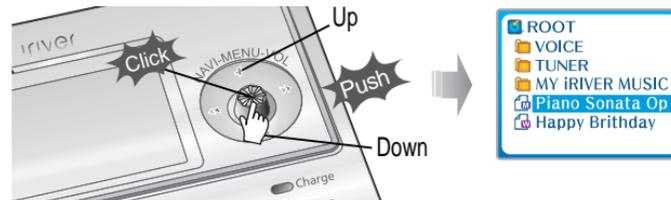

- 4 Press the MEMORY/EQ button to save the program list.

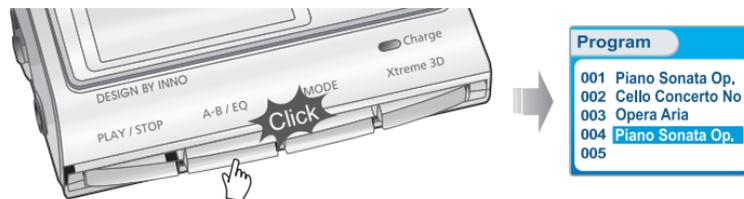


- Push the VOL + or VOL - switch to select a folder, then press the MEMORY/EQ button to save all files in the folder.
- Sub folders are not saved.

Playing in a favorite order (Program)

Program play

After programming, press the PLAY/STOP button to play the tracks in sequential order.

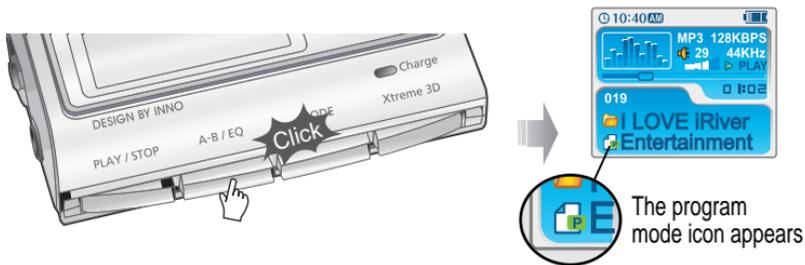

To remove files from the program list

Press the MODE/REC button after selecting the file to be deleted using the MEMORY/EQ button at stop mode. The program list is automatically changed.



Playing in a favorite order (Program)


To cancel program mode

Push the MENU/NAVI button to the VOL - direction at stop mode. Program playback is cancelled and normal playback is started.



Customizing the function settings (Menu)

Configuration

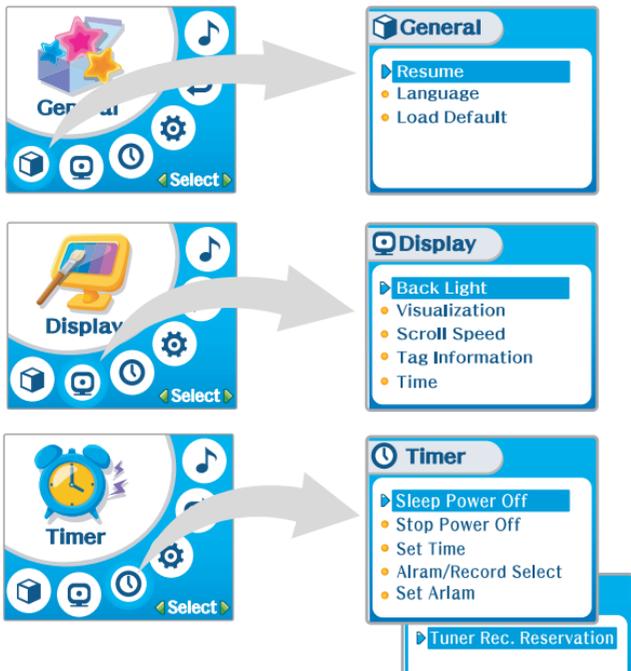

- Note**
- Functions are subject to change with different firmware versions.
 - Users can configure their own settings.

Customizing the function settings (Menu)

Configuration

