

INSTRUCTION MANUAL

1. GENERAL

The Keyless Entry System allows locking and unlocking of the vehicle doors by the Remote control using a hand held radio transmitter to activate a radio receiver which is integrated into the vehicle.

2. Function

2.1 Remote Door Lock

Press the LOCK button of the transmitter, and all the doors will be locked.

All turn signal lamps are also flashed only once while the ignition of the vehicle is being off.

2.2 Remote Door Unlock

Press the UNLOCK button of the transmitter, and all the doors will be unlocked.

All turn signal lamps are also flashed twice while the ignition of the vehicle is being off.

2.3 Safety Lock

All doors may be locked automatically in 30 seconds in case of below

- You don't operate any other actions, like turning on the ignition or operating the doors, after all the doors were unlocked by the UNLOCK button of the transmitter.

2.4 Burglar Alarm

The optical and audible alarm (turn signal lamps and siren) are activated during 28 seconds, when the opening signal of any vehicle door or engine bonnet or trunk is detected. This function is valid only for the arming mode which caused by the remote door lock function and released by the remote door unlock function.

NOTE : The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

