

 
Troubleshooting

How to Use

| |
|--------------------|
| Parts Description |
| Setup |
| Network / Internet |
| Connections |
| Settings |
| Backup / Recovery |
| Security |
| Other Operations |
| Notifications |

Parts and Controls of the Keyboard (VGP-WKB14)

Describes the features of the keyboard, such as keys, buttons and indicator lights.

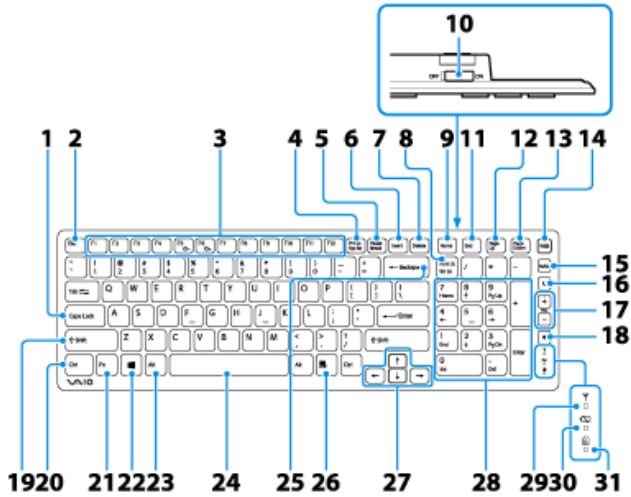

- 1. Caps Lock key [\[Details\]](#)
- 2. Esc key
- 3. Function keys [\[Details\]](#)
- 4. Prt Sc key
- 5. Pause / Break key
- 6. Insert key
- 7. Delete key
- 8. Num Lk / Scr Lk key [\[Details\]](#)
- 9. Home key
- 10. Power switch of the keyboard
- 11. End key
- 12. Page Up key
- 13. Page Down key
- 14. WEB button
- 15. MAIL button
- 16. Sleep button [\[Details\]](#)
- 17. Volume control buttons [\[Details\]](#)
- 18. Muting button [\[Details\]](#)
- 19. Shift key
- 20. Ctrl key
- 21. Fn key [\[Details\]](#)
- 22. Windows key
- 23. Alt key
- 24. Space bar
- 25. Backspace key
- 26. Applications key
- 27. Directional arrow keys
- 28. Numeric keypad
- 29. Connect indicator [\[Details\]](#)
- 30. Battery indicator [\[Details\]](#)
- 31. Caps lock indicator [\[Details\]](#)

Hint

- There is a raised dot on the F, J and 5 keys.
- After 10 minutes of idle time, the keyboard enters the power saving mode and all indicator lights turn off.



Troubleshooting

How to Use

Parts Description

Setup

Network / Internet

Connections

Settings

 
Backup / Recovery


Security

Other Operations

Notifications

Checking the Remaining Battery Power of the Keyboard

The remaining battery power of the keyboard can be checked by the  battery indicator.

1. Check the  battery indicator of the keyboard.



It blinks when the battery is running out of power.

The indicator is only a guide and may not show the remaining battery power accurately, depending on the AA battery.

Hint

- If you intend not to use the keyboard for a long time, slide the power switch to **OFF** to extend battery life.

Related Topic

[Parts and Controls of the Keyboard](#)

[Replacing the AA Battery of the Keyboard](#)



Troubleshooting

How to Use

Parts Description

Setup

Network / Internet

Connections

Settings

Backup / Recovery

Security

 
Other Operations

Notifications


Replacing the AA Battery of the Keyboard

Change the AA battery in the keyboard when the battery power becomes low.


1. Set the power switch of the keyboard to **OFF**.



 2. Turn over the keyboard, and then push the center of the cover in the direction shown in the illustration below.

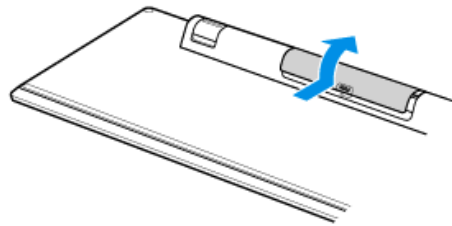

 3. Remove the old battery and insert a new AA alkaline battery (minus (-) end first), then close the cover.

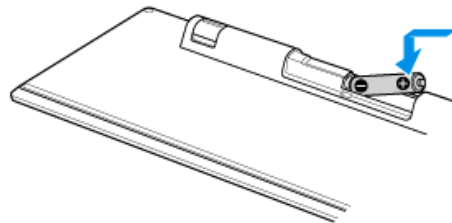

4. Set the power switch of the keyboard to **ON**.



Note

- Use a new AA alkaline replacement battery.
- If you do not intend to use the keyboard for a while, set the power switch of the keyboard to **OFF**. If you do not intend to use the keyboard for an extended period of time, remove its AA battery.
- When the battery power becomes low, replace with a new AA battery promptly. Keeping a depleted battery in the keyboard may cause battery leakage.
- Since the keyboard cannot be used with a commercially available rechargeable battery, use a non-rechargeable AA battery. If you use a rechargeable battery, battery leakage may occur, resulting in a malfunction.
- Do not recharge a dry cell AA battery.
- Refer to the supplied safety information manual.

Related Topic

[Parts and Controls of the Keyboard](#)

[Checking the Remaining Battery Power of the Keyboard](#)

2012 Sony Corporation

FCC Statement: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC Statement: Cet appareil et son antenne (s) ne doit pas être co-localisés ou fonctionner en association avec une autre antenne ou transmetteur.