

Wireless Microphone™

INSTRUCTION CARD
FCC ID: WLE-0059MCP002

The Wireless Microphone™ is a High Precision 2.4Ghz Microphone that connects directly to your game system.

The Wireless Microphone™ will work with all games that are microphone compatible including games that use the Logitech™ brand of wired microphone.

Getting Started

- The Wireless Microphone™ is powered by 1 x PP3 type battery which is supplied
- Slide open the battery compartment cover
- Insert the battery taking care that it is positioned with the + & - markings facing the correct way
- Replace the battery compartment cover
- The microphone now needs to be synchronized with the USB receiver dongle
- Switch on the microphone

Synchronizing the microphone and receiver

Simply insert the USB receiver into one of the available USB ports on your console.

This must be done within 2 minutes of inserting the batteries into the microphone.

The Blue LED on the USB receiver dongle will start to flash. This indicates that it is not yet synchronized with the microphone.

After a short period the Blue LED on the USB receiver will become steady to indicate that it is now synchronized with the microphone.

This synchronization procedure needs to be done only once and your microphone is now ready to use.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Note: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate equipment.

Customer Services

DATEL CUSTOMER SERVICES EUROPE

Customer Services, Dattel Ltd,
Stafford Road, Stone,
Staffordshire, ST15 0DG, UK

Email: Support@datteldesign.com
Web: www.codejunkies.com

DATEL CUSTOMER SERVICES USA

ATTN: Customer Services,
Dattel Design & Development Inc,
33 North Garden Avenue,
Clearwater, FL 33755

Email: Support@datteldesign.com
Web: www.codejunkies.com
Telephone: 727-431-0650