

myvoice

(MODEL : DMR-1309/18MP)

myvoice



MODELS

	DMR - 1309MP	DMR - 1318MP
Recording time	9 hour	> 18 hour
Memory	32MB	64MB

- **Extended Record Length**
Allows you to record up to a maximum of 550 minutes.
(32MB-standard)
- **MP3 File Playback Function**
The unit can be used to play and store digital music
- **Digital Interface**
Allows you to edit and save computer files as well as transfer them via e-mail
- **External Memory Add-on**
A multimedia card which increases memory on which standard computer files may be stored
- **Repeat Playback Function**
A message or a selected section can be played repeatedly
- **VOR Function**
Recording time is maximized as it only records when there is audible sound
- **Microphone Sensitivity Setup**
Microphone sensitivity can be adjusted relative to the distance from the source of the sound and the background noise level
- **Quick Search Function**
Allows quick searches for recorded sections you wish to hear
- **Time Display**
Displays the current time for additional convenience
- **Alarm**
The alarm may be setup according to your requirements
- **Telephone Recording Function**
Allows you to record important telephone conversations

Features	1
Contents	2
Advance preparations	
Installing the battery	3
Name of the each part	4
Voice recording operating manual	
Turning on the voice	5
Recorder/MP3 mode	6
Adjusting the volume	7
Recording	8
Playing	9
Deleting recorded messages	10
Setting up repeat playback	13
Setting the microphone sensitivity	14
Setting up VOR	15
Setting up the BEEP sound	16
Using the MP3	
Playing	17
Setting up repeat playback	18
Deleting an MP3 file	19
To delete all MP3 files Deleting MP3 files	20
Setting up the sound mode	21
Setting bass mode	22
Installing the MMC (Multimedia card)	23
Miscellaneous function	24
Setting the current time	24
Setting the alarm	25
Setting the Hold function/ viewing display data	26
microphone to record/ connecting to the telephone to record	27
Connecting to the audio system	28
Voice Wizard Installation manuals	
Connecting to a computer	29
Connecting the voice recorder to your Computer	32
Drive installation	33
basic icon	35
The others	36
Trouble shooting	36
Precautions	37
FCC note	39

Installing the battery

Replace the batteries in power off states

1. insert AAA(LR03) battery with symbols aligned correctly and then slide the cover back into place.



* Caution

1. Battery life time can be change according to operating method.
2. Take the battery off when you do not USB for a long time.

Checking the battery level



Name of the each part

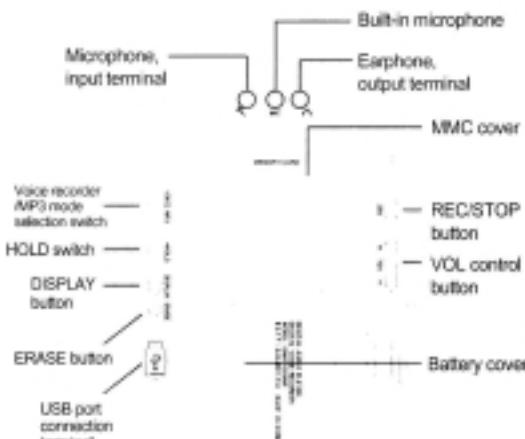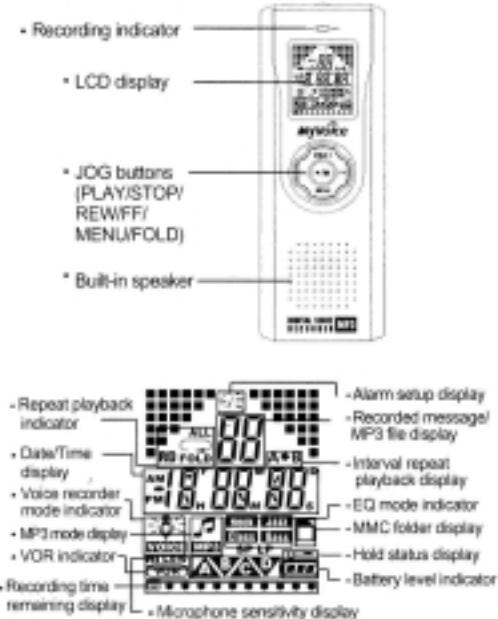

Turning on the voice recorder/MP3 mode

Your unit consists of voice recorder and MP3 modes.

To start, select the mode you wish to use.

To turn on the voice recorder mode



1. Set the voice recorder/MP3 mode selection switch to VOICE.
2. A recording folder, recording message number, recording time, etc. are displayed and you may record and playback the voice recording. Press the JOG button.

To turn on the MP3 mode



1. Set the voice recorder/MP3 mode selection switch to MP3. Press the JOG button.
2. The MP3 file number and playback time are displayed and you can playback MP3 files.



If the unit is switched on and left idle for more than 1 minute in voice recorder/MP3 mode, it will automatically return to standby mode. The current time will be displayed in this mode.

Recording

Turn the built-in microphone towards the sound source while recording.



With the voice recorder mode on

1. Press the JOG button in the direction to select the folder to record. Each push of the JOG button will allow you to select a folder from A, B, C, D in this order. (A, B, C, D, with a MMC installed.) A folder can only be selected when you are in "STOP" mode. Press the REC/STOP button.
2. A red signal lamp goes on and recording begins, a recording number is allocated and the recording time is displayed.

To stop recording

1. Press the REC/STOP button. The red signal lamp goes off and the recording will have been stored.

To pause the recording



Press the JOG button in direction.

The red signal lamp will flash and recording is temporarily paused. To continue recording, press the JOG button once more in the direction.



You can listen to content being recorded through your earphones while recording. Refer to page 14 to set the microphone sensitivity. Refer to page 15 if you'd like to use the VOR function which sets unit to record only when there is sound.

Adjusting the volume

The volume may be adjusted from levels 0 to 22.

To increase the volume



Press the side of the volume button. As you press the button, the VOL number increases along with the volume level.



To decrease the volume



Press the side of the volume button. As you press the button, the VOL number decreases along with the volume level.



You cannot adjust the volume while in standby mode where the LCD only displays the current time. In this case, press the JOG button once to switch to voice recorder or MP3 mode and then adjust the volume.

Listening with earphones

You need to connect a set of earphones to your unit to listen to music in MP3 mode. You can also listen to your recorded/playback messages on your earphones in voice recorder mode. Insert the earphone jack into the output terminal. You should hear sound through your earphones.



No sound is emitted through the speakers when you are in MP3 mode.

Playing

With voice recorder mode on

1. Press the JOG button in the direction to select the folder from which to play back a file.

Each push of the JOG button in the direction will allow you to select a folder from A, B, C, D, in this order. (A, B, C, D, with a MMC installed.)

2. Press the JOG button in the (pr) direction to select the file number you wish to play.

3. Press the JOG button. The playback time will be displayed and playback begins.



To stop playback

Push the JOG button. Playback will stop. To continue playback, press the JOG button again.

If you want to search for and play a specific section of a recording

Keep the JOG button pressed in the (pr) direction while playing.

If your unit automatically switches to standby mode (idle for more than one minute) while in playback, then switch back into voice recorder mode and the recording will continue playing back from the point where it was turned off.

Deleting recorded messages

To delete one recorded message



1. Press the JOG button in the direction to select the folder from which you wish to delete. Each press of the JOG button will allow you to select a folder from A, B, C, D in this order.



(A, B, C, D, with a MMC installed.)
2. Press the JOG button in the (or) direction to select the number of the recording you wish to delete.



3. Press the ERASE button once briefly to select 'ONE'.



In voice recorder mode

The selection will switch between ONE, FOLD, ALL each time you press the button. However, if you have a MMC installed, the selection will switch between ONE, ALL.

- ONE : Select this if you wish to delete the recording number selected.
- FOLD : Select this if you wish to delete all recordings in the folder selected.
- ALL : Select this if you wish to delete all recorded messages.

4. Press the ERASE button for more than 5 seconds. ERASE will blink and the selected recording will be deleted. When you delete a recording, the recording numbers are automatically rearranged.



A deleted recording cannot be recovered. Please check carefully before you delete any recordings.

Deleting recorded messages

To Delete all recorded messages in one folder



1. Press the JOG button in the direction to select the folder you wish to delete.

Each press of the JOG button will allow you to select a folder from A, B, C, D, in this order.

(A, B, C, D, with a MMC installed.)

The 'FOLD' and the folder to be deleted will begin blinking.



2. Press the ERASE button twice briefly to select FOLD.

With voice recorder mode on

The selection will switch between ONE, FOLD, ALL each time you press the button.

However, if you have a MMC installed, the selection will switch between ONE, ALL.

You must select ALL in this case, in order to delete all messages in the folder.

- ONE : Select this if you wish to delete the recording number selected.
- FOLD : Select this if you wish to delete all recordings in the selected folder.

- ALL : Select this if you wish to delete all recorded messages.

3. Press the ERASE button for more than 5 seconds. ERASE will blink and the selected folder will be deleted.



A deleted recording cannot be recovered. Please check carefully before you delete any recordings.

Deleting recorded messages

With voice recorder mode on

The 'ALL' and folders A, B, C, D will start blinking. The selection will switch between ONE, FOLD, ALL each time you press the button.

However, if you have a MMC installed, the selection will switch between ONE, ALL. If you select ALL in this case, only the folders in the MMC will be deleted.

- ONE : Select this if you wish to delete the recording number selected.
- FOLD : Select this if you wish to delete the recordings in the selected folder.
- ALL : Select this if you wish to delete all recorded messages. Press the ERASE button briefly three times to select ALL.

With voice recorder mode on

2. Press the ERASE button for more than 5 seconds. ERASE will blink and all recorded messages will be deleted.



A deleted recording cannot be recovered. Please check carefully before you delete any recordings.

When you select ALL from folders A, B, C, D, to delete all recordings, those recorded messages stored in the MMC are not deleted. Select ALL in the MMC folder to delete those recordings.

Setting up repeat playback

With voice recorder mode on

1. Press MENU from the JOG buttons for 3 seconds. REP will be displayed.

2. Press the JOG button in the (or) direction to select repeat.

3. Press the JOG button. Repeats all selections in the selected mode. The selected REP function is released when the unit is switched to MP3 mode.



REP

Repeat indicator
(Repeat Off)



REP

Repeat one recorded message



REP

Repeat all recorded messages in the current folder



REP

Repeat all recorded messages (including those on the MMC)

Repeating a sector

1. Press MENU from the JOG buttons at the beginning of the section from where you wish to repeat while playing a message. A will be displayed.

2. Press MENU from the JOG buttons at the end of the section which you wish to repeat while playing a message. will be displayed. The section from to will be repeated.

To cancel the setup, press MENU from the JOG buttons again or press the button in the (or) direction.

 
Setting the microphone sensitivity

The microphone sensitivity can be set according to the distance of the sound source and/or the background noise level.



With voice recorder mode on

1. Press MENU from the JOG buttons for 3 seconds REP will be displayed.
2. Press MENU from the JOG buttons once. MIC HI or MIC LO will be displayed.

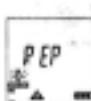

MIC HI (high microphone sensitivity mode)

Select this if when the sound source is near by or when the background noise level is low.



MIC LO (standard mode)

Select this if when the sound source is distant or when the background noise level is high.



3. Select the microphone sensitivity level by pressing the JOG button in the (pr) direction



4. Press the JOG button. The HI (high sensitivity) or LOW (standard mode) will be displayed according to the setup and the selected recording is automatically played. When a recording is made, the selected microphone sensitivity level is automatically activated.



Setting up the BEEP sound

 
You can select the function that emits a BEEP sound when a button is pressed.



1. Press MENU from the JOG buttons for 3 seconds REP will be displayed.
2. Press MENU from the JOG buttons 3 times. BP ON or BP OFF will be displayed.
3. Set the BEEP function by pressing the JOG button in the (pr) direction.



Select this if you wish to hear a Beep when a button is pressed.

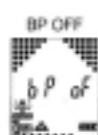

Select this if you do not wish to hear a Beep when a button is pressed.



4. Press the JOG button. Setup will be saved and the recorded message will begin playing automatically.

You can also set the BEEP button, following the method above, while in MP3 mode. However, you will only hear the BEEP sound via the earphones.



Setting up VOR

The VOR (Voice Operating Record) mode directs the unit to record only when there is audible sound. When a sound source becomes in audible, recording is suspended.



With voice recorder mode on

1. Press MENU from the JOG buttons for 3 seconds. REP will be displayed.
2. Press the MENU section of the JOG buttons twice. VOR ON or VOR OFF will be displayed.
3. Select the VOR function by pressing the JOG button in the (pr) direction.



VOR ON

Select this if you wish to use the VOR function.

VOR OFF

Select this if you do not wish to use the VOR function.



Press the JOG button.

The setup will be saved and the recorded message will begin playing automatically. If VOR ON is selected, the mark is appeared and the VOR function is activated when a recording is made.



You can make a VOR selection, following the procedures above, while recording.

Playing

You can hear music in MP3 mode via the use of a set of earphones.



While in MP3 mode

1. Press the JOG button in the (pr) direction to select the number of the MP3 file to be played.
2. Press the JOG button. Playback will begin with the playback time display.

When you wish to play a file in the MMC folder, first press the section of the JOG buttons and select the MMC folder.

To stop playing

 
 
 
 
Press the JOG button. Playback will STOP. To continue playing, press the JOG button again. If your unit automatically switches to standby mode after playback was paused, switch back to MP3 mode and playback will resume from the point where it was turned off.

If you wish to playback a particular section of a MP3 file. Press the JOG button in the (pr) direction while playing. The file will rewind or forward and resume playback once you release the button.

Setting up repeat playback



1. Press the MENU section of the JOG button for 3 seconds. REP will be displayed.
 2. Press the JOG button in ((or)) direction to select the repeat function of your choice.
 3. Press the JOG button.
- The files will be played in the selected mode. The selected REP function is released when you switch to the voice recorder mode.

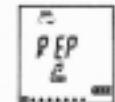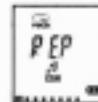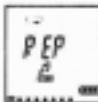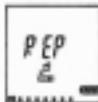

Repeating a sector

1. Press the MENU section of the JOG button at the beginning of the sector from which you wish to begin playing. A will be displayed.
2. Press the MENU section of the JOG button at the end of the sector which you wish play.

B will be displayed. The section from A to B will be repeated. To cancel setup, press the MENU section of the JOG button again or press the button in B or)) direction.

Deleting an MP3 file

To delete one MP3 file



1. Press the JOG button in the ((or)) direction to select the MP3 file.
2. Press the ERASE button briefly once to select "ONE".



3. Hold the ERASE button down for more than 3 seconds. The selected MP3 file will be deleted.

When you delete a MP3 file, the remaining file numbers are automatically rearranged. The selection will switch between ONE, ALL, each time you press the button.

However, if you have a MMC installed, the selection will switch between ONE, ALL.

- ONE : Select this if you wish to delete only the selected MP3 file.
- ALL : Select this if you wish to delete all MP3 files.

To delete a file in the MMC folder, first press the section of the JOG buttons to select the MMC folder.



 
A MP3 file cannot be recovered. Please check carefully before you delete any recordings.

To delete all MP3 files Deleting an MP3 file



While in MP3 mode

1. Press the ERASE button twice briefly to select "ALL". To delete a file in the MMC folder, first press the section of the JOG button to select the MMC folder.

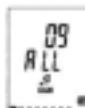

The selection will switch between ONE, ALL, each time you press the button.

- ONE : Select this if you wish to delete only the selected MP3 file.
 - ALL : Select this if you wish to delete all MP3 files.
2. Hold the ERASE button down for more than 5 seconds. ERASE will be displayed and all of the MP3 files will be deleted.



A MP3 file cannot be recovered. Please check carefully before you delete any recordings.

 
Setting up the sound mode

You may set up the sound mode in which to play back MP3 files when in MP3 mode.



While in MP3 mode


1. Press MENU from the JOG buttons for 3 seconds. REP will be displayed.
2. Press MENU from the JOG buttons once. EQ OFF, ROCK, JAZZ, or CLASSIC will be displayed.
3. Press the JOG button in the ((or)) direction to select the sound mode.

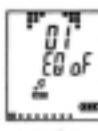

EQ OFF



 ROCK

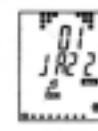

JAZZ



CLASSIC



3. Press the JOG button in the ((or)) direction to select the sound mode.



4. Press the JOG button.
The setup is saved and the MP3 file begins to play automatically.