

Please read this introduction manual carefully  
before using your digital voice recorder.

# myvoice

(MODEL : DMR-904SU/909SU/918SU)



#### UNIVERSAL SERIAL BUS

	DMR-904SU	DMR-909SU	DMR-918SU
SP	255min	255min	510min
LP	-	540min	1100min

**Decktron**  
Digital Electronic Communication Korea

Tel : 82.43.269.9600  
Fax: 82.43.272.9933  
<http://www.decktron.com>

## Contents

○ Features .....	1
○ Name of each part .....	2
○ Preparation for operating .....	4
- BATTERY LOADING .....	4
- SET MENU .....	5
○ Operating Voice Recorder .....	6
- RECORDING .....	6
- CONVENIENT RECORDING FUNCTION .....	7
- PLAYBACK .....	8
- CONVENIENT PLAYBACK FUNCTION .....	9
- ERASE .....	10
- CONNECTING WITH EXTERNAL APPLIANCE .....	11
○ Caution .....	13
- CAUTION IN OPERATING .....	13
- CAUTION IN USING BATTERY .....	14
- CAUTION FOR SAFETY .....	14
○ Trouble shooting .....	15
○ Specification .....	17

 
My Voice

## Features

- ◆ USB Interface  
To adopt USB standard, which is easy to set up and connect with PC
- ◆ FOLDER & FILE  
Max. 396 recording files are available  
Max. 99 voice recording files into each divided A,B,C,D folder
- ◆ Repeat & A-B Repeat function  
Can play over and again as you choose interval A-B
- ◆ VOR(Voice Operated Recording)  
Prevents unnecessary recording when there is no sound or voice
- ◆ Mode function  
Easy to select SP and LP(Only 909SU/918SU) function  
Check the total recorded time and remaining record time  
VOR on/off and sensitivity selection
- ◆ Intro Scan function  
To be available for playing only fore part of each message successively
- ◆ Digital Volume control  
10 steps volume control function
- ◆ E-mail function  
To be available for E-mailing voice file
- ◆ External input/output connection  
To be available for mutual recording with another appliances
- ◆ Automatic power off  
Power will be automatically off if there is no button pressing within 1 minute


My Voice 1

## Name of each part

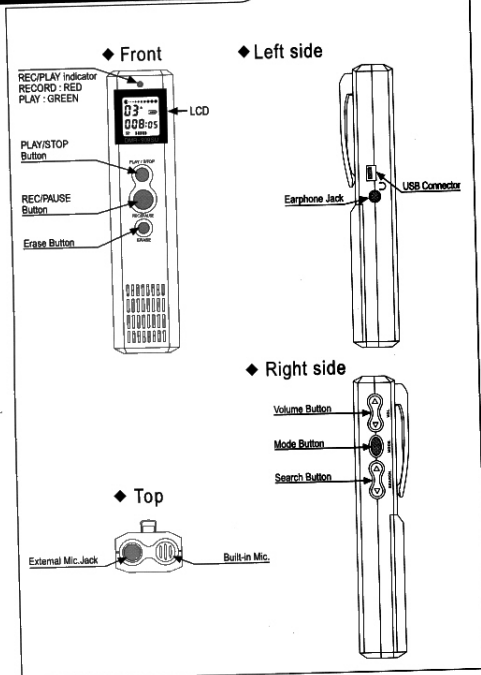

2 My Voice

## Name of each part

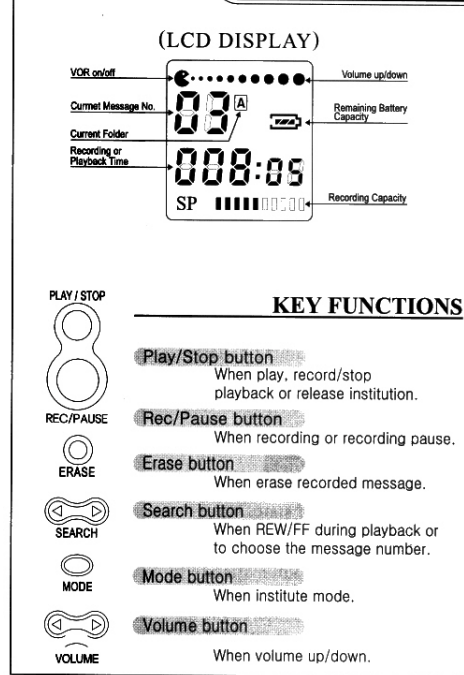 


My Voice 3


## Preparation for operating
 
### ● BATTERY LOADING

Be sure replace batteries in power off state.

1. To open the battery cover, press  and then slide it off.


Insert two AAA(LR03) batteries according to the polarity indicated and then slide the cover back into place.



Battery Life Time (LR03 alkaline batteries)

Usage	Available Time
Recording	Approximately 10hrs
Speaker Playback(VOL.5)	Approximately 8hrs

 2. To check the remaining battery power, press the PLAY/STOP button or REC/PAUSE button in power off state.



For Power  On

\* Press the PLAY/STOP or REC/PAUSE under power off state.

For Power  Off

- \* Voice recorder automatically turns off if no button is pushed within 1 minute in the mode.
- \* Press the mode button in the mode until "OFF" appears on LCD with a beep sound.

## 4 My Voice

## Preparation for operating

### ● SET MENU

1. Press PLAY/STOP or REC/PAUSE button, so that the unit gets POWER ON.
2. If you press MODE button, the unit will be operated as follows.

Folder (A,B,C,D)

▶ SP/LP (909SU/918SU only)

▶ VOR (ON/OFF) Remain Time

 
3. Press MODE and FF/REW buttons, you will be selected folder, recording mode and VOR function
4. Press MODE button four times, the unit will be displayed remain recording time.

## My Voice 5

## Operating voice recorder

### ● RECORDING

1. Press PLAY/STOP or REC/PAUSE button, so that the unit gets POWER ON.
2. Let MIC toward sound source and press REC/PAUSE button. Recording file will be added and recording will be continued.

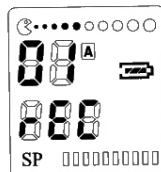

3. If you press REC/PAUSE button during recording, recording will be paused and if you press REC/PAUSE button once again, PAUSE will be released.
4. To stop recording, press PLAY/STOP button.

- \* Please do test recording in advance to prevent from failing recording.
- \* If MEMORY is exhausted or file number gets more than 99 messages in one folder, "FULL" will be displayed and recording won't be continued.
- \* VOLUME level will be controlled during recording.

## 6 My Voice

## Operating voice recorder

### ● CONVENIENT RECORDING FUNCTION

#### Simple recording

1. Press REC/PAUSE button more than 3 seconds in power off state, recording will be started.
2. If you press REC/PAUSE button during playback, recording will be started.

#### INDEX Addition

If you press FF button during recording mode, FILE number will be added and recording will be continued.

#### REC Monitor

During recording, you can monitor recording message by inserting earphone into earphone jack.

 
#### VOR On/Off Control

You can select VOR ON/OFF with MODE button even during recording mode.

## My Voice 7

● **PLAYBACK**

1. Press PLAY/STOP or REC/PAUSE button, so that the unit gets POWER ON.
2. Select FILE number FF/REW buttons.
3. If you press PLAY/STOP button, playback will be continued to the final message in the folder.

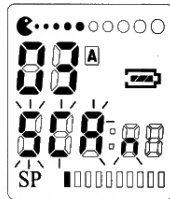

4. Adjust volume level with volume UP/DOWN button.
5. If you press PLAY/STOP button more than 1 second during playback, playback will be paused and if you press PLAY/STOP button one time, pause will be released.
6. To stop playback, press PLAY/STOP button one more time.

● **CONVENIENT PLAYBACK FUNCTION**

**REVIEW & CUE**

1. If you press FF/REW buttons shortly at playback mode, the fore & hind recording files will be played.
2. If you press FF/REW buttons for a long time, REW & FF will be proceeded during the button pressing.

**SCAN PLAY**

If you press PLAY/STOP button for more than 2 second, the fore part of each file in current folder will be played for 5 seconds in order.

**FILE REPEAT**

If you press MODE button shortly twice during playback, current playing file will be repeated with "rP" displayed.

And then press MODE button, FILE REPEAT will be canceled.

**A-B section REPEAT**

If you press MODE button one time shortly during playback mode, point A will be selected.

And please press MODE button one more time, point B will be selected.

And then A-B section will be repeated.

And then press MODE button, A-B section REPEAT will be canceled

● **ERASE**

(Erasing one FILE)

1. If you select a file with FF/REW buttons at stop mode and press ERASE button shortly.

(Selected file number will be blinking on LCD. For checking the message, the erasing file will be played.)

2. If you press ERASE button one more time, selected file will be erased and following file number will be changed as current file number.

(Erasing all data in FOLDER)

1. If you press ERASE button for more than 3 seconds, current folder will be blinking on LCD.
2. Select a folder with FF/REW button.
3. And then press ERASE button one more time, so that all data in the selected folder will be erased with beep sound.

 
(Erasing all FOLDERS)

1. If you press ERASE button for more than 3 seconds, current folder will be blinking on LCD.
2. Select all folders with FF/REW button.
3. And then press ERASE button one more time, so that all data in the all folders will be erased with beep sound.

● **CONNECTING WITH EXTERNAL APPLIANCE**

**Recording with external microphone**


If you connect external microphone into MIC JACK, built-in mic will be excluded and you can record with optional external microphone.



(You can clip external microphone onto your lapel, so that you can take free action. Also, you can record with much better sound quality by approaching sound source.)

**In case of recording external appliance into voice recorder unit**

 **AUDIO**

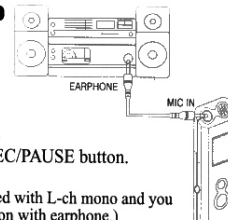

Connect optional audio cable into both earphone of external appliance and MIC of DVR unit and REC/PAUSE button.


(Recording will be proceeded with L-ch mono and you can check recording condition with earphone.)

## Operating voice recorder
 
### ● CONNECTING WITH EXTERNAL APPLIANCE

#### In case of recording from DVR unit into external appliance


Connect optional audio cable into both earphone jack of DVR unit and mic or external INPUT of external appliance and press both PLAY/STOP button of DVR unit and REC button of external appliance.

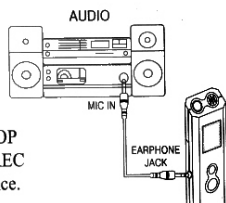

(Do test-recording in advance and you can't adjust volume level with VOLUME UP/DOWN buttons of the DVR unit.)

#### Telephone recording

 Connect optional Tel-line adapter into Tel-line cord as following picture and press REC/PAUSE button once telephone conversation is started.

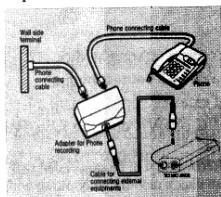

(Not available for Digital Telephone and the telephone with different MODULAR JACK)

## Caution

### ● CAUTION IN OPERATING

- Do not drop the product and give it a shock. It could cause troubles.
- Do not place the product at the following condition and/or places:
  - Where it is full of high temperature above 60 degrees.
  - At a dusty place.
  - Nears the heaters or from any type of heat sources.
  - In a car with windows closed, especially in summer.
  - At a heavy damp place like a bathroom.
- Any excessive force on the LCD display could cause damages to it and to overall LCD functions.
- A magnetic card such as a credit card or a subway communication ticket may not be working any longer once it is placed on or close to the speaker.
- The seller holds no liability for any damages caused by misuse of the product and any claims from the third party.
- The seller holds no liability for any lost messages which are caused by repair or any other troubles.

## Caution

### ● CAUTION IN USING BATTERY

- Do not have a short circuit, disassemble, heat or put battery in the fire, and do harm to your eyes, also could cause fever and the rupture of a doctor.
- Do not use different kind of battery.
- Take the battery off when you donot use for a long time.

### ● CAUTION FOR SAFETY

- Take battery off when there are malfunction caused by smoke and heat.
- Do not use in the place where electronic product's operation is prohibited like inside of airplane.
- Do not use in driving and walking, since any accident could be happened.

## Troubleshooting

### Check following articles first if you find any mal-functional matter.

#### In case of no LCD display

- Check1 Did you check the battery capacity?  
→ Replace batteries
- Check2 Are both polarities of the battery loading in right way?  
→ Load batteries in each right +/- position.

#### In case of no recording

- Check1 Isn't the message number or file FULL?  
→ Erase unnecessary message.
- Check2 Did you check the battery capacity?  
→ Replace batteries

#### In case of no playback

- Check1 Isn't there any recorded message?  
→ Check the recording message.
- Check2 Did you check the battery capacity?  
→ Replace batteries

#### In case of no sound from speaker

- Check1 Isn't your volume at 0(zero) position?  
→ Adjust the VOLUME button.
- Check2 Isn't your earphone inserted in?  
→ Take the Earphone Jack off.

## Troubleshooting

### In case of no sound from earphone

- Check1 Isn't your volume at 0(zero) position?  
→ Adjust the VOLUME button.  
Check2 Is your earphone properly inserted in?  
→ Insert the Earphone Jack completely

### In case of S/W installation interruption

- Check 1 Does your computer meet system requirement for this product's S/W?  
→ Check the system requirement.  
(After completing S/W installation, your PC's hard disk should have enough space)

- In case of low battery displaying, operating can't be proceeded properly

## Specification

For improvement of product, specifications and design can be changed without previous notice.

Item	Specification
Model Number	DMR-904SU DMR-909SU DMR-918SU
Max Recording Time(SP)	250 min 250 min 510 min
Max Recording Time(LP)	- 540 min 1100 min
Max File No to REC	4folder x 99 files
Freq. Response	400Hz ~ 3500Hz
Max Output Power	100mW at THD 10%
Input	Built-in MIC & 3.5F Mono Jack
Output	Built-in speaker & 3.5F Mono Jack
Loud Speaker	Dynamic 23mm
Dimensions	26(W) x 109(H) x 18(D) mm
Weight	33g(Without battery)
Storage Medium	Built-in Flash Memory
Power Source	DC 3V, "AAA" alkaline x 2
Battery Life Time	Recording/10hrs, Playback/8hrs
Condition to use	0° C ~ 40° C
Basic Accessory	User's manual, Earphone, 2 AAA battery, USB cable, Install CD
Optional Accessory	Telephone Adapter, Telephone cord, Audio Cable, External Pin MIC, Hand strap

## INFORMATION TO THE USER (Part 15.105(b))

For Class B digital device

### INFORMATION TO THE USER

Τησ εθυιπμεντ ηασ βεεν τεστεδ ανδ φουνδ το χομπλψ ωιτη τη λιμιτσ φορ α Χλασσ Β διγιταλ δεπιχε, πυρσυαντ το παρτ 15 οφ τη ΦΧΧ Ρυλεσ. Τησε λιμιτσ αρε δεσιγνεδ το προπιδε ρεασοναβλε προτεχτιον αγαινιστ ηαρμφυλ ιντερφερενχε ιν α ρεσιδεντιαλ ινσταλλατιον. Τησ εθυιπμεντ γενερατεσ, υσεσ ανδ χαν ραδιατε ραδιο φρεθυενχησ ενεργησ ανδ, ιφ νοτ ινσταλλεδ ανδ υσεδ ιν αχχορδανχε ωιτη τη ινστρυχτιονσ, μαψ χαιυσε ηαρμφυλ ιντερφερενχε το ραδιο χομμυνιχατιονσ. Ηοωεπερ, τηρε ισ νο γυαφαντεε τηατ ιντερφερενχε ωιλλ νοτ οχχυρ ιν α παρτιχυλαρ ινσταλλατιον. Ιφ τησ εθυιπμεντ δοεσ χαιυσε ηαρμφυλ ιντερφερενχε το ραδιο ορ τελεπισιον ρεχεπτιον, ωηιχη χαν βε δετερμινεδ βψ τυρνινγ τηε εθυιπμεντ οφφ ανδ ον, τηε υσερ ισ ενχυουραγεδ το τρψ το χορρεχτ τηε ιντερφερενχε βψ ονε μορε οφ τηε φολλοωινγ μεασυρεσ:

Ρεοριεντ ορ ρελοχατε τηε ρεχειπιινγ αντεννα.

Ινχυρεασε τηε σεπαρατιον βετωεεν τηε εθυιπμεντ ανδ ρεχειπερ.

Χοννεχτ τηε εθυιπμεντ ιντο αν ουτλετ ον α χιρχυιτ διφφερεντ φορομ τηατ το ωηιχη τηε ρεχειπερ ισ χοννεχτεδ.

Χονσυλτ τηε δεαλερ ορ αν εξπειριενχεδ ραδιο/Τς τεχνηνιχιαν φορ ηελπ.

### WARNING (Part 15.21)

Χηανγεσ ορ μοδιφιχατιονσ νοτ εξπρεσσυλ αππροπεδ βψ τηε μανουφαχτυρερ χουλδ ποιδ τηε υσερ'σ αυτηοριτησ το οπερατε τηε εθυιπμεντ.