 



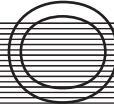


T184367
DeereTrax
 VCU10014

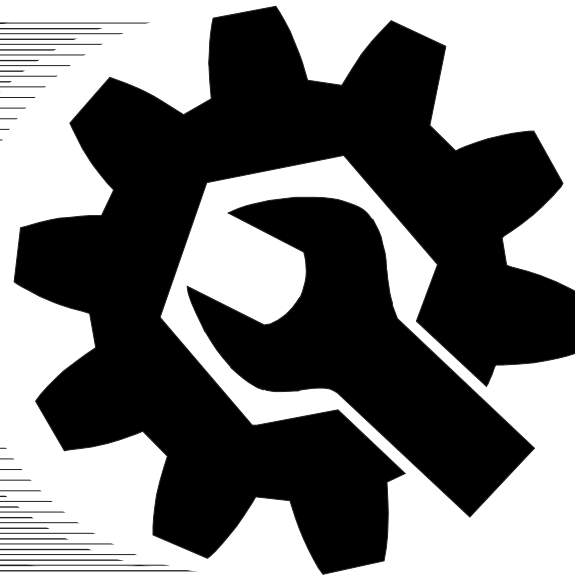

**INSTALLATION
 INSTRUCTIONS**



 All
 1600
 C, F, U

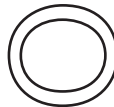


John Deere Dubuque Works
DeereTrax (13APR00)


ENGLISH

COPYRIGHT © 2000
 DEERE & COMPANY
 Moline, Illinois

All rights reserved
 A John Deere ILLUSTRATION® Manual

  
DeereTrax-19-13APR00

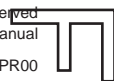

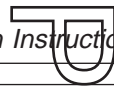




Live With Safety

 
Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.

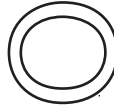

TS231 -19-07OCT88

    DX,LIVE -19-25SEP92-1/1

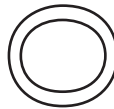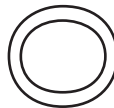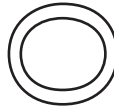

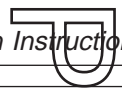

Parts List

 
 
 
 
 
Part numbers may change without notice.

Replacement parts are available through your John Deere dealer.



• Installation Kit VCA10023

- VCA10000 Communications Controller Harness
- VCA10001 Communications Controller
- VCA10002 Power Harness
- VCA10003 LED Light Harness
- VCA10005 Antenna Mounting Bracket and Clamp
- VCU10009 Alcohol Wipes (2 used)
- VCU10012 Hook and Hook Primer (3 used)
- VCU0013 Self Tapping Screw 6 mm x 70 mm (4 used)
- VCU10014 Installation Instructions T184367
- VCU10017 U-bolt (2 used)
- VCU10018 Metal Butt Splice (6 used)
- VCU10019 Wire 18 ga. 12 ft.
- VCU10020 Convoluted Tubing 12 ft.
- VCU10030 Lock Washer Stainless Steel 0.250 in. (4 used)
- VCU10031 Flat Washer Stainless Steel 0.250 in. (4 used)
- VCU10032 Ground Strap
- VCU10034 Cellular Antenna Cable
- VCU10035 Cellular Antenna
- VCU10036 Ground Plate
- VCU10037 GPS (Global Positioning System) Antenna
- VCU10038 GPS Antenna Cable
- H159144 Grommets (3 used)
- R105388 Tie Band (25 used)
- T178552 Heat Shrink Tubing (6 used)
- 14M7194 Nut Hex 6mm (2 used)
- 14M7229 Nut Hex 5 mm (3 used)
- 14M7151 Nut Hex 8 mm (2 used)
- 19H1648 Cap Screw 3/8-16 x 3/4
- 24M7138 Washer 5 mm (3 used)
- 24M3739 Washer 8 mm (2 used)
- 24M7105 Washer 6 mm (2 used)
- 24H1136 Washer 5/16 x .734 x .065
- 24H1622 Washer 3/8 x .870 x .083
- 37H87 Self Tapping Screw 5/16 x 0.75


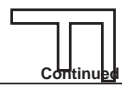
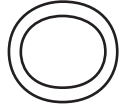
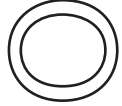
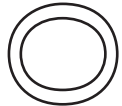
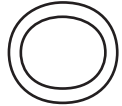



Continued on next page

CED, TX13067, 2386 -19-02FEB99-1/2

– 907-0077 Installation Record

       CED,TX13067,2386 –19–02FEB99–2/2

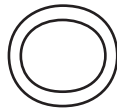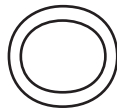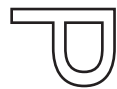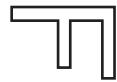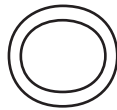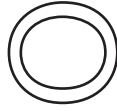

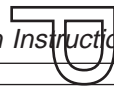





Service Parts

Below listed parts can be ordered as replacement or repair parts.




Service Part numbers may be different than original kit part numbers.

    - AT180705 Ground Strap
- VCA10000 Communications Controller Harness
- VCA10001 Communications Controller
- VCA10002 Power Harness
- VCA10003 LED Light Harness
- VCA10039 Hook and Hook Fastener Kit (Includes Hook and Hook Fastener and Primer)
- VCA10005 Antenna Mounting Bracket and Clamp
- VCU10034 Cellular Antenna Cable
- VCU10035 Cellular Antenna
- VCU10036 Ground Plate
- VCU10037 GPS (Global Positioning System) Antenna
- VCU10038 GPS Antenna Cable
- 14M7194 Nut Hex 6mm, Alternator Terminals (2 used)
- 14M7229 Nut Hex 5 mm, Alternator Terminals (3 used)
- 14M7151 Nut Hex 8 mm, Alternator Terminals (2 used)
- 24M7138 Washer 5 mm, Alternator Terminals (3 used)
- 24M3739 Washer 8 mm, Alternator Terminals (2 used)
- 24M7105 Washer 6 mm, Alternator Terminals (2 used)
- R105388 Tie Band (25 used)
- 37M7233 Self Tapping Screw 6 mm x 75 mm, Controller Mounting (4 used)
- 19H1648 Cap Screw 3/8-16 x 3/4 Ground Strap to Controller
- 24H1136 Washer 5/16 x .734 x .065 Ground Strap to Controller
- 24H1622 Washer 3/8 x .870 x .083 Ground Strap to Controller
- 37H87 Self Tapping Screw 5/16 x 0.75 Ground Strap to Ground
- CC20572 U-bolt (2 used) Antenna Mount
- 12H302 Lock Washer .250 in. (4 used) Antenna Mount
- 24M7035 Flat Washer .250 in. (4 used) Antenna Mount
- H159144 Grommets (3 used)
- T178552 Heat Shrink Tubing (6 used)

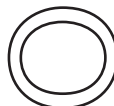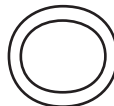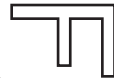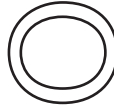



Parts Included In Kit

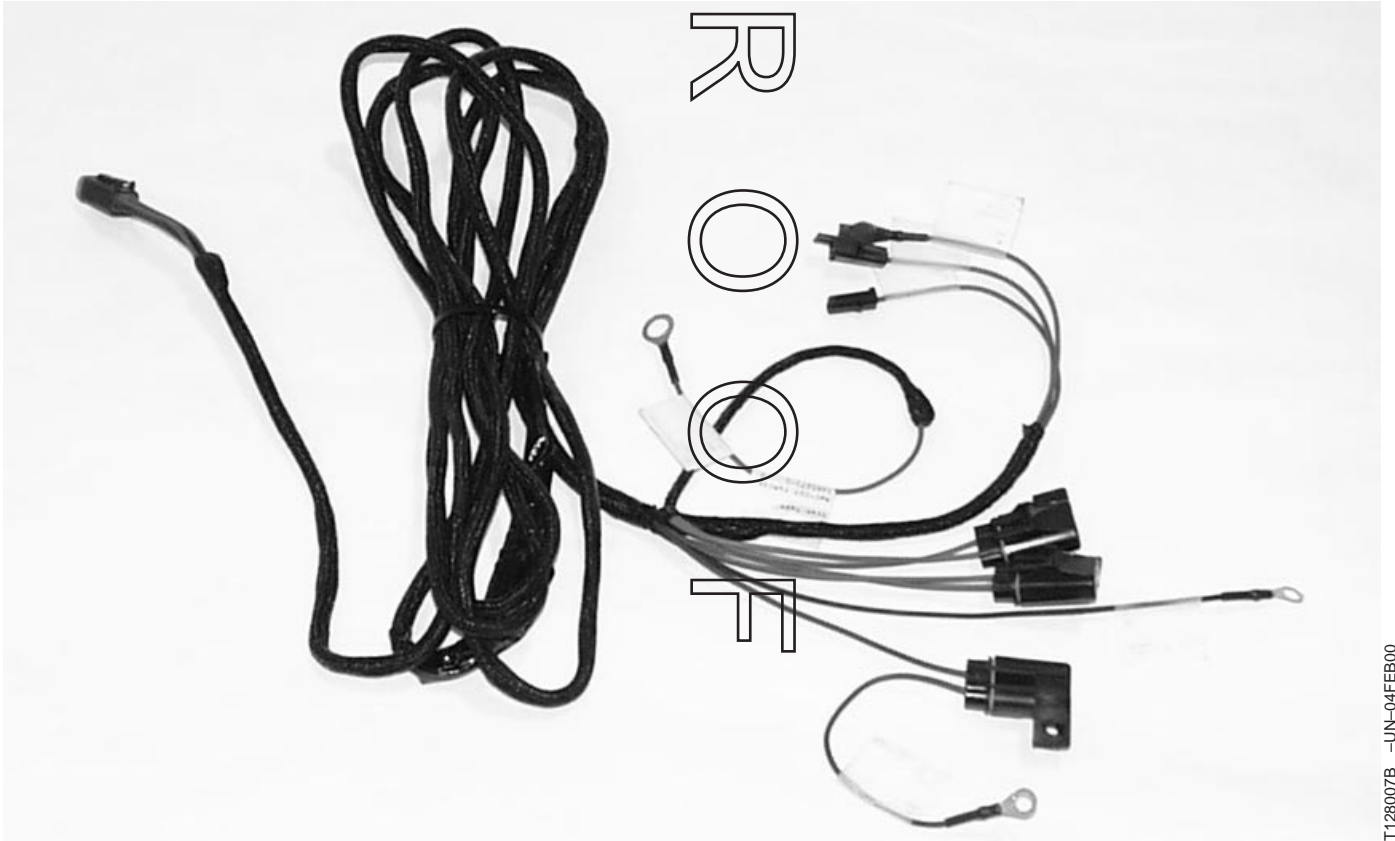

T128007B -UN-04FEB00

 
 
 
1—VCA10002 Power Harness


Power Harness



Continued on next page

CED,TX13067,2662 -19-31JAN00-1/14

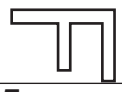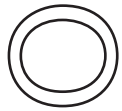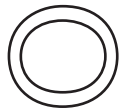

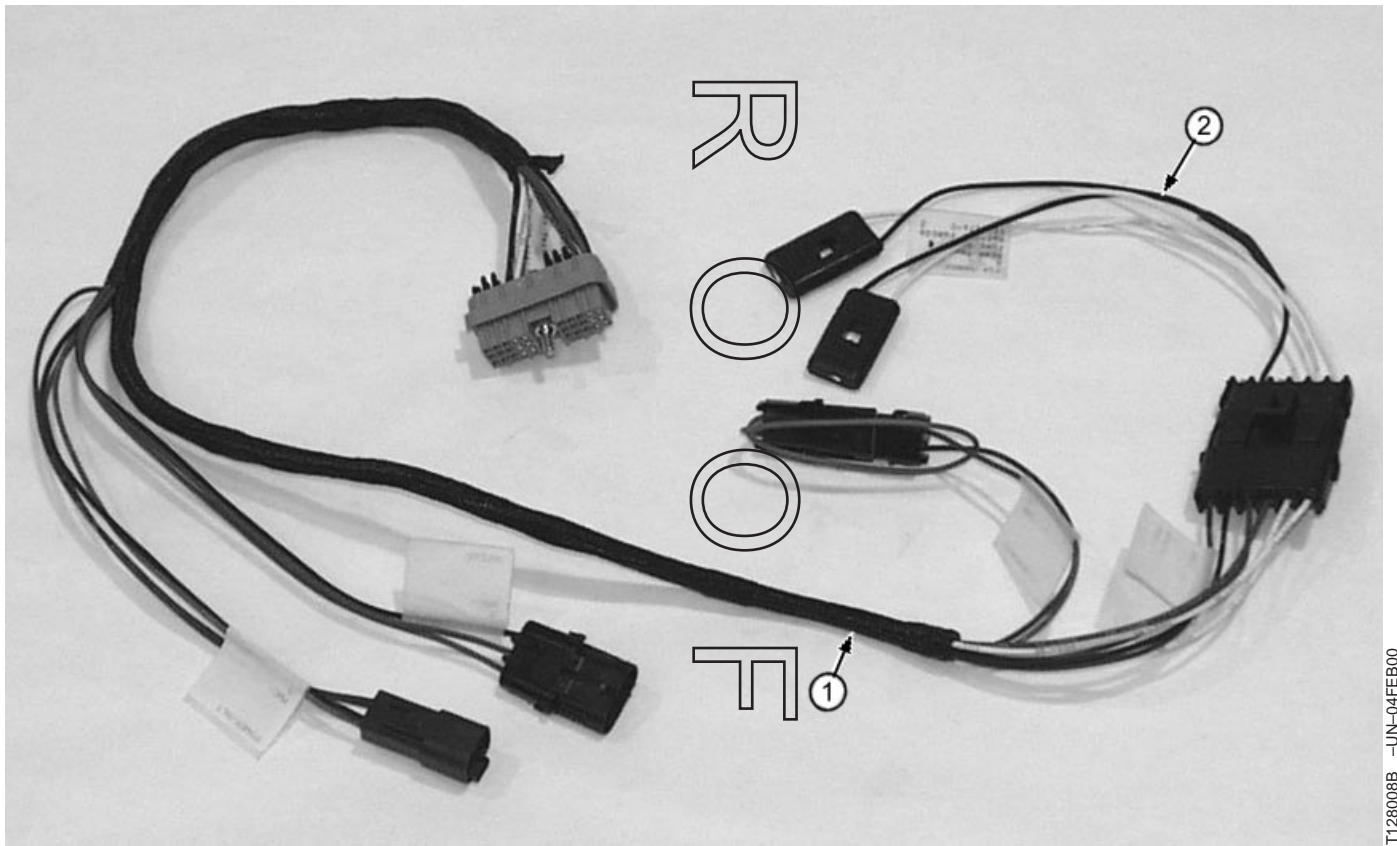

TT28008B -UN-04FEB00

1—VCA10000 Communications Controller Harness

 
 
 
2—VCA10003 LED Light Harness

Communications Controller and LED Harnesses




Continued on next page

CED,TX13067,2662 -19-31JAN00-2/14

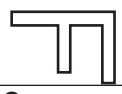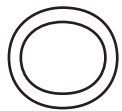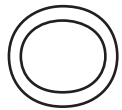

Communications Controller

- 1—VCA10001 Communications Controller
- 2—Hook and Hook Fastener Strips, part of VCA10039 Hook and Hook Fastener Kit

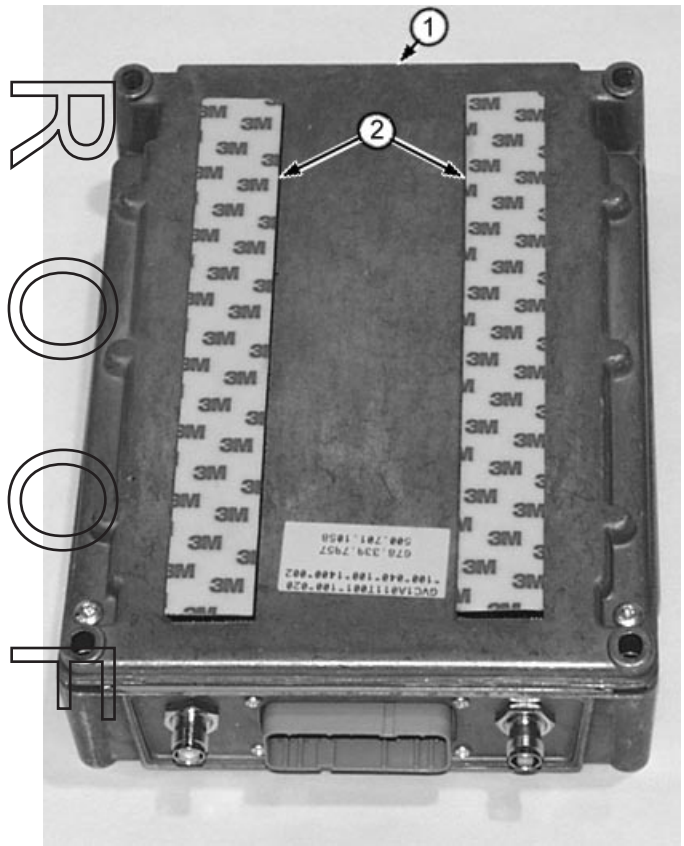


T127991B -UN-02FEB00

CED,TX13067,2662 -19-31JAN00-3/14

Communications Communicator Mounting Hardware

- 1—VCU10032 Ground Strap
- 2—VCU10013 6mm x 75 mm Self Tapping Screws (4)
- 3—24H1622 Washer 3/8 x .870 .083
- 4—19H1648 Cap Screw 3/8-16 x 3/4
- 5—24H1136 Washer 5/16 x .734 x .065
- 6—37H87 5/16 x .75 Self Tapping Screw
- 7—Alcohol Wipe (2), part of VCA10039 Hook and Hook Fastener Kit
- 8—Primer (3), part of VCA10039 Hook and Hook Fastener Kit

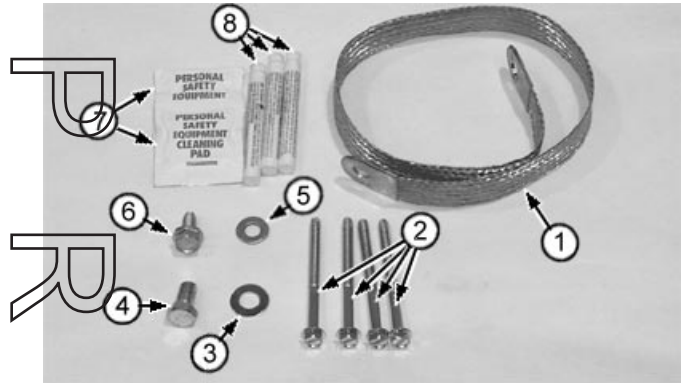


T127992B -UN-02FEB00

Continued on next page

CED,TX13067,2662 -19-31JAN00-4/14

Alternator Hardware

- 1—24M3739 8 mm Flat Washer (2)
- 2—14M7151 8 mm Hex Nut (2)
- 3—24M7105 6 mm Flat Washer (2)
- 4—14M7194 6 mm Hex Nut (2)
- 5—24M7138 5 mm Flat Washer (3)
- 6—14M7229 5 mm Hex Nut (3)

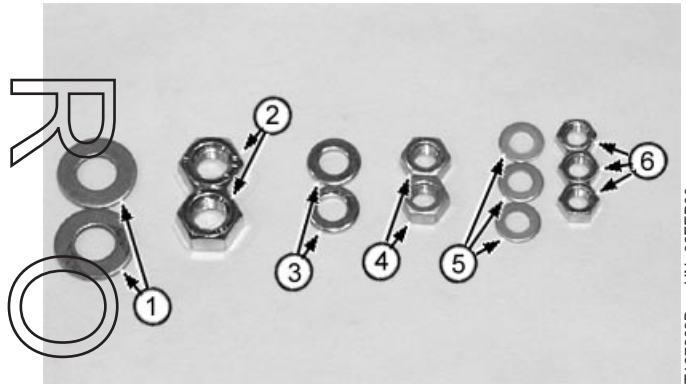


T127993B -UN-02FEB00

CED,TX13067,2662 -19-31JAN00-5/14

Installation And Operating Instructions

VCU10014 Installation and Operating Instructions

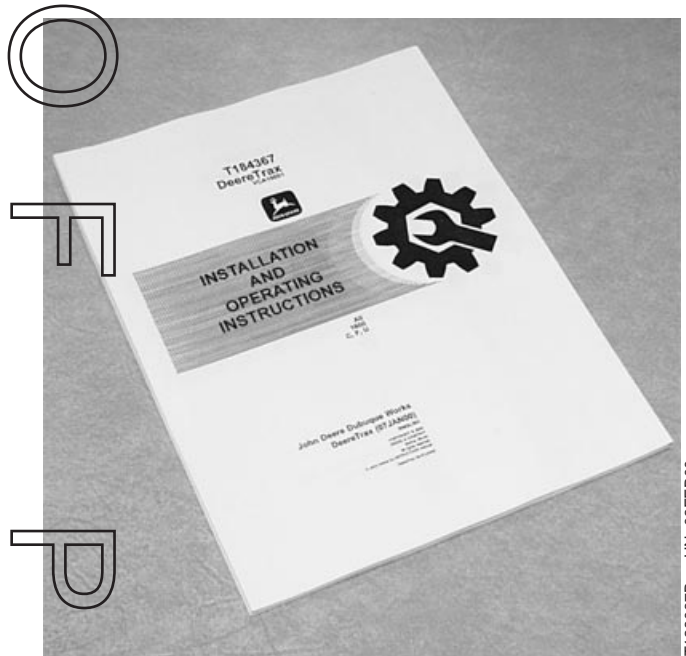


T128067B -UN-03FEB00

Installation and Operating Instructions

Continued on next page

 CED,TX13067,2662 -19-31JAN00-6/14

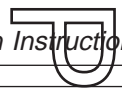

Harness Routing Hardware

- 1—VCU10020 Convolute Tubing and VCU10019 Wire
- 2—VCU10018 Metal Butt Splice (6)
- 3—T178552 Heat Shrink Tubing (6)
- 4—H159144 Grommet (3)
- 5—R105388 Tie Band (25)




T127996B -UN-23FEB00

CED,TX13067,2662 -19-31JAN00-7/14

Antenna Mount Bracket

- 1—VCU10005 Antenna Mounting Bracket

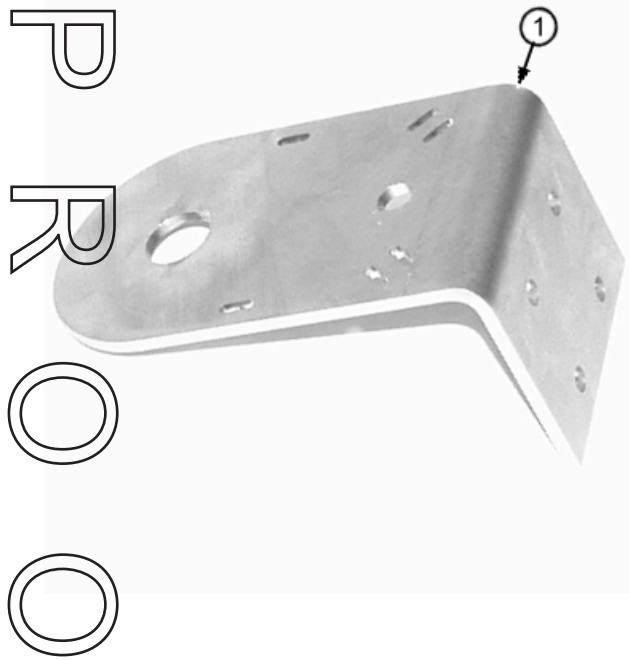


T128082B -UN-03FEB00

Continued on next page

CED,TX13067,2662 -19-31JAN00-8/14

Antenna Mounting U-Bolts

- 1—14H387 1/4-20 Hex Nut (4)
- 2—12H302 Lock Washer .250 in. (4)
- 3—24M7035 Flat Washer .250 in. (4)
- 4—CC20572 U-Bolts (2)

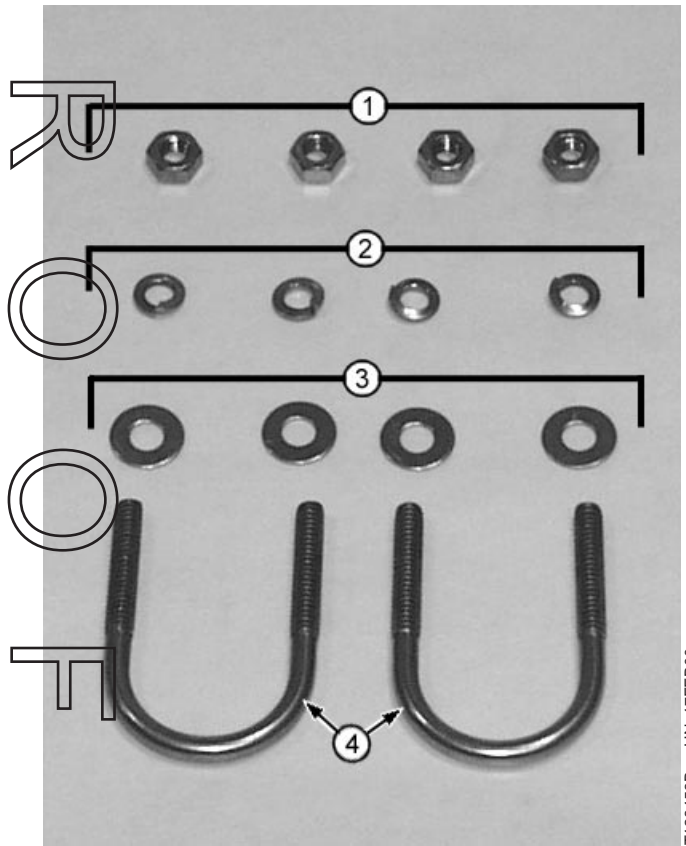

CED,TX13067,2662 -19-31JAN00-9/14

Cellular Antenna

VCU10035 Cellular antenna includes all parts shown.

FCC Antenna Warning

Use of any antenna other than the one provided with this kit may expose the user or nearby persons to radiofrequency (RF) emission levels outside the FCC safety guidelines.

- 1—Antenna
- 2—Rubber Washer




Continued on next page

CED,TX13067,2662 -19-31JAN00-10/14

Cellular Antenna Ground Plate

VCU10036 Cellular Antenna Ground Plate.

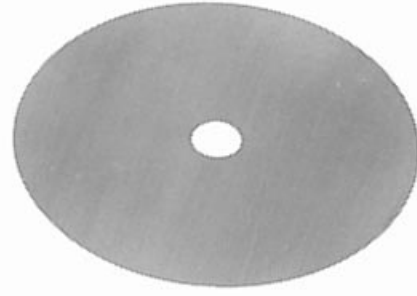

Cellular Antenna Ground Plate

T128304B -UN-11FEB00

CED,TX13067,2662 -19-31JAN00-11/14

Cellular Antenna Cable

VCU10034 Cellular antenna cable includes all parts shown.

- 1—Cable
- 2—Nut
- 3—O-Ring



T128068B -UN-03FEB00


Continued on next page

CED,TX13067,2662 -19-31JAN00-12/14

GPS Antenna

VCU10037 GPS antenna includes all parts shown..

- 1— GPS Antenna
- 2—O-Ring
- 3—Nut

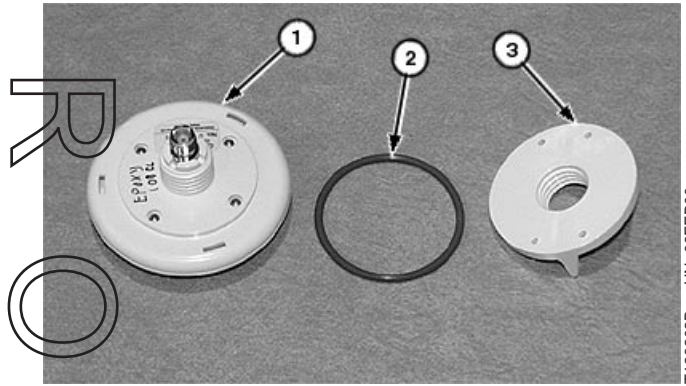

VCU10037 GPS Antenna

T128202B -UN-09FEB00

CED,TX13067,2662 -19-31JAN00-13/14

GPS Antenna Cable

VCU10038 GPS antenna cable includes all parts shown.



VCU10038 GPS Antenna Cable

T128203B -UN-09FEB00

 
 
 
CED,TX13067,2662 -19-31JAN00-14/14



Tools and Equipment

Not Supplied With Kit

- Drill Bits
 - #4 or 7/32 in.
 - 17/64 in.
 - 3/8 in.
 - 1/2 in.
 - 3/4 in.
 - Uni-Bit®
- Volt-Ohmmeter
- Electric Drill
- Duct Tape
- Electrical Tape
- Screw Drivers
- Metric and SAE Wrenches
- Fish Tape
- Utility Knife
- Wire Crimping Tool

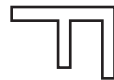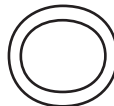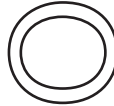


CED, TX13067, 2455 -19-03AUG99-1/1

Customer Support Center


The Customer Support Center will assist dealers or customers having problems installing or operating the DeereTrax system.

Customer Support Center phone number:
1-800-939-0805.

 NOTE: When the DeereTrax system was ordered, Customer Support Center contacted the person identified on the purchase order as on-site administrator. The on-site administrator was given detailed instructions for configuring and using the DeereTrax software.

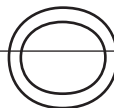


CED, TX13067, 2452 -19-03AUG99-1/1

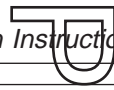 

Customer Personal Service (CPS)

Note to customer:

 
CPS will be used to gain access to your vehicle's information via the Internet through DeereTrax software at <http://cps.deere.com>

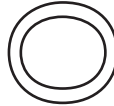



CED,TX13067,2453 -19-03AUG99-1/1

Cellular Service

 
DeereTrax communicates via a built-in cellular technology. The unit is pre-programmed at the factory and will be activated when it is shipped to the dealer. If problems arise, contact the Customer Support Center at 1-800-939-0805.

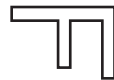

CED,TX13067,2454 -19-03AUG99-1/1

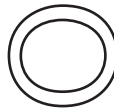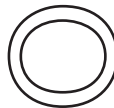  

Basic System Layout

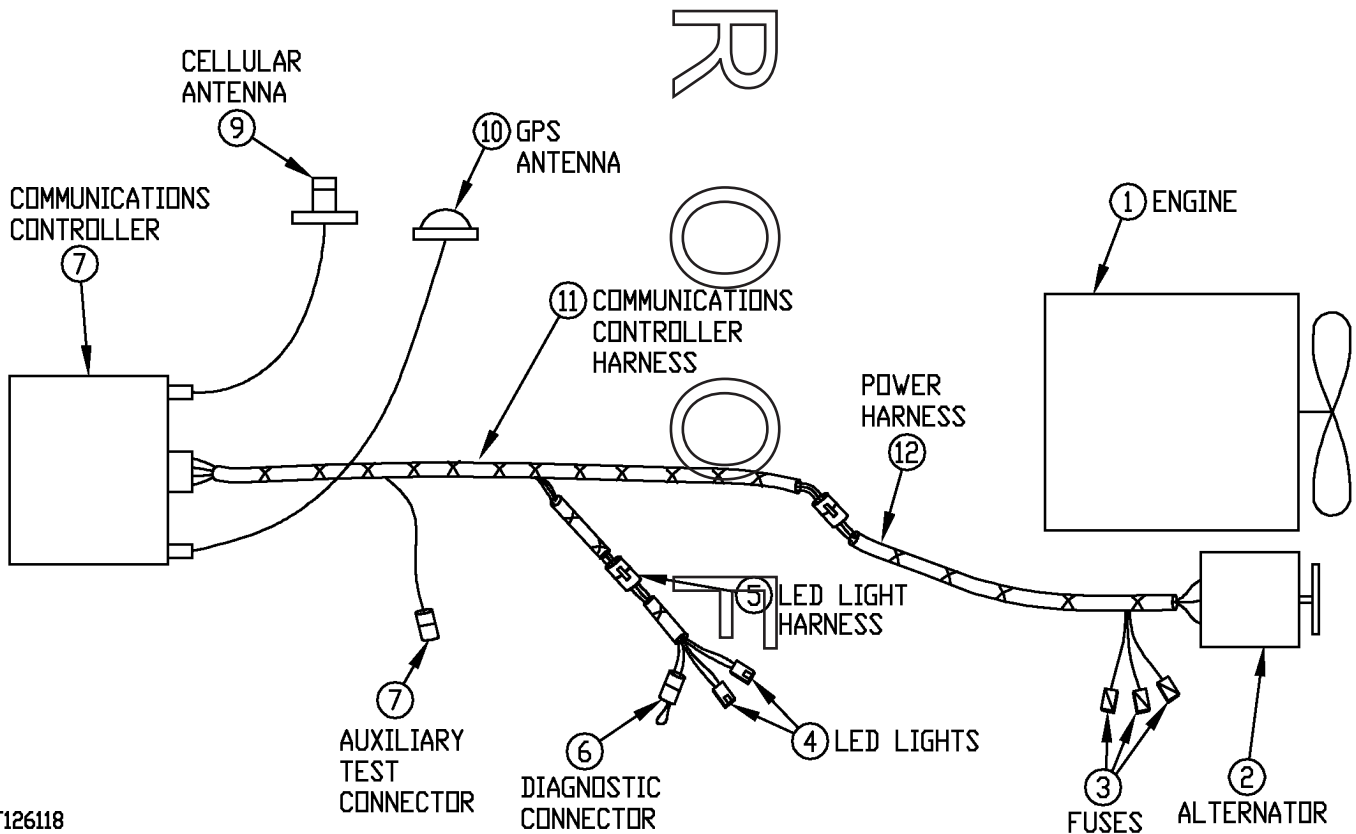

T126118

- | | | | |
|--------------|------------------------|-----------------------------|---------------------------|
| 1—Engine | 4—LED Lights | 7—Communications Controller | 10—Communications Harness |
| 2—Alternator | 5—Diagnostic Connector | 8—Cellular Antenna | 11—Power Harness |
| 3—Fuses | 6—Auxiliary Connectors | 9—GPS Antenna | |

Basic components of the system are:

1. Antennas and antenna cables
2. Harnesses
3. Communications controller

Find the best location for each component.

Follow guidelines to prevent components from becoming damaged during machine operation.

Make sure components are close enough to communications controller so cables will reach.

Before installation is started, read this instruction.

T126118 -19-02FEB00


CED,TX13067,2596 -19-19NOV99-1/1

Selecting Mounting Location For Communications Controller

IMPORTANT: Before doing any work on an electrical component, turn battery disconnect switch OFF or disconnect negative battery cable. Damage to electrical components may result if terminals are shorted during maintenance.

Never install close to the engine, transmission or hydraulic tank where temperature may exceed 70°C (160°F). Never install on a panel that vibrates excessively. Controller damage may result if exposed to excessive heat or vibration.

- Install communications controller in a protected area where it won't be exposed to excessive heat or damage from chains or tools carried in the cab. The load center area of a 4-wheel drive loader is an ideal location.
- Avoid installation in areas where temperature can exceed 70°C (160°F). Typical areas to avoid are inside the engine compartment, next to a hydraulic tank or transmission.
- Select a location so harness connectors and antenna cables can be attached or removed easily.
- Do not install in a location that will prevent removal of other components.
- Install controller horizontally or with connectors down to prevent water or oil from collecting in harness connections.
- Before final location is chosen, check power harness length and antenna cable length.

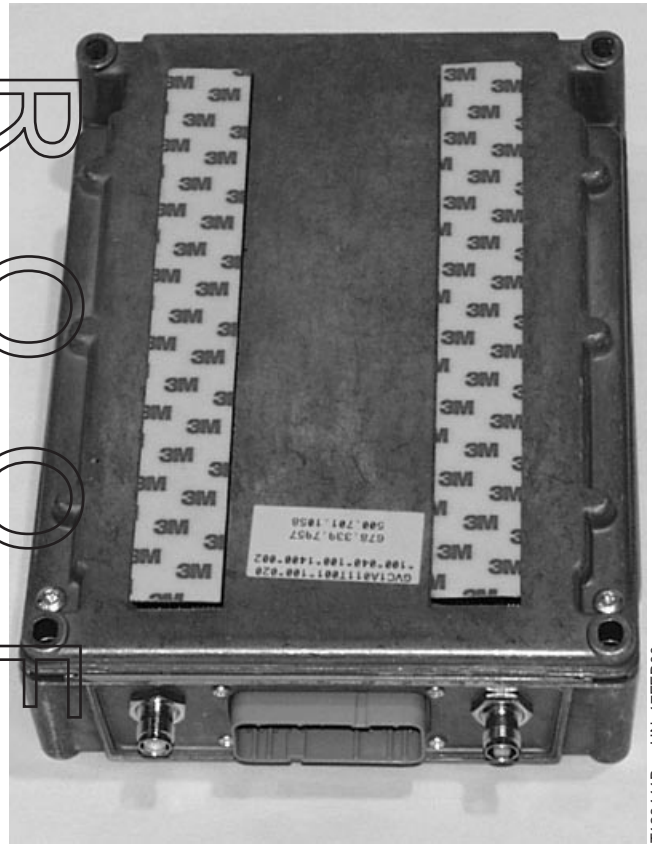

T128441B -UN-17FEB00

CED, TX13067, 2458 -19-03AUG99-1/1

Installing Communications Controller


Communications controller can be installed using hook and hook fastener or using cap screws. Choose the best procedure for your application.

CED,TX13067,2600 -19-22NOV99-1/4

Installing Communications Controller Using Hook and Hook Fastener Kit

1. Communications controller already has hook and hook fastener attached.
2. Clean installation area of machine using alcohol wipe (3) then apply Primer (2) to the cleaned area. Follow directions on primer tube.
3. Remove clear strips (1) from hook and hook fastener and press communications controller firmly into place.

- 1—Hook and Hook Clear Strips
- 2—Primer (3), part of Hook and Hook Fastener Kit VCA10039
- 3—Alcohol Wipe (2), part of Hook and Hook Fastener Kit VCA10039

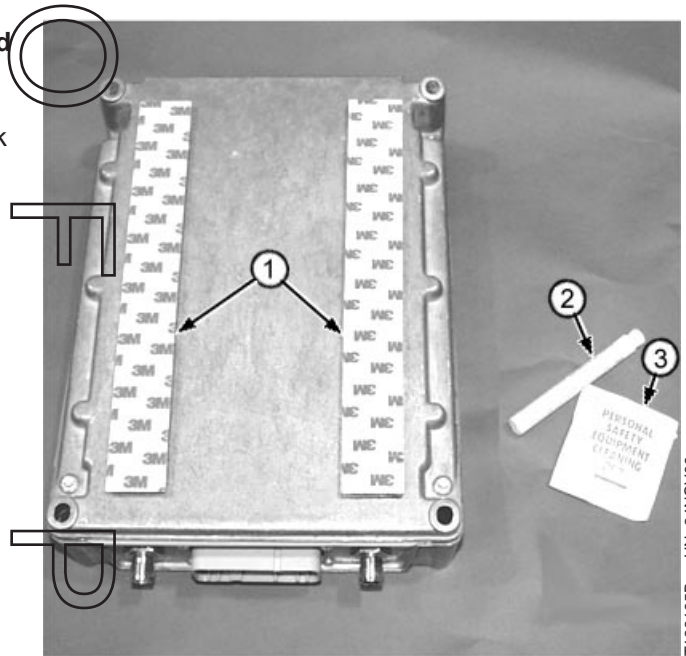


T126195B -UN-24NOV99

Continued on next page

CED,TX13067,2600 -19-22NOV99-2/4

4. One hole in the communications controller has internal threads. Install Capscrew (2) to attach Ground Strap (1).
5. Attach other end of ground strap (1) to a good clean ground connection on the machine.

- 1—VCU10032 Ground Strap
- 2—19H1648 Cap Screw
- 3—24H1622 Washer

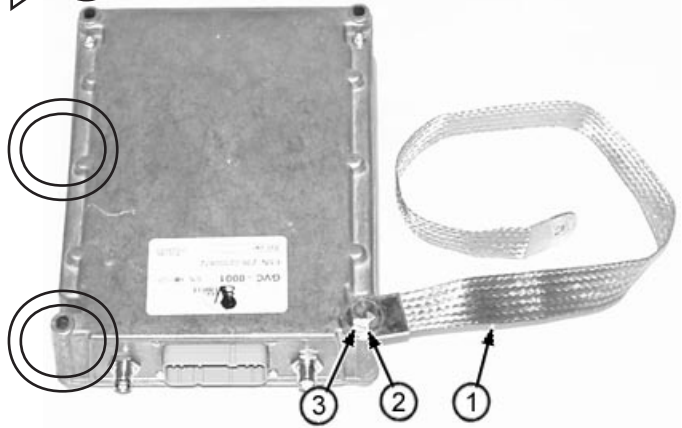


T127567B -UN-22FEB00

CED,TX13067,2600 -19-22NOV99-3/4

Installing Communications Controller Using Cap Screws


1. Choose a mounting area using guidelines in Selecting Mounting Location For Communications Controller.
2. Use template to locate mount holes. (See Drill Template For Communications Controller on next page)
3. Drill mount holes using a No. 4 or 7/32 bit.
4. Install Self-tapping cap screws (1). Use one screw to attach ground strap (2).
5. Attach other end of ground strap to a good clean ground connection on the machine.

- 1—VCU10013 6mm x 75 Self Tapping Cap Screw (4 used)
- 2—VCU10032 Ground Strap

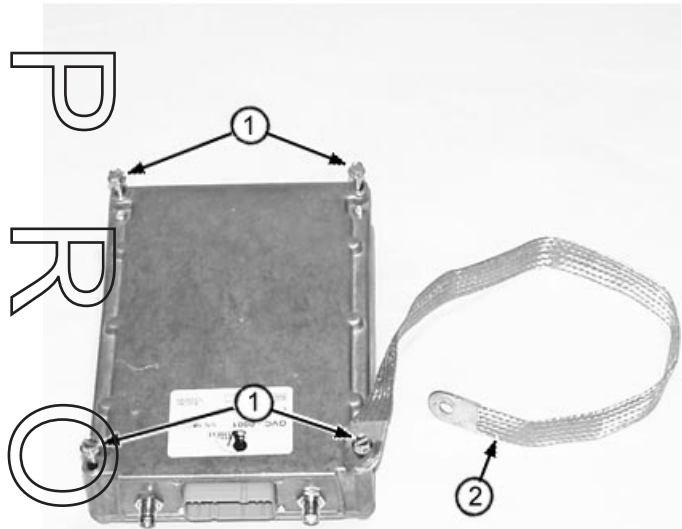

T127570B -UN-01FEB00

CED,TX13067,2600 -19-22NOV99-4/4

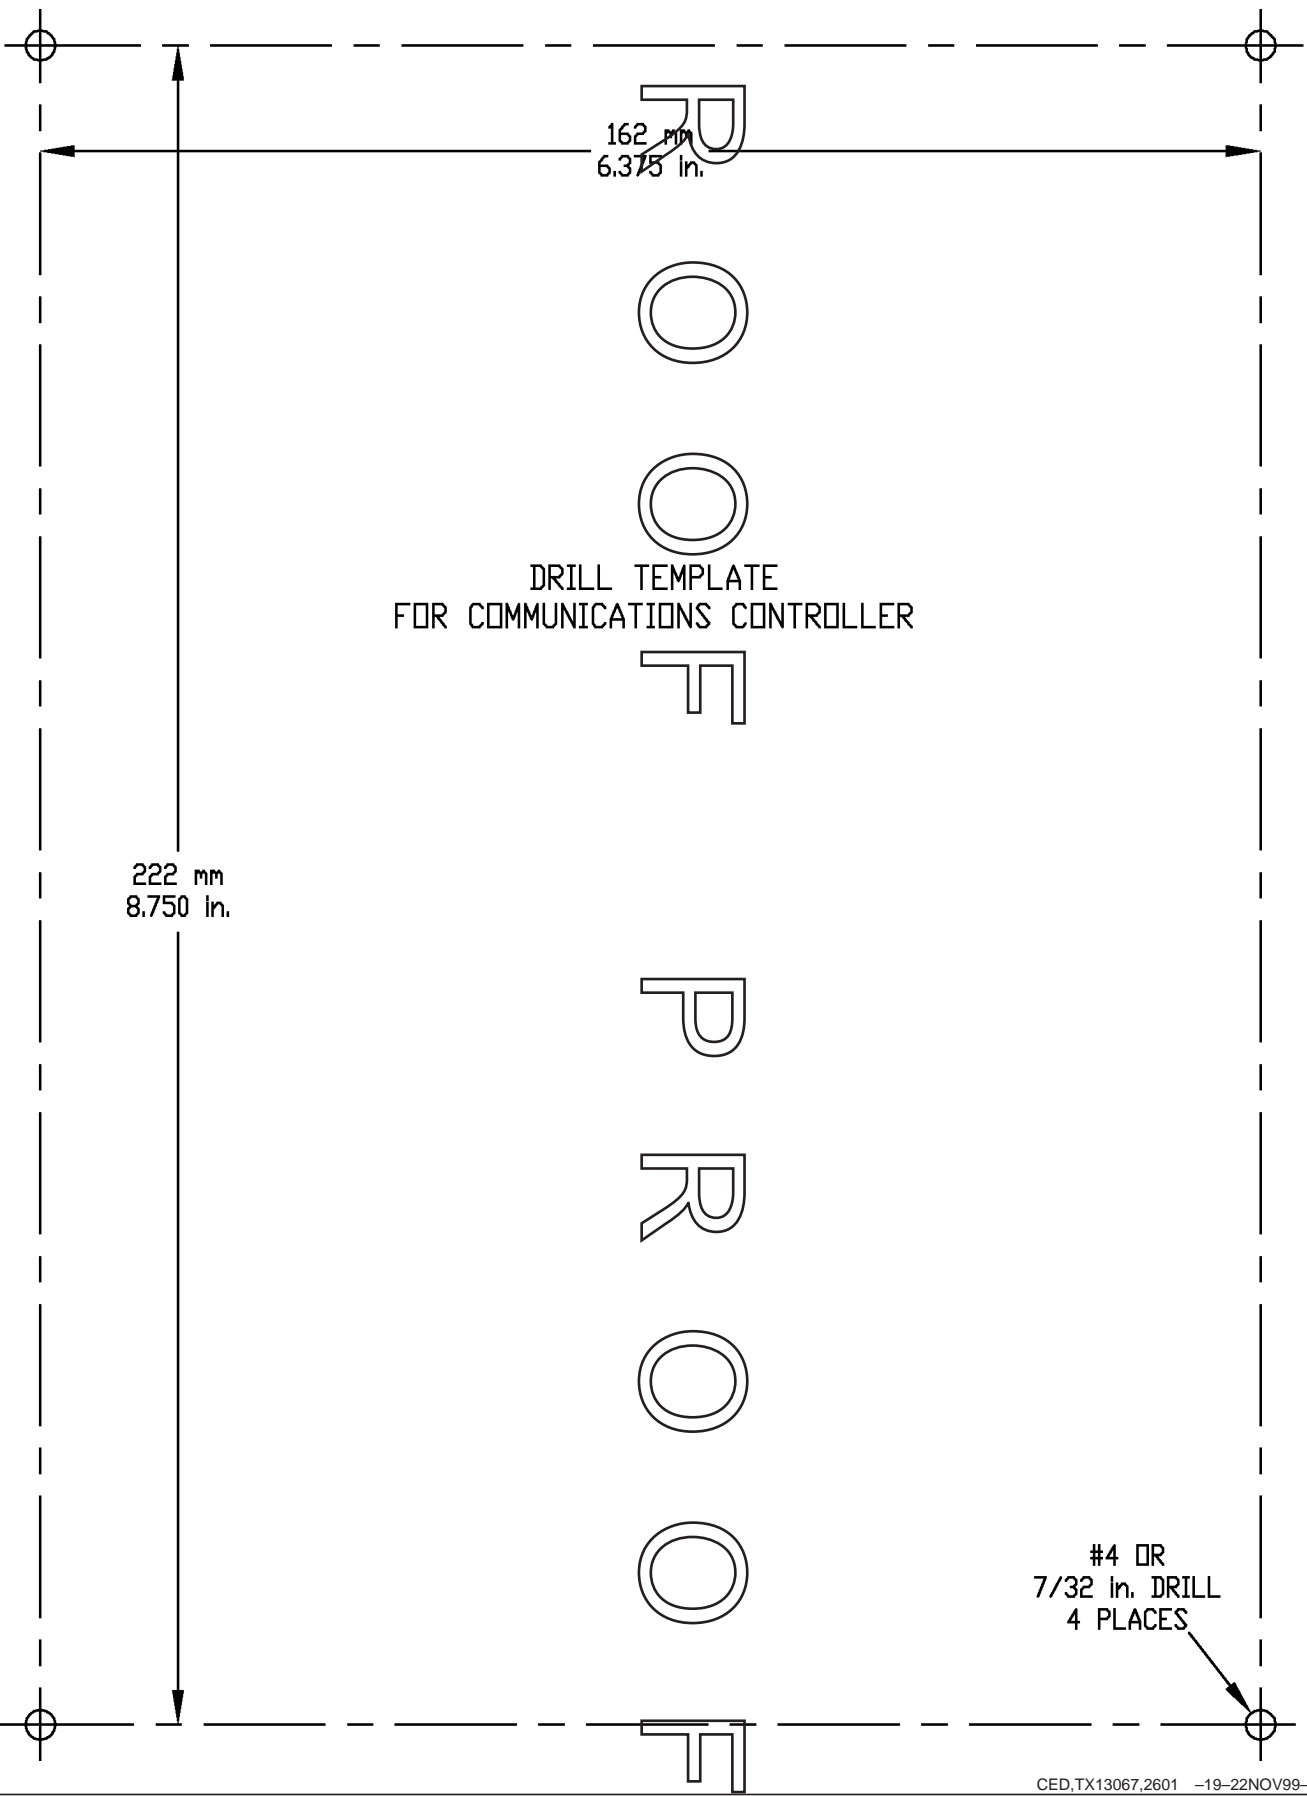

162 mm
6.375 in.


222 mm
8.750 in.

DRILL TEMPLATE
FOR COMMUNICATIONS CONTROLLER

#4 OR
7/32 in. DRILL
4 PLACES



 
T126134 -19-24NOV99

CED,TX13067,2601 -19-22NOV99-1/1



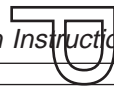


Removing Communications Controller

   1. To remove the communications controller after installing with the hook and hook fastener:
 - a. Carefully pry controller from mounting surface starting at a corner.
 - b. To prevent hook and hook fastener from pulling away from controller, push your finger between the fastener pieces.
 - c. If hook and hook fastener pulls loose from the controller, press it back in place.
2. To reinstall the controller:
 - a. Align hook and hook fastener strips on controller and mounting surface, then press controller against one end of the fastener strips and “rock” into full contact.
 - b. Slowly apply pressure along full length of controller until fasteners are secure.
3. If additional hook and hook fastener strips, alcohol wipes or primer is needed, order VCA10039 Hook and Hook Fastener Kit.

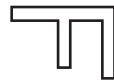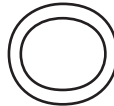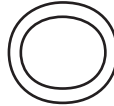


CED, TX13067, 2664 -19-02FEB00-1/1

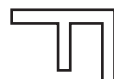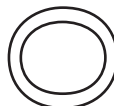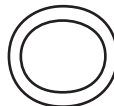   



Installing Communications Controller Harness

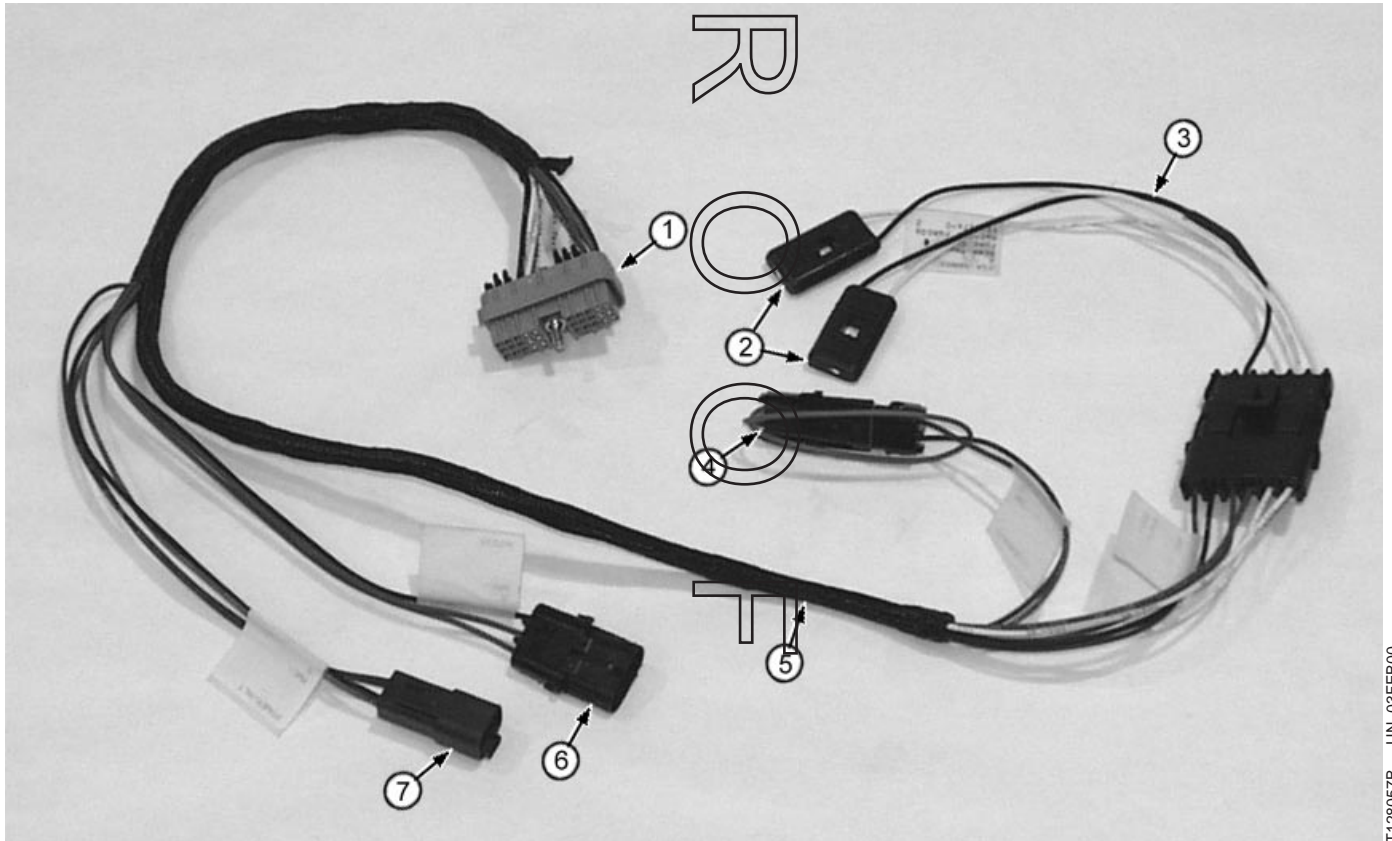

T128057B -UN-03FEB00

1—Connector to Communications Controller
2—LED Lights

3—LED Light Harness
4—Diagnostic Connector
5—Communications Controller Harness

6—Auxiliary Connectors

7—4-Pin Connector to Power Harness



 
 
1. Route communications controller harness so the LED lights (2) and diagnostic connector (4) are protected from damage and yet accessible. LED

lights and diagnostic connector will be used for troubleshooting the system.



Continued on next page

CED, TX13067, 2599 -19-22NOV99-1/2

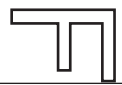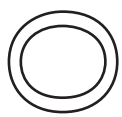


2. Push communications controller harness 30-pin connector (2) onto communications controller (1) so pins are started.

Use a 1/4 in. socket to tighten cap screw (3).

3. Using tie bands, attach extra connectors to the communications controller harness so they won't be damaged during normal operation.


- 1—Communications Controller
- 2—Communications Controller Connector
- 3—Cap Screw

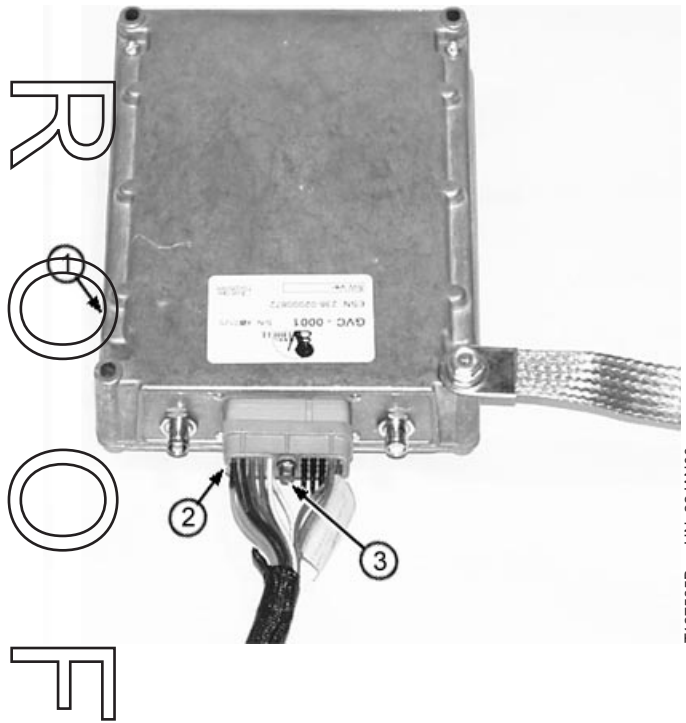

CED, TX13067,2599 -19-22NOV99-2/2

P
R
O
O
F

Installing Power Harness

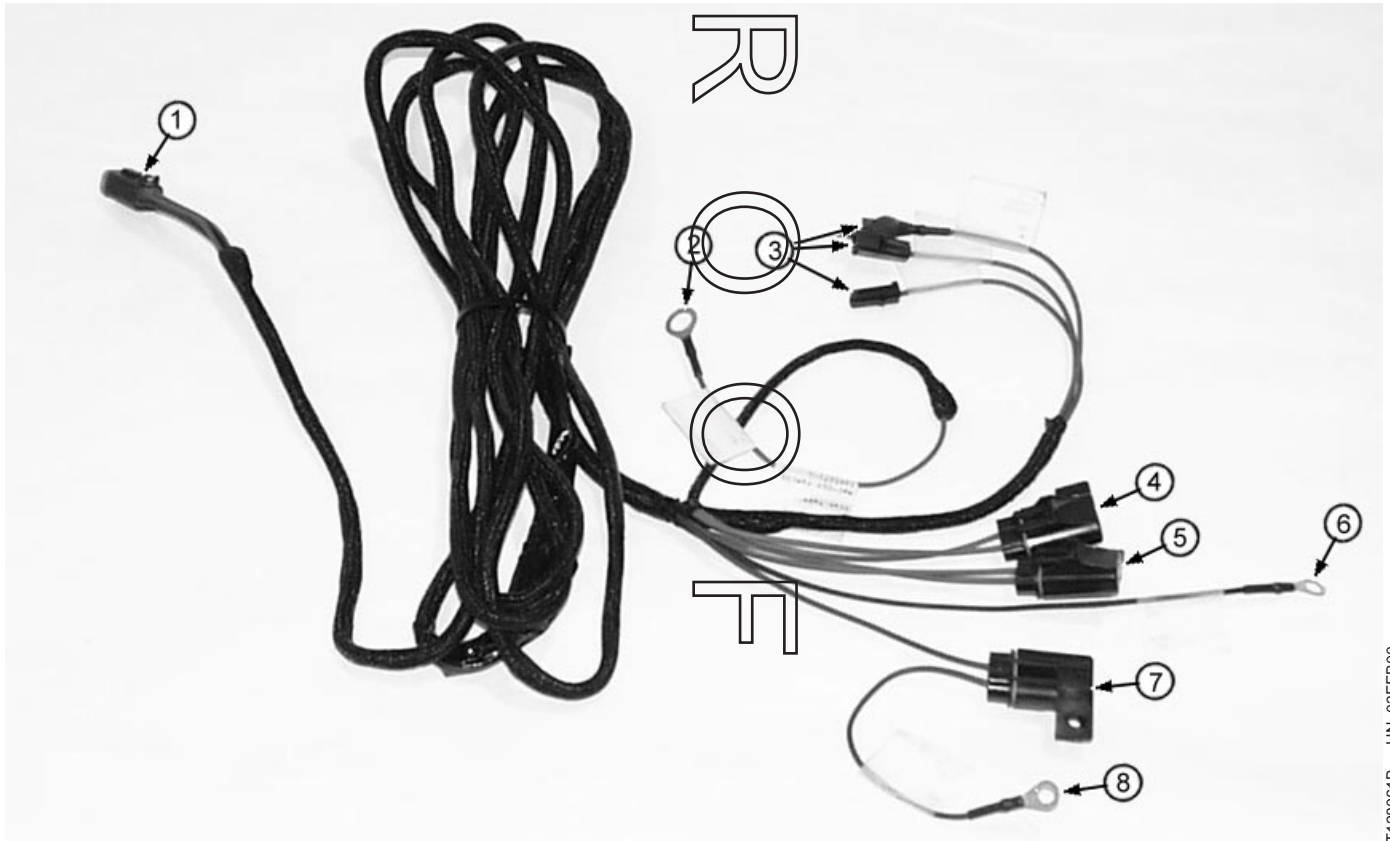

VCA10002 Power Harness

1—4-pin Connector to Communications Controller
2—B+ Unswitched Power (Red Wire)

3—W+/R+ Engine Running (Purple Wire) Connectors (Use whichever needed)
4—B+ Unswitched Power Fuse

5—W+/R+ Engine Running Fuse
6—GND (Ground) (Black Wire)

7—D+ Switched Power Fuse
8—D+ Switched Power (Brown Wire)

Power Harness Electrical Requirements	
Wire Color	Machine Connection
Red	Constant positive (+) power source. 12—24 volts typical, 36 volts maximum. With key ON or OFF
Brown	Positive (+) power source. 12—24 volts typical, 36 volts maximum. Only with key ON (0 volts with key OFF.).
Purple	Positive (+) power source. 6—24 volts typical, 36 volts maximum. With engine running.
Black	Ground (GND)

Connecting B+ Unswitched Power (Red Wire)



CAUTION: Before doing any electrical maintenance, turn battery disconnect switch

OFF or disconnect negative (-) battery cable. Damage to electrical components or personal injury could result if a power wire is shorted to ground.

This connection supplies battery voltage to the communications controller regardless of key switch position.

Typical connection for unswitched power is B+ terminal on the alternator.

If connecting B+ Red wire terminal to an existing machine wire, use VCU10018 metal butt splice and T178552 heat shrink tubing.

Continued on next page

CED,TX13067,2550 -19-26OCT99-1/4

T128061B -UN-03FEB00



Connecting D+ Switched Power (Brown Wire)

This connection supplies switched power to the communications controller.

Connect to a place where battery power is present with the key switch ON and not present with the key switch OFF.

Typical connection for switched power is D+ terminal on the alternator.

1. Connect D+ Brown to switched power source. If splicing into existing machine wire, use VCU10018 metal butt splice and T178552 heat shrink tubing.
2. If alternator does not have a D+ terminal, locate another source for switched power.

Use a VCU10018 metal butt splice to splice to an existing wire or terminal.

Cover splice with T178552 heat shrink tubing to prevent shorting to ground.

Connecting Ground (GND) (Black Wire)

This connection provides a ground for the system.


Connect Black Ground wire to alternator case or machine frame.

Connecting W+/R+ Engine Running (Purple Wire)


This connection provides the communications controller with a signal indicating the engine is running. A minimum of 6 volts is required.

Typical source for this signal is the W+ or R+ terminal on the alternator. This provides a signal when the engine is running.

Three W+/R+ Purple wires are included in the harness, each has a different connector. Choose the one that fits your alternator. Tie the other Purple wires to the harness so they won't be damaged during normal operation.

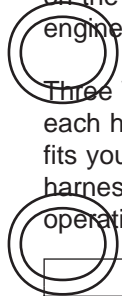

If Machine Has:	Connect Purple Wire To:
W+ terminal on alternator	W+ alternator terminal
R+ terminal on alternator	R+ alternator terminal
If alternator does not have above terminals	Switched power source

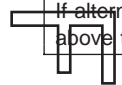 



Testing Power Harness Connections

1. Using a voltmeter measure voltages in the 4-pin connector of VCA10002 Power Harness as indicated in the chart below.




Continued on next page

  CED,TX13067,2550 -19-26OCT99-2/4

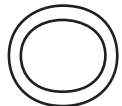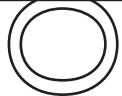


2. Connect a voltmeter to terminal 2 of the 4-pin connector, measure voltage in terminals 1, 3 and 4.

Voltage will be between 6 and 36 depending on machine system voltage and alternator output.

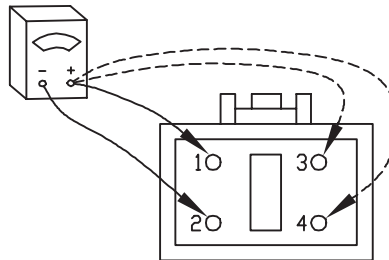

Key Switch OFF	
Terminals	Voltage
2-1	12-36
2-3	0
2-4	0

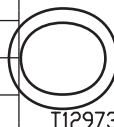 

T129733

Key Switch ON	
Terminals	Voltage
2-1	12-36
2-3	12-36
2-4	0



Engine Running	
Terminals	Voltage
2-1	12-36
2-3	12-36
2-4	6-36



T129752B

- 1—Red Wire
- 2—Black Wire
- 3—Brown Wire
- 4—Purple Wire



 
 
T129733 -UN-31MAR00


T129752B -UN-30MAR00



Continued on next page

CED,TX13067,2550 -19-26OCT99-3/4

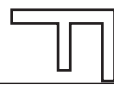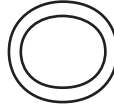

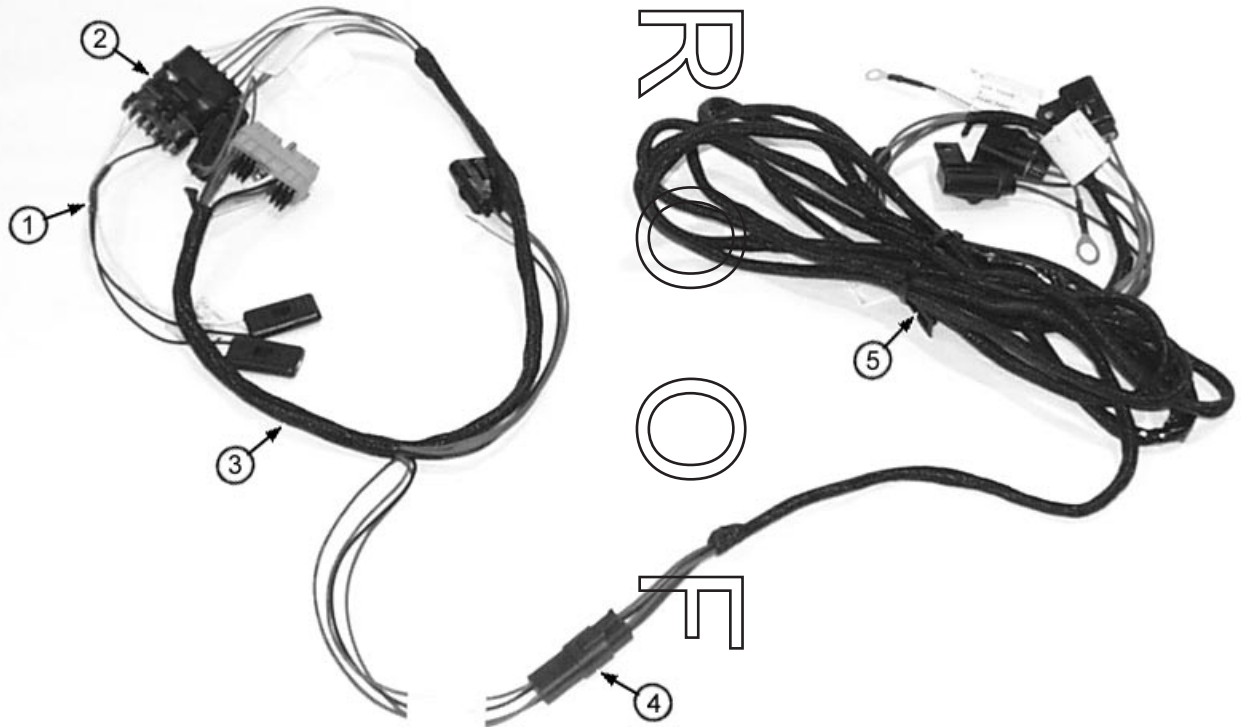

LED Light Harness, Communications Controller Harness and Power Harness

1—VCA10003 LED Light Harness

2—6-pin Connector
3—VCA10001 Communications Controller Harness

4—4-pin Connector

5—VCA10002 Power Harness

Connecting And Routing Harnesses To Communications Controller

- 1. **IMPORTANT:** Route harnesses away from hot, moving or vibrating components. Do not attach harnesses to hydraulic hoses. Avoid sharp edges and use grommets and tie bands where needed.

Route communications controller harness to communications controller mounting location. Use tie


bands to secure harnesses to existing harnesses where possible.

- 2. Connect LED light harness 6-pin connector (2) to communications controller harness.
- 3. Connect power harness 4-pin connector (4) to communications controller harness 4-pin connector.

CED,TX13067,2550 -19-26OCT99-4/4

T128062B -UN-03FEB00

Selecting Mounting Location For Antennas

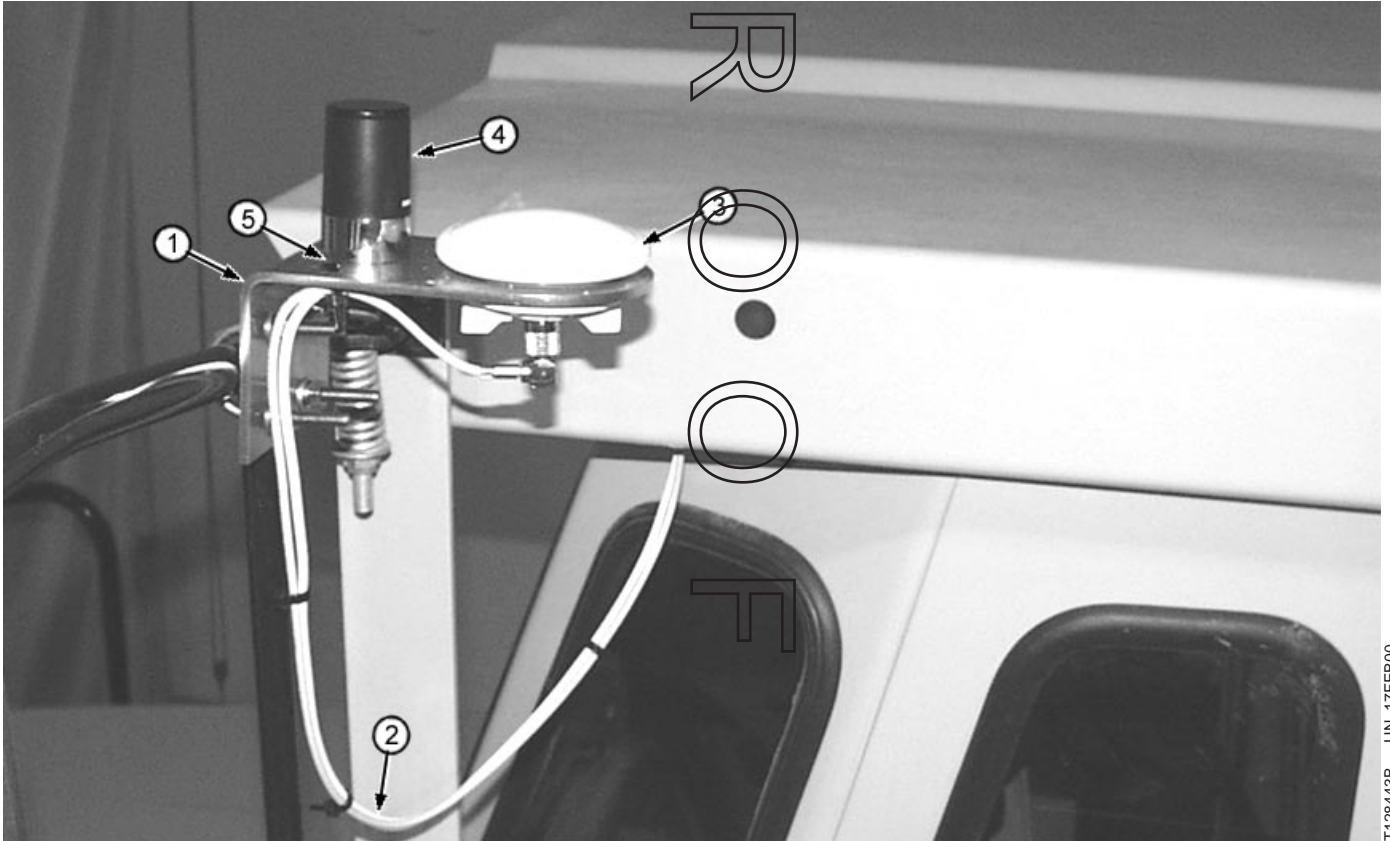

1—VCA10005 Antenna Mounting Bracket

2—Drip Loop in Antenna Cables

3—VCU10038 GPS Antenna
4—VCU10034 Cellular Antenna

5—Tie Band

CAUTION: Never modify by drilling or welding a Roll Over Protection Structure (ROPS). Structure may fail during a roll over accident.

The Falling Objects Protection Structure (FOPS) may be modified by drilling holes up to 25 mm (1.0 in.) diameter.

FCC Antenna Warning Label

While the device is in operation, a separation of at least 500 mm (20 in.) must be maintained between antennae and the body of the user or nearby persons in order to meet the FCC RF exposure guidelines.

- Antennas must be mounted outside the cab at least 500 mm (20 in.) away from the machine operator.
- Cellular antenna should be mounted using VCA10005 mounting bracket if possible.

 
- Entire length of cellular antenna must be mounted above cab roof or any structure within 300 mm (12 in.).
- Mount cellular antenna (4) at least 300 mm (12 in.) from upright metallic structures, like mirrors. Center of the cab roof or attached to a roof handhold is an ideal location.
- Mount the GPS antenna (3) in an area that allows an unobstructed view of the sky. Mounting near the cellular antenna is OK. Use Antenna Mounting Bracket (1) when possible.
- Antennas may be mounted directly to a cab or ROPS roof. Ensure all gaskets and O-Rings are installed under antennas to prevent water entry. Petroleum jelly may be used to prevent O-Rings from slipping out of position.
- Ensure adequate ground plane is available (See Installing Antennas Through Machine or Metal Panel).

Continued on next page

CED, TX13067, 2597 -19-19NOV99-1/2


- Where antenna cables go through the roof or steel panels, install convoluted tubing or grommets to prevent chaffing or shorting. Make "drip loops" (2) in cables to prevent water from running down the cables and into the cab.
- Protect antenna cables by securing to mounting bracket or other machine brackets with tie bands (5).

- Mount antennas where they are best protected from damage.
- Antenna height must not exceed overall height limitations for transporting the machine.
- Route antenna cables with existing cables or harnesses.

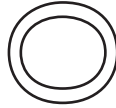

CED,TX13067,2597 -19-19NOV99-2/2

Assembling Antennas Using Mounting Bracket

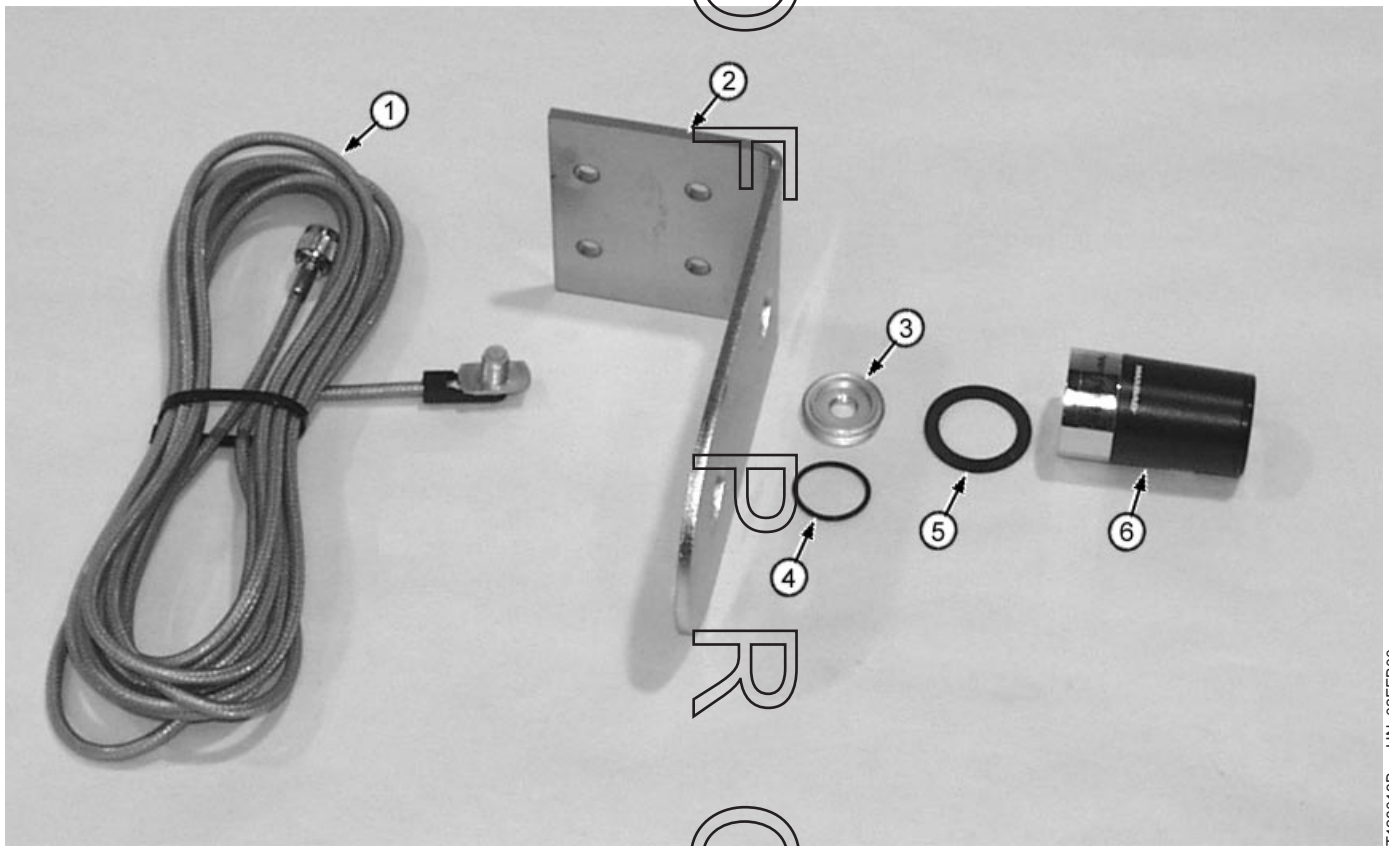

1—VCU10034 Cellular Antenna Cable 2—VCA10005 Antenna Mounting Bracket

3—Nut
4—O-ring

5—Rubber Washer
6—Cellular Antenna

Continued on next page

CED,TX13067,2552 -19-27OCT99-1/6


T128019B -UN-02FEB00

Assembling Cellular Antenna


1. Insert cable end (1) through small hole in bracket (3).
2. Use tie bands (2) to attach cable to bracket.

Cable can run any direction from bracket.

- 1—VCU10034 Cellular Antenna Cable
- 2—Tie Band
- 3—VCA10005 Antenna Mounting Bracket
- 4—O-ring
- 5—Nut
- 6—Rubber Washer
- 7—VCU10035 Cellular Antenna

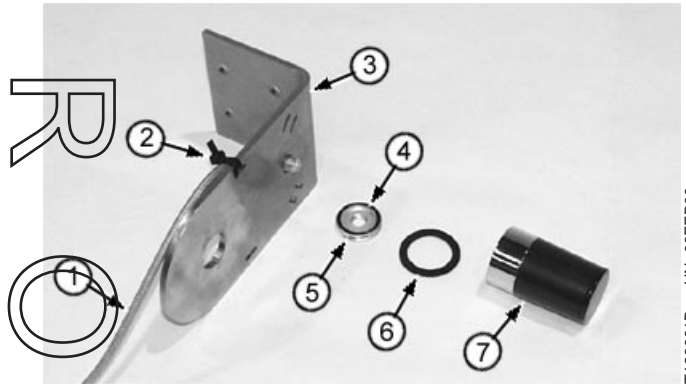


T128081B -UN-03FEB00

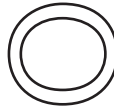 

CED,TX13067,2552 -19-27OCT99-2/6

3. Screw nut (4) over cable end. Apply petroleum jelly to O-ring to ensure it stays in groove.
4. Apply petroleum jelly to rubber washer to prevent it from rolling. Install rubber washer (5) over nut (4). Screw antenna (6) onto nut. Hand tighten only.


- 1—VCU10034 Cellular Antenna Cable
- 2—VCA10005 Antenna Mounting Bracket
- 3—Nut
- 4—VCU10035 Cellular Antenna
- 5—Rubber Washer

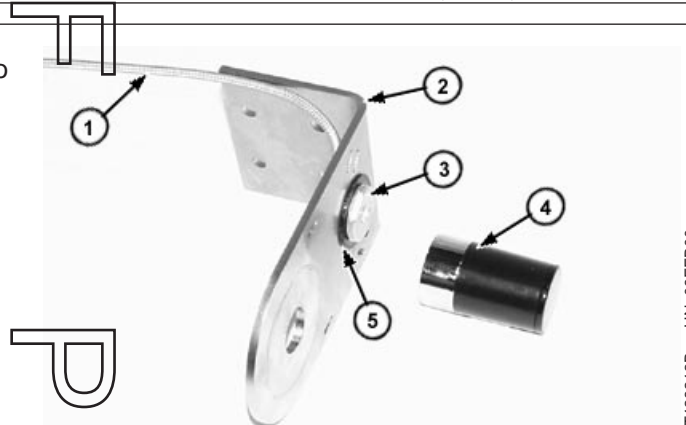

T128212B -UN-09FEB00

Continued on next page

 
CED,TX13067,2552 -19-27OCT99-3/6

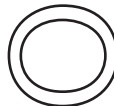




Assembling GPS Antenna

1. Apply petroleum jelly to O-Ring (4).
2. Install O-ring (4) on antenna.
3. Insert antenna through large hole in bracket (3).
4. Install nut (2) on antenna and tighten hand tight. Ensure O-Ring stays in place.
5. Connect cable (1) to antenna.
6. Route cables from GPS and CELL antennas together and secure to bracket (3) with tie bands as needed.
7. Secure antenna cables to machine as needed.
8. Install additional tie bands on cables as needed to keep them neatly together.

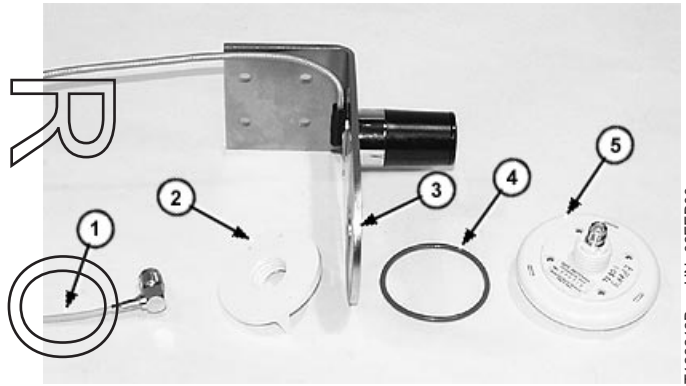




T128213B -UN-09FEB00

 
- 1—Cable
- 2—Nut
- 3—VCU10005 Antenna Mounting Bracket
- 4—O-Ring
- 5—GPS Antenna

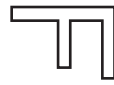

Continued on next page

   CED,TX13067,2552 -19-27OCT99-4/6

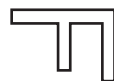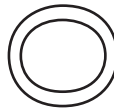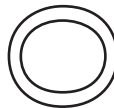

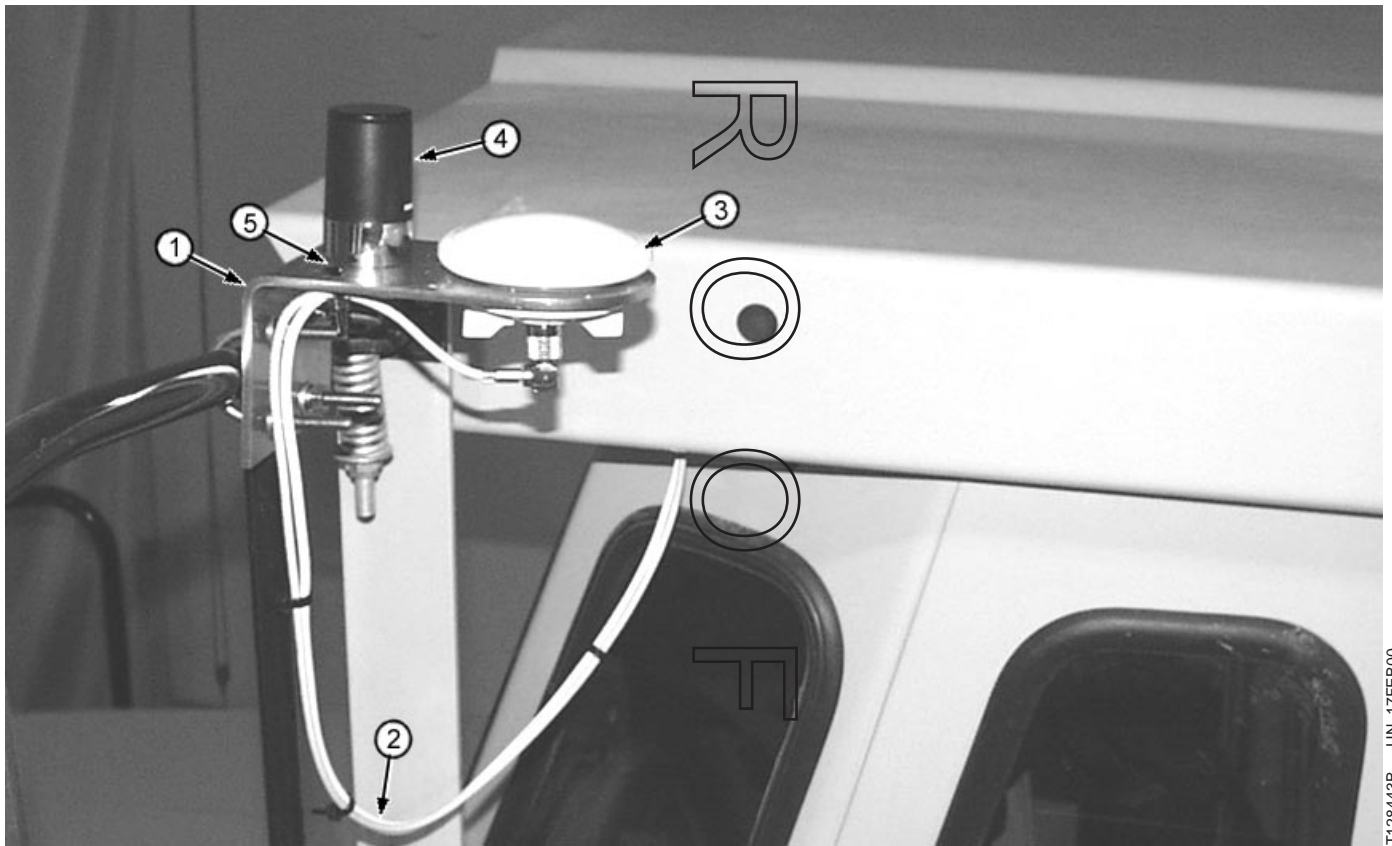

Typical Bracket Mount

1—VCU10005 Antenna Mounting Bracket

2—Drip Loop in Antenna Cables

3—VCU10037 GPS Antenna
4—VCU10035 Cellular Antenna

5—Tie Band

9. Attach bracket and antennas to hand hold or other suitable location using U-bolts.

Mount antenna at least 500 mm (20 in.) from operators body.

Mount cellular antenna (4) at least at least 300 mm (12 in.) from upright structures like mirrors.

10. Make a drip loop (2) to prevent water from running along the cables into the cab.

FCC Antenna Warning Label

While the device is in operation, a separation of at least 500 mm (20 in.) must be maintained between antennae and the body of the user or nearby persons in order to meet the FCC RF exposure guidelines.


Continued on next page

CED,TX13067,2552 -19-27OCT99-5/6

11. Route both the cellular and GPS antenna cables to the communication controller.

Connect cables to controller. Cable ends are different to prevent connecting them incorrectly.

- 1—Communications Controller
- 2—VCU10038 GPS Antenna Cable
- 3—VCU10034 Cellular Antenna Cable

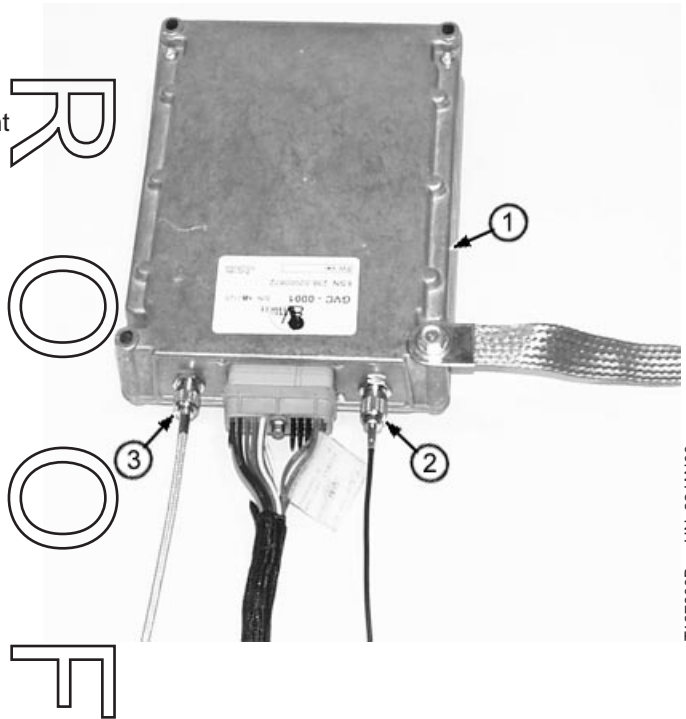

T127600B -UN-22JAN00

CED,TX13067,2552 -19-27OCT99-6/6


Installing Antennas Through Machine Roof or Metal Panel

CAUTION: Never modify a Roll Over Protection Structure (ROPS) by drilling or welding. Structure may fail during a roll over accident.

The Falling Objects Protection Structure (FOPS) may be modified by drilling holes up to 25 mm (1.0 in.) diameter.

1. Choose a place on the machine roof or other suitable panel where the antennas are protected and the cables will reach the communications controller.

For proper operation, the antenna must be mounted on a metal surface (like a steel roof).

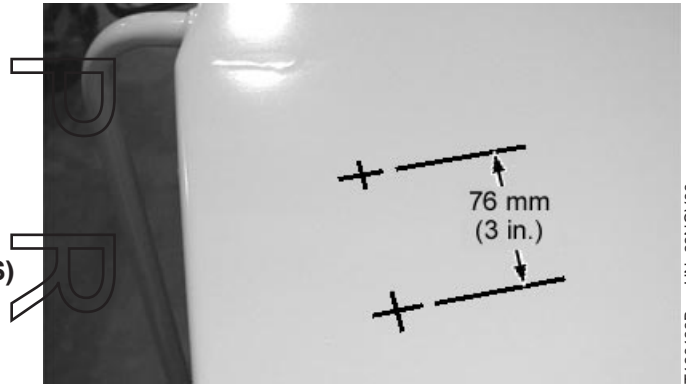

T126133B -UN-22NOV99



 
 
Continued on next page

CED,TX13067,2598 -19-22NOV99-1/3

If the machine has a plastic or fiberglass roof panel, install VCU10036 Ground Plate on bottom side of roof or panel.

Connect antenna cable making sure serated edges make good contact with ground plate.

- 1—VCU10036 Ground Plate
- 2—VCU10036 Cellular Antenna Cable
- 3—Serated Edge of Cable End

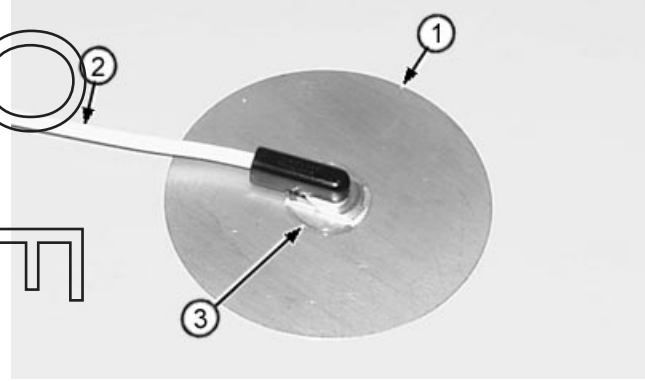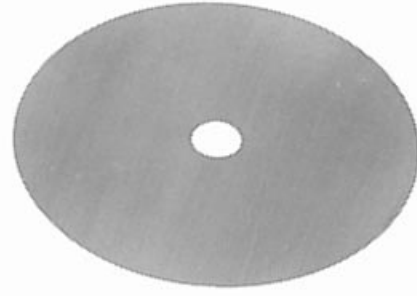
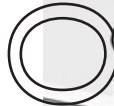
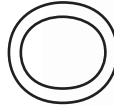



T128304B -UN-11FEB00

T128445B -UN-17FEB00

Continued on next page

   CED, TX13067,2598 -19-22NOV99-2/3

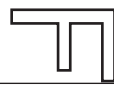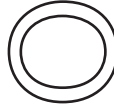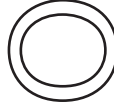

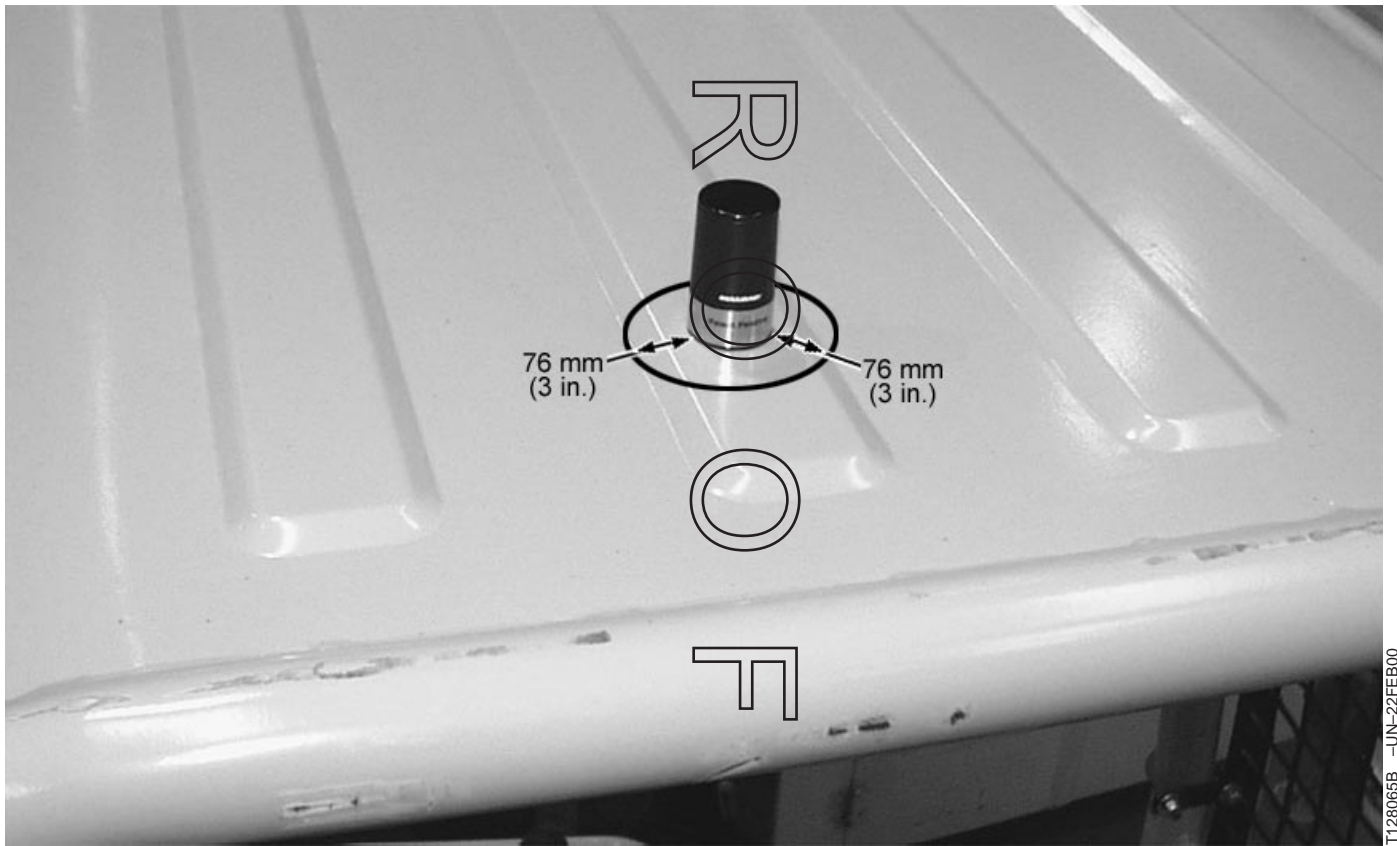

Cellular Antenna Ground Plane

At least 76 mm (3.0 in.) around the cellular antenna in every direction must be free of other metal items like hand holds, beacons or other antennas. The area must be flat to ensure a good ground plane.

- 2. Mark the roof or panel so the holes will be at least 76 mm (3 in.) apart. (The GPS antenna mounting hole location is OK).

- 3. Drill one hole 3/8 in. for the cellular antenna.

- 4. Drill the other hole 7/8 in. for the GPS antenna.

- 5. Assemble antennas through roof following guidelines in Assembling Antennas Using Mounting Bracket.

CED, TX13067, 2598 -19-22NOV99-3/3

System Testing

To determine if unit is functioning properly, move machine outdoors with no overhead obstructions or power lines.


- 1. Engine OFF.

Continued on next page

CED, TX13067, 2460 -19-03AUG99-1/3

2. Remove the cover (2) and W+/R+ Engine Running Fuse (1) from the Power Harness. This fuse has Purple wires going to it.
3. Key ON.
4. Observe CELL and GPS/ENG RUN LED Light as ignition key is turned ON. Both LED lights must be ON for 1—5 seconds indicating power to the communications controller. LED lights may go OFF indicating no cellular service or GPS lock.
5. The system will now test CELL and GPS functionality. Both LED lights will come ON indicating successful completion of this test. This may take 10 minutes.

1—Fuse
2—Cover

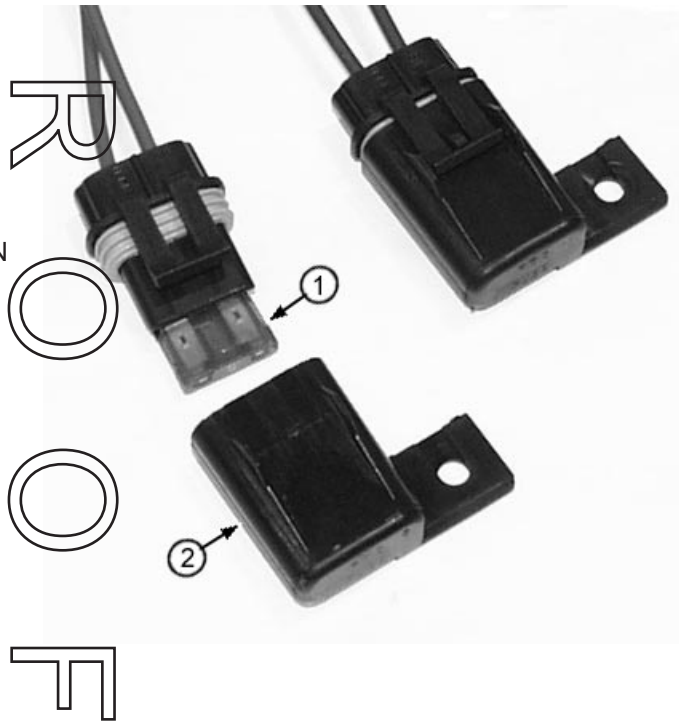


TT129751B -UN-30MAR00

CED, TX13067, 2460 -19-03AUG99-2/3

6. Carefully remove GPS antenna cable (2) from communications controller (1). The GPS/ENG RUN LED Light (3) should go OFF to indicate No GPS lock.
7. Replace W+/R+ Engine Running Fuse and cover.
8. With GPS antenna cable disconnected, start engine.
Within 10 seconds GPS/ENG RUN LED light must come ON and stay ON indicating the engine is running.
9. Stop engine. Connect GPS antenna cable.


System is OK.

1—Communications Controller
2—GPS Antenna Cable
3—GPS/ENG RUN LED Light

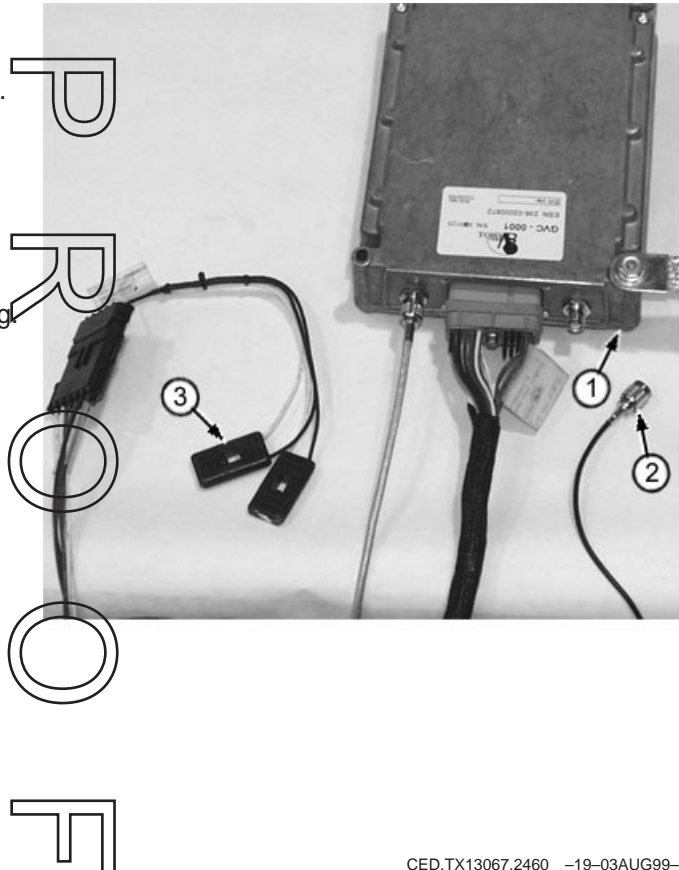

TT127603B -UN-22JAN00

 CED, TX13067, 2460 -19-03AUG99-3/3

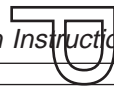


Vehicle Hours Synchronization

When installation is complete, vehicle hours must be synchronized with communications controller.






 A copy of the DeereTrax Installation Record is included in the installation kit.

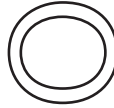


Continued on next page

   CED,TX13067,2595 -19-18NOV99-1/5

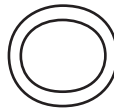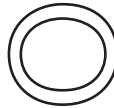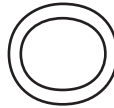

DEERE[®]TRAX INSTALLATION RECORD – DO NOT TOSS

 - 1) VERIFY THE ATTACHED LABEL MATCHES THE LABEL ON THE COMMUNICATIONS CONTROLLER PLACED ON THE MACHINE.

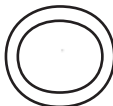

<<< LABEL HERE >>>

- 2) AT INSTALLATION, COMPLETE THE FOLLOWING INFORMATION. (WRITE LEGIBLY)

Customer company name: _____

Dealer account number:

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Dealer name: _____

Installer name: _____

Equipment Manufacturer: _____ **Model:** _____

Machine S/N:

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

(Required for John Deere Equipment - 13 digits)

Customer Machine ID:

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

- 3) FOLLOW HOURS SYNCHRONIZATION PROCEDURE IN INSTALLATION INSTRUCTIONS (T184367).

Vehicle hours at synchronization: _____

Date/time of synch:

--	--

 /

--	--

 /

--	--

 :

--	--

 :

--	--

 am
pm

- 4) SOON AS POSSIBLE FAX FORM TO (309/749-1021).
- 5) RETAIN FORM FOR LATER REFERENCE.

DEERE[®]TRAX INSTALLATION RECORD – DO NOT TOSS

T128442

T128442 -19-23FEB00

Continued on next page

CED, TX13067, 2595 -19-18NOV99-2/5

 
Record vehicle hours, date and time of synchronization on DeereTrax® Installation Record.

When DeereTrax™ Installation Record is complete Fax it to the number on the record.

To synchronize the communications controller:

1. Move the machine outdoors with no electrical wires or metal structures directly overhead.

2. Key switch ON. Engine OFF.


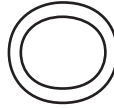


CED,TX13067,2595 -19-18NOV99-3/5

3. Both LED lights (1 and 2) will come ON for 1—5 seconds, indicating power is present at the communications controller.

LED lights may go OFF indicating no cellular service or GPS lock.

 - 1—GPS/ENG RUN LED Light
- 2—CELL LED Light

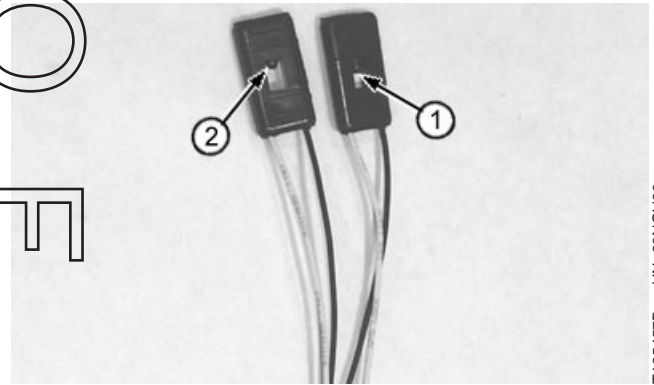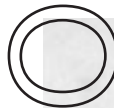

T125457B -UN-23NOV99

CED,TX13067,2595 -19-18NOV99-4/5

4. Wait up to ten minutes for both LED lights to come ON.

If lights fail to come ON after ten minutes, see Problem Diagnosis.

5. After both lights come ON, disconnect diagnostic connector (2), wait more than six seconds.

6. Connect diagnostic connector.


 
 
7. Watch CELL LED light (1).

It must go OFF within one minute, then back ON.

8. When CELL LED light comes back ON, system is OK.

9. If CELL LED light does NOT come back ON, go to Problem Diagnosis.

10. Complete the DeereTrax Installation Record and Fax to the number listed on the sheet.

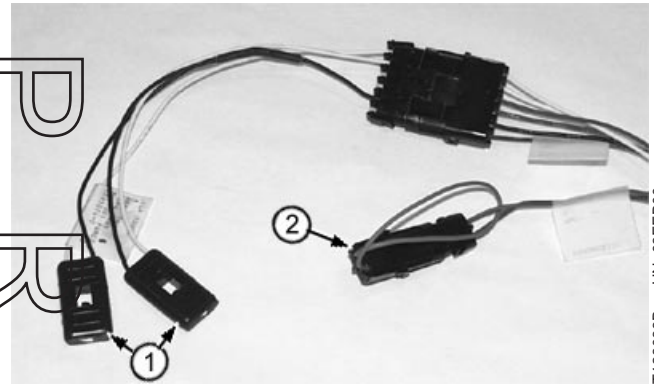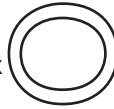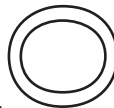


LED Lights and Diagnostic Connector

- 1—GPS/ENG RUN LED Light and CELL Light
- 2—Diagnostic Connector

T128066B -UN-03FEB00

 CED,TX13067,2595 -19-18NOV99-5/5

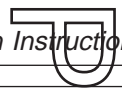

Problem Diagnosis

Symptom

**LED Lights Do Not Come ON
When Key Is Turned ON**

Problem

Blown fuses



Solution

 
Check fuses in power harness

Connection to alternator incorrect



Check harness connections to terminals on alternator.

B+ unswitched power (Red Wire) must be connected to positive (+) power source.

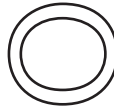

GND (Black wire) must be connected to clean frame ground.

D+ switched power (Brown Wire) must be connected to positive (+) power source. Voltage with key ON.

Power harness failure



Check Brown wire in four-pin power harness connector. It must have voltage only when the key is ON.

Check Red wire in four-pin power harness connector. It must have voltage all the time.



 
Communications controller harness failure

Check Black wire in four-pin power harness connector. It must have a good connection to frame ground.


Check pin 1A (Red wire) in connector to communications controller. It must have battery voltage at all times.



Check pin A3 (Brown wire) for battery voltage only when key is ON.

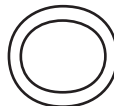

 Check pin 2A (Black wire) for continuity to frame ground.




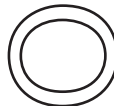


Continued on next page

CED,TX13067,2532 -19-05OCT99-1/3




Symptom	Problem	Solution
Cellular Connection LED Does Not Come ON	LED harness failure	Check for battery voltage on both Yellow wires in six-pin connector on communications controller harness as key is turned ON (Use the Black wire in that connector as a ground reference).
		Voltage may fluctuate for five seconds, but should remain constant after that.
		If voltage is present on yellow wires, but LED lights aren't ON, harness has failed. replace harness.
	Communications controller failure	If voltages in previous checks are correct, communications controller has failed.
	Cellular antenna cable connection	Check cellular cable connection at antenna and communications controller.
	Cellular antenna failure	Check general antenna condition. Replace if damage is seen.
GPS/ENG RUN LED Light Does Not Come ON (Engine OFF)	Lack of cellular service	Assure cellular service is available, call with a hand-held cellular phone to be sure. Perform procedure to activate cellular service. If service is still not activated, call Customer Support Center at 1-800-939-0805
	Communications controller failure	Replace antenna and cable. Verify cellular phones will work in that location. If LEDs do not come ON and voltage checks are OK, replace communications controller.
	Obstructed view of sky	Move machine to an open location away from buildings and overhead power lines.
	GPS antenna failure	Check general antenna condition, replace if damage is seen.

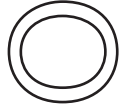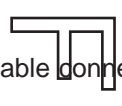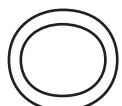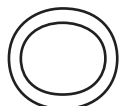    

Continued on next page

 CED, TX13067, 2532 -19-05OCT99-2/3

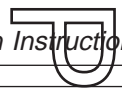

Symptom	Problem	Solution
GPS/ENG RUN LED Light Does Not Come ON (Engine Running)	GPS antenna cable connection	Check GPS antenna cable connections at antenna and communications controller.
	Communications controller failure	Replace antenna and cable. If LEDs do not come ON and voltage checks are OK, replace communications controller.
	Blown fuse	Check W+/R+ Engine Running Fuse in Power Harness
	Incorrect voltage or poor connection at engine running signal source	With engine running a minimum of 6 volts must be present at W+/R+ Engine Running connection to engine (Purple wire).
	Power harness failure	With engine running, check for a minimum of 6 volts on Purple wire in 4-pin connector of power harness.
	Communications controller harness failure	With engine running, check for a minimum of 6 volts on pin B-1 (Purple wire) in connector of communications controller harness.
	Communications controller failure	If voltages are correct, communications controller has failed.

CED, TX13067.2532 -19-05OCT99-3/3

