

Owner's Manual

MULTIFUNCTION THERMOFAN STOVES

731 MF
735 MF

CONTENTS

2	Introduction
2	Unpacking
2	Installation
2	Electrical Installation
3	The Control Panel
3	Automatic Oven Timer / Clock
6	Warmer Drawer
7	Multifunction Oven (6 functions)
10	Solid Plates (model 731MF)
11	Ceran Smooth Top (model 735MF)
12	Maintenance
13	Safety Advice
13	Owner's Responsibility
14	Problem Check
14	Service



www.defy.co.za

INTRODUCTION

Congratulations on the purchase of this quality product. We trust that you will enjoy many years of trouble free use. Please read these instructions carefully before using the stove. This manual will provide you with information on how to operate and care for your product in order that you gain the maximum benefit from it.

UNPACKING

- Please ensure that packaging material is disposed of in a responsible manner.
- Plastic bags should be cut up to prevent children playing with them and accidentally suffocating.
- Remove all packing from the oven cavity and position the accessories.
- If the appliance is damaged in any way, do not use it. Report the damage to your dealer, who will take the necessary corrective action.

INSTALLATION

- Levelling feet are provided to assist you in positioning your stove, so that it will stand firm and level. To adjust the level, turn the relevant foot to either raise or lower the stove.
- Surfaces immediately adjacent to the oven should be able to withstand temperatures of up to 100°C without delaminating or discolouring.

ELECTRICAL INSTALLATION


“This appliance must be earthed and the manufacturer and the seller do not accept responsibility for any damage due to incorrect installation or electrical connection.”

- This appliance should not be connected through an earth leakage system. Refer to S.A.B.S. 0147.

Connection to the power supply This appliance has a ‘Y’ type supply cord connection and must be installed by a licensed electrician, who will ensure that the oven is correctly connected and safely earthed. The rated current is printed on the serial number label attached to the stove upper back panel.

The appliance must be connected the mains through an All pole isolating switch which has a minimum clearance between the contacts of 3 mm. in All poles. A means for disconnection must be provided in the fixed wiring.

CONTROL PANEL (731MF and 735MF)

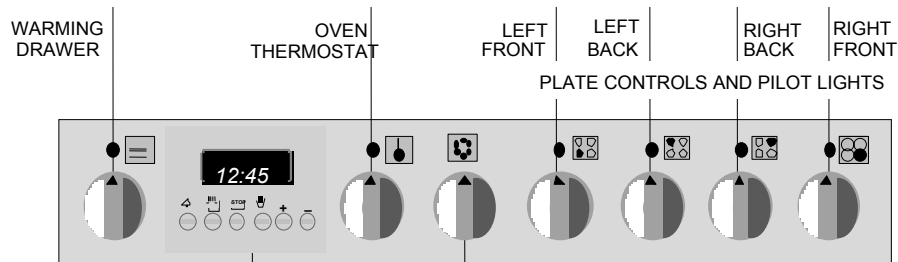

MULTI FUNCTION SELECTOR

- Fan only (defrost)
- Conventional cooking
- Fan assisted conventional cooking
- Thermofan cooking
- Turbo grill
- Conventional grill


NOTE

A variable grill option is catered For by selecting Turbo Grill and Then setting the oven thermostat to the desired grill temperature

AUTOMATIC OVEN TIMER / CLOCK

BUTTON FUNCTIONS

- 1 = MINUTE MINDER
- 2 = COOKING PERIOD
- 3 = STOP TIME
- 4 = MANUAL CONTROL
- 5 = SUBTRACT
- 6 = ADD

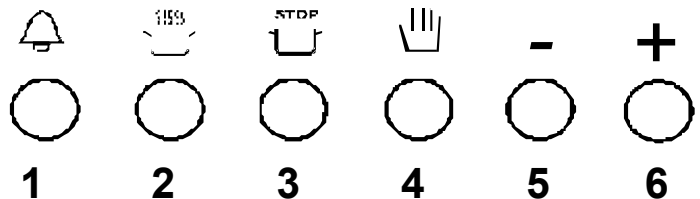

Setting the time of day


- When the power is first connected (or after a power failure), the clock display will flash **00.00**
- To set the clock, press buttons **1** and **2** and hold them down.
- Press button **5** or **6** until the correct time of day is displayed.
- Release the buttons. The clock is now set.
- Please note that the clock has a 24 hour display.
- For example 3.00 PM will be displayed as 15.00.

Minute minder

- Suppose that you wish to time the boiling of a 5 minute egg.
- First boil the water
- Press and hold button **1**. The display will show **00.00**
- Press button **6** until the display shows **00.05**
- Release the buttons and place the egg in the boiling water. The display will again show the time of day.
- After 5 minutes the timer will emit an electronic tone which lasts for about one minute (2 beeps every 2 seconds). To cancel the tone, press any of the buttons.

Note:


- During the operation of the minute the remaining time may be displayed pushing button 1
- The minute minder can be used simultaneously and independent of any automatic control program
- The display will always revert to the time of day after any program has been set.

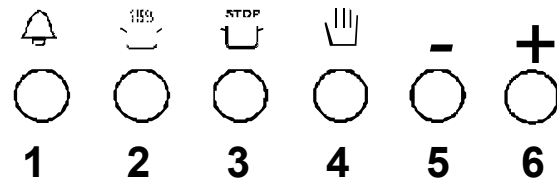

Switching the oven on and off automatically (Autobake)

Autobake is intended for dishes such as roasts and casseroles. These are not affected by a waiting period in a cold oven.

- Prepare your meal and place it in the oven.
- Set the cooking period required by pressing buttons **2** and **6** until the desired period is displayed.
- Set the stop time by pushing buttons **3** and **6** until the desired stop time is displayed.
- Release the buttons and the clock will again display the time of day.
- The word **AUTO** will light up on the clock display.
- Set the **multi function selector** where applicable to the desired function.
- Now set the relevant **oven thermostat** the desired temperature setting.

The automatic control will automatically switch the oven on and the  symbol will light up in the clock display.

Cooking will commence at the selected temperature and for the selected cooking period.

The oven will automatically switch off at the selected stop time and emit an electronic tone for about one minute (4 beeps every 2 seconds).To cancel the tone, press any of the buttons.

- The word **AUTO** will flash until button **4** is pressed and manual control is restored.
- Return the **multi function selector** to the **OFF** position.
- The oven **thermostat** must be turned to the **OFF** position in an anticlockwise direction.

Example:

Suppose the time of day is now 13h00.

The food needs to be cooked for 2 hours at 180°C and it should be ready to serve at 18h00. Here's what to do.


- Ensure the clock is set to the correct time of day, **13.00**.
- Press buttons **2** and **6** until **02.00** is displayed.
- Press buttons **3** and **6** until **18.00** is displayed.
- Set the oven thermostat to **180°C** and the multi function selector to the desired mode.

Hint:


It is not advisable to use the Autobake function for cooking periods that are less than 60 minutes.


Switching the oven off automatically

Suppose you have to go out and you will not be back in time to switch off a meal already cooking in the oven and requiring another 40 minutes before it is done. Proceed as follows:

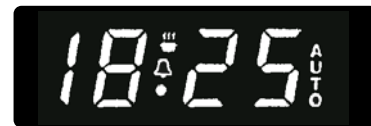

Proceed as follows:

- Press and hold button **2**. The clock will display **00.00**.
- Release the buttons and the clock will again display the time of day.
- The word **AUTO** and  will light up in the display.
- After 40 minutes, the oven will switch off automatically and emit an electronic tone for about one minute (4 beeps every 3 seconds).
- To cancel the tone, press any of the buttons.
- The word **AUTO** will flash until button **4** is pressed and manual control is restored.
- Return the **multi function** selector to **OFF**.
- The oven **thermostat** must be turned to the **OFF** position in an anticlockwise direction.

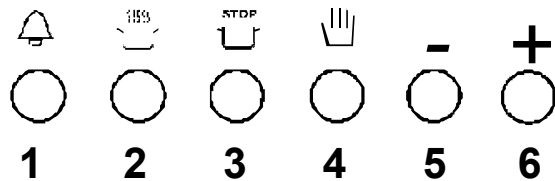

Important

- If the Automatic start and or stop functions are not required, the clock must be set to manual mode. Unless this is done, the oven will not work. Press button 4
- Check that the Key lock is not activated. (See page 6)

Special feature - Key lock

When activated, the ‘Key Lock’ prevents unauthorised persons or children operating the oven.

To Activate the key lock:

1. Ensure that the timer is in manual mode. (Cancel any active programmes)
2. Press buttons 1 and 2 simultaneously and hold them down for approximately 8 seconds. The display will then read “ON”
3. Press button 6 and the display will read “OF” and a key symbol will appear.
4. After approximately 5 seconds, the clock will revert to the time of day but the key symbol will remain
5. In this mode the clock will function normally but the elements will not come on and the oven elements are thus disabled.


De-activating the Key lock

1. Ensure that the timer is in manual mode. (Cancel any active programmes)
2. Press buttons 1 and 2 simultaneously and hold them down for approximately 8 seconds. The display will then read “OF”
3. Press button 6 and the display will read “ON” and a key symbol will disappear.
4. After approximately 5 seconds, the clock will revert to the time of day.
5. In this mode the clock and oven will again function normally.


WARMER DRAWER

- The warming drawer has a variable temperature control. This allows the correct setting for the application. An indicator light will glow when the drawer has been switched on.
- If food is to be kept warm for a lengthy period it is best to select a lower temperature.
- Food left for too long in the warmer drawer could dry out and spoil. As a precaution food should always be covered, to minimise the drying effect.
- The drawer can be removed for cleaning purposes. Pull the drawer out to the bump-stop, then lift the front slightly and continue pulling till the drawer slides free.
- Refit by lifting the rear of the drawer over the bump-stop and then sliding it back.

MULTIFUNCTION OVEN

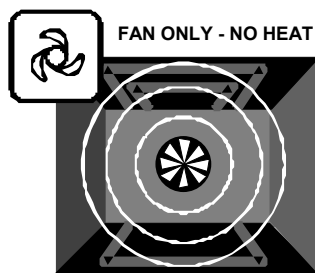


1 The fan blows ambient air over the frozen food to defrost it.

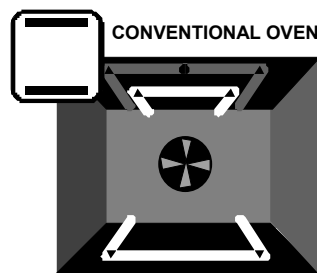


2 Top heat and bottom bake elements are used.




3 Top heat and bottom bake elements are used in conjunction with the fan.

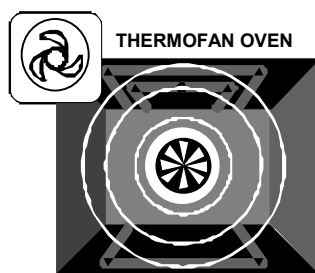

4 The rear bake element is used in conjunction with the fan.

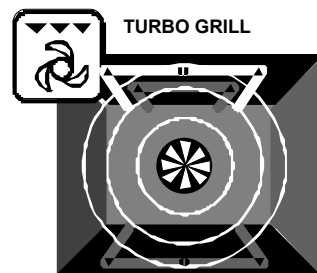

5 The top grill element is used in conjunction with the fan.

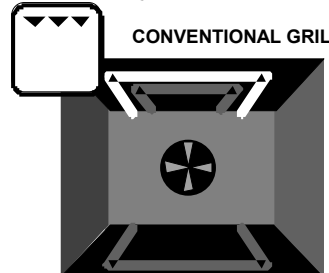

6 The top grill element only is used.

1 FAN ONLY (Defrosting)

- Ensure that the timer is set to manual.
- Set the multifunction knob to **fan only**. In this mode the fan at the back of the oven will circulate air at room temperature, substantially reducing the defrosting period required for frozen food.

2 CONVENTIONAL OVEN

- Ensure that the timer is set to manual.
- Set the multifunction selector to **conventional oven** and the oven thermostat to the required temperature. The indicator light will glow and remain on until the oven has reached the selected temperature.
- When the indicator light switches off, the food should be placed in the oven.
- During cooking the indicator light will cycle on and off as the oven thermostat maintains the selected temperature.
- After completion, return the **multifunction selector** and the **oven thermostat** to the **OFF** position in an anticlockwise direction.

Baking guide

- Where possible, bake on the middle shelf position in the oven.
- Do not use the baking trays as these are exclusively used for Thermofan baking.
- Place the food halfway between the back of the oven and the door.
- Do not open the oven door until at least two thirds of the baking time has elapsed.



3 CONVENTIONAL OVEN (Fan assisted)

- Ensure that the timer is set to manual.
- Set the multifunction selector **to conventional oven fan assisted** and the oven thermostat to the required temperature. The indicator light will glow and remain on until the oven has reached the selected temperature.
- No preheating is necessary and the food can be placed in the oven immediately.
- During cooking the indicator light will cycle on and off as the oven thermostat maintains the selected temperature.
- After completion, return the **multifunction selector** and the **oven thermostat** to the **OFF** position in an anticlockwise direction.

Baking guide

- Baking may be done on two shelves simultaneously. The recommended shelf positions are shown in the sketch.
- Do not use the baking trays as these are exclusively used for Thermofan baking.
- Place the food halfway between the back of the oven and the door.
- Do not open the oven door until at least half of the baking time has elapsed.



4 THERMOFAN OVEN

Registered by Defy in 1978, **Thermofan** cooking differs from conventional cooking in that it uses the principle of forced convection within the oven. The advantages are:

1. Both trays may be used at the same time.
2. Different dishes can be cooked simultaneously without flavour or aroma transfer. Hence fish, meat and cakes can be baked at the same time.
3. The oven door may be opened any time for inspection purposes without risking a flop.
4. By circulating hot air around the food, spit-roast chickens may be done without using a rotisserie.

Cooking

- Ensure that the timer is set to manual.
- Set the multifunction selector to Thermofan oven and the oven thermostat to the required temperature.

- The indicator light will glow and remain on until the oven has reached the selected temperature. When the indicator light switches off, the food should be placed in the oven. During cooking the indicator light will cycle on and off as the oven thermostat maintains the selected temperature.
- After completion, return the **multifunction selector** and the **oven thermostat** to the **OFF** position in an anticlockwise direction.

Baking guide

- **Thermofan** baking is done with the oven trays in position. An unused tray should be kept in position to facilitate proper airflow. Position 1 is recommended for large roasts, position 2 for roasting and baking and position 4 for baking.
- For small items the entire area of each tray may be utilised. Larger items should be placed towards the front of each tray.
- All ovens extract a certain amount of moisture from the food being cooked. The much greater capacity of the **Thermofan** oven allows more food to be cooked and thus more moisture may be released. This is normal and not detrimental to the food or the oven.
- For professional results and perfect browning, open the oven door when half the baking time has lapsed. Then turn the baking tins around so that the sides previously facing the back of the oven now face the front.



Caution: Thermofan baking relies on good contact between the bottom of the cake tin and the oven tray. Do not use spring form baking tins with a raised bottom. The lack of contact will cause the bottom of the cake to be underdone. These tins may be used on a wire shelf where no insulating air space is created.

5 TURBO GRILLING

The oven door must remain partially open (about 50mm) when turbo grilling. Use only a wire shelf when grilling as the intense heat could warp the baking trays. Turbo grilling is most suitable for meat as drying out and shrinkage will be reduced.

- Ensure that the timer is set to manual.
- Set the multifunction selector to **turbo grill**.
- Set the oven thermostat to **230°C**.
- Pre-heat the roast pan and grill rack for 5 minutes under the grill element to help seal the meat.
- Place the food on the grill rack and place this on the wire shelf near to the grill element.
- Monitor the grilling process to avoid burning the food.
- Care must be taken not to touch the grill element while handling food in the oven. Withdraw the shelf to improve access.
- After completion, return the **multifunction selector** and the **oven thermostat** to the **OFF** position in an anticlockwise direction.



6 CONVENTIONAL GRILLING

The oven door must remain partially open (about 50mm) when grilling.

Use only a wire shelf when grilling as the intense heat could warp the baking tray.

- Ensure that the timer is set to manual.
- Set the **multifunction knob** to **conventional grill**.
- Set the oven thermostat to **230°C**.
- Operating instructions are otherwise the same as those for turbo grilling mentioned previously.

WARNING: ACCESSIBLE PARTS MAY BECOME HOT WHEN GRILLING. ALWAYS USE OVEN GLOVES WHEN HANDLING FOOD IN THE OVEN AND KEEP CHILDREN WELL AWAY FROM THE PRODUCT WHEN IT IS IN USE.

SOLID PLATES

Red dot plates

- Plates featuring a red dot in the centre are high speed, high wattage plates for increased performance
- For your safety these plates are fitted with thermal limiters. Should a plate be accidentally switched on and left unattended, the limiter will reduce the power output of the plate and minimise the risk of overheating and the possibility of fire.



Caring for Solid Plates

- Before using the plates for the first time, switch them on for about 4 minutes at the highest setting. This allows the factory applied protective coating to burn in.
- To prevent blotchy discolouration and corrosion, moisture from splatters and spills should be cleaned off immediately.
- To clean the plates, wipe them with a damp cloth or nylon pad. A little liquid detergent may be used. Do not use metal scourers or sharp metal objects to clean the plates.
- After cleaning, dry the plates by switching them on for a short while.
- To prevent rust, periodically apply some, sewing machine oil or electrical hotplate polish available from Defy Service Centres. Extra attention is required in areas of high humidity or in close proximity to the sea.


NOTE: THE WARRANTY DOES NOT COVER THE REPLACEMENT OR REPAIR OF RUSTED OR CORRODED PLATES.

Recommendations

- Use only pots with a solid level base. An uneven base can prolong cooking times and waste energy.
- Use pots with a base diameter slightly larger than the plate. This will ensure even heat distribution and prevent spillage from dripping onto and staining the hot plate.
- Always cover the pot with a lid. This will conserve energy and minimise spillage.
- Thermal shock could damage the plates. Do not put cold pots on very hot plates.

Plate controls - variable

- Select the heat level by turning the knob to the required setting.
- You may select any setting.
- 1= low, 3 = medium and 6 = high.
- The illuminated display will glow, when the plate is switched on.

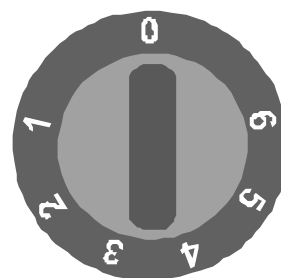

CERAN SMOOTH TOP

WARNING In the unlikely event of sustaining accidental damage and cracking, switch off the appliance at the mains to avoid electric shock and have the panel replaced before further use.

Plate controls - variable

- Select the heat level by turning the plate control knob to the required setting. You may select any setting, even between numbers. 1= low, 3 = medium and 6 = high.
- The relevant pilot light will glow and shortly thereafter the hot surface indicator light on the hob will glow. It will remain on for 20 to 30 minutes after switch off. This is a reminder that the hob surface is still too hot to touch.

Caring for the Ceran hob

- Ceran is a tough, durable material, which provides a beautiful, functional and long lasting cooking surface. To keep it looking good, it needs to be treated with care and cleaned regularly.
- Spillage should be wiped off as soon as possible with a damp cloth, preferably while the hob is still warm.
- Clean the hob with a nylon pad and 'Smooth top cleaner'. A sample of this cleaner is supplied with the unit. Replenishment cleaner is available from all Defy Service Centres.
- If necessary stubborn spills may be removed using the blade scraper provided.
- Do not use metal scourers or coarse abrasive powders as these could scratch the Ceran.
- Regular cleaning after use will prevent dirt build up and ensure that the hob remains bright and attractive.
- Wipe the hob surround with a damp hot soapy cloth and dry.


Recommendations (see also the enclosed 'CERAN' leaflet)

- Use only pots with a solid level base. An uneven base will prolong cooking time and waste energy.
- Use pots with a base diameter slightly larger than that of the thermal area. This will ensure even heat distribution and prevent spillage from dripping onto and staining the hot zone.
- Always cover the pot with a lid. This will conserve energy and minimize spillage.
- Save energy by switching the plate off 5 to 10 minutes before the end of a lengthy cooking period. The Ceran hob will retain sufficient residual heat to complete the cooking process.
- A pot with rough edges could scratch the Ceran if it were dragged across the surface of the hob.
- Any spillage of sugar solution such as jam, must be removed immediately. If allowed to cool on the Ceran it could pit and damage the surface.
- Do not cover the Ceran with aluminium foil and do not use poor quality aluminium pots. These will leave unsightly deposits, which in time, could adhere to the Ceran.

MAINTENANCE

Cleaning the oven

- Switch off the electrical power supply before cleaning any part of the appliance.
- Open the oven door and allow the oven to cool down.
- For improved access, the shelves, trays and oven door may be removed. (see details below)
- Clean the oven with a damp, hot soapy cloth. Do NOT use steam cleaners.
- It may be necessary to soak burnt soils with a liquid cleaner to soften them before scrubbing them with a nylon brush or scouring sponge.
- Heavy soils on the bottom of the oven may require overnight soaking under a sponge liberally sprinkled with household ammonia. The soil can then be removed the following morning by washing normally.
- Do not use metal objects or steel wool to clean the oven
- For your convenience, the shelves may be removed.
- After cleaning, fit the bottom element into the hooks of the element guard. Failure to observe this precaution would allow the element to rest on and possibly damage the oven enamel.

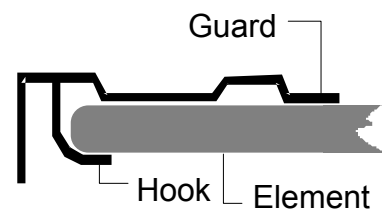

General cleaning

- Switch off the electrical power supply before cleaning any part of the appliance.
- Wipe down glass panels, cabinet, door, control knobs, trims and handles with a hot soapy cloth. Do Not use steam cleaners.
- Use only liquid household cleaners and avoid abrasive powders, scouring pads and caustic cleaners.
- Rinse and wipe down with a clean cloth.

Oven light

The oven light is switched on and off by the multifunction selector switch on the control panel.

To replace a faulty light bulb, proceed as follows:

- Switch off the power at the wall isolator to avoid the possibility of electric shock.
- Remove the light cover by unscrewing it in an anti clockwise direction
- Unscrew the faulty bulb and fit a new 40 watt bulb rated for 300°C
- Refit the light cover.

Removing the Oven Door

- Open the oven door to the grill position.
- Firmly grasp the door at both sides and pull the door upwards until it is free of the hinge arms.
- To replace the door, lower the door onto the exposed hinge arms and push firmly home.
- Check to see if the door once more closes properly.

SAFETY ADVICE

- Only use the oven and hob for preparing food.
- Always keep children away from the product when it is in use.
- Do not leave hot fat or oil unattended. If overheating occurs, these could catch fire.
- Switch off the power at the wall switch in the event of a fault or when cleaning the appliance.
- Do not store flammable items in the oven. If the oven is inadvertently switched on, these could catch fire.
- Never cover the oven bottom element with aluminium foil. Cooking times will be affected and the oven enamel could be damaged.
- Avoid spilling fruit juice, particularly citrus, on the oven as it could damage the enamel.
- Always keep the oven door gasket clean as this will enable the door to seal properly.

OWNER'S RESPONSIBILITY

Since the following are not factory faults, they are the owner's responsibility.

- Damage to exterior finish.
- Breakage of glass and other components.
- Replacement of the light bulb.
- Damage through improper installation or use of the appliance.
- Damage caused by moving the appliance.
- Rusted or corroded solid plates.

PROBLEM CHECK

**Before calling a service technician to assist with a problem,
PLEASE CHECK THE FOLLOWING**

1. The mains distribution board.
2. The wall switch.
3. Check that the “Key Lock” on the timer has not been activated. (see page 6)
4. Ensure that the automatic timer has been set to “manual mode”. Push button 4.
5. Should your timer display “HELP”, please contact your nearest Defy service centre.

Remember that you may be charged for a service call even during the warranty period if the fault is due to or caused by any of the above.

SERVICE

If you have followed the instructions and still have a problem, contact the nearest Defy Service Centre. They will be able to advise you on any aspect of the product or send a qualified technician to repair it.

The Manufacturer strives for continuous improvements. For this reason, the text and illustrations in this book are subject to change without notice.

Part Number 063 698