

# Dell™ E771mm Color Monitor

## Quick Setup Guide




### Safety Instructions

Observe the following safety guidelines when connecting and using your monitor:

- Be sure that your monitor is electrically rated to operate with the AC power available in your location.
- Locate your monitor near an easily accessible electrical outlet.
- Place the monitor on a solid surface and treat it carefully. The screen can be damaged if dropped, sharply hit, or touched with a sharp or abrasive implement.
- Put your monitor in a location with low humidity and a minimum of dust.
- Never use your monitor if the power cable has been damaged. Do not allow anything to rest on the power cable, and keep the cable away from where people could trip over it.
- Never insert anything metallic into the monitor openings. Doing so may create the danger of electric shock.
- To avoid electric shock, never touch the inside of the monitor. Only a qualified technician should open the monitor's case.
- Be sure to hold the plug, not the cable, when disconnecting the monitor from an electrical outlet.
- Openings in the monitor cabinet are provided for ventilation. To prevent overheating, these openings should not be blocked or covered. Also, avoid using the monitor on a bed, sofa, rug, or other soft surface. Doing so may block the ventilation openings in the bottom of the cabinet. If you put the monitor in a bookcase or some other enclosed space, be sure to provide adequate ventilation.
- Do not expose the monitor to rain or use it near water. If the monitor accidentally gets wet, unplug it and contact an authorized dealer immediately. You can clean the exterior of the monitor with a damp cloth when necessary, but be sure to unplug the monitor first.
- If your monitor does not operate normally—in particular, if there are any unusual sounds or smells coming from it—unplug the monitor immediately and contact an authorized dealer or service center.



### Connecting Your Monitor to a Computer

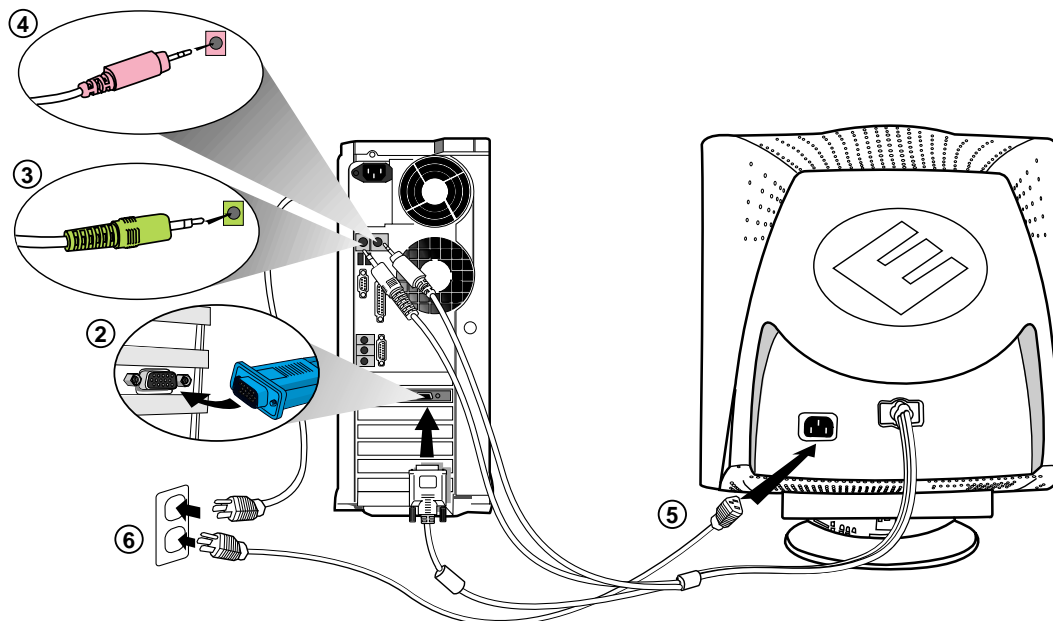


1. Turn off your computer and unplug your computer's power cable.
2. Connect the blue connector of the monitor's signal cable to the blue video connector on the back of your computer. Tighten the connector screws finger-tight. Do not overtighten.
3. Insert the green audio plug to the green audio "line out" on the back of your computer.
4. Insert the red microphone plug to the red audio "mic in" on the back of your computer.
5. Fully insert the monitor power cable into the power port on the back of the monitor.

6. Plug the power cables of your computer and your monitor into a nearby electrical outlet.
7. Turn on your computer and monitor. If the monitor does not display an image, refer to the troubleshooting section of this guide.




## Monitor Controls and Indicators

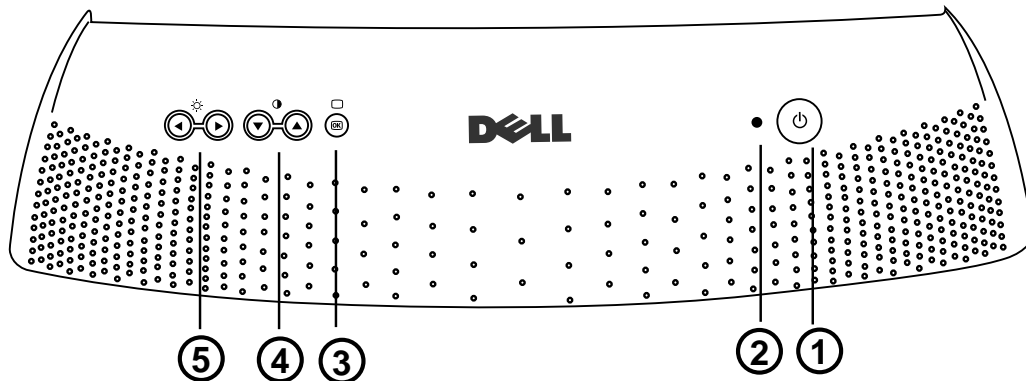

1. Power button - Switches your monitor on.
2. Power Indicator - This light glows green during normal operation
3. "OK" button - When pressed it will take you to the Main OSD Menu controls.
4. Contrast hotkeys - Pressing either Up or Down arrow directly will adjust screen contrast (CONTRAST control bar will appear on screen).  
UP and DOWN buttons - These are also used for selecting other functions in the Main OSD Menu of your monitor.
5. Brightness hotkeys - Pressing either Left or Right arrow directly will adjust screen brightness (BRIGHTNESS control bar will appear on screen).  
LEFT and RIGHT buttons - These are also used for adjusting other functions in the Main OSD Menu of your monitor.

## Audio Controls

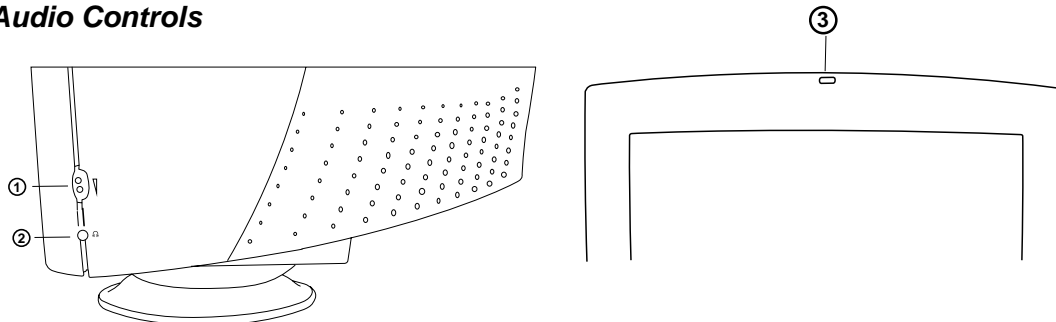

1. Volume Control: Turn the rotary knob upwards (clockwise) to increase the sound volume.
2. Earphone connection – connect your earphone plug to the earphone connector (the speakers will be switched off when earphone is plugged in).
3. Microphone located at top of front bezel : When recording sound, speak towards this location.



## Driver Installation

Use the monitor CD to install the appropriate monitor driver for your operating system.

### *Microsoft® Windows® XP Operating System*

To manually install or update the driver, perform the following steps:

1. Insert the monitor CD into the CD-ROM drive.
2. Click **Start→ Control Panel→ Appearance & Themes** and then click the Display icon.
3. In the **Display Properties** window, click the **Settings** tab, and then click **Advanced**.
4. Click the **Monitor** tab, and then click **Properties→ Driver tab→ Update Driver**.
5. When the **Hardware Update Wizard** dialog box appears, choose “Install the software automatically,” and click **Next>** and then **Finish** to complete the installation.
6. Close the **Display Properties** window.

### *Microsoft® Windows® Millennium Operating System*

To manually install or update the driver, perform the following steps:

1. Click **Start→ Settings→ Control Panel** and then double-click **Display**.
2. In the **Display Properties** window, click the **Settings** tab, and then click **Advanced**.
3. Click the **Monitor** tab, and then click **Change→ Specify the location of the driver→Next**.
4. When the **Update Device Driver Wizard** dialog box appears, select “Display a list of all the drivers in a specific location, so you can select the driver you want,” and click **Next>**.
5. Insert the monitor CD into the CD-ROM drive, then click **Have Disk...**
6. Type **d: \** (change the drive letter to match your CD-ROM drive if it is not drive D) in the **Copy manufacturer’s files from:** box, then click **OK**.
7. Click **Next>**, **Next>**, and then **Finish** to complete the installation.
8. Close the **Display Properties** window.

### *Microsoft® Windows® 2000 Operating System*

To manually install or update the driver, perform the following steps:

1. Click **Start→ Settings→ Control Panel** and then double-click **Display**.
2. In the **Display Properties** window, click the **Settings** tab, and then click **Advanced**.
3. Click the **Monitor** tab, and then click **Properties→ Driver→ Update Driver**.
4. When the **Update Device Driver Wizard** dialog box appears, choose “Search for a suitable driver for my device,” and click **Next>**.
5. Insert the monitor CD into the CD-ROM drive, type **d: \** (change the drive letter to match your CD-ROM drive if it is not drive D) in the **Copy manufacturer’s files from:** box, and click **Next>** and then **Finish** to complete the installation.
6. Close the **Display Properties** window.

### *Microsoft® Windows® 98 Operating System*

Windows 98 automatically detects the new monitor and displays the **Add New Hardware Wizard** dialog box if the monitor driver is not already installed.

1. *Insert the monitor CD into the CD-ROM drive, and click **Next>** twice when the **Add New Hardware Wizard** dialog box appears.*
2. Click the **CD-ROM drive** box to install the drivers from the CD and then click **Next>**.
3. Confirm that the driver was found on the CD, and click **Next>** twice to install the driver.
4. Click **Finish** to exit the **Add New Hardware Wizard** dialog box.

To manually install or update the driver, perform the following steps:

5. Click **Start→ Settings→ Control Panel** and then double-click **Display**.
6. In the **Display Properties** window, click the **Settings** tab, and then click **Advanced**.
7. Click the **Monitor** tab, and then click **Change**.
8. When the **Update Device Driver Wizard** dialog box appears, follow the steps in the previous paragraph.

### *Setting Display Resolution*

For optimal monitor performance while using Microsoft® Windows® XP, Windows® 2000, Windows 98, Windows 95 or Windows NT®, set the display resolution to 1024 x 768 as follows:

1. Click **Start→ Settings→ Control Panel**.
2. Double-click the **Display** icon in the **Control Panel** window, and then click the **Settings** tab.
3. In the Desktop area, move the sidebar to 1024 x 768 pixels. Then click **OK**.



## Accessing the User's Guide Online or via CD

To view the latest monitor *User's Guide*, access the **SUPPORT** section of the Dell Web site (<http://support.dell.com>).

If you do not have Internet access, you can access the guide on the monitor CD:

1. Insert the monitor CD into your CD-ROM drive.  
A start-up document should launch automatically; however, if the start-up document does not launch automatically, click **Start**→ **Run**, type `D:\monitor.htm`, and click **OK**. (Substitute the correct CD-ROM drive letter if it is not the D drive.)
2. Click the appropriate icon to open the *User's Guide* in the desired language.



*NOTE: All applicable warranty and regulatory information regarding your monitor is contained in the User's Guide on your CD.*



## Troubleshooting Tips

### Monitor Has No Power

If the monitor's power indicator is off and no image appears on the display, perform the following checks:

- Ensure that the power cable is fully inserted in the monitor's power port and the electrical outlet.
- Test the electrical outlet by plugging in a working electrical device such as a lamp.
- Ensure that the power button has been depressed, and wait for the power indicator to light.
- Try another power cable on the monitor. Use the computer's power cable and turn on the monitor with the signal cable disconnected. If the monitor is working correctly, a self-test pattern appears.

### No Image Is Displayed on the Monitor

If the monitor power indicator is on but no image appears on the display, perform the following checks:

- Ensure that the video connector is seated properly. Tighten the connector screws securely with your fingers.
- Ensure that the computer is on.
- Increase brightness and contrast controls.
- Turn off the monitor and unplug the signal cable. Check the cable connector for bent or broken pins.
- With the signal cable still disconnected, turn on the monitor. If the monitor is working correctly, a self-test pattern appears.
- Perform a monitor reset or recall.

### No Sound from Speakers

If there is no sound from speakers after Windows start up, perform the following checks:

- Ensure that all audio cables are connected properly.
- Ensure that the monitor is not in power save mode.
- Increase audio volume by turning the rotary volume control upwards.
- Turn up the volume by clicking the yellow speaker icon in the windows taskbar and adjusting the volume setting. Make sure that none of the mute boxes below the slider bars are selected. Use an audio CD and start CD player via Start-Programs-Accessories-Entertainment.

### IMPORTANT!

Before contacting Dell for technical assistance, refer to the Troubleshooting section in the *User's Guide* on your monitor CD. This section contains detailed information for resolving most monitor problems.

Information in this document is subject to change without notice.

© 2001 Dell Computer Corporation. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Computer Corporation is strictly forbidden.

Trademarks used in this text: *Dell* and the *DELL* logo are trademarks of Dell Computer Corporation; *Microsoft* and *Windows* are registered trademarks of Microsoft Corporation.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Computer Corporation disclaims any proprietary interest in trademarks and trade names other than its own.

September 2001