



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI ESAM 5400 PERFECTA. You'll find the answers to all your questions on the DELONGHI ESAM 5400 PERFECTA in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual DELONGHI ESAM 5400 PERFECTA
User guide DELONGHI ESAM 5400 PERFECTA
Operating instructions DELONGHI ESAM 5400 PERFECTA
Instructions for use DELONGHI ESAM 5400 PERFECTA
Instruction manual DELONGHI ESAM 5400 PERFECTA

INDEX

INTRODUCTION	25	FROTHING THE MILK FOR CAPPUCCINO (AND HEATING LIQUIDS)	32
Symbols used in these instructions	25	Cleaning the cappuccino maker after use	33
Letters in brackets	25	HEATING WATER	33
Troubleshooting and repairs	25	Customising hot water quantity	33
SAFETY	25	CLEANING AND MAINTENANCE	34
Fundamental safety warnings	25	Emptying the drip tray	34
Designated use	26	Cleaning the coffee maker	34
Instructions	26	Cleaning the water tank	34
DESCRIPTION	26	Cleaning the drip tray	34
Description of appliance	26	Cleaning the coffee grounds container	34
Description of control panel	26	Cleaning the spouts	34
Explanation of lights	26	Cleaning the coffee feed funnel	35
PRELIMINARY CHECKS	26	Cleaning the inside of the machine	35
Controls after transport	26	Cleaning the infuser	35
Installing the appliance	26	DESCALING	35
Connecting the appliance	26	SETTING WATER HARDNESS	36
Using the appliance for the first time	28	Measuring water hardness	36
TURNING THE APPLIANCE ON	28	Setting water hardness	36
TURNING THE APPLIANCE OFF	28	TECHNICAL SPECIFICATION	37
CHANGING THE MENU SETTINGS	29	DISPOSAL	37
Manual rinsing	29	DISPLAYED MESSAGES	38
Descaling	29	TROUBLESHOOTING	40
Setting the temperature	29		
Auto-Off	29		
Setting water hardness	30		
Resetting factory default values (reset)	30		
Installing the filter	30		
Replacing the filter ("Reset water filter")	30		
Statistics function	30		
MAKING COFFEE	31		
Selecting the coffee taste	31		
Selecting the quantity of coffee in the cup	31		
Customising the "my coffee" quantity	31		
Regulating the coffee mill	31		
Making coffee using coffee beans	31		
Making coffee using pre-ground coffee	32		

24



[Your user manual](#)
[DELONGHI ESAM 5400 PERFECTA](#)

Manual abstract:

If repairs are required, contact an authorised service centre only. **25 Danger!** Do not allow the appliance to be used by persons (including children) with psychological, physical or sensory impairments or with inadequate experience or knowledge, unless closely supervised and instructed by someone responsible for their safety. Children must be supervised to ensure they do not play with the appliance. **Important: Risk of burns!** This appliance produces hot water and steam may form while it is in operation. Avoid contact with splashes of water or hot steam. When the appliance is in operation, do not touch the cup warmer shelf (A6) as it becomes hot. **Designated use** This appliance is designed and made to prepare coffee and heat drinks. All other use is considered improper.

This appliance is not suitable for commercial use. The manufacturer is not liable for damage deriving from improper use of the appliance.

DESCRIPTION Description of the appliance (page 3 - A) A1. Grinding coarseness regulator knob A2. Bean container lid A3. Container for coffee beans A4. Pre-ground coffee feed funnel A5.

Compartment for measure A6. Cup warmer shelf A7. Water tank A8. Infuser A9. Coffee grounds container A10.

Cup tray A11. Drip tray A12. Service door A13. Coffee guide A14. Coffee spout (adjustable height) A15. Cappuccino maker/hot water spout A16. Measure A17. Main switch **Instructions** Read these instructions carefully before using the appliance. - Keep these instructions. If the appliance is passed to other persons, they must also be provided with these instructions.

- Failure to respect these instructions may result in burns or damage to the appliance. The manufacturer is not liable for damage deriving from failure to respect these instructions. **Description of control panel** (page 3 - B) A number of buttons on the panel have a dual function. This is indicated in brackets in the description. B1. button: turns the appliance on and off B2. Indicator lights: indicate the current settings, alarm messages or need for maintenance. B3. button: to prepare 1 cup of coffee with the settings displayed B4. button: to prepare 2 cups of coffee with the settings displayed.

B5. button: to deliver steam or hot water to make hot drinks. (When you access the MENU, pressing the "OK" button confirms the selection made). B6. Selection knob: turn clockwise or anticlockwise until the light corresponding to the quantity of coffee comes on "my coffee" (customised) espresso coffee standard coffee long coffee 26 extra long coffee (When you access the MENU: turn to select).

Aroma selection button : press until the light corresponding to the type of coffee you want to make comes on. pre-ground coffee extra-mild taste mild taste standard taste strong taste extra-strong taste B8. B8. steam or hot water selection button. (When you access the MENU: press the "ESC" button to exit from the selected function and go back to the main menu).

P button to access the menu: **PRELIMINARY CHECKS** Controls after transport After removing the packaging, make sure the product is complete and undamaged and that all accessories are present. Do not use the appliance if it is visibly damaged. Contact the technical service centre. **GB B7. Installing the appliance** **Important!** When installing the appliance, respect the following safety warnings: · The appliance gives off heat. Leave a free space of at least 3 cm around the sides and back of the appliance and at least 15 cm at the top, otherwise the heat could be trapped and damage the machine. · Water penetrating the appliance could cause damage. Do not place the appliance near taps or sinks. · The appliance could be damaged if the water it contains freezes. Do not install the appliance in a room where the temperature could drop below freezing point.

· Arrange the power cable in such a way that it cannot be damaged by sharp edges or contact with hot surfaces (e.g. electric hot plates). B9. Explanation of lights The "hot water" function is selected. Manual rinse (activated by accessing the menu with the P button) Indicates the need to descale the appliance. The water tank is empty and must be filled with fresh water. The "temperature" light comes on when the machine is warming up or cooling down. It goes off when the correct temperature is reached. The "steam " function is selected.



[Your user manual](#)

[DELONGHI ESAM 5400 PERFECTA](#)