

Installation instructions for the deployment and installation of your Aruba 40 802.11b/g wireless access point.

About the Aruba 40

The Aruba 41 is part of a comprehensive wireless network solution. The device works only in conjunction with an Aruba Mobility Controller, and provides the following capabilities:

- Wireless transceiver
- Protocol-independent networking functionality
- IEEE 802.11b/g operation as a wireless Access Point
- IEEE 802.11b/g operation as a wireless Air Monitor
- Compatible with IEEE 802.3af Power Over Ethernet (POE)
- Can be centrally managed, configured, and upgraded through an Aruba Mobility Controller

PACKAGE CONTENTS

- 1 x Aruba 40 Wireless Access Point
- 1 x Quick Installation Guide (this document)

Inform your supplier if there are any incorrect, missing or damaged parts. If possible, retain the carton, including the original packing materials. Use them to repack the product in case there is a need to return it.

BEFORE GETTING STARTED

Before installing your Aruba 40 wireless access point, please ensure you have the following:

- 1 x Fast Ethernet cable of required length
- 1 x 802.3af compliant Power over Ethernet source (PSE) - Aruba Mobility Controller or Midspan device
- 1 x Aruba Mobility Controller provisioned on the network:
 - with Layer 2/3 network connectivity your Aruba 40
 - One of the following network services:
 - Aruba Discovery Protocol (ADP)
 - DNS server with an "A" record (see section 1; Provisioning the Aruba 40)
 - DHCP Server with vendor specific options (see section 1; Provisioning the Aruba 40)
- Optional:
 - Mounting screws (not supplied)

The Aruba AP Setup Process

Setting up an Aruba AP typically consists of a planning stage and three AP installation stages:

WLAN Planning — Determine how many Aruba access points will be needed for your wireless network deployment and where they will be installed. This can be easily accomplished using Aruba's automated RF Plan site-survey software (available separately). This stage should have been completed during the master Aruba Mobility Controller installation and configuration. In typical Aruba installations, the mobility controllers are configured and installed prior to access points.

1 AP Provisioning — Provides each Aruba access point with the initial setting required to locate the host Aruba Mobility Controller.

Once the Aruba access point is associated to its host Mobility Controller, device specific configuration may be applied as required (such as location code).

2 AP Installation — Once provisioned, the AP can be physically installed at its intended place of operation.

3 AP Configuration — The administrator defines the operational behavior for each Aruba access point such as RF characteristics and security features. For specific access point configuration information, refer to the ArubaOS User Guide.



1 Provisioning the Aruba 40

Aruba Networks, in compliance with governmental requirements, has designed the Aruba 40 such that only authorized network administrators can change these settings. For more information on Access Point configuration, refer to the ArubaOS User Guide.

CAUTION:

Access Points are radio broadcast devices and as such are subject to governmental regulation. Network administrators responsible for the configuration and operation of Access Points must comply with local broadcast regulations. Specifically, Access Points must use channel assignments appropriate to the location in which the Access Point will be used.

Goal of Access Point Provisioning

Provisioning provides the Aruba access point with basic network settings that allow it to locate the host Aruba Mobility Controller. Initial provisioning may be achieved through a number of methods, including:

- Aruba Discovery Protocol (ADP)
- DNS
- DHCP with Vendor Specific Options

Aruba Discovery Protocol (ADP)

This is the simplest method for AP provisioning. ADP allows Aruba access points to be connected to the network (or directly to a Aruba Mobility Controller) and brought into operation automatically.

ADP performs one key task:

Obtain the IP address of the host Aruba Mobility Controller from which the Aruba access point will obtain its initial software load and configuration.

NOTE: Additionally, the access point software can be uploaded via a standard TFTP server.

ADP with Directly / Layer 2 Connected Access Points

If your Aruba access point is directly connected to an active Ethernet interface on an Aruba Mobility Controller, then no configuration is required. You may proceed to the next step.

ADP with Layer 3 Connected Access Points

If your Aruba access point is NOT directly / Layer 2 connected to an Aruba Mobility Controller, and IP multicast routing is enabled on the host network, then ADP will multicast packets to locate a host Aruba Mobility Controller's IP address.

To ensure ADP is enabled, issue the following commands on the Master Aruba Mobility Controller:

```
(A5000) (config) #adp discovery enable  
(A5000) (config) #adp igmp-join enable
```

An IP helper address on the subnet's default gateway, mapped to the host Aruba Mobility Controller's IP address can be also used to facilitate the multicast / broadcast based aspect of this process.

Provisioning using DNS

If Layer 3 network connected, the Aruba 40 can use network based DNS to resolve a factory configured default host name "aruba-master" to derive the host Mobility Controller IP address. To enable this, a record for "aruba-master" must be created on the network DNS server.

Provisioning using DHCP with Vendor Specific Options

A standards compliant DHCP server can be configured to return the host Aruba Mobility Controller's IP address through Vendor Specific Options (option 43) in the DHCP reply. If the host Mobility Controller's IP address is obtained via DHCP, it will be used for uploading the Aruba access point's software image and configuration.

NOTE: If you have location-specific configurations for your Access Points, you will need to apply this configuration information using AP Reprovisioning.

AP Reprovisioning

Once an AP is associated to an Aruba Mobility Controller, it is capable of being Reprovisioned if necessary. AP Reprovisioning is the process by which APs are assigned unique configuration characteristics, for example, location codes. Location codes are important for recalibration and triangulation. For details on AP Reprovisioning, see the ArubaOS User Guide.

AP Provisioning

Recommended only in instances where APs require to be pre-staged or provisioned in advance of shipment and final network installation (such as Remote Access Point (RAP) deployments), in AP programming mode, AP configuration parameters are defined on the Aruba Mobility Controller via command line interface or web interface, where they can then be uploaded to individual access points as required.

2 Installing the Aruba 40

Select a location as close as possible to the center of the intended coverage area. The service location should be free from obstructions or obvious sources of interference. Normally, the higher you place an access point or air monitor, the better its performance.

The Aruba 40 can be mounted on a wall using the mounting slots on the bottom of the unit.

NOTE: For dimensions, see "Product Specifications". Allow 5 cm (2") additional space on the right-hand side for cables and ensure enough space for antenna articulation.

Using the Built-In Mounting Slots

The keyhole-shaped slots on the back of the Aruba 40 can be used to attach the device upright to an indoor wall or shelf.

CAUTION: Do not use the mounting slots to hang the Aruba 40 from the ceiling, sideways, or in any place where it could fall on people or equipment. For more secure installation, use one of the optional mounting kits.

To hang the Aruba 40 upright using the mounting slots, perform the following steps:

- 1 Install two screws in the wall or shelf. If attaching the device to drywall, we recommend using appropriate wall anchors (not included).
- 2 Align the Aruba 40 mounting slots to capture the surface screws.
- 3 Orient the antenna. For best performance, swivel the antenna so that it is oriented vertically.

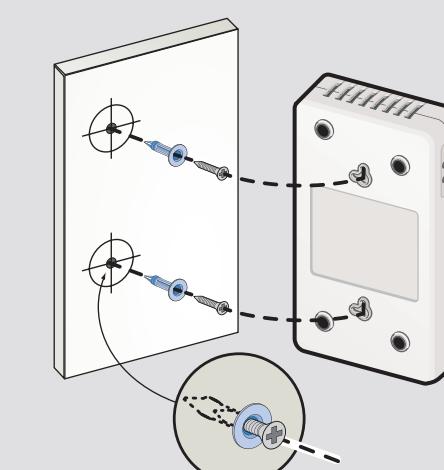


Figure 0-1: Aruba 40 Mounting

Connecting Required Cables

NOTE: Aruba 40 Access Points are intended only for installation in Environment A as defined in IEEE 802.3.af, Power over Ethernet. All interconnected equipment must be contained within the same building, including the interconnected equipment's associated LAN connections.

The 10/100 Mbps Ethernet (FE) port is used to connect the AP to a 10Base-T/100Base-TX (twisted-pair) Ethernet LAN segment. Use a 4- or 8-conductor, Category 5 UTP, straight-through FE cable. X and automatically adjusts for straight-through or cross-over cables. The maximum length for FE cables is 100 meters (325 feet). Install cables in accordance with all applicable local and national regulations and practices.

Connecting Cables & Power

- 1 Connect one end of the FE cable directly to the Aruba 40 FE port
- 2 Connect the other end of the FE cable to one of the following:
 - To a network port on the Mobility Controller, or
 - To a network mid-span device that supports 802.3af compliant port

FE Port Specifications

The 10/100 Mbps Ethernet (FE) port is located on the right-hand side of the Aruba 40 and has an RJ-45 female connector. The port pin-outs are shown in Figure 0-2:

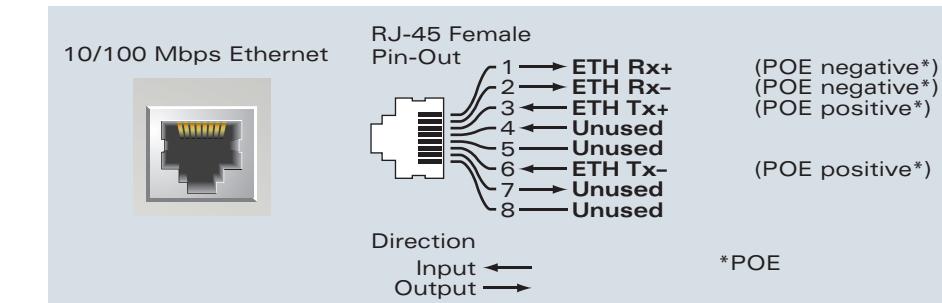


Figure 0-2: Aruba 40 FE Port

Verifying Successful Installation

The integrated LEDs on the AP 40 may be used at this point to verify the AP is receiving power and initializing successfully. LED behavior indicated status as follows:

LED	Color(S)	Activity	Action
Power/Test	Green	On	Power On, Device Ready
		Flashing	System Initializing
LAN (10/100 Mbps)	Green/Amber	Off	No Link
	Green On		100Mbps Link Negotiated
	Green Flashing		100Mbps Data Activity
	Amber On		10Mbps Link Negotiated
	Amber Flashing		10Mbps Data Activity
WLAN	Green/Amber	Off	Wireless Radio Disabled
	Green On		Wireless Radio Enabled
	Green Flashing		Wireless Data Activity

3 Configuring the Aruba 40

Once the Aruba 40 has been provisioned and installed, it will be capable of discovery and association to an Aruba Mobility Controller where the wireless and security parameters can be set. For AP configuration information, refer to the ArubaOS User Guide.

Specifications

Mechanical

Dimensions (antenna stowed) (HxWxD) :

- 107mm x 184mm x 32mm
- 4.21" x 7.24" x 1.26"

Weight - 0.45Kgs / 0.99Lbs

Temperature:

- Operating: 0°C to 50°C (32°F to 122°F)
- Storage: -10°C to 70°C (14°F to 158°F)

Relative Humidity - 5% to 90% non-condensing

Altitude - 8,000ft @ 28°C (82.4°F)

Mounting:

- Wall, cube or ceiling mountable
- Enclosure supports integrated wall point / screw head mounting lugs (screw head 7mm diameter maximum)

Antenna - Integrated, non-detachable articulating antenna

Visual Status Indicators (LEDs):

- PWR - Power / Status
- ENET - Ethernet link status / Activity
- WLAN G - WLAN 2.4GHz status / Activity

Electrical

Ethernet:

- 1 x 10/100 Base-T auto-sensing Ethernet RJ-45 Interface, MDI/MDX
- IEEE 802.3af compliant Power Over Ethernet
- IEEE 802.3, IEEE 802.3u
- Power Over Ethernet (IEEE 802.3af compliant), 48V DC / 200mA (see Ethernet pin-out diagram for pin configuration)
- Reset button

Wireless LAN

Network Standards - IEEE 802.11b and IEEE 802.11g

Antenna Type - Integral, 802.11b/g omni-directional antenna

Antenna Gain:

- 2.4 ~ 2.5GHz / 1.9dBi

Radio Technology:

- Orthogonal Frequency Division Multiplexing (OFDM)
- Direct Sequence Spread Spectrum (DSSS)

Radio Modulation Type:

- 802.11b - CCK, BPSK, QPSK
- 802.11g - CCK, BPSK, QPSK, 16-QAM, 64-QAM

Media Access Control - CSMA/CA with ACK

Supported Frequency Bands 2.4GHz:

- 2.400 ~ 2.4835GHz (Global), channels country specific

Operating Channels:

802.11b	802.11g
• US, Canada 11	• US, Canada 11
• ETSI 13	• ETSI 13
• Japan 13	• Japan 13

Complete country list available at <http://www.arubanetworks.com/products/aps/certification>

Data Rates:

- 802.11b - 1, 2, 5.5, 11 Mbps per channel
- 802.11g - 6, 9, 12, 18, 24, 36, 48 and 54 Mbps per channel

Output Transmit Power - 100 mW maximum (or lower as configured on the Aruba Mobility Controller to comply with local regulatory requirements)

Miscellaneous Functionality

Maximum Clients - 64

Radio Band Selection - via Mobility Controller in software

Manageability:

- Management of all 802.11 parameters
- Network Wide AP Management via CLI, WEB GUI and SNMPv3
- Access Point Profiles, managed by Geographical Location, BSSID and Radio Type

Encryption (AP and Mobility Controller) - 40bit / 64bit / 128bit / 152bit WEP, TKIP, AES

Compliance

FCC

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION STATEMENT: FCC RF Radiation Exposure Statement
This equipment complies with FCC RF radiation exposure limits set forth for indoor use only. This equipment should be installed and operated with a minimum distance of 20 centimeters (7.87 inches) between the radiator and your body for 2.4 GHz operations. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Canada

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of the Department of Communications.

Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Classe B prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques," NMB-003 édictée par le ministère des Communications.

VCCI - Class B

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

CE - Class B

Warning—This is a Class B product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

EU - Class B
This product complies with EN5022 Class B and EN5024 standards.

Certifications

Electromagnetic Compatibility

FCC Part 15 subpart C (15.247/15.407

RSS 210 (CAN)

TELEC ARIB STD-T66

EN 61000-4-2, EN 61000-4-3, EN 61000-4-4,

EN 61000-4-5, EN 61000-4-6, EN 61000-4-11

EN 60601-1-2: 2001

73/23/ECC

AS/NZS 4268 Class B

The CE approval mark on back of the product indicates that it meets R&TTE Directive - EN 300 328, EN 301 489, EN 301 893

Safety

UL Listed (UL60950)

UL Listed (Canadian Electrical Code/CSA 22.2 No. 60950)

EN60950 / IEC60950

Disposal of AP40/41

When the useful life of the Access Point has expired, be sure to dispose of the unit in accordance with all local code and environmental regulations. Contact your local waste management or environmental agencies for details.

Customer Support

Main Site: www.arubanetworks.com

Support: www.arubanetworks.com/support

E-mail

Sales: sales@arubanetworks.com

Support: support@arubanetworks.com

Telephone Numbers

Main 408-227-4500

Fax 408-227-4550

Sales 408-754-1201

Support In the U.S.: 800-WI-FI-LAN (800-943-4526)

International: 408-754-1200



The Mobile Edge Company

1322 crossman avenue | sunnyvale california 94089

tel 408 227 4500 | fax 408 227 4550

www.arubanetworks.com