

K3100G+M483G+G01UF

Prestige
The perfect way to pair comfort with productivity

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

2.4 GHz wireless keyboard and mouse

Package contents

- · Wireless keyboard (two AAA batteries included)
- · Wireless laser mouse (one AA battery included)
- · Ultra compact USB receiver
- Instructions

Installing the batteries

Keyboard

- Step 1: Press the battery compartment button to open the lock located in the bottom of the keyboard. Lift the battery cover away from the unit.
- Step 2: Insert the supplied batteries, making sure to place them with correct polarity inside the compartment.
- Step 3: Replace the cover, pressing it gently until it clicks in place.

Important note:

The keyboard includes a low-battery indicator conveniently located at the top right corner of the unit. When batteries are nearly depleted, the LED indicator will flash. In that case, replace both batteries with new ones, making sure they are of the same type.

Mouse

- **Step 1:** Press the battery compartment button to open the lock located in the bottom of the mouse. Lift the battery cover away from the unit.
- Step 2: Insert the supplied battery, making sure to place them with correct polarity inside the compartment.
- **Step 3:** Replace the cover, pressing it gently until it clicks in place. *Important note:*

Equipped with smart power technology, this mouse greatly extends battery life. The mouse will go automatically into standby mode after a few minutes of inactivity. If the mouse remains idle for more than 8 minutes, it will enter into a "deep-sleeping mode", reducing power consumption to almost zero.

The mouse can also be switched off completely to further save energy, especially if you intend not to use the mouse for longer periods of time.

Advanced operation

To change the speed setting of the mouse:

You may select the speed setting between 500 and 1000 dpi by pressing the silver button located at the top of the mouse for 5 seconds.

Connecting the keyboard and mouse with the USB receiver

- 1. Remove the USB receiver from its dock on the base of the mouse.
- 2. Connect the USB receiver to a free USB port on the PC.
- 3. Turn on your computer, if you have not done so already.
- 4. Windows will detect the USB plug and will integrate it into the operating system.

5. Keyboard pairing:

Press and hold the "connect" button located on the bottom of the keyboard. The connector light will flash for a few seconds. Tap the keys on the keyboard or type something to verify that is working properly. If it does not work, please repeat the procedure again.

6. Mouse pairing:

Locate the switch on the bottom of the mouse and make sure that is set to ON. Press and hold the left and right mouse buttons until the LED flashes for a few seconds. Disposal Move the mouse around to make sure the pairing is successful. Otherwise, repeat the procedure again.

Troubleshooting

If the keyboard or mouse doesn't work as expected, first verify that the following recommendations have been followed:

- · The batteries are new and are correctly installed.
- The receiver is correctly connected to the computer.
- Receiver is within communication range with keyboard and mouse (no more than 10 meters away, depending on location).

Disposal



Electrical and electronic products must not be discarded as regular household waste!

As part of the company's eco-friendly approach, we encourage you to follow all applicable local waste regulations to dispose of your used electronics properly.

Safety precautions

- There are no user -serviceable parts in either the mouse or keyboard; never attempt to disassemble them.
- · Keep water or other liquids away from both electronic devices.

Copyright

Reproduction of this manual or any part thereof is forbidden without written consent from Klip Xtreme, LLC.