


Handy Terminal "BHT-800" will be supplied with this AC adaptor.
As you can see in the drawing below, this AC adaptor has Standard Ferrite Core.

Connecting to the power supply

CU-801, CU-811, CU-821, CH-851

- (1) Connect the output plug of the AC adaptor into the power inlet connector of the CU/CH.
- (2) Connect the AC adaptor to a wall socket.

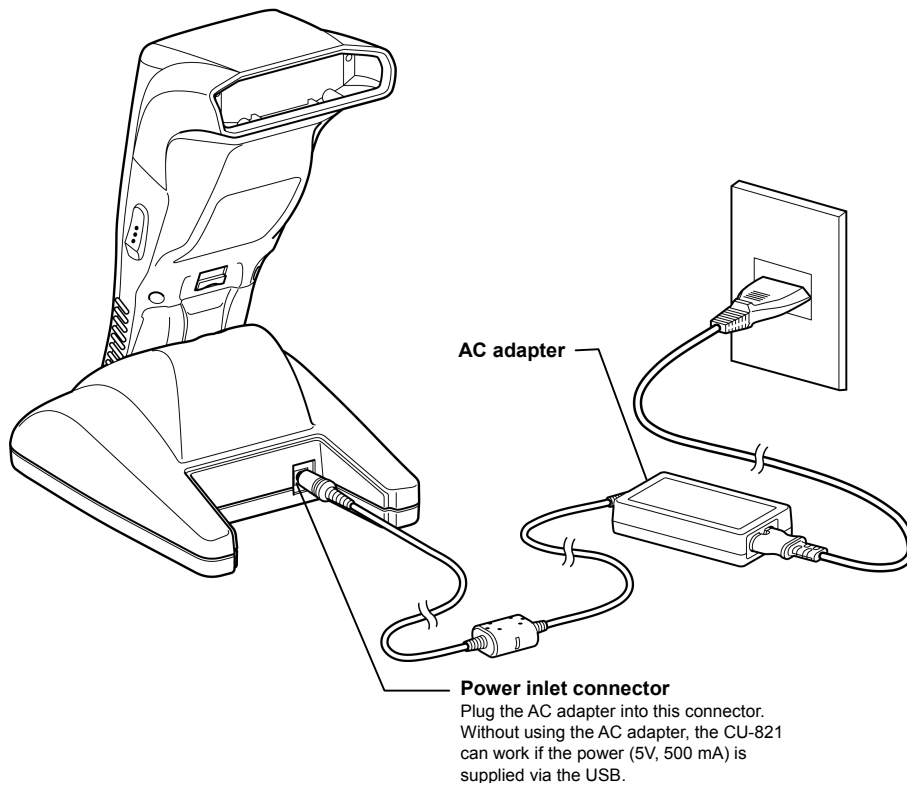

Note: The above diagram is that of the CH-851.