

Locking/Unlocking the doors

**INSTRUCTIONS**

When you push the 'Lock' button on the key, all the doors can be locked from outside the vehicle.

Make sure all the doors are locked when you leave the vehicle.

When you push the 'Unlock' button on the key, all the doors can be unlocked from outside the vehicle.

(If applicable)

When you push the 'Trunk' button on the key, the car trunk lid can be opened from outside the vehicle.

(If applicable)

When you push the 'Power Back Door' button on the key, the back door can be opened /closed from outside the vehicle.

(If applicable)

When you push the 'Panic' button on the key, alarms can be operated/unoperated from outside the vehicle.

**NOTE**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC WARNING**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.