content

Chapter 1 Product Description1				
Section 2 Product Appearance Introduction1				
Section 3 speaker (bee buzzer) sound2				
Section 4 Product paramete3				
Chapter 2 The Product Installation5				
YooSee APP Download Installation5				
Section 2 YooSee APP ID Registered (Initial Use)6				
Section 3 YooSee APP Log In (Finished Registering) 9				
Section 4 Proudcts Launch11				
Section 5 How To contact Products of First Time To Use				
Or Reset With YooSee App11				
Section 6 How To Product Of Contact Password Set With				
YooSee APP20				
Chapter 3 Product Features21				
Section 2 Camera setting Main Interface Button				
Introduction23				
Section 3 Camera Real-time Viewing Interface				
1				

Instrue	ctions					24
Sectio	n 4	Yoosee	APP	System	Settings	Interface
Instrue	ctions					25
Chapt	er 4 C	amera Ba	sic Fea	tures		26
Secti	on 2	Device In	formati	on		26
Sectio	on 3 ·	Time Settir	ngs			27
Sectio	n4 I	Media Sett	ings			28
Sectio	n 5 Se	ecurity Set	tings			29
						29
Sectio	n 6 I	Network Se	ettings			29
Secti	ion 7 A	Alarm Setti	ngs			30
Sectio	n 8 l	Recording	Setting	gs		31
Sectio	n 9 Df	fense Zone	e settin	gs		34
Sectio	on 10 S	Storage Se	ettings.			35
Sectio	on 11 E	Device Upo	lates C	hecking.		35
Chapter 5	Yoos	ee APP Sy	stem S	Setting Fe	atures	35
Secti	on 1	ID Imforat	tion			36
Sectio	on 2	System Se	etting			36
Sectio	on 3 Ve	ersion upda	ate			37
Sectio	on 4	System No	otificatio	on		37
Sectio	on 5	About				37
			2			

Chapter 1 Product Description

Section 1	Packing List:	
Device *1		
Instructions*1		
adapter*1		
Stent and install	Accessories bag*1	Haier

Section 2 Product Appearance Introduction

- 1 : High sensitivity resistor
- 2: HD Camera Shot;
- 3 : Infrared night vision lights ;
- 4 : microphone (Built-in);
- 5: WIFI Aerial;
- 6 : speaker (Built-in);
- 7: Power port;
- 8 : Reset ;
- 9 : TFcard slot :
- 10 : Network port



Section 3 speaker (bee buzzer) sound

camera speaker(bee buzzer)sound stutas definition:

- waiting to connect when device works(network not connect)
- 2. Voice promptsthat connecting and waiting (nework connecting successfully)
- Voice prompts:connecting successfully(WIFI connection successfully)
- 4. Voice prompts:reset successfully(reset successfully)
- 5. sirens (motion detection alarm)
- Voice prompts: set defense successfully(defense setting)
- Voice prompts: Withdraw defence successfully(withdraw defence)

Section 4 Productparamete

	Туре	1/4" Color CMOS Sensor
		Primary:
Picture Sensor	Tesolution	720P/960P/1080P;
		Minor: 640 x 360 (12fps);
	Focal	F: 3.6MM
LENS	Lens Type	GLASS
LEINS	Perspective	65 Degrees
	Input	Bulit-in microphone
Audio	Output	Bulit-in speaker
Audio	Audio codec	- 744 elevy
	format	g.711alaw
	Compressed	H.264
	image format	п.204
) (ida a		Primary:720P/960P/1080P
Video	esolution	Minor: VGA
		(640 x 480, 12FPS)
	Image Flip	Auto

-		
	Storage	Sport (Max Micro SDcard
	Otorago	32GB)
	Supported	TCP/IP,DHCP,DDNS,PPP
	Protocols	OE,UPNP,RTSP,ONVIF
	WIFI	IEEE 802.11b/g/n
Communication	WIFIF	5014 (Ourse Arres)
Communication	Distance	50M (Open Area)
	Wireless	WEP & WPA WPA2
	Security	
	Protocol	Encryption
		Level : 355
	Cradle head	Degreesvertical: 120
		Degrees
Others		LEDInfrared Light, Night
	LED Light	Vision Function :10M
		Push Notifications、Alarm
	Alarm Output	Video、Sending email
Consumption	Power	DC 5V/2A

Implementation of standards : GB8898-2011

Chapter 2 The Product Installation

YooSee APP Download Installation

Method 1 : Scan the QR code on the retail box to install APP:"YOOSEE APP"Ifiphone(Apple ,iOS)mobile ,please scan :



Please download and install the "Y00SEE" APP



follow the prompts, and your mobile desktop will show "YOOSEE"APP, pease check :icon on right Method 2 : Hit the link and install "Y00SEE"APP : www.yoosee.com

please choose the right software version follow your mobile system ,and open the link to download the app then finish installing, your mobile will show "YOOSEE"APP,pease check: icon on right



Section 2 YooSee APP ID Registered (Initial Use)

Must register the ID if first time to use "YOOSEe", also please

pass the register process if finished registering and login the Yoosee APPSpecific steps of register (For example: android system ,the same as : 1. Hit the APP icon (YOOSEE)



3. Choose the item of Newly created through login interface

	Ac	coun	t logon	
	+86		China	
8	Enter m	obile N	lo./email add	dress
6	Please	enter tl	ne password	Ø
	Please e		ne password	99
		Log	gin	
egiste	r		Forget	passwo


2. Register by the email or mobile number and set the password

<		Mailbox register
	8	Please enter the mailbox
	ĉ	Please enter new password
	ĉ	Please re-enter password
		Immediately register

1. Import the right email or mobile number message on the Registration

a.mobile registered : Enter the Verification Code from the mobile that registered and also enter the default password

b. email registered : Enter the email address and the default password

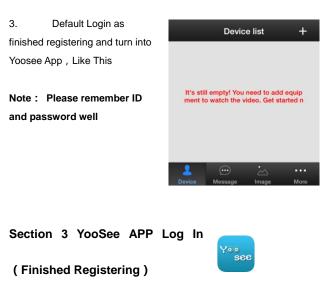

- 1. Hit the mobile App Icon(YOOSEE)
- 2. Enter the login interface ,Enter the ID and password and log in
- 3. Login successfully

	+86	I	China	
2	Enter n	nobile N	No./email add	iress
ô	Please	enter ti	he password	ø
		Log		_

Section 4 Proudcts Launch

- 1. Contact with camera. Confirm the wifi signal of mobile well ,then contact the camera with power
- 2. waiting the Motor of camera self-test (the camera lens will rotate) until head the sound:waiting to connect




Section 5 How To contact Products of First Time To Use Or Reset With YooSee App

Please Control bellow if finished setting the network contacting step:

products and the Yoose APP connection Precautions:

- the moibile and the camera need contact with the same WIFI setting
- Wifi router must not be set the security strategy that limited the drive to visit
- ♦ WIFI name must be not the Special characters
- ♦ WIfi password must not be the Special characters
- Step 1, items contact with wireless network
- Hit Icon"YOOSEE" on the Mobile desktop, and turn to device list interface automatically

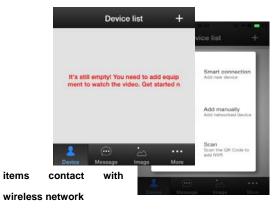

Way 1 : Intelligent connection

2. According toprompt , add the new device.hit next step

<	Add new device
Con	nected to the power supply
(
give of if no	r on and wait for the camera to ut the connection cue tone connection cue tone is heard, reset the camera
	No cue tone?
	Next step

3. now the interface poping up the wifi that need to contact with camera on the mobile ,and enter the wifi password

< Ready for connecting WiFi
Camera needs to connect
Not support 5G network
de*****ye
Please enter WiFi password 65
What requires camera have?
Next step

4. hit next step ,and
waitingto connectnetwork
5. when you head that:"
itis connecting now ,please
waiting " in 3 second , it will pop up the ID interface and
connection succeeded

When camera is ready it releases prompt tone for
No connection cue tone?
Hear connection cue tone

Ready for connecting WiFi

Way 2 : Contact the network by cable and turn to WIFI

1. please contact the camera with the router(not model) by network cable and open the Monitoring software :YOOSEE, then hit " Manually add" Upper right corner after WIFI contacted with mobile well



- 2. Enter ID , device name and password ,then hit save
- (Note:devicename:anyname you like , original password:123)

<	Add networked device
Plea	ase enter device ID +7-digit number on the bottom of the camera sticker
Plea	ase enter device name 4 Name casually
Plea	ase enter device password
	Save

 as finished last step ,hit "device settings(Gear icon)"-hit"Network settings"- hit" your wifi name as the WIFI List show"- hit"confirm "or"change"-enter password ,wait until connection succeeded (waiting for 1-3 minutes .it will show "✓"), then you could pull out the network cable and

1	C
	n
-	~

install the camera where you want to install (note: dont out

of range of wifi)

4.

<	Netwo	rk setting	9
Netw	ork type		
0	Wired		
۲	WIFI		
_			
WIFI	list		
de ****	*∗iye		🗸 🎅

Special declaration: thers must not be any special character on the WIFI , and it must be not out of MAC address limited in router

Step 2 setting password in the device

It will pop up the interface that enter the original password:"123",and set the new password after login

in successfully through above 2 ways

Save Device list +

59****5

Please enter device password

<

Cam59****5

Please enter password that you

like and save in the password box of the interface created (note:remember

the password well)



it will turn to interface of device list automatically as finished

setting

Note:

- must head the sound:"waiting to connect" from camera before want to connect with network
- Please reset if wrong password or contection


unsuccessful. Way: hit the reset key behind the camera

for 5 seconds by the Sharp objects until hear the

sound:"reset successfully", and connect with the network again




Section 6 How To Product Of Contact Password Set With YooSee APP

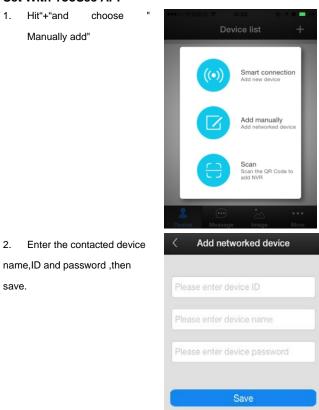

Chapter 3 Product Features

below is :Specific operations and Function Description

Section 1 YooSee APP Main Interface Button it will show interface below as hit device name:

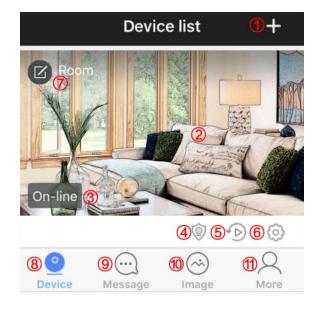

- 1. Add button :add camera
- 2. Remote monitoring:join Remote monitoring when hit
- 3. Device status:prompt be online or not
- Defencestatus:Only receiving the alarm report if set up defences.Alarm if lock , cancel alarm if unlock ,please check :Section 6 Security Settings
- 5. Replay button:reply video features
- 6. Setting button:set the device menu
- 7. Edit button:edit camera name and password
- device button: to view the device list, it will show all the camera contected
- 9. Report button: view all the alarm report
- 10. video button: view all the Screenshots of camera recorded
- 11. More button: view Yoosee APP system features and Exit interface

Section 2 Camera setting Main Interface Button Introduction

1.time settings : set time	< Device setting
2. Media settings: change	6****88
Video mode, change sound	Device information
volume ,and set image	G Time setting ≫
reversing	📔 Media setting 🛛 >>
3. Security Settings:set the	🥡 Safety setting 🛛 >>
device admin password and	Defence setting >>>
guest password	(1) Network setting >>
4. Network settings:view all	
the network message of all	Alarm setting >>>
the camera connected	Video recording setting >>
5. Alarm setting:set if receive	Add sensors >>>
alarm report or not	Service language >>

6. Video setting:set video switch and the video models

7. Zone setting: can not support

8. Storage settings:view TF card status and capacity message

9. Device update:hit the current newest version check, and

update

Section 3 Camera Real-time Viewing Interface Instructions



- 1 : Show the device time message
- 2 : Show quantity of viewing people
- 3 : Resolution switching button(HD/SD/Smooth)
- 4 : Defense button
- 5 : Monitor function button
- ${\bf 6}$: Intercom function (only intercom if Press and hold ;gun

type camera can not support)

7 : Photograph function button


- 8 : Close button and exit interface
- 9 : Slide the screen up and down, and could control the camera to rotate UDLR position

Section 4 Yoosee APP System Settings Interface Instructions

- 1. Account information: check Yoosee APP software account number and login account message
- 2. System stettings: set the scene models
- Version update:check the current newest software version
- 4. system notice:about the Yoosee software notice
- about: the Introduction of Yoosee software
- scan QR code and add device

7.

Alarm

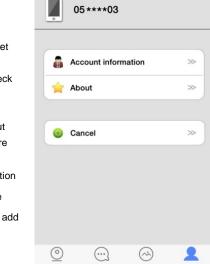

More

management:shield the device of alarm report received

and interval alarm time

- 8. Logout:log out current account number
- 9. Quit:quit out Yoosee

Chapter 4 Camera Basic Features

Section 1 Real-Time Viewing Monitoring

hit "Remote monitoring"button of camera show being online in device main interface, then could view the real-time image **NOTE:** if want to check the same device Viewing Monitoring use 2 mobiles, these 2 mobiles must use different Yoose ID to login

Section 2 Device Information

show the current device

version message



Section 3 Time Settings

- change device time, hit below "apply"and ok ! and it will show the time upper left corner when view the real-Time Viewing Monitoring after finished time setting
- 2. change the device Time zone, please choose the local time zone ,and hit "apply"

Time setti	ing			
2015	11	14	15	41
2016	12	15	16	42
2017		16	17	43
Applicatio	on		2016-12-	15 16
Time zone	e setting	9		
		UTC 7		
		UTC 8		

Note: must

Synchronize the

Section 4 Media Settings

- change video models:PAL model and NTSC model
- change the sound volume
- 5. image reversed: hit the image reversed switch to ensure view image normal normal by mobiles

<	Media	setting
Video forma	at	
PAL		Ontsc
Sound volu	me	
		_0
Picture inve	ersion	\bigcirc
Indicator lig	ght	

Section 5 Security Settings

change the admin password

and guest password

- 1. Admin password: all the permissions
- Safety setting
 word
 Set administor password
 all
 Set guest password
- 2. Guest

password:Real-time viewing permissions

< Set administor password Save	< Set guest password Sav
The new password must be 6 ~ 30 characters composed of letters and digits Please enter the current password	Please enter the guest password
Please enter the new password	< Network setting
Confirm to enter	Network type
Section 6 Network Settings	O Wired ● WiFi

- 1. network models:wire model and wireless model
- wire model: plus and connect with the network

Ow	ired	
٥w	IFI	
WIFI lis	st	
te**a		
derrore	Ve	

1

/ 🛜

cable and ok

3. wireless network list:showwifi message Nearby

Section 7 Alarm Settings

1. Alarm report received:hit the switch button ,and open if show blue ,default closed

2. The account number that alarm report push :view Yoosee APP account number that alarm report push (note: not login account number); delete account number that alarm report push, it will close the alarm report switch when delete the Yoose App ccount number

 The Email that alarm report pushed :add the email to received alarm report email can received the Screenshots of Alert Motion Detection when open the alarm report received

	Devic	e list	+
Room On-line			
		0	
Device	Message	(co) Image	Q More
-			

Alarm Set	ang
Receive warning messa	ge
Alarm sending account number	>>
Alarm mailbox	Not bound \gg
Mobile surveillance	\bigcirc
Buzzer	\bigcirc
Buzzer	\bigcirc

successfully.

- 4. Motion Detection : hit the switch button , and open if show blue ,default closed , the camera can capture moving objects when open status
- 5. Bee buzzer(Speaker) : the device can not support bee buzzer。

note : Just received alarm report only open the motion detection and the switch of alarm report received at the same time and the defences key is locked

Section 8 Recording Settings

1、 ready for the recording

1) need to ready one piece micro sd card , and put it into micro sd card (TF card)slot behind of the camera,please follow the picture below:



2) the micro sd card effect that put in the micro sd card



NOTE:

- Need format the card if first time to use. make sure the TF card is Fat 32 format system,allocation unit:16KB
- Support max capacity is 32GB, it will store 200MB/hours when device works, the video on the tf card will be covered cyclically if the TF store in full capacity and not copied out
- ♦ The video can be player by Gplayer(dedicated player)

2、 Recording stype settings

1) Manual recording

- a、 hit"Manual recording" button
- b. hit the "Manual recording" sbutton ,and open if show blue ,default closed.it will work if hit the button, and will be end to work if hit it again

Record mode	
Manual video re	ecording
O Alarm record	
O Timed video rec	cording

2) Alarm recording

when set the alarm recording status, need to ensure the the moving port is on the status of alarm report received :open the motion detection and the switch of alarm report received at the same time and the defences key is locked

- a recording models:hit
 alarm recording , and it
 start record,the camera
 just work only received
 the alarm report
- b、 recording time:set the time that record the video each time

3) Timed recording

- a、 hit "Timed recording"
- b、 time Planning

schedules:please setting the recording Start time(left) and

Recording	time (mir	1)	
() 1	O2	C)3
< Vide	eo recor	ding sett	ing
Record m	ode		
OManu	al video rec	cording	
OAlarm	record		
Time	d video reco	ording	
Planned t	ime		
Planned t			
Hour	Min	Hour	Mi
	Min	Hour 22	Mi
	Min 0		Mi

00:00-24:0

Video recording setting

Record mode

Alarm record

O Manual video recording

O Timed video recording

end time(right) in the time Planning schedules

33

Application

 $c_{\boldsymbol{x}}$ — hit the "apply" in the interface ,and cotrol successfully

3、 video viewing

hit"review"button on the yoose app main interface ,and can check video message and the view the video



Section 9 Dfense Zone settings

Defense Zone settings

Defense Zone setting could connect with other Smart home accessories,forexample:doormagnet,Human body infrared sensor ,Smoke detector etc but this model of Haier camera can not support the function,please waiting for the new models that support these functions

Section 10 Storage Settings

	Record mode	
view mini sd card (TF)card capacity,	Manual video recording	
and the Remaining capacity, also can	O Alarm record	
and the Remaining capacity, also can	O Timed video recording	
format TF card		
Note: need format the card if first time	Recording switch	
to use, make sure the TF card is Fat 32		
to use. Make sure the TF card is Fat 32	SD card capacity:	14722M
format system, allocation unit:16KB	Surplus capacity of SD card:	801M
	SD card format	\gg

Video recording setting

Section 11 Device Updates Checking

hit device checking update, view the current software version

and update in time



Chapter 5Yoosee APP System Setting Features

hit<more> button Yoosee app interface on the Yoosee App ,and

		< Account information	
Se	ction 1 IDImforation	Account No. 01+**98	
		Mailbox Not bound >>	
1.	account number: including	Mobile phone ······· >>	
	Yoosee app software		
	account number that	Change login password	
	registered and the mobile	Change password Save	
	number or email that you		
	registered	Please enter the current password	
2.	change the	Please enter the new password	
	password :enter the new		
	password and old	Confirm to enter	
	password, also can change		
	the login password that setted	before	
		/ Outlow cutting	

Section 2 System Setting

Yoosee software system default settings including alarm setting 36

Warning vibra	tion
Alarm ringing	
Alarm ringing	
On-hook icon in notice co	
Automatic sta	rtup C

and ring setting etc

Section 3 Version update

hit "version update checking", view the Yoosee current version and update the newest version



Section 4 System Notification

the items is the Yoosee APP System Notification

Section 5 About

hit "about"button to view description about Yoose app About 00.46.02.01

Yoosee is a charge-free APP custommade for the new generation of smart home appliance. It adopts the advanced Cloudlink P2P network transmission technology. Remote monitoring can be realized so simply, letting you care about your families and friends at any time everywhere.

Section 6 Log Out

hit"logout"button to quite currentloginedyooseeacc oun umber. you could login or enter the registered acc ount number and password to login again

Section 7 Quited

hit"quite"button and exit YooseeAPP,and also can hit Yoosee APP icon then log in again

Chapter6 FAQ

1.why is the network can notcontect unsuccessfully?

Answer: : please check the network status if connect well , the network settings correct, wifi name if include Special characters, the device

2.device is off line or network anomaly?

Answer :Reflashrefresh,app will reload when slide from up to down by hand, it is broken network, Power outage,camera Crash if still off line, and need to check the Circuit: pull out and plug in the plower plus! if can not restore network, please pull out the sd card after Power outage,andconntect the power well again ,if also can not r

torenetwork,need to connetct the router trough the network cable, please check P14 (wire connection change to wireless connection)to control

3.can not hear the alarm sound ?

Answer: check the switch of received alarm report if on , the Motion Detection if on ,arming key if on ,make sure all the switch and key on all the time , and open the Bee buzzer , and you can hear the alarm sound

4.Can not record the video?

Answer : check if intall TF card , and if keep recording video open , also check the TF if broken.Need format the card if first time to use. make sure the TF card is Fat 32 format system,allocation unit:16KB

5.how to do if forget the password ?

Answer :suggest to hit the reset key to reset factory settings ,

and connect network and set the password again

Chapter7 More 36

please update system software in time, it can check and update automatically

FCC Statement

This equipment has been tested and found to comply with the limits for a Class

B digital device, pursuant to part 15 of the FCC rules. These limits are

designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates, uses and can radiate radio

frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular

installation. If this equipment does cause harmful interference to radio or

television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of

the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which

the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly

approved by the party.

Responsible for compliance could void the user's authority to operate this

equipment. (Example- use only shielded interface cables when connecting to

computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject

to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference

that may cause undesired operation.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limits set forth for

uncontrolled enviroment. This equipment should be installed and operated with

minimum distance 20cm between the radiator and your body.