

Appendix 6.

User manual

Rearview Monitor

Model : RVM-804

USER MANUAL(Ver 1.0)

Table of Contents

1. Caution
2. Components of the product
3. How to use the product
4. How to install the product
5. Product Specification
6. Warranty statements



- Thank you for purchasing our touchscreen vehicle monitor.
- Please read this manual before you use the product.
- The product may be different than described in the manual; depending on renewal and/or upgrade of S/W version and performance it can be altered without notice.

Home page:
Product inquiry:

1. Caution



- For your safe operation, please read this manual before you start to use the product. We inform you that our company shall not be responsible for failures and troubles that are occurred due to misuse or neglect of the cautions written on this manual.
 - Operating this equipment when driving a vehicle might cause an accident. Use the equipment after parking or stopping the vehicle in a safe area.
 - When wiping off the dust, use a soft fabric instead of liquid solvents (thinner, benzene etc.) solution or a wet rag.
 - Do not press the liquid crystal screen hard. It might be damaged by hard pressure.
 - Do not drop or give shock. It might cause breakdown or damage.
 - Do not dismantle the product arbitrarily. We do not supply free after service for an arbitrarily dismantled product.
 - Touching the power with a wet hand causes electric shock. Caution required.
 - For accessories or cables to connect with the product, it is recommended to use proper goods from our company. We are not responsible for any problems caused by wrong articles.
 - Do not disconnect the power cable during using the product. It might cause damage to the product.
 - Please conform the failure of the User's Guide and precautions, If a fault occurs in the operations.
- # Amplified explanation is as follows.
- Caution: This part inform what to keep in mind or understand and what caution is required to use the product.
 - Ref(reference): Reference is about functional explanation.

2.Components of the product



① Touch Screen

- By touching one of the small picture during multi screen mode, the concerning small picture will be enlarged into full screen mode.
- By touching the screen it is possible to control the equipment or to change the settings.

② Power On/Off

- Press the power button for 0.5 seconds to turn on the screen.
- Press the power button for 0.5 seconds to turn on the screen when it is turned on.

③ Illuminance sensor

- Behind this window a sensor detects the actual light conditions in the area around the screen. When activated via the menu settings, this sensor automatically controls the brightness of the screen. (Day/Night control)



④ Bluetooth phone menu On/Off

- Bluetooth phone menu screen appears when you touch the button.

⑤ LCD Display On/Off

- Lcd screen appears when you touch the button.

⑥ Split Screen

- A split screen appears.

⑦ Menu Button

- The main menu appears.

Rear Panel



① Power Input

- Connect the power cable. (VCC/GND/TRG1~TRG5/Speed SW)

② Camera Input

- Connect the camera cable. (Cam1 ~ Cam4)

③ AUX In

- AUX in 2 port

④ Ext. MIC / Speaker

- Connect an external mic and speake..

Components

- Please check that you have the correct contents before using this Product.
- If any items are missing, please contact your dealer.



Top Case



Bottom Case



Manual



Power + Camera Cable


Caution : Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



3. How to use the product

Start screen


- When the booting is ready, the multi screen as below will be displayed


When the small window is touched, it is enlarged.

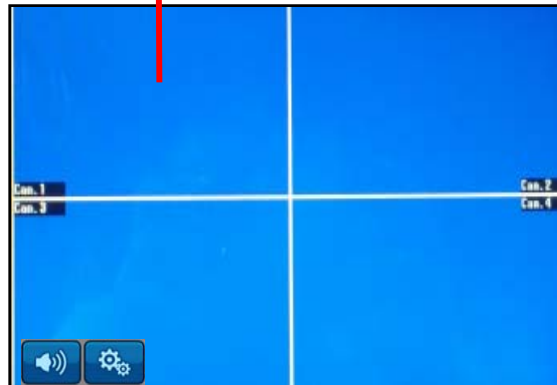

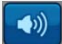- When the small window on the multi screen are touched, the channel is enlarged into full screen mode. One more touch returns it back to the multi screen mode.
-  : Adjust the volume of the speaker.
-  : Setting menu.


Volume Control

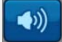-  Press the button to display volume Pop-up.

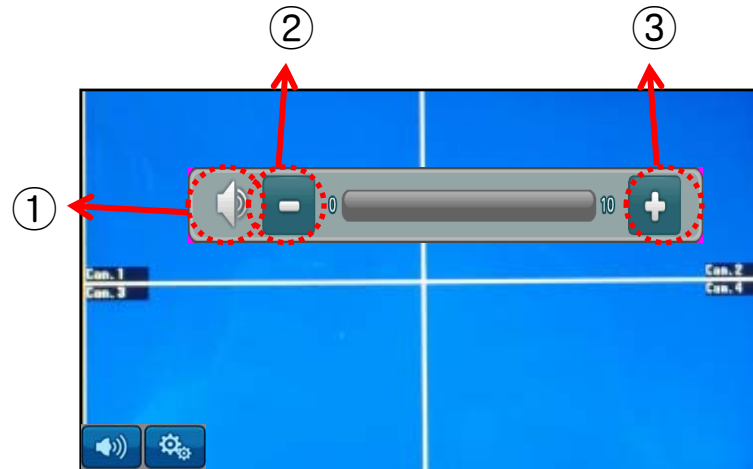

- ① Press the button to mute.
- ② Press the button to increase the volume.
- ③ Press the button to decrease the volume.


Multi screen

-  Press the multi screen button to divide the screen.




Press multi screen
Button once:
Cam1,Cam2


Press multi screen
Button 3 times:
Cam1,2,3,4

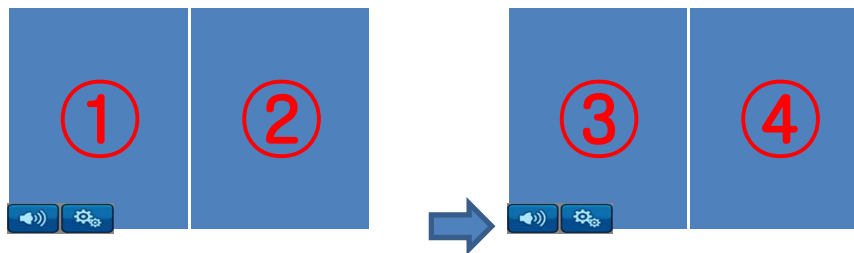

Press multi screen
button twice:
Cam3,Cam4

Setting Mode

-  Press the setting menu button to open the setting screen.

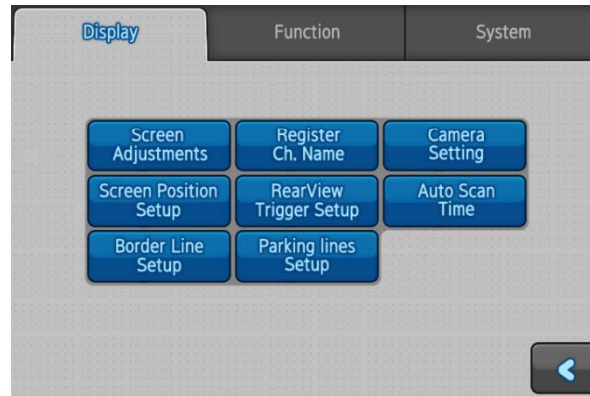

Screen Adjustments



- CAM : Adjust brightness of Camera input screen
- AUX : Adjust brightness of AUX screen

Display

Register
Ch. Name

Input the name into each channel.

Ch. Name Change		Display Ch. Name	
Ch.1	<input type="text"/>	<input type="radio"/> On	
Ch.2	<input type="text"/>	<input type="radio"/> Off	
Ch.3	<input type="text"/>		
Ch.4	<input type="text"/>		
		<input type="button" value="OK"/>	<input type="button" value="Cancel"/>

Camera
Setting

	Mirror	Reverse	Shutter
Cam.1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Cam.2	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Cam.3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Cam.4	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		<input type="button" value="Yes"/>	<input type="button" value="No"/>

- Mirror : Mirror image or normal image
- Reverse : Mirror image or reverse image
- Shutter : Enable to operate Shutter/Heater Camera

Display

Screen Position Setup

Setup screen position of each channel

Channel	None	Cam.1	Cam.2	Cam.3	Cam.4	Aux1
Ch.1	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Ch.2	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Ch.3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
Ch.4	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>

※ Caution: Cam1 and AUX1 cannot be setup at the same time.

RearView Trigger Setup

Setup the screen on each trigger.

Channel	None	Cam.1	Cam.2	Cam.3	Cam.4	Aux1
Ch.1	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Ch.2	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Ch.3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
Ch.4	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>

Display

Auto Scan Time

Display the full screen according to each Channel setup when setting up On

Scan Time (0~9sec) On Off

Quad	Ch.1	Ch.2	Ch.3	Ch.4	Aux1	Aux2	↑
							↓

OK Cancel


Border Line Setup

Display the dividing lines of the screen

Border Line

On Off

OK Cancel

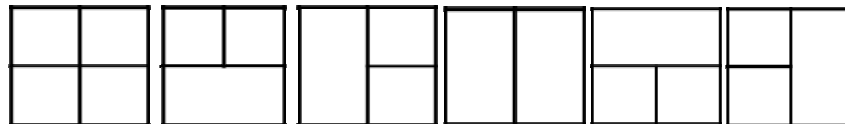

Display

Parking lines Setup


Adjust Parking line of each Trigger.

	Display	Calibration	Thickness	
Trig.1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/> Thin	
Trig.2	<input type="radio"/>	<input type="radio"/>	<input type="radio"/> Thick	
Trig.3	<input type="radio"/>	<input type="radio"/>		
Trig.4	<input type="radio"/>	<input type="radio"/>		

Calibration

Trig.1

Front & Rear

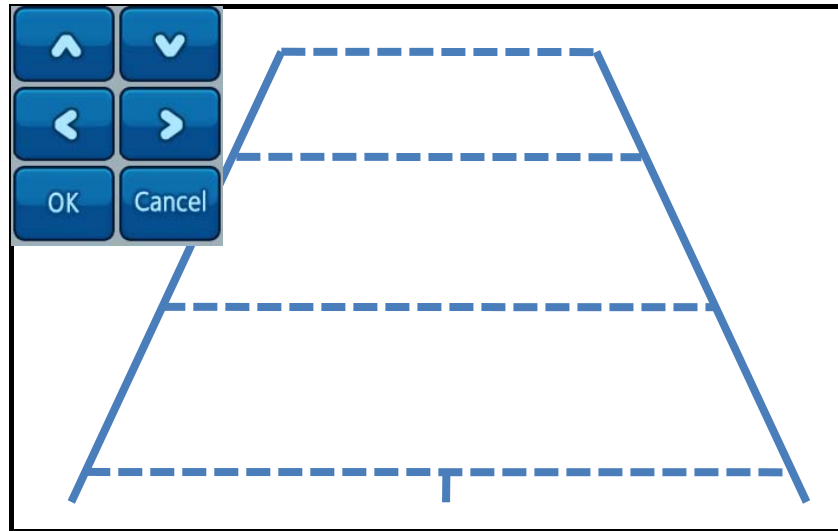

Function

Auto Power

The screen is turned On automatically
When starting the vehicle



전원 Off 전의 화면Mode로 On됩니다.

Dimmer

Automatic brightness adjustment by sensor
in the front housing



Sensitivity of automatic brightness adjustment, level 0 to
10 controlled by actual light conditions (Day/Night)

Function

Trigger Delay Time

Keep Trigger activated during setup time after Trigger off in order to bridge temporary powerloss, e.g. from vehicle's turnlight signal


Trigger Delay Time (0~9 sec)

Trig.1 Trig.2 Trig.3 Trig.4 Trig.5

OK Cancel

Touch Calibration


Re-adjust center Point of Touch panel

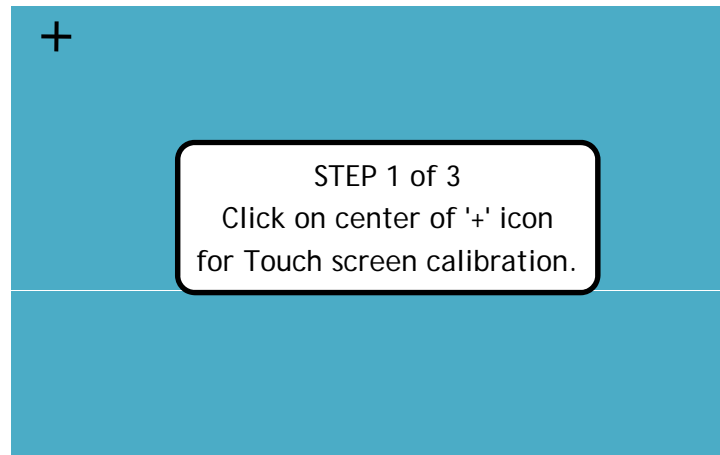

Function

Speed Switch Setup


Detect speed of a vehicle from 10 to 200Hz

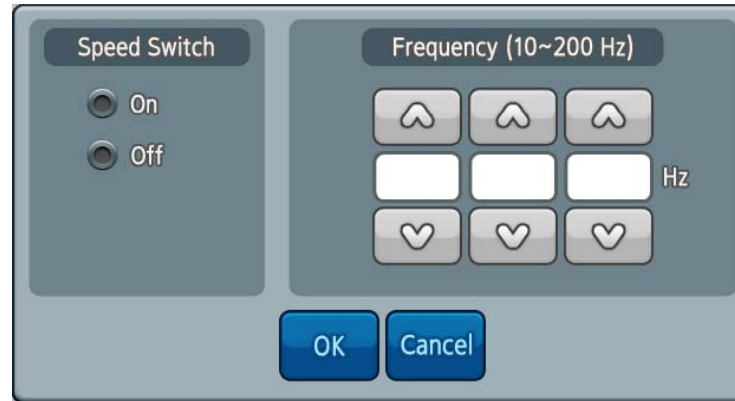

The Speed Switch Setup screen is divided into two main sections. On the left, under the heading "Speed Switch", there are two radio button options: "On" and "Off". On the right, under the heading "Frequency (10~200 Hz)", there is a numeric keypad consisting of three columns of buttons. The top row has three upward-pointing arrow buttons, the middle row has three blank white boxes, and the bottom row has three downward-pointing arrow buttons. To the right of the keypad is the label "Hz". At the bottom of the screen are two blue buttons labeled "OK" and "Cancel".

Speed Switch Display

To switch automatically into the screen ON mode, by detecting a speed signal (tacho signal)

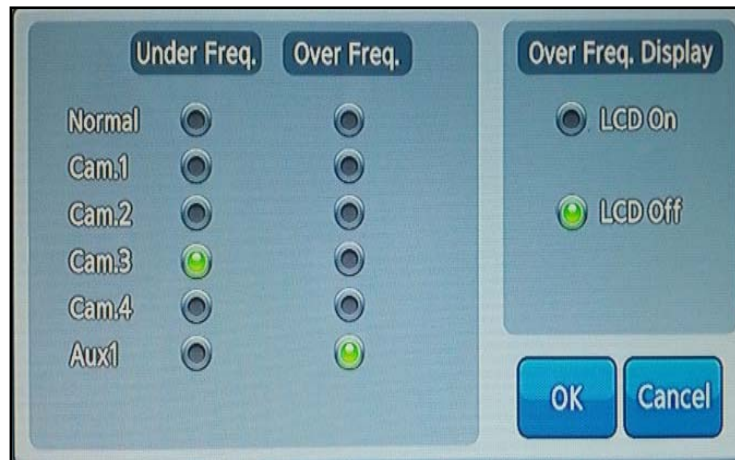

The Speed Switch Display screen is divided into three sections. On the left, under the heading "Under Freq.", there are radio buttons for "Normal", "Cam.1", "Cam.2", "Cam.3", "Cam.4", and "Aux1". The "Cam.3" radio button is currently selected and highlighted in green. In the middle, under the heading "Over Freq.", there are six unselected radio buttons. On the right, under the heading "Over Freq. Display", there are two radio button options: "LCD On" and "LCD Off". The "LCD Off" radio button is currently selected and highlighted in green. At the bottom of the screen are two blue buttons labeled "OK" and "Cancel".

System

Menu Display Time

Set time displaying the Menu screen.

Menu Display Time

On 3 sec 5 sec

10 sec 15 sec 1 min

OK Cancel

Screen On Time

Set time displayed on the screen.

Screen On Time

On 1 min 2 min

3 min 5 min 10 min

OK Cancel

설정시간 동안 Touch등 Key 입력이 없으면 화면이 꺼집니다.

System

Menu Lock

Set a password to lock the Menu button.

The screenshot shows a dialog box titled "Menu Lock". It contains two buttons: "Set" and "New Password". At the bottom, there are two buttons: "OK" and "Cancel".

Language


Support languages for each country. (Option)

The screenshot shows a dialog box titled "Language Setting". It contains a list of languages with radio buttons next to them: English, Japanese, Français, Deutch, Chinese, Italiano, Español, Korean, and Suomi. At the bottom, there are two buttons: "OK" and "Cancel".

System

Factory
Default

Initializing set points of Menu

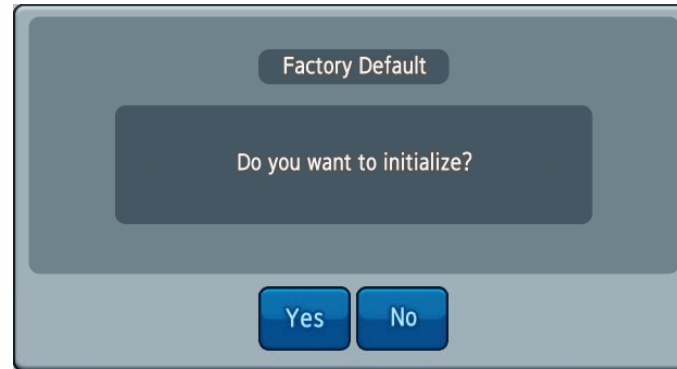

Factory Default


Do you want to initialize?

Yes No

A dialog box with a grey background. At the top, there is a dark grey rounded rectangle containing the text "Factory Default". Below this is a larger dark grey rounded rectangle containing the question "Do you want to initialize?". At the bottom of the dialog, there are two blue rounded rectangular buttons labeled "Yes" and "No".

Sys-Info.

Display Firmware Version and Model name

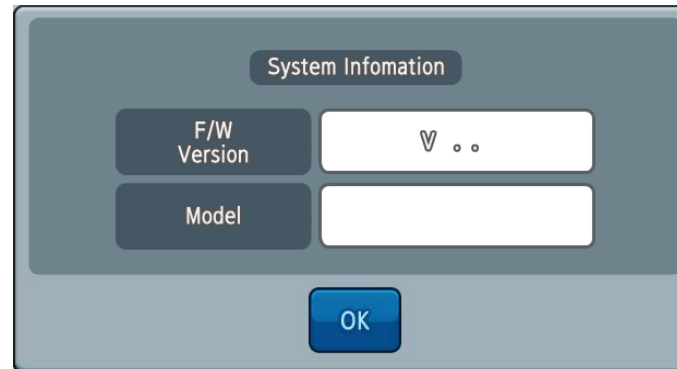

System Information


F/W Version V . .

Model

OK

A dialog box with a grey background. At the top, there is a dark grey rounded rectangle containing the text "System Information". Below this are two rows of labels and input fields. The first row has a dark grey rounded rectangle labeled "F/W Version" followed by a white rounded rectangle containing the text "V . .". The second row has a dark grey rounded rectangle labeled "Model" followed by an empty white rounded rectangle. At the bottom of the dialog, there is a blue rounded rectangular button labeled "OK".





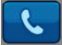


Bluetooth Phone

-  Press the button to start Bluetooth.


Screen of Bluetooth start

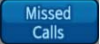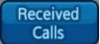

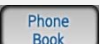
Start-up screen displays the Phone Book list of phone paired.

-  : Displays call lists during absence.
-  : Displays phone call lists received.
-  : Displays phone call lists sent.
-  : Use for making a call dialing numbers.
-  : Displays a Phonebook list.
-  : Setup of Bluetooth.
-  : Finishes Bluetooth.


Bluetooth Phone

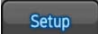- Enter the Pairing Mode for Pairing with Bluetooth by pressing the  button

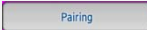

1. Pairing mode is set by pressing the  button.
2. Connect Bluetooth to a cell phone you want searching Bluetooth device.(Enter the Pin code depending on type of cell phones)
3. Message is displayed when it is connected as below.






4. Return to the start-up screen of Bluetooth by pressing the  button.

Bluetooth Phone

- Paired device : Displays devices Paired.

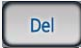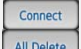

- * Display devices paired up to 8 devices
 - Displays devices paired
 - Deletes devices connected by the  button
 - Connects devices by pressing the  button
 - Deletes all devices by pressing the  button
- < Devices paired are connected automatically in order >

Bluetooth Phone


Auto Answer

:Connection automatically when receiving a call



Information


:Incoming call automatically after a set time when receiving a call from the set on the state.

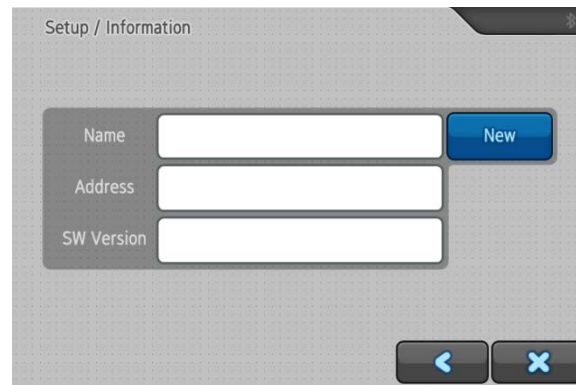


- Name : Phone on display during Pairing is the name of that instrument.
- Address : Bluetooth Address.
- Bluetooth Soft ware Version is displayed.

Bluetooth Phone

- Down load phonebook list after pairing succeed.

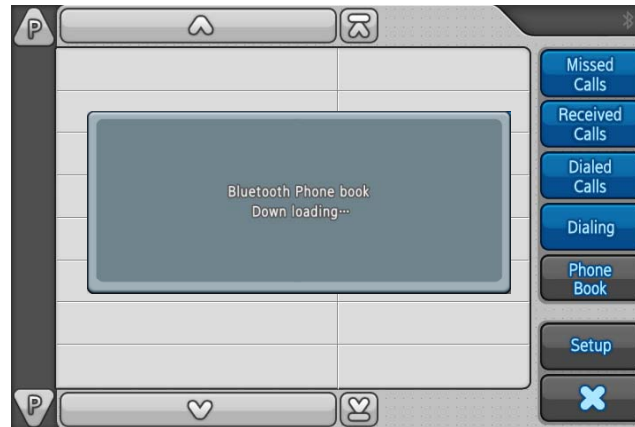

- Call after press the number in the list.

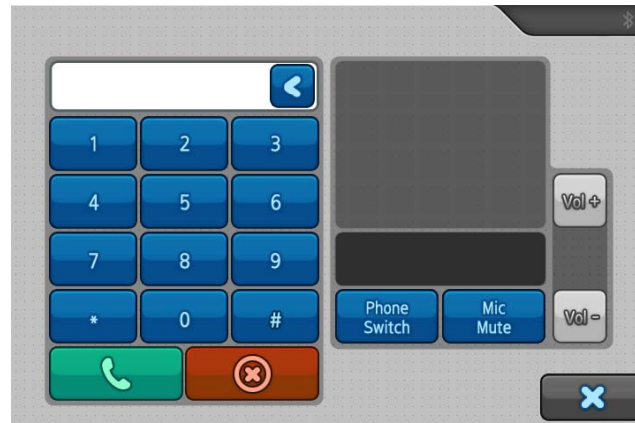

4. Installation

6. Specification

- LCD : Built in 8" TFT LCD (WVGA 800x480, with Touch Panel)
- Camera : 4Ch input (1 Vp-p, 75Ω) /NTSC, PAL (Video & Audio)
- Audio Output 1Ch
- AUX1, AUX2
- Trigger 5 input (Cable Input : 12 ~ 24V)
- ALS Sensor (Night & Daytime Brightness detection)
- Power : 12~24Vdc (12Vdc 1.3A)
- Operating Temp. : -20°C ~ 55°C
- Storage Temp. : -30°C ~ 85°C
- Dimensions (W x H x D) : 218mm x 150mm x 59mm
- Weight : 1775g

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.