

## **Table of Contents**

### **1. Getting Started with the DASDEC**

- 1.1. Introduction**
- 1.2. Features**

### **2. The Emergency Alert System**

- 2.1. Purpose**
- 2.2. Operation**
- 2.3. Management**
- 2.4. Your responsibility as a broadcaster**
- 2.5. Future of EAS and DASDEC**

### **3. DASDEC Hardware and Setup**

- 3.1. Introduction**
- 3.2. Front Panel**
  - 3.2.1. LCD**
  - 3.2.2. Status LEDs**
- 3.3. Back Panel Connectors**
- 3.4. Audio Wiring**
- 3.5. GPIO Output relays**

### **4. DASDEC Operation**

- 4.1. Power Up, User Interface and Initial Setup**
  - 4.1.1. Using a VGA monitor, keyboard, and mouse with a DASDEC**
  - 4.1.2. Directly connecting a networked host computer**
  - 4.1.3. LAN connection with a networked host computer**
- 4.2. Web Server Login**
  - 4.2.1. Product License Key Configuration**
- 4.3. Network Configuration**
  - 4.3.1. Default network setup**
  - 4.3.2. Setting the IP address using DHCP**
  - 4.3.3. Setting the IP address manually**
  - 4.3.4. Network status information**
- 4.4. Server Configuration**
  - 4.4.1. Setup Server Page**
    - 4.4.1.1. DASDEC platform ID**
    - 4.4.1.2. Server Name**
    - 4.4.1.3. Access Security Configuration**
    - 4.4.1.4. Product License Key Entry**
    - 4.4.1.5. Restart**
    - 4.4.1.6. Software Upgrade**
  - 4.4.2. DASDEC Clock and NTP**

- 4.4.3.Admin Password**
  - 4.4.4.Email Server**
  - 4.4.5.Audio levels and tone testing**
  - 4.5.Decoder Setup**
    - 4.5.1.Station FIPS ID**
    - 4.5.2.Decoder Auto-Forwarding Setup**
      - 4.5.2.1.EAS ORG Type**
      - 4.5.2.2.EAS Station ID**
      - 4.5.2.3.Auto-Forward EAS Types Setup**
      - 4.5.2.4.Auto-Forward FIPS Locations Setup**
    - 4.5.3.Audio Input Configuration**
  - 4.6.Decoder Event Status**
  - 4.7.Forwarded Event Status**
  - 4.8.Encoder Setup**
    - 4.8.1. General Encoder Setup**
      - 4.8.1.1.EAS ORG Type**
      - 4.8.1.2.EAS Station ID**
      - 4.8.1.3. EAS Types Pool Configuration**
      - 4.8.1.4. EAS FIPS Locations Pool Configuration**
    - 4.8.2.Required Tests Encoder Setup**
    - 4.8.3.Audio Encoder Configuration**
  - 4.9.Encoder Operation**
    - 4.9.1.Sending EAS alerts**
    - 4.9.2.One Button send alerts**
    - 4.9.3.Originated Alert status**
  - 4.10.Testing DASDEC Encoding and Decoding**
- 5.DASDEC Peripherals**
- 5.1.Vela NDU**
  - 5.2.Other Character generator**
- 6.Appendix**