

Table of Contents

1. Getting Started with the DASDEC
 - 1.1. Introduction
 - 1.2. Features
 - 1.3. TDX - Textual Data Exchange
2. The Emergency Alert System
 - 2.1. Purpose
 - 2.2. Operation
3. DASDEC Hardware and Setup
 - 3.1. Introduction
 - 3.2. Front Panel
 - 3.2.1. LCD
 - 3.2.2. Status LEDs
 - 3.3. Back Panel Connectors
 - 3.4. Audio Wiring
 - 3.5. GPI Output relays
4. DASDEC Operation
 - 4.1. Power Up and Initial Setup
 - 4.1.1. Starting the DASDEC
 - 4.1.2. Using a VGA monitor, keyboard, and mouse with a DASDEC
 - 4.1.3. Using a browser on a networked computer
 - 4.2. Network Configuration
 - 4.2.1. Default network setup
 - 4.2.2. Setting the IP address using DHCP
 - 4.2.3. Setting the IP address manually
 - 4.2.4. External address
 - 4.2.5. Network status information
 - 4.3. Server Configuration
 - 4.3.1. Server Name
 - 4.3.2. DASDEC Clock
 - 4.3.3. Password
 - 4.3.4. Optional Features
 - 4.3.5. Audio levels and tone testing
 - 4.4. Decoder Setup
 - 4.4.1. Station ID
 - 4.4.2. EAS ORG type
 - 4.4.3. Auto-Forward EAS Types Setup
 - 4.4.4. Auto-Forward FIPS Locations Setup
 - 4.4.5. Audio Input Configuration
 - 4.5. Decoder Status

- 4.6. Encoder Setup**
 - 4.6.1. Common EAS type pool Setup**
 - 4.6.2. Common EAS FIPS locations pool Setup**
 - 4.6.3. One Button Alert Configuration**

- 4.7. Encoder Operation**
 - 4.7.1. Sending EAS alerts**
 - 4.7.2. About TDX**
 - 4.7.3. One Button send alerts**
 - 4.7.4. Originated Alert status**
 - 4.7.5. Audio output configuration**

- 5. DASDEC Network Protocol**

- 6. DASDEC Peripherals**
 - 6.1. Vela NDU**
 - 6.2. Texscan character generator**
 - 6.3. Chyron CODI character generator**

- 7. Troubleshooting**