# **IBC233 Bluetooth Boombox**

# **IMPORTANT SAFETY INSTRUCTIONS**

- 1. Read these Instructions.
- 2. Keep these Instructions.
- 3. Heed all Warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with a dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

#### **FCC STATEMENT:**

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - -- Consult the dealer or an experienced radio/TV technician for help.

#### FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

#### Additional Warnings

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
 L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.

For Warranty Information and the most up-to-date version of this User's Guide, go to **www.iLiveElectronics.com** Customer Service: **1-888-999-4215** 

Email Support: prodinfo@dpiinc.com, Email Parts: partsinfo@dpiinc.com

- Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
  - La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like. Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the rear or bottom of the apparatus.
   Attention marquage est situé sur le paneau arrière ou inférieur de l'unité.
- The marking information is located at the rear or bottom of apparatus. Le marquage est situé sur le paneau arrière ou inférieur de l'unité.

### WARNINGS AND PRECAUTIONS

**CAUTION**: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

For Warranty Information and the most up-to-date version of this User's Guide, go to **www.iLiveElectronics.com** Customer Service: **1-888-999-4215** 

Email Support: prodinfo@dpiinc.com, Email Parts: partsinfo@dpiinc.com

- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **PRÉCAUTION:** Danger d'explosion si les piles sont remplacées de façon incorrect. Remplacer les piles seulement par le même type de pile ou l'équivalent.
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- **WARNING:** The remote control's button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste
- **WARNING:** Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- WARNING: Shock hazard Do Not Open.
- AVIS: RISQUE DE CHOC ÉLECTRIQUE NE PAS OUVRIR

Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.

La prise du secteur est utilisé pour déconnecter le système.

La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.

No mezcle baterías viejas y nuevas.

No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).

#### **WARNING:**


To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

#### **CAUTION:**

Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.

For Warranty Information and the most up-to-date version of this User's Guide, go to **www.iLiveElectronics.com** Customer Service: **1-888-999-4215** 

Email Support: prodinfo@dpiinc.com, Email Parts: partsinfo@dpiinc.com

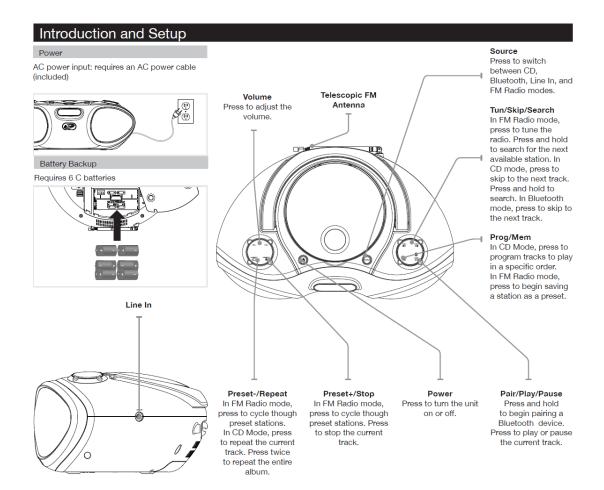

# **Bluetooth Setup**

# Pairing a Bluetooth Device for the First Time

- 1. Power on the unit by pressing the **Power** button.
- 2. Press the **Source** button to switch to Bluetooth Mode. *The display will show the flashing letters "bt"*.
- "BT" will flash quickly on the display.
   When pairing, remain within 3 feet of the unit.
   If the unit does not automatically begin to pair, press and hold the Pair button.
- 4. Using the native controls on your Bluetooth device, select the "IBC233" in your Bluetooth settings to pair.

If your device requests a password, enter the default password "  $0\,0\,0\,0$  ".

Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.

5. When successfully paired, the display will stop flashing.

After initial pairing, the unit will stay paired unless unpaired manually by the user

For Warranty Information and the most up-to-date version of this User's Guide, go to **www.iLiveElectronics.com** Customer Service: **1-888-999-4215** 

Email Support: prodinfo@dpiinc.com, Email Parts: partsinfo@dpiinc.com

or erased due to a reset of the device.

If your device should become unpaired, follow the above steps again.

If any pairing issues should occur, un-pair the unit on your Bluetooth device and follow the above steps again.

### **Playing Audio Wirelessly**

- 1. Follow the instructions for Pairing a Bluetooth Device.
- 2. Use the native controls on the connected Bluetooth Device to select a track.
- 3. To play, pause or skip the selected track, use the native controls on the connected Bluetooth Device or press the Pair/Play/Pause or Tun/Skip/Search buttons.
- 4. Audio played through the connected Bluetooth device will now be heard through the speakers.

#### Radio

## **Tuning the FM Radio**

- 1. Press the **Source** button to switch to FM Radio mode.
- 2. Press the **Tun/Skip/Search** buttons to tune the radio manually, press and hold to search for the next available station.

#### **Saving a Station as a Preset**

- 1. Follow the instructions for Playing the Radio.
- 2. Press the **Prog/Mem** button.
- 3. Press the **Tun/Skip/Search** to select a preset number. *Up to 20 stations may be preset.*
- 4. Press the **Mem** button to save the current station to the selected preset.

#### **Tuning to a Preset Radio Station**

 In FM Radio mode, press the Preset-/Repeat and Preset+/Stop buttons to cycle through saved presets.

#### **Radio Reception**

Adjust the position of the **Telescopic FM Antenna** to improve FM radio reception.

# Line In

For Warranty Information and the most up-to-date version of this User's Guide, go to **www.iLiveElectronics.com** Customer Service: **1-888-999-4215** 

Email Support: prodinfo@dpiinc.com, Email Parts: partsinfo@dpiinc.com

# **Using the Line In**

Requires a 3.5mm audio cable (included)

- 1. Connect the 3.5mm audio cable to the **Line In** on the unit and an audio output on an MP3 player or other audio source.
- 2. Press the **Source** button to switch to Line In mode.
- 3. Use the native controls on the connected MP3 player or other audio source to play and control audio played through the clock radio.

#### CD

## Loading a CD

- 1. Open the **Disc Door**.
- 2. Place a CD into the unit, label side facing up.
- 3. Close the **Disc Door**.

# Playing a CD

- 1. Follow the instructions for Loading a CD.
- 2. Press the **Source** button to switch to CD mode.
- 3. Press the Pair/Play/Pause button to begin playing the loaded CD.

### **Programming a CD**

- 1. Follow the instructions for Loading a CD and Playing a CD.
- 2. Press the **Prog/Mem** button.
- 3. Press the **Tun/Skip/Search** buttons to select a track.
- 4. Press the **Prog/Mem** button to save the track to the program.
- 5. Repeat step 3 and 4 until the desired number of CD tracks are programmed.
- 6. Press the **Play** button to begin playing the program.



# International Support

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: www.iLiveElectronics.com Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en www.iLiveElectronics. com Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur www.iLiveElectronics.com

For Warranty Information and the most up-to-date version of this User's Guide, go to **www.iLiveElectronics.com** Customer Service: **1-888-999-4215** 

Email Support: prodinfo@dpiinc.com, Email Parts: partsinfo@dpiinc.com