


SHARP®

SPC658 LED Alarm Clock with Bluetooth® Instruction Manual & Warranty

Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.

FEATURES

1. PM indicator
2. POWER ON/OFF button
3. VOL - button
4. PLAY/PAUSE/
SNOOZE button
5. VOL + button
6. Bluetooth indicator
7. Alarm indicator
8. HOUR button
9. MIN button
10. AUX IN jack
11. DC 5V jack
12. Battery compartment
13. ALARM ON/OFF switch
14. ALARM button
15. Speaker
16. TIME button

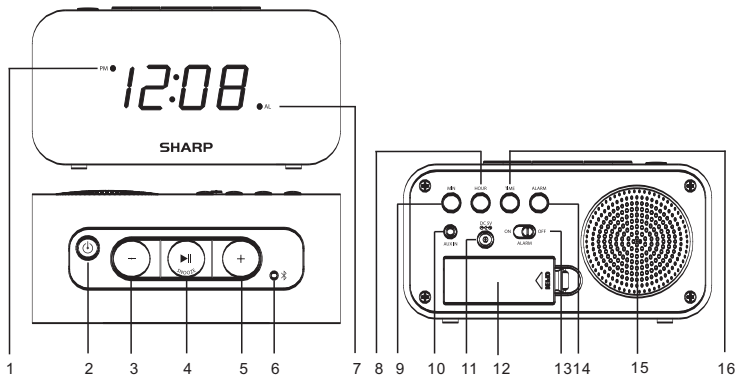

CONNECTING TO THE POWER SUPPLY

Insert the AC adaptor into a 120V AC ~ 60Hz mains outlet and the other end of the cord into the **DC 5V** jack on the back of the unit.

INSTALLING THE CLOCK & ALARM BACK UP BATTERIES

The clock time and alarm time (if set) can be maintained during a power failure by 2 x AAA/ LR03 batteries (not supplied). However, once the power is restarted, check the time to make sure it is accurate and reset if necessary.

INSERTING THE BATTERIES

1. Open the battery compartment at the back of the unit by pressing on the catch and removing the cover.
2. Insert 2 x AAA/ LR03 batteries (preferably alkaline batteries) into the battery compartment, following the polarity as shown on the diagram inside the compartment.
3. Replace the battery compartment cover.

SETTING THE CLOCK

- Press and hold the **TIME** button down to activate time setting.
- While holding down the **TIME** button, press the **HOUR** button to advance to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- While holding down the **TIME** button, press the **MIN** button to advance to the correct minute.
- Release the **TIME** button when the correct time is shown on the display.

SETTING THE ALARM

- Press and hold the **ALARM** button down to activate alarm setting.
- While holding down the **ALARM** button, press the **HOUR** button to advance to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- While holding down the **ALARM** button, press the **MIN** button to advance to the correct minute.
- Release the **ALARM** button when the correct alarm time is shown on the display.

USING THE ALARM FUNCTION

- Slide the **ALARM ON/OFF** button to **ON** to activate the alarm and the alarm indicator will be lit.
- Slide the **ALARM ON/OFF** button to **OFF** to deactivate the alarm and the alarm indicator no longer be visible.

SNOOZE FUNCTION

- Pressing the **SNOOZE** button after the alarm sounds will cause the alarm to stop and the alarm will sound again in 9 minutes. This will happen each time the **SNOOZE** button is pressed.

USING BLUETOOTH FUNCTION

- Press the **POWER ON** button to enter **Bluetooth** mode. The Pairing Indicator will flash blue quickly.
When pairing, remain within 3 feet of the unit.
- Using the native controls on your Bluetooth device, select the "SPC658" in your Bluetooth settings to pair.

- When successfully paired and connected, the Pairing Indicator will display a solid blue light and a beep will sound from the unit.
After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device.
- Use the native controls on the connected Bluetooth device to select a track.
- To play or skip the selected track, use the native controls on the connected Bluetooth device.
- To pause the track, use the **PLAY/PAUSE** button on the alarm clock.
- Audio played through the connected Bluetooth device will now be heard through the speakers.
- To adjust the volume, press the **VOL+/-** button on the alarm clock.

USING AUX IN FUNCTION

- Connect the 3.5mm audio cable (not included) to the **AUX IN** jack on the unit and an audio output on an MP3 player or other audio source.
- Press the **POWER ON** button to enter **AUX IN** mode.
- Use the native controls on the connected MP3 player or other audio source to play and control audio played through the alarm clock.

FCC WARNINGS

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

- However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

**For Customer Service Please Call Toll Free at
1-(800)-221-0131 and ask for Customer Service.
Monday-Friday 9:00 AM - 4:00 PM EST**

Please call for assistance before returning the clock to the store.

One Year Limited Warranty

M.Z. Berger & Company warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase date of this product. Defects caused by tampering, improper use, unauthorized modifications or repairs, immersion in water or abuse are not covered by this warranty. If a defect covered by this warranty occurs during the warranty period, wrap your clock carefully and send it to the following address:

MZ Berger Service Center
29-76 Northern Boulevard
Long Island City, NY 11101

You must include a Proof of Purchase, either the original receipt or a photocopy and a check or money order for USD \$6.00 to cover the cost of handling. Also include your return address inside the package. M.Z. Berger will repair or replace the clock and return it to you. M.Z. Berger will not be liable for any loss or damage, including incidental or consequential damages of any kind; from any breach of warranty either expressed or implied relating to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, this limitation may not apply to you.

Printed in China

Model SPC658

AccuSet and SHARP registered in the U.S. Patent and Trademark office.