




INSTRUCTIONS & WARRANTY

Model# SXE86002

Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.

FEATURES

1. PM indicator
2. Alarm 1 indicator
3. Bluetooth indicator
4. Alarm 2 indicator
5. USB charging port
6. DC5V jack
7. **VOLUME - / ALARM 2** button
8. **VOLUME + / ALARM 1** button
9. **POWER ON/OFF / ALARM OFF / MODE** button
10. **HOURLY TUNING <** button
11. **MINUTE / TUNING >** button
12. **TIME / MEMORY / ||** button
13. **SNOOZE / SLEEP** button

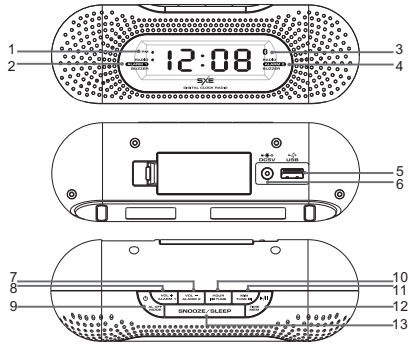

CONNECTING TO THE POWER SUPPLY

Insert the AC adaptor into a 120V AC ~ 60Hz mains outlet and the other end of the cord into the **DC 5V** jack on the back of the unit.

INSTALLING THE CLOCK & ALARM BACK UP BATTERIES

The clock time and alarm (if set) can be maintained during a power failure by 2 x AAA/ LR03 batteries (not supplied). Once the power is restored, check the time to make sure it is accurate and re-set if necessary.

INSERTING THE BATTERIES

1. Open the battery compartment at the bottom of the unit by pressing on the catch and removing the cover.
2. Insert 2 x AAA/ LR03 batteries (preferably alkaline batteries) into the battery compartment, following the polarity as shown on the diagram inside the compartment.
3. Replace the battery compartment cover.

SETTING THE CLOCK AND ALARM

1. Press and hold the **TIME** button and the hour/minute digits will flash.
2. Use the **HOURLY TUNING <** button to set the hours. The PM indicator will light when the hour is advanced into the PM time.
3. Use the **MINUTE / TUNING >** button to set the minutes.
4. Press the **TIME** button to confirm.

Setting the alarm

1. To set the alarm time, follow steps (1) to (4) above, using the **ALARM 1/2** button, instead of the **TIME** button.
2. Use the **ALARM 1/2** button to select buzzer or radio

USING THE ALARM FUNCTION

1. To enable the alarm function, use the **ALARM 1/2** buttons to select buzzer or radio. The selected alarm mode indicator will light up.
2. The buzzer or radio will come on at the set time.

3. To stop the alarm, press the **||** button. The alarm will sound again the next day.

*Note: While the buzzer alarm volume is fixed and cannot be adjusted, the radio alarm volume can be adjusted to your desired level using the **VOLUME** buttons. To select a radio station to wake up to, see the section on "**USING THE RADIO**".*

SNOOZE FUNCTION

When the alarm sounds, press the **SNOOZE** button. The alarm mode indicator will flash and the alarm will sound again after 9 minutes. To cancel the SNOOZE function and repeat the alarm the next day, press the **||** button.

SLEEP FUNCTION

With this function, you can listen to the radio for up to 120 minutes, after which it will turn off automatically.

1. When the unit is switched on, press the **SLEEP** button repeatedly to select the duration: 120, 90, 60, 45, 30, 15, 05 minutes or OFF.
2. At the end of the set time, the radio turns off automatically.
3. To cancel the sleep function before the end of the set time, press the **||** button to turn off the radio immediately.

USING THE RADIO

1. Press the **⏻** button to turn on the radio and press the **MODE** button and select FM mode.
2. Press and hold one of the **<TUNING>** buttons to start automatic tuning up/down. Release the button when the unit is receiving a station you would like to listen to. For manual fine-tuning, you can press it briefly to adjust the frequency step by step.
3. Press and hold the **⏻** button to turn off the radio.

For optimum reception

Extend and position the FM antenna to achieve optimum reception.

Preset radio stations

You can store up to 10 stations.

Use the **<TUNING>** buttons to search for a station. Press and hold the **MEMORY** button to store the station and a number to be assigned for the preset will be displayed.

Listening to a preset station

While listening to the radio, press the **MEMORY** button to select a preset station. The current time is always displayed. When you change to Radio mode, the frequency will be displayed for 5 seconds and then the unit will go back to displaying the time.

USING BLUETOOTH FUNCTION

1. Press the **⏻** button to turn on the radio and press the **MODE** button and select Bluetooth mode. The Bluetooth indicator will start flashing.
When pairing, remain within 3 feet of the unit.
2. Using the native controls on your Bluetooth device, select the "**SXE86002**" in your Bluetooth settings to pair.
3. When successfully paired and connected, the Bluetooth indicator will display a solid red light from the unit.
After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device.
4. Use the native controls on the connected Bluetooth device to select a track.
5. Use the **<TUNING>** buttons to play or skip the selected track.
6. Use the **▶/||** button to pause the track.
7. Use the **VOL+/-** buttons to adjust the volume.

USB CHARGING FUNCTION

To charge, connect your USB device like smartphone to the USB port of this clock. Use only with devices that require 5V USB power. USB port provides 1000mA recharging current. Devices requiring more than 1000mA should not be used. Charging time may vary for difference devices.

Note: Charging function may not be supported for all phones or electronic devices.
Charging output would be around 80% in radio mode.

FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.