

User's Guide

DMT6000 CXCI



DSR - Digital Satellite Receiver

CONTENTS

Page

Page

Safety	3	General Function	31
For your safety	4	Select Channel	31
Outdoor Use Marking	4	Pause the Screen	32
Cable System Installation Marking	4	Previous Channel Recall	32
Polarized Attachment plug Marking	4	TV & Radio Mode	32
Important Safety Instruction	5	TV & VCR Mode	32
FCC Information	9	Channel Information	33
General Information	10	Volume & Audio Control	33
Main Features	10	Channel Manager	34
For Your Safety	11	Channel Manager	34
Unpacking	12	Favorite Channel	35
General Operation	12	Move Channel	35
Remote Control Unit (RCU)	13	Lock Channel	36
Front Panel	14	Rename Channel	36
Rear Panel	15	Delete Channel	37
Installation	16	Sort Channel	37
Connecting to Antenna & TV	16	Fast Edit mode	38
Connecting to TV & VCR using SCART	16	Go to Function	38
Connecting to TV using RCA support	17	Electronic Program Guide (EPG)	39
Connecting to TV using RF support	17	Timer	40
Connecting to another Receiver	18	Antenna Direction Help	41
Menu Information	19	Front Panel Display	42
User Installation	21	Trouble Shooting	43
Antenna Setup1) DiSEqC1.2	21	System Specification	45
Antenna Setup2) Fixed	22		
Channel Search1) DiSEqC1.2	23		
Channel Search2) Fixed	26		
System Setting	27		
Parental Lock	28		
Factory Default	29		
Common Interface	30		

Safety



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK
DO NOT REMOVE COVER(OR BACK)
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, Within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Safety

For Your Safety

- The space around the receiver should be clear to allow for proper ventilation of the receiver.
- Do not cover the Receiver or place it on a unit that emits heat
- Use a damp soft cloth to clean the casing.
- Do not connect or disconnect cables when the Receiver is plugged in.
- Do not remove the cover
- Do not allow the unit to be exposed to hot, cold or humid conditions
- Never allow liquids, spray or other materials to come into contact with the inside of the Receiver.

Outdoor Use Marking

Warning : To prevent fire or electric shock, do not expose this appliance to rain or moisture.

Cable System Installation Marking

Note to CATV System Installer : This reminder is provided to call CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical

Polarized Attachment plug Marking

Caution : To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Safety

Important Safety Instruction

- 1) Read Instructions :All the safety and operating instructions should be read before the product is operated.
- 2) Retain Instructions :The safety and operating instruction should be retained for future reference.
- 3) Head Warnings :All warnings on the product and in the operating instructions should be adhered to.
- 4) Follow instructions :All operating and use instructions should be followed.
- 5) Cleaning :Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaner. Use a damp cloth for cleaning.
- 6) Exception :A product that is meant for uninterrupted service and that for some specific reason, such as the possibility of the loss of an authorization code for a CATV converter, is not intended to be unplugged by the user for cleaning or any other purpose, may exclude the reference to unplugging the product in the cleaning description otherwise required in this article.
- 7) Attachment :Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 8) Water and Moisture : Do not use the product near water for example, near a bath, wash bowl, kitchen sink, or laundry tub ; in a wet basement; or near a swimming pool; and the like.
- 9) Accessories : Do not place this product on an unstable cart, stand, tripod, bracket, or table. This product may fall, causing serious injury to a child or adult, and serious damage to the product. Use
- 10) A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surface may cause the product and cart combination to overturn. Please refer to picture 1 in the end of this chapter.
- 11) Ventilation – Slot and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 12) Power sources : This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

Safety

Important Safety Instruction

13) Grounding or Polarization: This product may be equipped with a polarized alternating-current line plug(a plug having on blade wider than the other). This plug will fit into the power outlet only on way. This is a safety feature. If you are unable to insert the plug gully into the outlet, try reversing the plug. If the plug should still fail to fir, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarizing plug.

Alternate Warning : This product is equipped with a three-wire grounding-type plug, a plug having a third(grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

14) Power-Cord Protection : Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

15) Protective Attachment Plug : The product is equipped with an attachment plug having overload protection. This is a safety feature. See instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

16) Outdoor Antenna Grounding : If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electric Code, ANSI/NFPA 70, provides information with regards.

17) Lighting : For added protection for this product during a lighting storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lighting and power-line surges.

18) Power Lines : An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits. Or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

19) Overloading : Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire of electric shock.

Safety

Important Safety Instruction

- 20) Object and Liquid Entry : Never push objects of any kind into this product through opening as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 21) Serving : Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 22) Damage Requiring Service : Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- a) When the power-supply cord or plug is damaged.
 - b) If liquid has been spilled, or objects have fallen into the product.
 - c) If the product has been exposed to rain or water.
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an importer adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way
 - f) When the product exhibits a distinct change in performance-this indicates a need for service.
- 23) Replacement Parts : When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 24) Safety Check : Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 25) Wall or Ceiling Mounting : The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 26) Heat : The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products(including amplifier) that produce heat.

Safety

Important Safety Instruction

Picture 1)

Example of Portable cart warning


(Symbol provided by RETAC)



Picture 2)

Example of antenna grounding as per national

 Electrical code, ANSI / NFPA 70

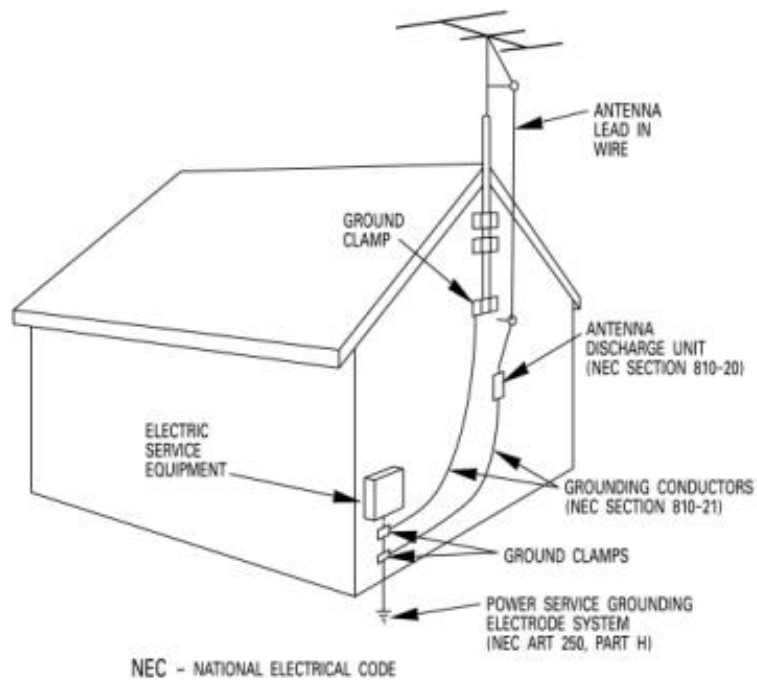

FCC Information

This device complies with part 15 of the FCC Rules, Operation is subject to the following two conditions :

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limit for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, this equipment may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio TV technician for help

Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

General Information

A Digital Satellite Receiver is a convenient product that allows you to view a variety of programs provided through satellite. This guide covers the installation of the DSR and the necessary steps to operate various features. This guide also explains special features available only in this DSR in detail, and will allow you to take full advantage of these features.

Main Features of DSR

- Fully MPEG2, DVB compliant
- Capable of descrambling encrypted programs by using built-in Conax descrambler
- 2 Slots common interface for access to Irde, CryptoWorks, Nagravision, Conax, SECA and more
- DiSEqC1.0 positioner for multi-satellites (128 satellites)
- C/Ku band control for each antenna
- Digital Audio with AC support by SPDIF
- PIG (Picture In Graphic) support
- Provide friendly and easy-to-use menu system
- Various channel editing function (favorite, moving, locking, renaming, deleting and sorting)
- User programmable various satellite & transponder information
- Automatic search for newly added transponder (Network Auto Search)
- Stores up to 5000 channels
- Easy and speedy software upgrade through USB
- Plug-and-play data transfer system (DSR to DSR)
- Timer function, automatically turns On/Off by setting function (daily, weekly, monthly and one time)
- Automatic reserved channel moving system
- Provide Electronic Program Guide (EPG)
- OSD Teletext (DVB ETS 300 706) and Subtitle function support
- VBI Teletext support
- Antenna positioning help feature
- Selectable video output: CVBS, RGB
- Provide various switch types, LNB types and NTSC/PAL monitor type
- SCPC/MCPC receivable from C/Ku band satellite
- Multi LNB controlled by DiSEqC1.0, 22KHz and 0/12 volt switching
- 256 colors OSD Screen Display
- PAL/NTSC automatic conversion
- Last channel automatically saving

General Information

For Your Safety

This STB has been manufactured to meet international safety standards. Please read all of the safety and operating instructions before operating the product. Keep all safety and operating instructions for future reference.

1. Main Supply : 9050V AC, 50/60Hz, 30W

2. Overloading

Do not overload a wall outlet, extension cord, or adapter as they may result in fire electric shock.

3. Liquids

Do not expose the STB to rain or moisture.

4. Cleaning

Disconnect the STB from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a light damp cloth for cleaning.

5. Ventilation

The slots on top of the STB must be left uncovered to allow proper airflow to the unit. Do not stand the STB on soft furnishing carpets. Do not expose the STB to direct sunlight or do not place it near a heater. Do not stack electronic equipment on top of the STB.

6. Attachments

Do not use any attachments not recommended by product manufacturer as they may cause hazards.

7. Connection to the Satellite Dish LNB

Disconnect the STB from the mains before connecting or disconnecting the cable from the satellite dish. FAILURE TO DO SO CAN DAMAGE THE LNB.

8. Connection to the TV

Disconnect the STB from the mains before connecting or disconnecting the cable from the TV. FAILURE TO DO SO CAN DAMAGE THE TV.

9. Earthing

 
The LNB cable **MUST BE EARTHED** to the system earth for the dish. The earth system must comply with SABS 061.

10. Location

Place the STB indoor in order to prevent potential damage by lightning, rain, or direct sunlight.

11. Servicing

Do not attempt to service this product yourself, as opening moving covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

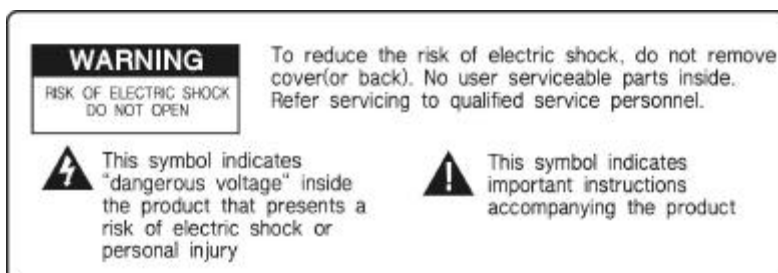

General Information

Unpacking

Make sure you have received all the items in the Satellite Receiver box.

Digital Satellite Receiver DSR



Remote Control Unit



User's Guide

Batteries



General Operation

Throughout this manual you will notice that the everyday operation of your DSR is based on a series of user friendly on screen display and menus. These will help you get the most from your DSR, guiding you through installation, channelizing, viewing and many other functions.

All function can be carried out using the buttons on the Remote Control. Some of the function can also be carried out using the buttons on the front panel.

If at any time when you using the menus you want to return to the normal TV mode, press the TV/AV button.

 
The DSR is easy to use, always at your command and adaptable to future advances.

Please be aware that new software may change the functions of the DSR.

In the case of your facing difficulties with the operation of DSR, please consult the relevant section of this manual, including the Problem Shooting. Alternatively call your dealer or a customer service adviser.

General Information

Remote Control Unit (RCU)

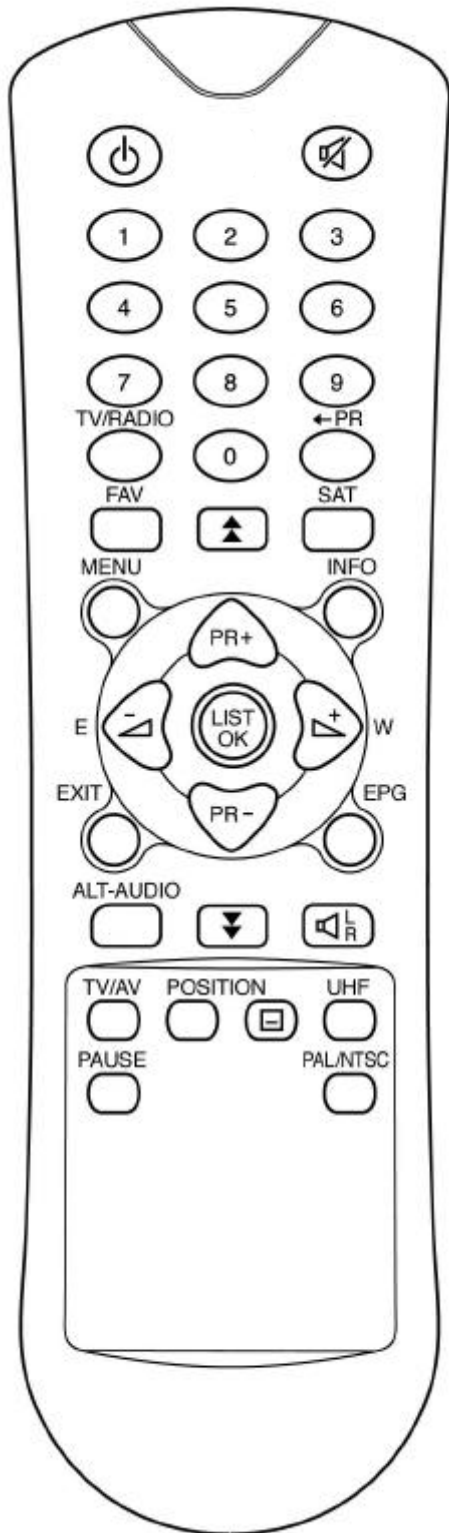


Key	Function
	Turns power ON/OFF of the DSR
	When watching a channel, mutes the sound
0 ~ 9	Enter number of the required menu item or select a channel number to watch.
TV/RADIO	Switches between TV and Radio mode
← PR	Switches back to previous channel
FAV	Display the favorite channel list
INFO	Shows information of the current channel
MENU	Press this key one time to run menu on screen, and call command box
	Moves up / down a page in the channel list
OK, LIST	Executes the selected item in the menu screen, or enters the desired value in any input mode.
PR+, PR-	When watching a channel, change channels, or moves to the next higher or lower item in the menu.
	When watching a channel, adjust the volume, or move to the left or right item in menu
EXIT	Returns to the previous menu on the menu screen or escape from the menu
ALT-AUDIO	When watching a channel, switches the audio languages
EPG	Calls up the EPG (Electronic Program Guide)
	Selects the different audio modes.
TV/AV	Switches between TV or AV mode
Position	Display position bar on the screen to adjust the antenna or for manual search.
	Switches to subtitle and teletext mode.
UHF	Switches to UHF tuning mode
PAUSE	Press once to pause the screen picture, press once again to go to the normal mode

General Information


Front Panel



Key	Function
MENU	Shows the main menu and command box on the screen.
OK	Executes the selected item in the menu.
ESC	Returns to the previous menu on the menu screen.
	Turns on and off the power of the receiver.
CH	When watching, changing to the previous channel, or moves to the next higher or lower item in the menu.
VOL	When watching a channel, adjust the volume or move to the left or right item in the menu.

General Information

 
Rear Panel

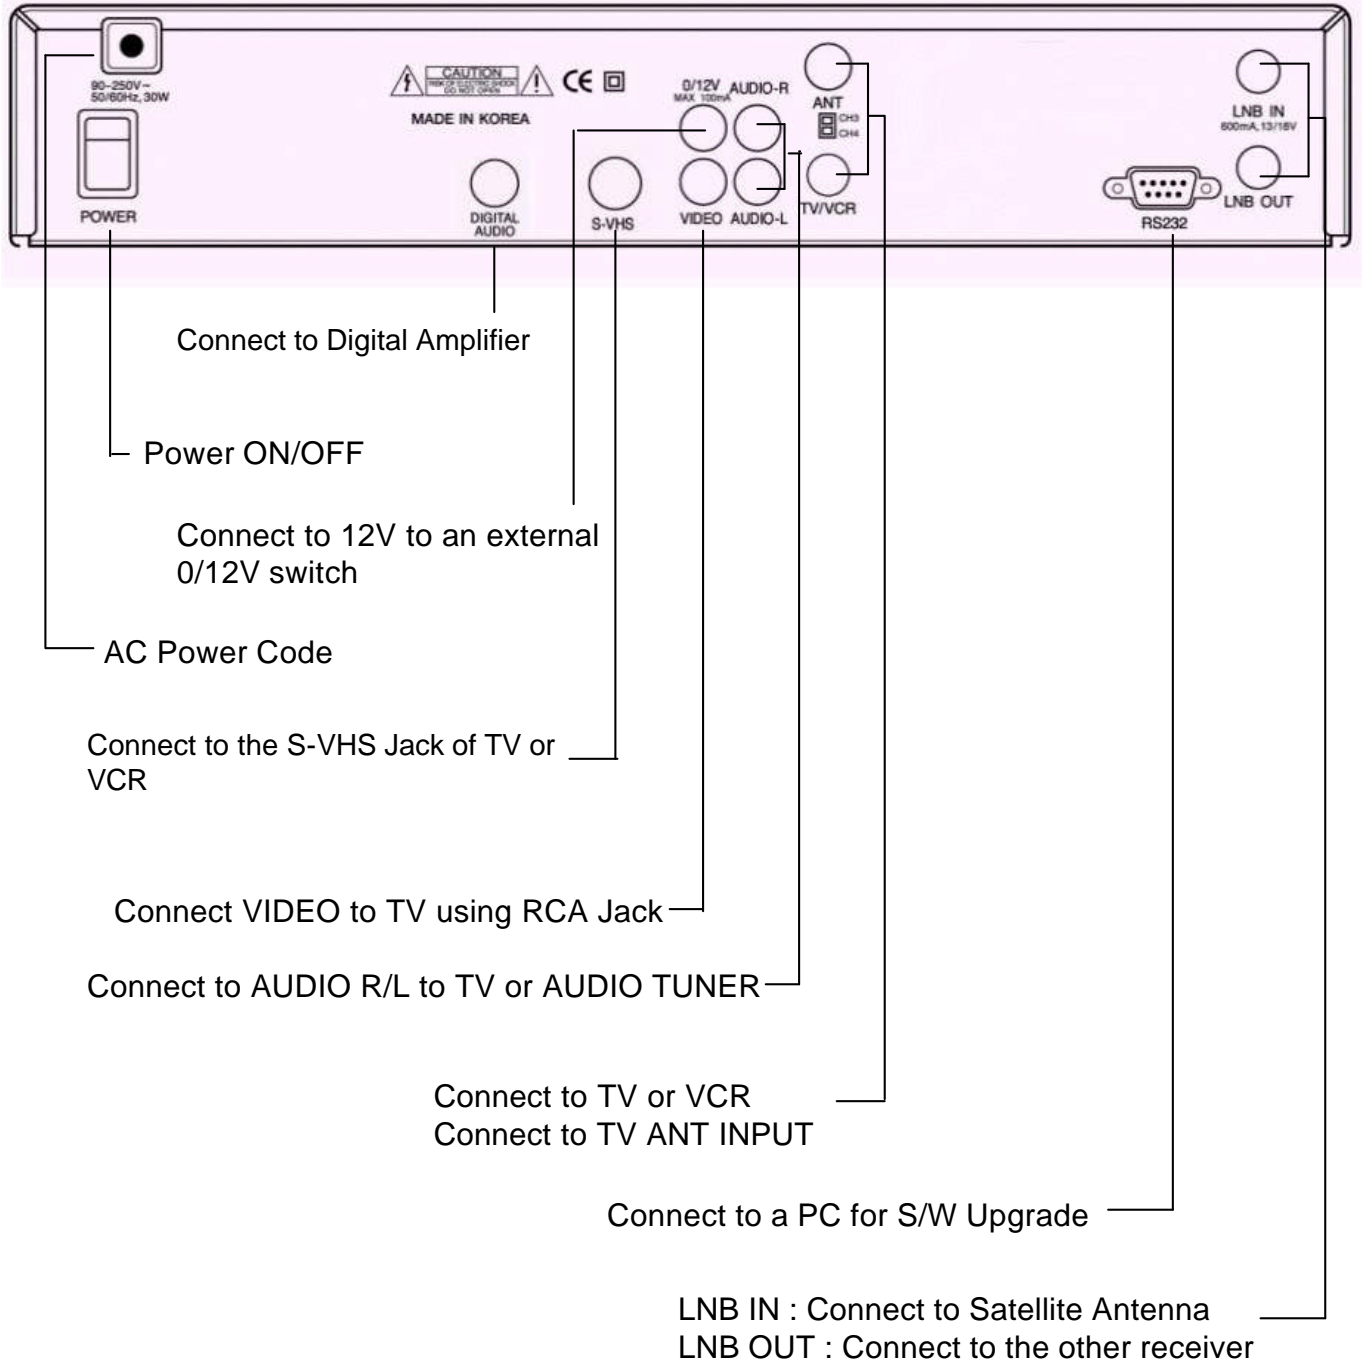


Installation

This section explains the installation of DSR. Refer to the manual supplied with the equipment for the installation of outdoor equipment such as the dish antenna. When adding new equipment, be sure to refer to the related parts of the manual for the connection.

 Connecting to ANTENNA & TV

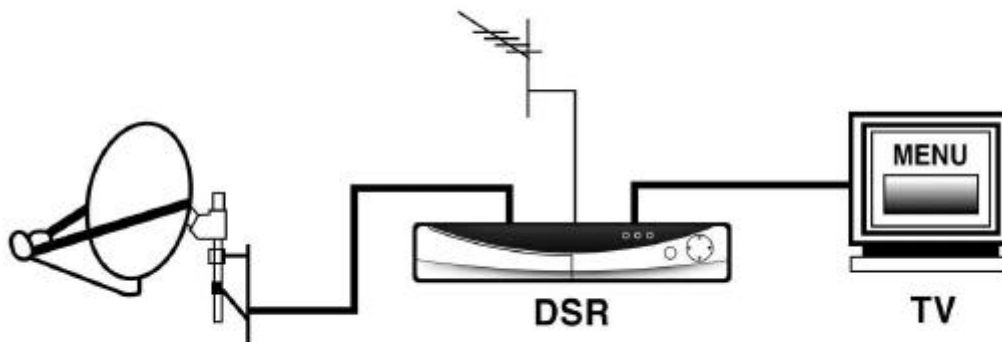


Connecting to TV using RCA support

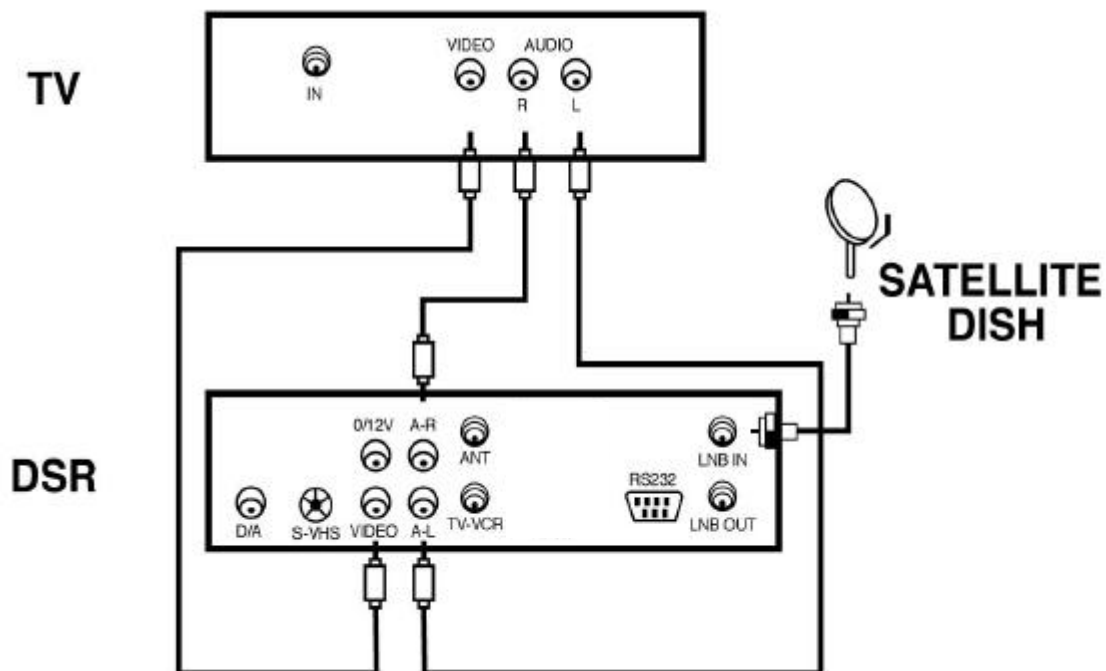 


Installation

 Connecting to TV using S-VHS support

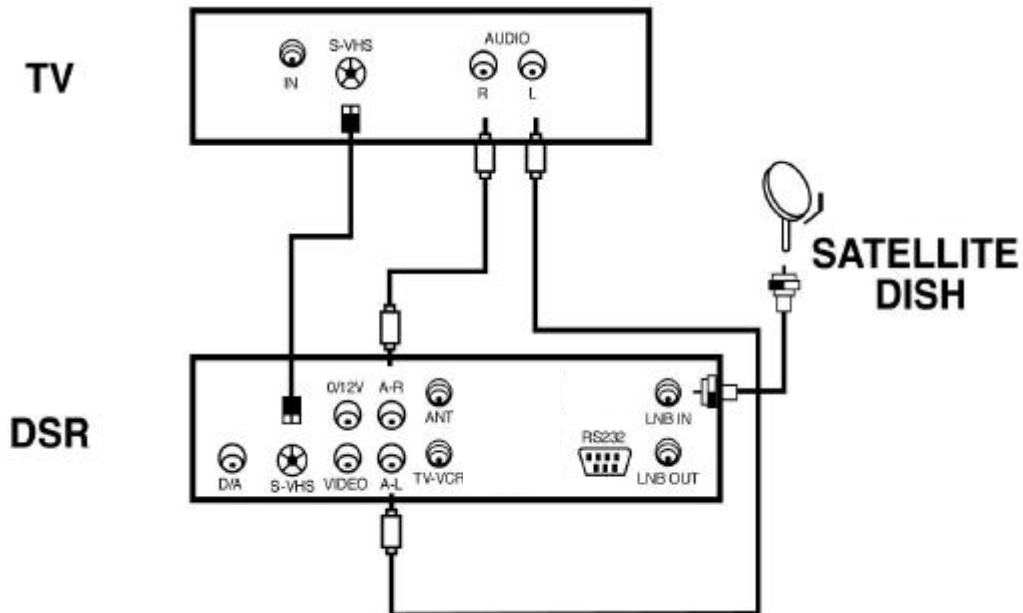


Connecting to TV using RF support

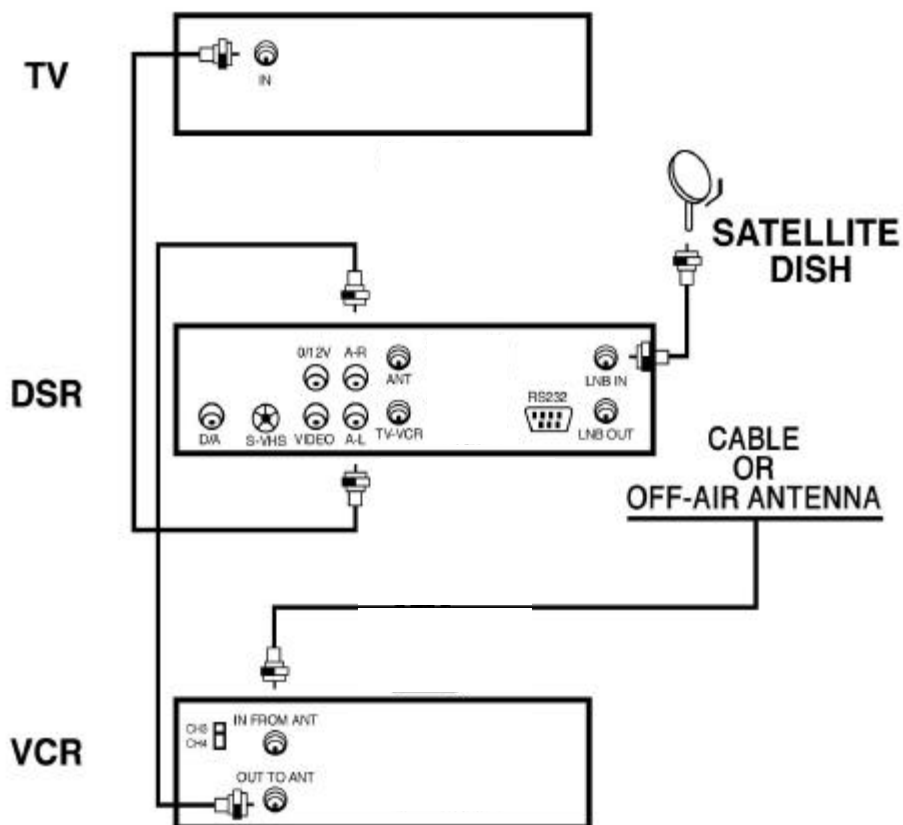 

Installation

 Connecting to Digital Amplifier

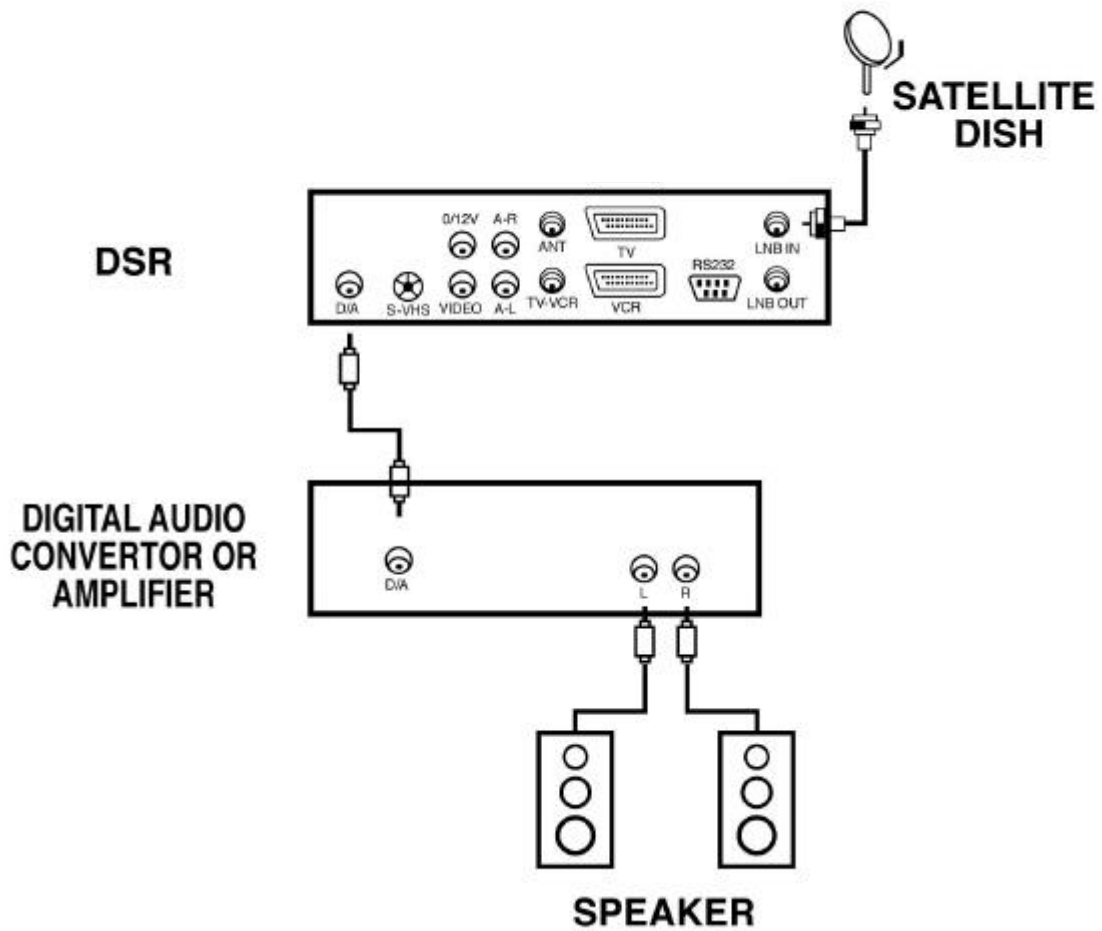


Menu Information

Once you properly installed and connected cables of the **BSR**, the **Menu** will be displayed

This menu consists of 6 main menus as follows.

 - Channel Manager
- Program Guide
- Timer
- User Installation
- Common Interface
- Receiver Information

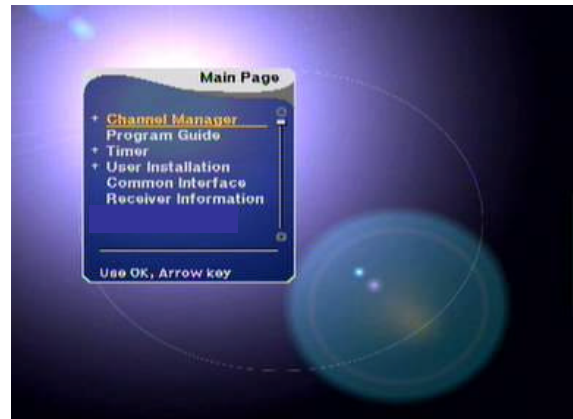


To move up and down, press **↑** or **↓**. To move left and right, press **←** or **→** keys on the RCU. Place cursor on the **User Installation**, then submenu will be displayed on the screen. (Refer to the picture)

User Installation


This menu consists of 5 sub-menus as follows.

 - Antenna Setup
- Channel Search
- System Setting
- Parental Lock
- Factory Default

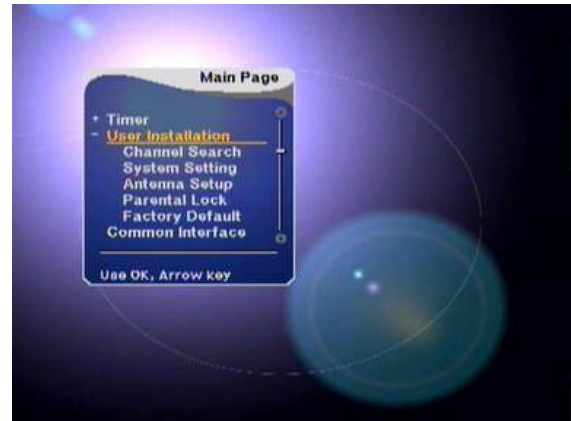

Antenna Setup-1) DiSEqC 1.2

 - 1) Antenna : You can select maximum 16 antennas with the combination of switches.
- 2) Type : Select your antenna type to be DiSEqC1.2
- 3) Univ. LNB: Select your LNB type. If you have universal LNB, select YES otherwise select NO.
- 4) LNB Freq. : Enter the proper LNB frequency referring to your LNB using numeric key on the RCU or use KEY PAD displayed by pressing OK key.
- 5) Switches (0/12 Volt, 13/18 Volt, DiSEqC) : You can select the switches with which you want to configure the antenna.
- 6) C/Ku band control : You can select C/Ku band by selection of switch type.

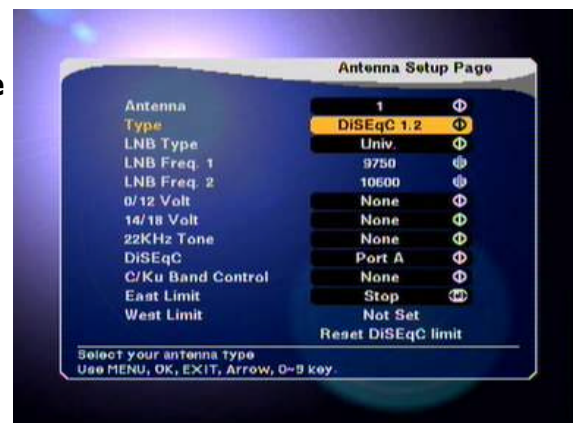


User Installation

7) East, West Limit

: Press E key on the RCU continuously until your antenna reaches to the easternmost point and then press OK key on the RCU. The message of "Would you like to set East limit of DiSEqC motor?" will be displayed for your confirmation. Place cursor on the "OK" and press OK key on the RCU to confirm the East limit. Then, the value of East Limit will be changed to "Set".

 
To set West limit, take the same steps as East limit.

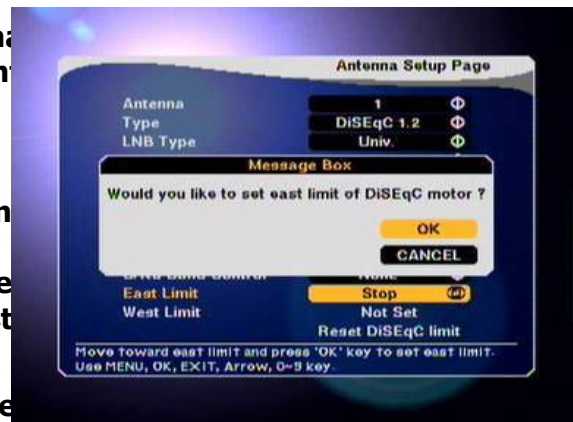


8) Reset DiSEqC limit

: If you want to reset the East limit or West limit, place the cursor on 'Reset DiSEqC limit' button and then, press OK key on the RCU. The message of "Would you like to reset limit for DiSEqC position?" will be displayed for your confirmation. Select OK button and press OK key on the RCU.

 The cursor will move to the East limit button so that you can reset the limit. After that, please reset West limit same as before.

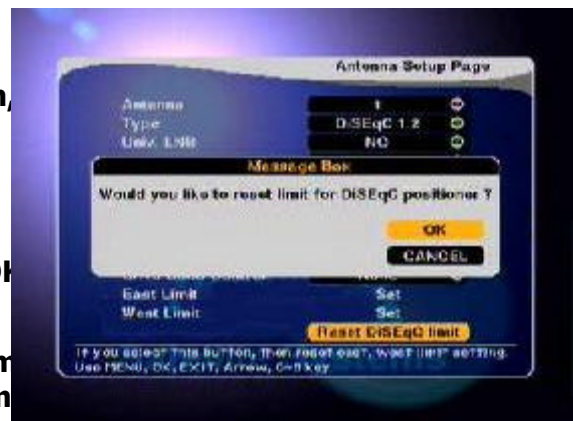

 After setting all necessities, please EXIT to finish antenna setup menu. The message of "Are you sure to change the configuration of antenna setup?" will be displayed. Please select OK button on the screen and then wait for saving data.

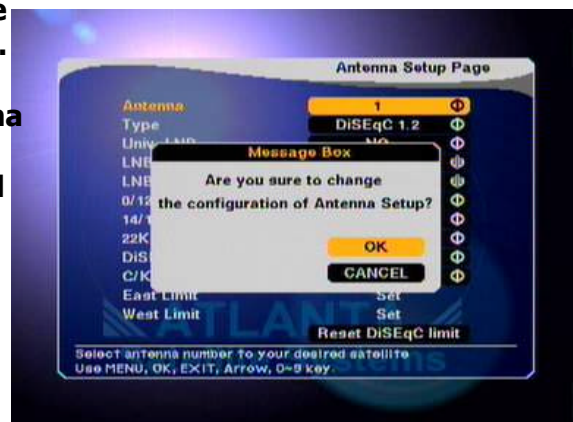


User Installation

Antenna Setup-2) Fixed

 - 1) **Antenna** : You can select maximum 16 antennas with the combination of switches.
- 2) **Type** : Select your antenna type to be Fixed.
- 3) **Univ. LNB**: Select your LNB type. If you have universal LNB, select YES otherwise select NO.
- 4) **LNB Freq.** : Enter the proper LNB frequency referring to your LNB using numeric key on the RCU or use KEY PAD displayed by pressing OK key.
- 5) **Switches (0/12 Volt, 13/18 Volt, DiSEqC)** : You can select the switches with which you want to configure the antenna.
- 6) **C/Ku band control** : You can select C/Ku band by selection of switch type.

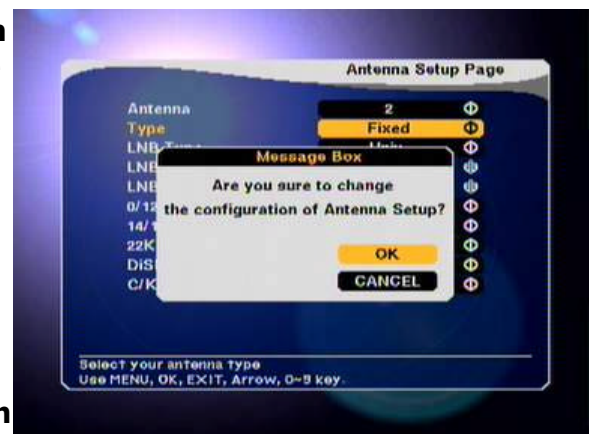

After setting all necessities, press EXIT key to finish antenna setup menu. The message **Are you sure to change the configuration of Antenna setup?** will be displayed. Please select OK button on the screen and then wait for saving data.



User Installation

 
Channel Search-1) DiSEqC 1.2


1) Antenna : Select your antenna number.

2) Satellite : Select a satellite using   keys or if you press **OK** key. Then, the list of satellite will be displayed so that you can select easily.


You can see the information of the selected satellite in the right side.

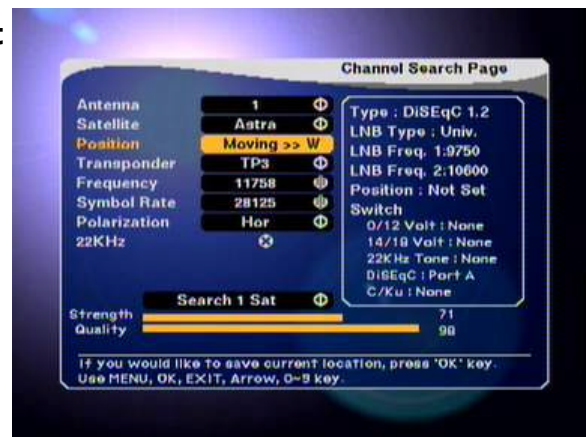

Edit Mode : If you want to edit those preprogrammed data such as Transponder, Frequency, Symbol Rate, Polarization, Skew and 22 KHz, please press **MENU** key on the RCU to display the command box. Check edit mode by pressing **OK** key on the RCU and then you can go into those columns to change the value.



 
3) Position : After selecting a satellite, please select Position button and then keep pressing  or **W** key on the RCU until selected satellite is locked. If the satellite is locked correctly, the white color of signal label bar will be changed to yellow.

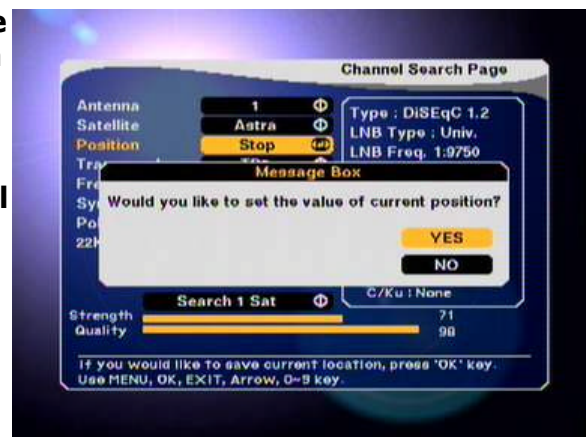When you press **OK** key on the RCU, the message **Would you like to set the value of current position?** will be displayed for your confirmation.



4) Transponder : Select a transponder using   keys or if you press **OK** key, transponder List will be displayed so that you can select easily.

 5) Frequency & Symbol Rate : If you press **MENU** key on the RCU in this menu, command box will be displayed. Check edit mode by pressing **OK** key on the RCU and then you can go into those columns to change the value.

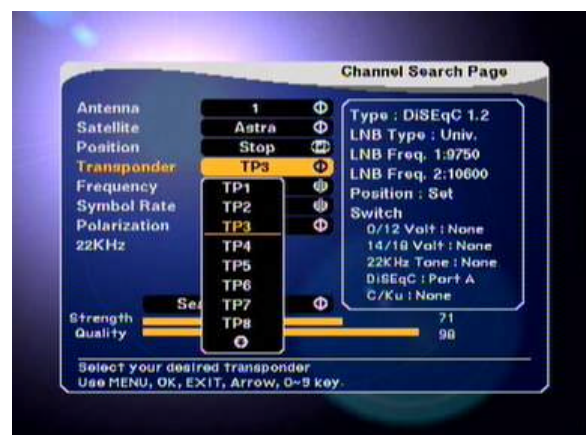

User Installation

6) Polarization

: Select Hor or Ver

7) 22KHz

: Select ON or OFF.

8) Search 1 Sat

: DSR allows you to search channels with convenient options as follows, select one using arrow keys.

-Search 1 SAT

: Search channels in one satellite which selected on Satellite column.

-Search TP

: Search channels in one TP which selected on TP column.

-Search Network

: Search Channels transmitted by satellite network information table(NIT).

-Search all SAT

: Search all channels at once all satellites selected.

9) Set PID

: If you want to set PID (Packet Identifier) manually, select TP in the "Channel Search Page" and press MENU key on the RCU to display command box.

 
 
 
 
And select SET PID command and press OK, then set PID menu will be displayed. Enter the correct value and select OK.

10) Sat Name Edit

: If you want to change a name of satellite, select a satellite and press MENU key on the RCU to display command box. Select Sat Name Edit, then, Keypad Dialog box will be appeared. Using arrow key on the RCU, you can edit the satellite name.

11) Delete TP

: If you want to delete a TP, select a TP to be deleted and press MENU key on the RCU to display command box. Then, select Delete TP command and the confirm message box will be displayed.

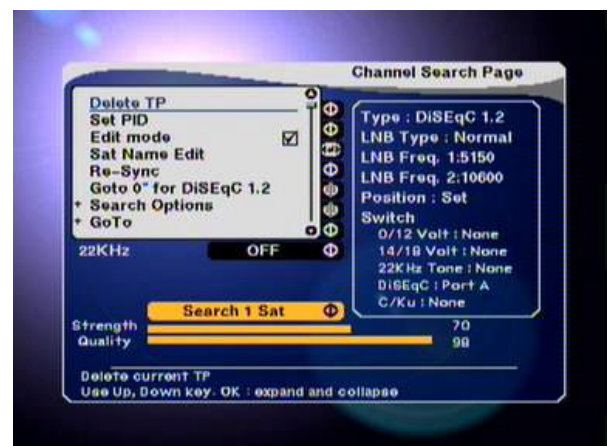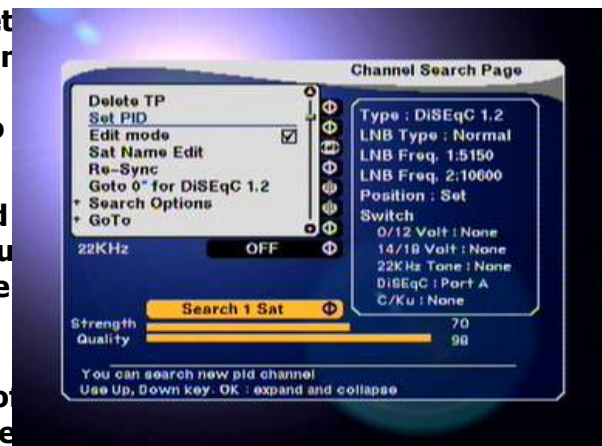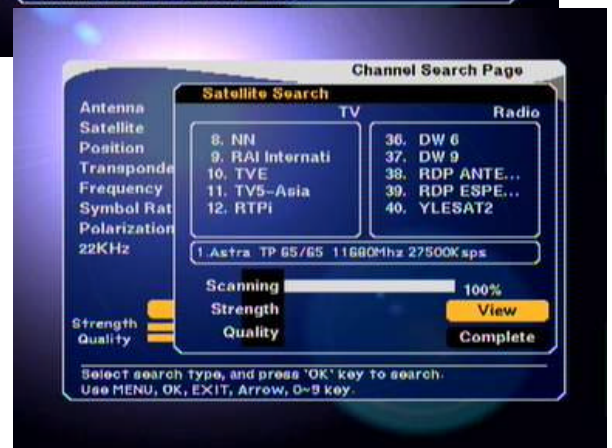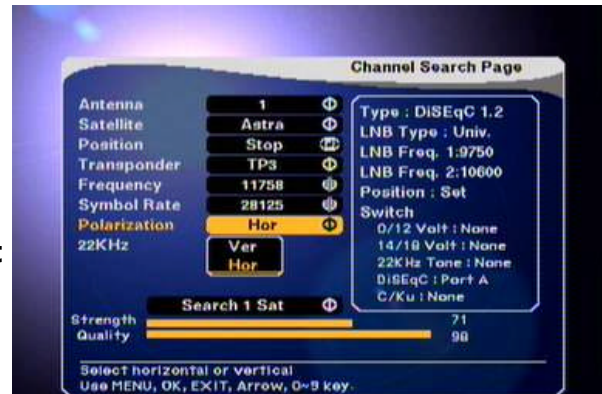

User Installation

12) **Re-Sync** : When all location of searched satellites are shifted by unknown reason, you can realign all of them at once if you adjust one satellite's location.

13) **Go to 0° for DiSEqC1.2**
: When you install the motor of DiSEqC1.2 antenna at first, you can select this function to move the center of antenna to be 0

14) **Search Option**
: DSR allows you to search channels with convenient options as follows.

-FTA only

-Not searched TP only

 
 
-Sort by scramble

If you select FTA only, DSR searches FTA channels only.

If you select Not searched TP only, DSR searches channels in the TP which is not searched or new TP.

If you select Sort by Scramble, DSR sorts the scrambled channels automatically.

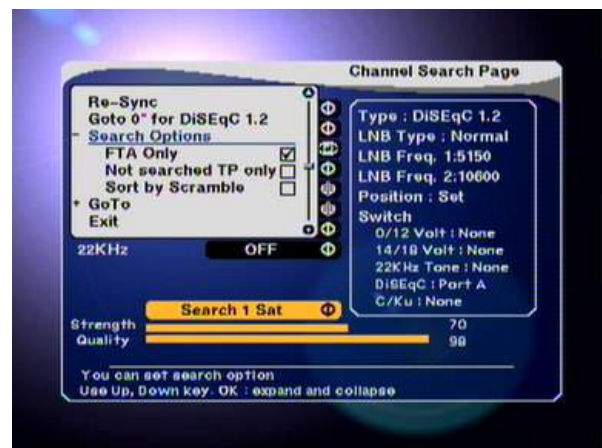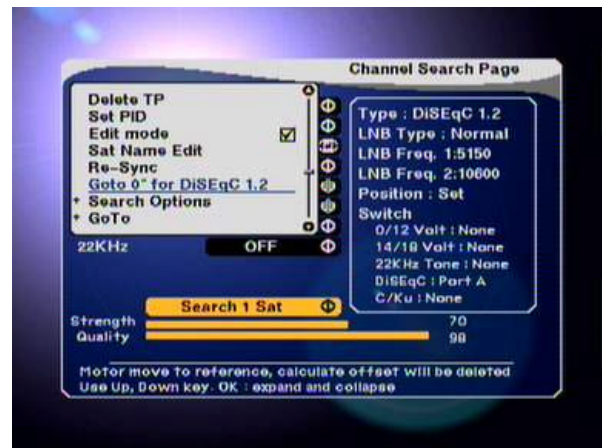

When searching is started, the name of channels searched will be displayed on the screen. When searching is finished, the cursor will be placed on the View button automatically. Press OK key to save the channel list and watch the channel searched . Select Exit to search again.



 
User Installation

Channel Search-2) Fixed

1) Antenna : Select your antenna number.

2) Satellite : Select a desired satellite using   keys or if you press **OK** key, the list of satellite will be displayed so that you can select easily.


You can see the information of selected satellite in the right side.

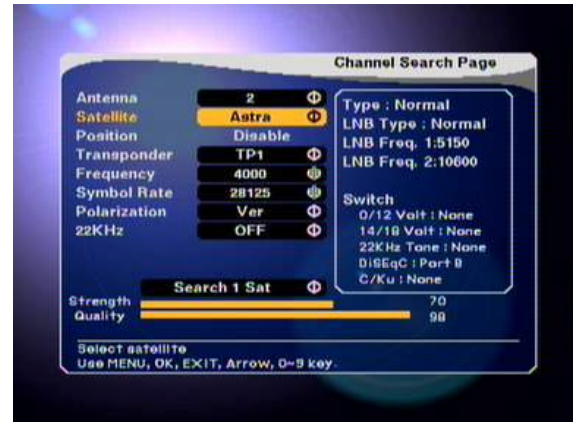

3) Edit Mode

: If you want to edit those preprogrammed data such as Transponder, Frequency, Symbol Rate, Polarization, Skew and 22 KHz, please press **MENU** key on the RCU to display the command box. Check edit mode by pressing **OK** key on the RCU and then you can go into those columns to change the value.

 4) ~ 14) Please refer to DiSEqC1.2 type antenna.



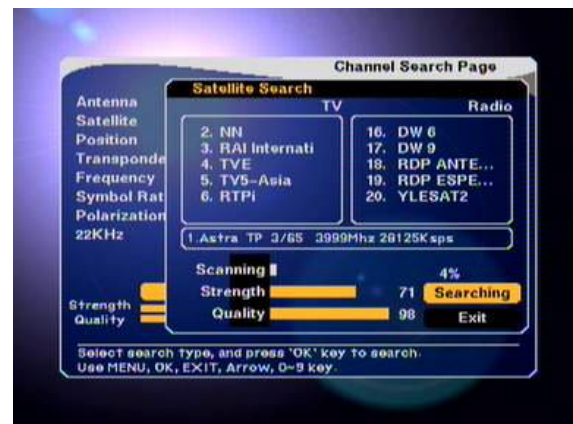


User Installation

System Setting

System Setting menu provides variety of choice which is matching to your environment.

   - 1) **OSD Color** : You can select the color of Night, Ocean, Wine, Grass.
- 2) **OSD Language** : Select your desired OSD Language.
- 3) **Audio Language** : Select your desired audio language to be in the top priority under the condition that this language is supported from the channel.
- 4) **LNB power** : The default value of LNB power is ON. Select Off in the case of the LNB power is not necessary.
- 5) **Screen Format** : If your TV supports 16:9 screen format and selected channel provides 16:9 format program, select 16:9.
- 6) **Video output** : If your SCART supports RGB control, select RGB. Otherwise select CVBS.
- 7) **TV type** : Select the type according to your TV type.
- 8) **Volume save** : You can save volume by each channel.
- 9) **Start On Channel**: If you press OK key, then the channel list is displayed. You can select one channel of the list, the selected channel starts whenever you turn on DSR.
- 10) **UHF Standard** : Select UHF type.
- 11) **UHF Channel** : Select your desired UHF channel for satellite mode.

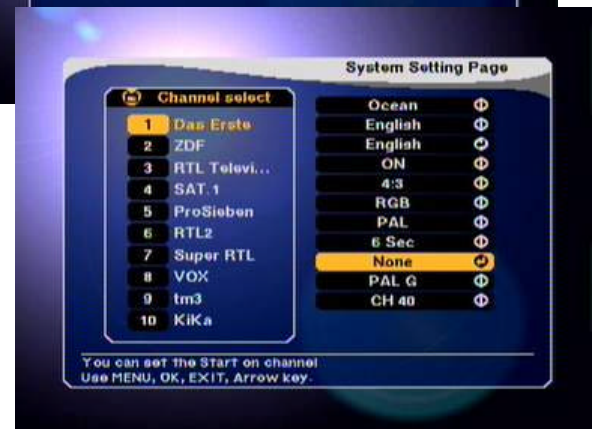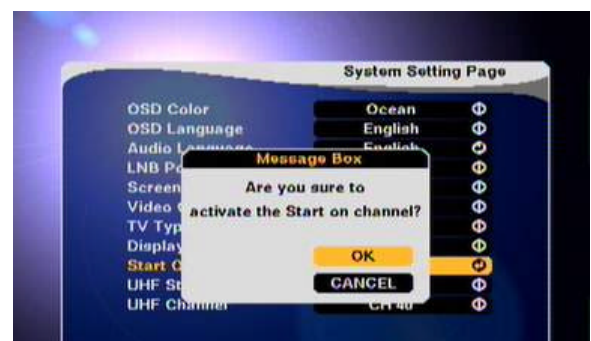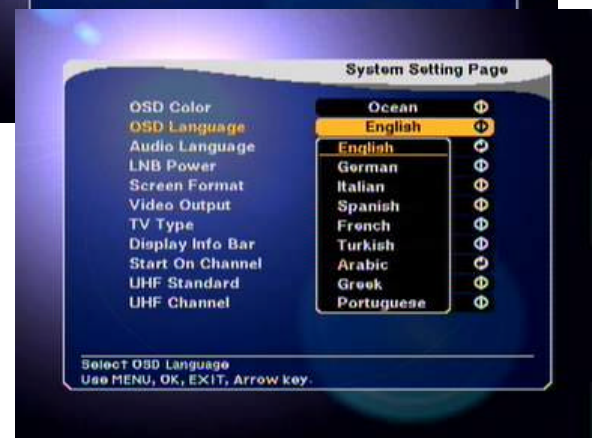

User Installation

Parental Lock

This function allows you to lock the channel with your password in order to prevent from accessing the channel by your children or any other person.

And also you can protect your installed data and information by using Install Lock.


How to change Password

- 1) Enter the current password.
- 2) Select ON of Parental Lock.
- 3) Enter new password.
- 4) Confirm your new password by entering new password again.

Note : Default password is 0000.

 
Warning : Once you change password, please do not forget and keep well.

How to use Parental Lock

- 1) If you want to activate parental lock function, go to the TV Channel Manager Page.
- 2) Press MENU key to have command box and select Lock.
- 3) Select channel the which you want to Lock
- 4) Press OK then  symbol is marked.
- 5) Exit this menu and Turn off the DSR

Note : To activate Parental Lock, you have to turn off DSR once.

And turn on the DSR and select channel which is locked. Then, enter your password.

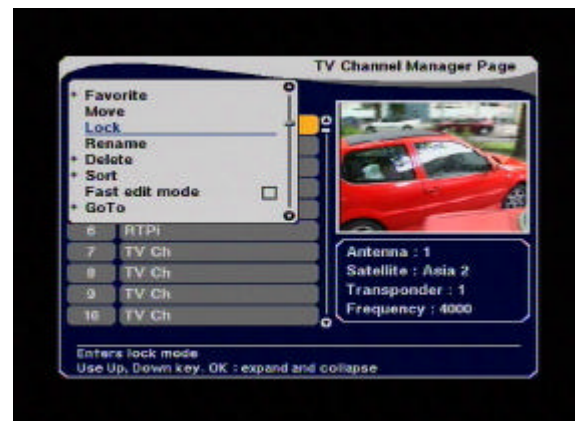

User Installation

How to use Install Lock

- 1) Enter the current password.
- 2) Select ON of Install Lock
- 3) Enter new password
- 4) Confirm your new password by entering new password again
- 5) Exit this menu and Turn off the DSR
- 6) Turn on DSR and press MENU key on the RCU
- 7) Select any menu and press OK on the RCU .
- 8) Then Enter Password Box will be played.
- 9) Unless enter correct password, you can not run any menu.

Note : Default password is 0000

 
 
Warning : Do not forget your password in order not to fail to operate DSR

Factory Default

If you want to bring DSR back to the factory default condition, select Factory Default and press OK key.

Then, warning message will be displayed. To confirm, select OK and press OK.

Warning : You will lose all of data and information which was installed.

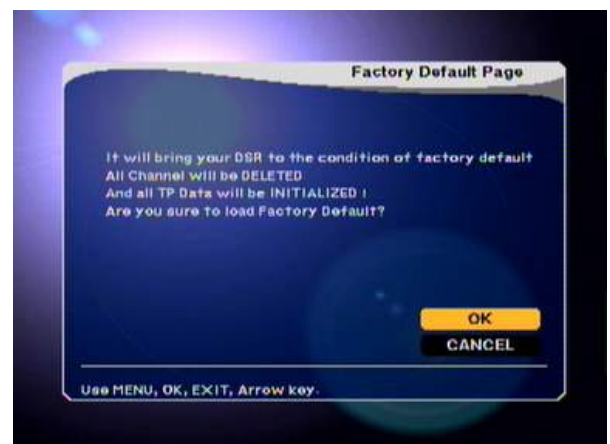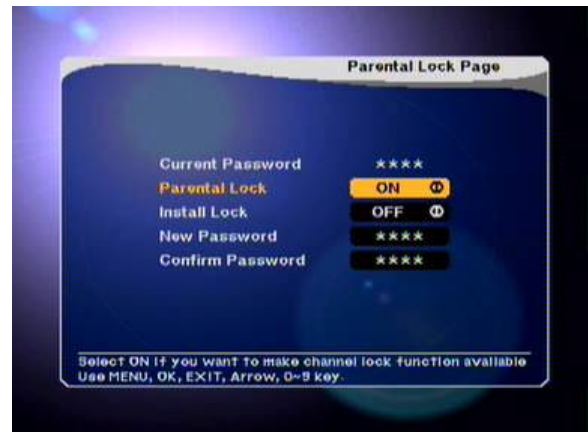

Common Interface

DSR makes you enjoy various scrambled channels encrypted by Nagravision Irdeto Conax Cryptoworks and SECA.

Preparing

To be able to receive scrambled digital satellite channels you will need Smartcard and a Common Interface CA (Conditional Access) module from the Service Provider of your choice.

The Smartcard and the CA module may also provide access to special menus not described in this manual. If so, please follow the instructions from the Service provider.

Only free to air channels are available without the Smartcard and CA Module.

Input the CA Module in the slot of DSR. And insert Smartcard to the CA module entirely. If it is done, you can enjoy scrambled channels relating with your CA Module and Smartcard

The Conax CA Module is embedded in DSR. So you just insert Smartcard to the slot without Conax CA Module. Then you can enjoy Conax Channel.



Note : DSR has 3 slot of 2 CA Module you can change what you want and Conax CA Module.

Check Manager

Select Common Interface menu in the Main Menu page. Then DSR detects and shows the Embedded Conax Access and CA Module names, which you insert. Then select one of these slots, which you want

Then you can see the information, which Program provider presents.

Note : This information may be different according to the Program Provider.

General Function

The following describes the basic functions of your DSR while watching satellite TV or listening to satellite radio.

DSR enables you to watch various scrambled channels by inserting the CAMs and Smartcards according to your choice.

While watching, the current channel information will be shown on the bottom of the screen if you press INFO button on the RCU.

Select Channel

If you want to select channel, use **CH** on the front panel, **PR+**, **PR-** key on the RCU or numeric key on the RCU to select a channel and press **OK** key on the RCU.

In addition to the above normal function, DSR provides more convenient channel change function.

While watching, press **OK/LIST** key on the RCU or front panel. Then channel list will be displayed on the screen. If press **EXIT** key, the channel list will be disappeared.

You can sort channel list by All, Favorite group, Satellite, Alphabet as follows.

- 1) All : It shows you all channel list sort by alphabet.
- 2) Favorite group : You can make favorite group in the menu of channel manager. It shows that group, and you can select one favorite group, then channel list belongs that group will be displayed.
- 3) Satellite : If you select Satellite the list of satellite searched in DSR will be displayed. Then you can select satellite you want. After that, you can see channel list belongs to the satellite.
- 4) Alphabet : If you select A or B channel list (head of channel name A or B.) will be displayed.



General Function

Pause the frame

Press **PAUSE** key on the RCU to pause the screen. To bring it back to the normal mode, press **PAUSE** key once again.

Previous channel recall

Press **PR** key on the RCU to move the previous channel which you were watching before the current channel.

TV & Radio mode

While watching a TV channel, press **TV/RADIO** key on the RCU to move to the radio mode. Press this key once again, it will bring you back to the TV mode.



TV & VCR mode

By pressing **TV/AV** key on the RCU, you can change the mode from satellite to TV or VCR. Press once to move to the TV mode and LED displays TV.

Press twice to move to the VCR mode and LED displays VCR.

Press three times to move back to satellite mode and LED displays the channel number.

General Function

Channel Information

Every time you change channels, you will receive program information for a few second.

While watching channel, you can see the current channel information anytime by pressing INFO key on the RCU.

Note : Channel information will be displayed for 6 seconds and disappeared. You can adjust the display time interval from 2 to 12 seconds.



Volume & Audio Control

1) Volume Control

To increase or decrease volume, press  key on the RCU or  key on the front panel.

Note : DSR has 18 volume levels and this shall be controlled from the adjusted volume level of your TV.

2) Mute

To mute the sound, press  button on the RCU. To bring back the normal sound, press this key once again.

 
3) Audio Control

Press the  key repeatedly to select one of three possible audio settings (Left, Right and Stereo)

The current audio status will be displayed in the channel information.

4) Language Selection

Press the ALT-AUDIO key on the RCU repeatedly to select audio language. This is dependent on the transmission of audio signal from the satellite which supports multiple language.

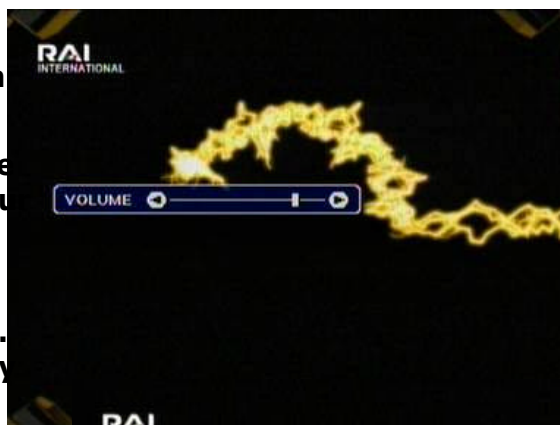

Position

If you need to adjust the antenna more accurately to watch a clear channel, press POSITION key on the RCU and then the position bar will be displayed. Pressor W key on the RCU to adjust for clear channel.



Channel Manager

DSR provides most powerful channel managing function in **the world**. This function allows you to have a more interesting and useful operation as well as **watching** simply.

Channel Manager

Channel Manager consists of TV Channel and Radio Channel. Press OK key placing the cursor on the TV Channel.

Note :Since the operation of Radio Channel is same as that of TV channel, in this manual only TV Channel is explained.

 
 
In the left side of TV channel menu, you can see the channel list which were already searched and in the right side, you can watch the current channel in small Picture in Graphic (PIG) mode (1/9 size of the normal) and you can see channel information under the PIG screen. When you move cursor from one channel to another, PIG will change accordingly.

Press **MENU** key on the RCU, then command menu will be displayed

TV Channel manager has 9 commands as follows;

1. Favorite
2. Move
3. Lock
4. Rename
5. Delete
6. Sort
7. Fast edit mode
8. Go To
9. Exit

Select a function by pressing **OK** key.

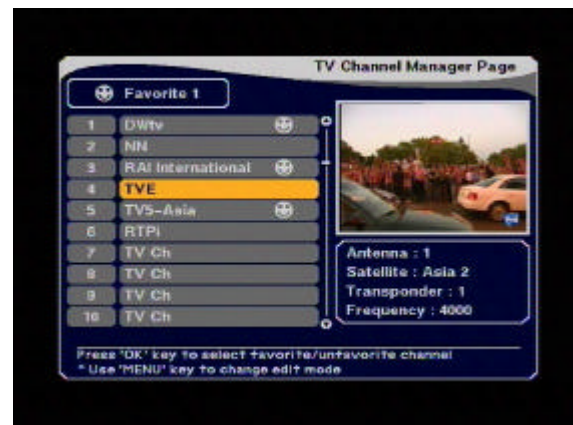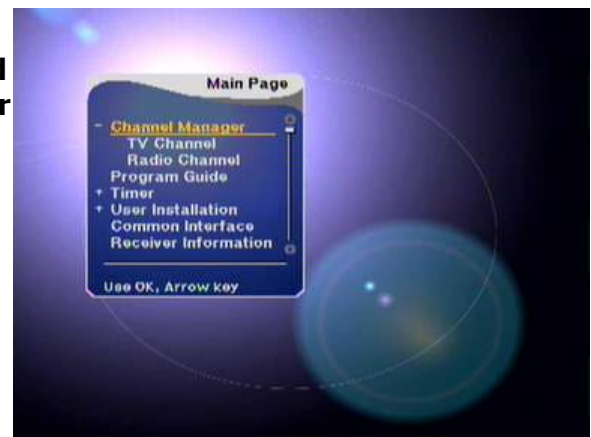

Channel Manager

Favorite

When you select channel manager, default favorite list will be showed on the screen as Favorite 1.

Select your favorite channel and then press **OK** key. Then **⊕** will be marked at rear of your selected channel name.

And if you want to delete the channel name in the favorite channel list, press **OK** key once again, then the **⊕** mark will be disappeared.

After the selection of favorite channels press **EXIT** key twice to save data and press **FAV** key repeatedly to see if each of the favorite groups are properly selected.

* **⊕** means scrambled channel.

How to make favorite group

1. When you enter channel manager, the default favorite group will be showed once on the screen as Favorite 1.

 
2. In the channel manager page, press **MENU** key on the RCU and select **FAVORITE**, then Favorite group 1,2,3 will be displayed. After that, select group and cursor channel what you want and press **OK** key by group.



Move

In the TV channel Manager Page, press **MENU** key on the RCU and select **MOVE** in the command box. Select a channel by pressing **OK** key and move the cursor to the location in which you want to move the selected channel and press **OK** key. Then, you will find the selected channel has moved to the desired location and channel no. also changed in order accordingly.

And check whether the channel number is changed on the channel list or not.

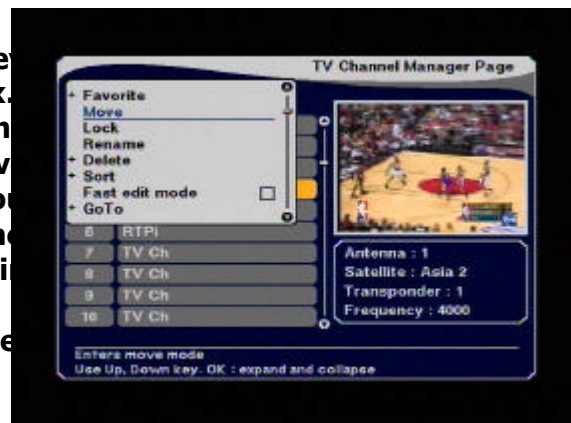


Channel Manager

Lock

In the TV Channel Manager Page, press **MENU** key on the RCU, and select Lock on the command menu.

This Lock command allows you to lock the channel. First, select the channel, which you want to lock and press **OK** key and then **Ⓛ** will be marked at rear of the selected channel name.

 Note : To perform this function, you should set up the Parental Lock in advance.

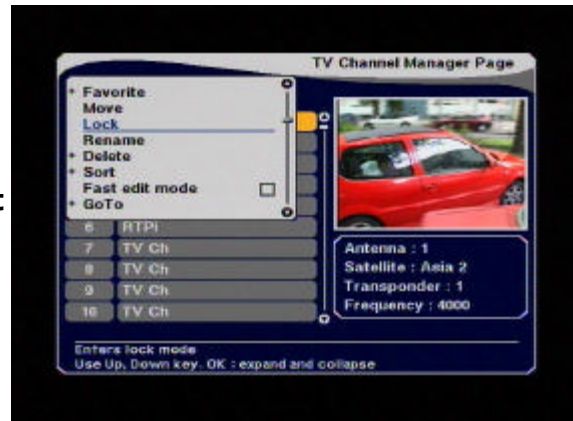


Rename

In the TV channel Manager Page, press **MENU** key on the RCU, and select Rename on the command menu.

The Rename function allows you to rename the channel. First, select channel to be renamed and press **OK** key, then, the keypad dialog will be displayed. Edit new name by selecting characters or numbers. To delete characters or numbers, select **Ⓛ** in the keypad dialog.

 And check whether the channel name is changed on channel list properly or not.

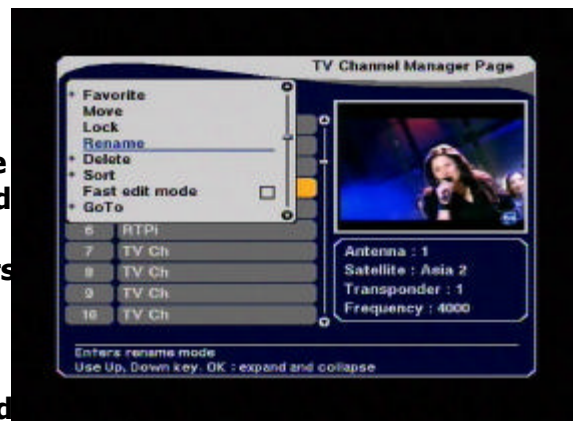

Channel Manager

Delete

In the TV Channel Manager Page, press **MENU** key on the RCU, and then select Delete on the command menu.

Then, submenu like Delete CH, TP, Satellite and all will be displayed.

This Delete command allows you to delete the channel permanently. First select the channels, which you want to delete, then selected channel number will be changed to yellow X mark. If you cancel the selection, press **OK** key again, then the number will be back.

If you decided to delete, press **EXIT** key and then Message box will be displayed. Press to delete.

And check whether the selected channels are deleted on the channel list or not.

Warning : The deleted channel can not be recovered unless you search again. Please be careful when you decide to delete channels.

Sort

 
 
In the TV Channel Manager Page, press **MENU** key on the RCU, and select Sort on the command menu.

This Sort menu has its sub command and it allows you to sort the channels as you like.

You can sort the channels by Favorite, Lock, Scramble, SAT name and CH name. Place the cursor on your desired line, and then press **OK** key.

And check whether the channels are sorted properly on the channel list or not.


Note : Radio Channel Manager has the same way of operation as TV channel Manager.

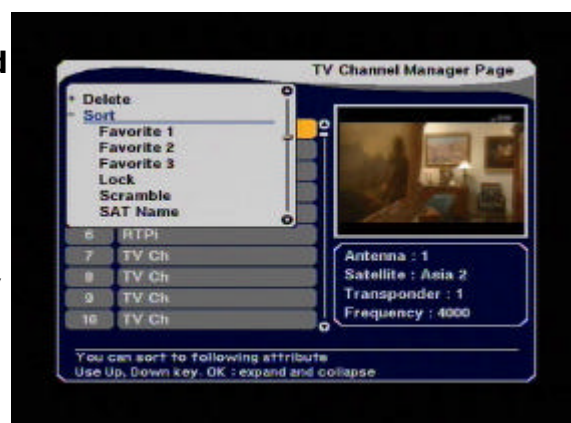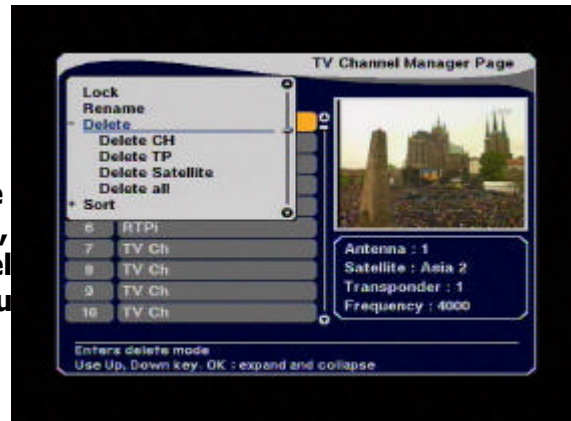

Channel Manager

Fast Edit mode

 Fast edit mode allows you to edit channel faster than normal without showing channels selected. If you turn off the Fast edit mode, DSR will show each channels selected in the small PIG screen and it takes few seconds more to edit channels.

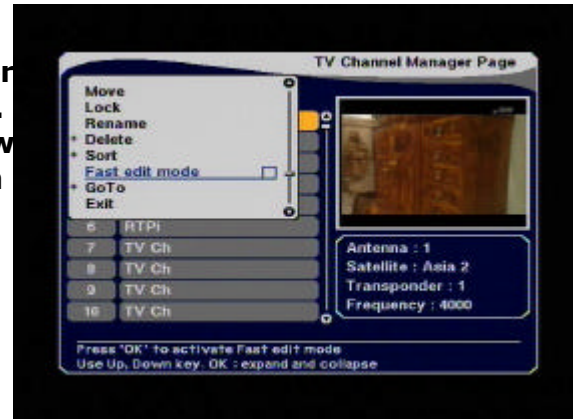


Go To Function

GoTo function enables you to go to any page of the menu tree by the adoption of Open Architecture Concept for the implementation of software. This powerful function makes the menu system to be user friendly and easy to use.

How to use GO TO function.

 1. Press MENU key on the RCU in the menu.
2. Select a TV Channel in the Channel Manager.
3. After your working in the TV Channel, press MENU key on the RCU.
4. Then menu box will be displayed.
5. Select Go To menu and press OK key.
6. Then submenu list will be displayed.
7. Select Timer and press OK key.
8. Then you can go to the Timer Page directly
9. If you go back to TV Channel, repeat the procedure of Go To function.

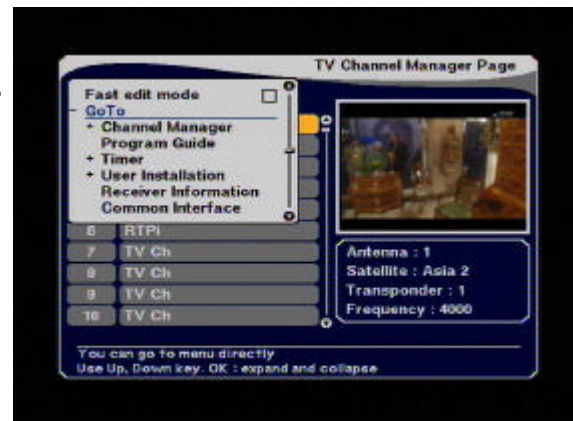

Electronic Program Guide(EPG)

DSR provides EPG function for you to get access to the TV Guide(or Radio Guide if you are listening to radio channels) which will show the titles and other information of the current and next programs on different channels. The information is only available from the network of the channel you are watching.

 
To see the EPG data, press EPG key on the RCU when watching a channel or select Program Guide in the Main Page.



Then, EPG box will be displayed.

You can see the channel in the PIG screen, channel list in the left side and Program schedule for selected channel will be displayed in the right side. The time will be displayed in relation with the program schedule.

Note : A "No information yet" message will be shown if the selected channel does not provide EPG data.

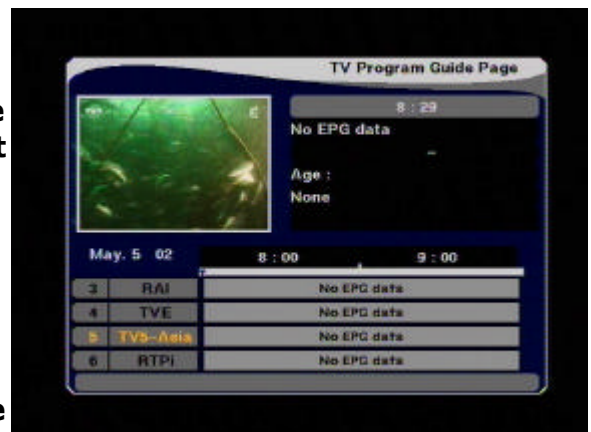

Timer

You can adjust the real time as well as you can program the timer with various ways. This function is one of the strong point of DSR.

Time Adjust

Usually you get the information of real time from the satellite automatically but sometimes they emit wrong information. In that case, you can adjust the real time at this function.



Time Reservation

To activate the timer and/or turn off the timer as well as recording time.

It enables to select timer maximum 10.

Timer allows you to program the various timer function.

You can set the timer daily, weekly, monthly and one time



Antenna Direction Help

Although you entered correct value in Antenna Setup menu, if your antenna is positioned incorrectly you could not receive signal from the Satellite.

 
 
 
So DSR provides Antenna Positioning Help in order for you to have exact information to direct your antenna toward a satellite.

First, select your desired Satellite name and then the location of selected satellite will be displayed. In case the location of the satellite is changed, you should reset the new location.

Second, enter the value of Longitude and Latitude of your location.

If you entered correct value of your position, place your cursor on Compute and press key.

Then, DSR shows the exact information of antenna direction.

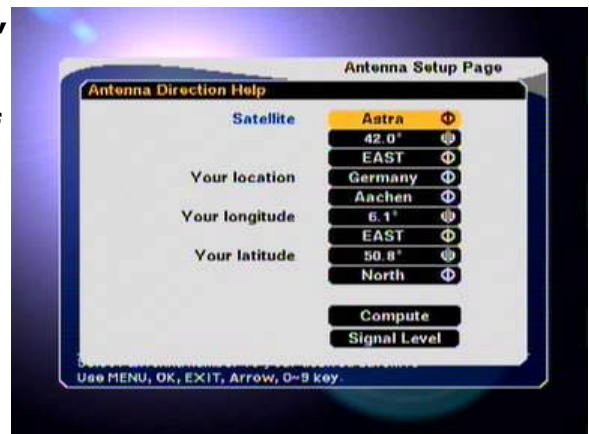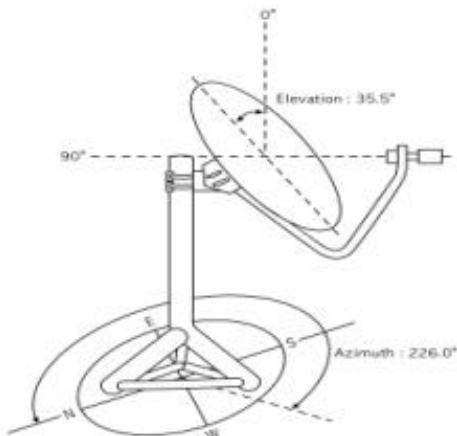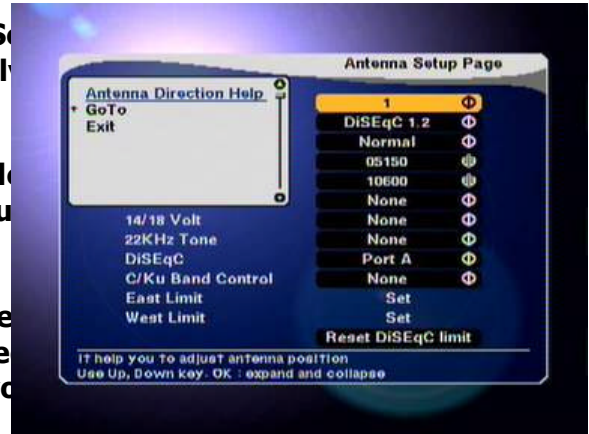

Front Panel Display

Front Panel Display



: Up load Procedure



: VCR Mode



: Down load Procedure



: System Waiting



: Error in Data transmitting



: Flash ROM Error



: TV Mode



: System Booting

Trouble Shooting

Problem	Possible causes	What to do
The display on the front panel does not light up.	Main cable is not connected.	Check that the main cable is plugged into the power socket.
No sound or picture, but the front panel shows red light.	The DSR is in standby mode.	Press the standby button.
No sound or picture.	The satellite dish is not pointing at the satellite.	Adjust the dish. Check the signal level in the Antenna Setup menu.
	No signal or weak signal.	Check the cable connections, LNB and other equipment connected between the LNB and the DSR, or adjust the dish.
Bad picture / blocking error.	The satellite dish is not pointing at the satellite.	Adjust the dish.
	Signal is too strong.	Connect a signal attenuator to the LNB input.
	Satellite dish is too small.	Change to a larger dish.
	LNB noise factor too high.	Change to an LNB with lower noise factor.
	The LNB is faulty.	Change the LNB.

Trouble Shooting

Problem	Possible causes	What to do
<p>No Welcome Menu on the screen after you switched on the DSR for the first time.</p>	<p>The system is connected by SCART leads and TV is not in AV/EXT mode.</p>	<p>If the system is connected by SCART leads, switch the TV to the appropriate AV input.</p>
	<p>The system is connected by RF leads.</p>	<p>Check the UHF channel fixed in your system and tune the UHF channel properly..</p>
<p>There is interface on your digital satellite channels, an existing terrestrial channel or video signal.</p>	<p>The system is connected by RF leads and the output channel of the DSR interferes with an existing terrestrial channels or Video signal.</p>	<p>Change the DSR output channel to a more suitable channel, or connect the system by SCART leads.</p>
<p>The RCU is not working.</p>	<p>Battery exhausted.</p>	<p>Change the batteries.</p>
	<p>RCU is incorrectly aimed.</p>	<p>Aim RCU at DSR, or check that nothing blocks the front panel.</p>

Note : If you have tried all of the actions suggested above, without the problem, please contact your dealer or service provider.

System Specification

- 1) TV System : PAL B/G, I, D/K
- 2) Input Data Rate : 2 - 45 MBPS
- 3) Modulation : QPSK(DVB Specification)
- 4) Inner FEC : Viterbi Convolutional Coding Rate
1/2, 2/3, 3/4, 5/6, 7/8(DVB)
- 5) Outer FEC : Reed Solomon Coding(204, 188)
T=8(DVB)
- 6) System Decoding : ISO/IEC 13818-1(MPEG2) TS
Specification TS Descrambling
- 7) Video Decoder : 13818-2(MPEG2) MP@ML
11172-2(MPEG1) Compatible
Wide Screen TV(16:9) / Normal TV(4:3)
- 8) Picture Resolution : 720(H) X 576(V) X 50 Field/Sec.
560(H) X 576(V) X 50 Field/Sec.
576(H) X 576(V) X 50 Field/Sec.
360(H) X 576(V) X 50 Field/Sec.
- 9) Audio Decoder : ISO/IEC 11172-3(MPEG1) Layer 1,2 Multi-lingual
Sampling Frequency : 33, 44.1, 48 Khz
Operation Mode : Stereo, Dual Mono, Joint Stereo
- 10) CI module slot
 - Connector : 2 X JEIDA 4.0 PCMCIA type
 - Live insertion : Yes
 - Module size : PCMCIA type II

11) Hardwired Conax descrambling module