

MPIO Player User's Guide

DIGITALWAY Co., Ltd

Thank you for purchasing **MPIO mp3 Player**.

This guide gives you a full explanation about the operation method of **the player**, cautions in handling and A/S procedure, which needs to be read before using this unit **the player**.

Experience the excellent sound quality of MPIO!

DIGITALWAY Co., Ltd will do our best to make a better product in return for your **purchase**.

A warranty card is appended to this guide.

Contents

1. Cautions in using **mp3 player**

1. **Using environments**
2. **Product safety**
3. **User safety**
4. **Data storage**

2. Introduction

1. Features
2. Specifications
3. **Computer Requirements**
4. **Components**
5. Part Name and how to use the buttons
6. Configuration of LCD **window**

3. Tips for MPIO Player Beginners

1. Charging the Battery
2. Installing the operational software
3. **Turn ON/OFF**
4. Volume control
5. Navigation
6. Music file **(Play/Pause)**
7. Music and data file download

8. Disconnecting the player from a computer
9. How to use HOLD function.

4. Using the MPIO Player functions

1. Button operational table
2. Operation methods by functions
3. Display/system setup

5. Using the MPIO UTILITY

1. Recovery to initial setup state at **Format & Configuration**
2. Firmware upgrade
3. Windows Media Player Plug-In Installation

1. Cautions in using mp3 player

1. Using environments

- Do not keep and use **the player** at the places mentioned below.
 - 1 Places of too high temperature
 - 2 Places of too low temperature
 - 3 Humid places
 - 4 Places under danger of submersion
 - 5 Dusty places
 - 6 Places exposed to the direct rays of the sun
 - 7 In a vehicle
 - 8 Near a heater
 - 9 Places under severe vibration
 - 10 Near a magnetic substance

2. Product safety

- 1 Do not give a shock to **the player**.
- 2 Do not disassemble, repair and remodel this product **without permission**
- 3 Do not put a substance into this product.
i.e.) Clip, Paper, Water, Beverage, etc.
- 4 If the surface of this product is stained, clean it with a soft cloth or towel. Never use a

chemical solution.

3. User safety

1 Traffic-related safety

- Do not listen to Music and FM broadcasting **with** a headphone or an earphone while you drive a bicycle, **Motorcycle** and vehicle. This may cause a dangerous accident and is illegal depending on districts.
- Decrease the volume of a headphone or an earphone when listening to Music or FM broadcasting while walking. This may cause a dangerous accident.

2 Protection of Ear

- Do not listen to music **with** a headphone or earphone for a long time. The possibility of hearing damage has been pointed out by experts.

4. Data storage

- 1 The company isn't responsible for data loss and damage that occurs **in** data transmission between this product and a computer.
- 2 If you save an important data in this product, be sure to back them up. The company isn't responsible for the damaged data if the saved data is lost due to a mechanical trouble, malfunction and other causes (external shock, electric discharge, etc.) Be careful.
- 3 Be sure to back up the data saved in this product before **Customer Service**. The company doesn't perform a separate backup for a received product, considering that the customer has already backed up the data. Therefore, this company isn't responsible for data damage that occurs during the service.
- 4 Be sure to hold the plug when inserting and removing the USB **terminal** of this product from a computer.
- 5 Do not shock or shake the jointed part when this product is connected with a computer.

2. Introduction

1. Features

1 The slim, small size and high Performance!

MPIO FL330 reminds the user of getting a valuable jewelry with an elegant necklace.

2 USB Mass Storage

When the **player** is connected with a PC, it is perceived automatically as a **removable disk**.

Therefore, you can upload and download data conveniently without a **manager program**.

3 Nothing is more excellent!

Basic 6 types Preset EQ and 4 types of Philips Sound Effects

- Jazz, Pop, Rock, Vocal, Classic, Normal / Pure Studio, Concert Sound, Groove, Dynamic Bass

They are prepared for true **maniac**

(* But, not supported in FL330 model.)

4 Multi-Format **Support**

Supports MP3, WMA and ASF format as a multi-format player.

5 **Graphic User Interface** for user's convenience.

A great effort has been made on GUI to enhance a user's convenience.

This product offers graphic-oriented icon, simple menu and easy access **way**.

6 Navigation

You can save and search a music file easily by using a tree-shaped structure like **Window Explorer**.

7 **Voice Recording**

(*But, not supported in FL330 model.)

8 Firmware upgrade

We'll do our best to improve the performance of this product through continuous firmware upgrade service.

2. Specifications

Size	30 x 50 x <u>12.8</u> (W x H x D)mm
Weight	25g
Memory	128MB/256MB
Compressed format support	MP3(8 ~ 320kbps), WMA(5 ~ 192kbps), ASF
LCD display	2 line Negative LCD, White LED backlight
Supported language	55 languages supported
Menu language	English

File transmit speed	Max. 5 Mbps
Earphone output	6mW/channel
Signal to Noise rate	90dB
Output frequency range	20Hz ~ 20KHz
Battery	Li-Polymer
Continuous playing time	Max. 10 hours (128kbps MP3 file play, Volume 20)
Operating temp.	5°C ~ 40°C

!! The contents on this user's guide may be changed without a prior notice to improve the performance.

- The available memory capacity may be reduced by a logical file system regardless of the memory capacity (128/256MB) of the **player**.
- The playing time depends on **usage** and menu setup.
- The data transmission speed depends on the **Specification** of a user's computer.
- PC-link using extension code such as USB hub isn't guaranteed.
- **Rechargeable batteries have a limited Number or charge cycle and may eventually need to be replaced.**
- **Battery life and number of charge cycle may vary by use and settings.**

3. **Computer Requirements**

(1) IBM PC

Main: USB Interface (Rev 1.1) standard system and CD-ROM Driver mounted

CPU: Pentium 133MHz or more

Memory: 64MB or more

Hard disk margin: 20MB or more

Supported operational system: Windows 98/98SE/Me/2000/XP

(2) Macintosh

- Main: USB Interface (Rev V1.1) standard system and CD-ROM Driver mounted

ex) Power Mac G3 (Blue & White)/G4/G4 Cube, iMac/iBook, Powerbook, Powerbook G4

- Memory: 64MB or more

- Hard disk margin: 20MB or more

- Supported operational system: Mac OS 9.04~10.x

! Be sure to use the offered USB cable because the **Player** doesn't often work **when used** an extension cord for connection with a PC.

4. Compositions

1 Basic

- Main body
- Manual
- **Installation CD**
- **Mini-USB**
- USB Extension Cable
- Warranty card

2 Additional

* FL300

- Ring-shaped earphone
- Nude Case + Necklace string

* FL330

- Normal Earphone
- Armband + Case

! The accessories may be changed without a prior notice to improve the performance and quality of this product.

5. Part Name and how to use the buttons

Earphone Jack & USB Port

Reset

REW button: Navigation / Move to Menu

FF button: Navigation / Move to Menu

MENU button: Range Repeat / Information Change

Volume key -: Volume control only in playing.

Volume key +: Volume control only in playing.

(Move to the upper folder and menu at Navigation or Menu Search Mode.)

Play / Pause button: Power ON/OFF, Music Play/Pause

LCD Window: Displays the file information and menu setup state.

6. Configuration of LCD **Window**

!! * **Press** the MENU button to change the LCD information as follows.

<p>Music information display figure 1</p> <p>Music information display figure 2</p>	<p>(1 line)</p> <ol style="list-style-type: none"> 1. PRESET EQ icon 2. The number of music being played/Total of music saved in the player or the folder 3. Sound effect icon (Not supported in FL330.) 4. REPEAT icon 5. Sleep icon 6. BATTERY icon <p>(2 line)</p> <p>Music information display</p>
---	--

<p>Clock display screen</p>	<p>(1 line)</p> <p>day of week / day / month / year</p> <p>Play state display icon (PLAY or PAUSE)</p> <p>(2 line)</p> <p>Alarm setup display icon / PM. AM display icon</p> <p>Clock display (time, minute)</p>
-----------------------------	--

3. Tips for MPIO Player Beginners

1. Charging the battery

¹ When the battery icon becomes empty, 'Low Battery' icon appears as shown below and the player turn off, the battery should be charged.



² When the player is connected by USB cable from the earphone jack to USB port of PC, the below USB & Charging icon appears on the LCD screen and charging begins.



3 When charging is completed, the below icon appears on the LCD screen.



Charging time: 3 hour (completely charged state based)

Playing time: Max. 10 hours

!> The charging and playing time can be different depending on the user's using environment.

!> Always separate the USB Cable from the PC unless it is being charged or USB connection

2. Installation of operating software

The PC using Windows ME, Windows 2000 and Windows XP supports USB 1.1 Storage Device basically and perceives the player as a **removable disk** without installing a **manager program**.

 
Thus, you can utilize the player by using **the Windows Explorer**

For a computer using Windows 98/98SE, a MPIO USB Device Driver should be installed first.

(Only if the **device** driver is installed, the computer can perceive the player as an external storage.)

How to install

- 1 Connect a USB cable with a computer and a Player USB **port** (Earphone Jack).
- 2 "New hardware device perceived" message box appears on the PC monitor.
- 3 Insert the **supplied** CD in a computer, select the PLAYER3xx.INF file in the device drive folder as a device drive and press "Confirm". Then, the computer perceives the PLAYER as a **removable disk**.

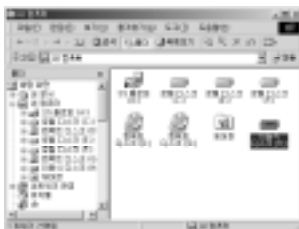

3. Power ON/OFF

- **Press and hold** the Play/Pause button to **turn** on and display MPIO Logo screen.

To skip the Logo screen, press **any key during the intro MPIO logo**

- **Press and hold** the Play/Pause button to **turn** off.

4. Volume control



- To increase the volume: +button
- To decrease the volume: - button

!> Press **and hold** the volume key to increase and decrease the volume fast.

(But, the volume control function is available only in playing.)

5. Navigation

- **Enter the Folder:** Move to the upper or lower folder by using the FF & REW button, and select folder. Then press the Menu button
- **Exit the Folder:** Press the Volume + button in the folder to return to the upper folder.

6. Music File (Play/Pause)

- Select a music file and press the Play/Pause button shortly to play the file.
- Use the FF & REW button to move to the previous or the next music while listening.
- Pressing the REW button after first 10 seconds of a track_will move back to beginning to the **current** track.
- Pressing the REW button within 10 seconds of a track will move to the previous track (of the current track).
- **Press and Hold** the FF & REW button **in listening music** to perform the Fast Forward/Fast Rewind function.
- **Press** the Play/Pause button to pause **the music**.



If 'no track' message appears, there is no saved music. Download a music file.

No Track

 
7. Music and Data File Download

(1) **Connect the MPIO Player with a computer.**

- For a PC using Windows 98/98SE, install the USB Device Driver in an **supplied** CD. (Refer to 13 Page for installing method.)


- Turn on and connect the USB cable with a computer and the USB terminal (Earphone terminal) of this player.

- Check the USB link message on the LCD screen of the player as follows (2 image).



! The battery is charged automatically when USB is linked.

 - To download or copy files, drag and drop files from PC to a removable disk (MPIO drive) by using the Window Explorer.

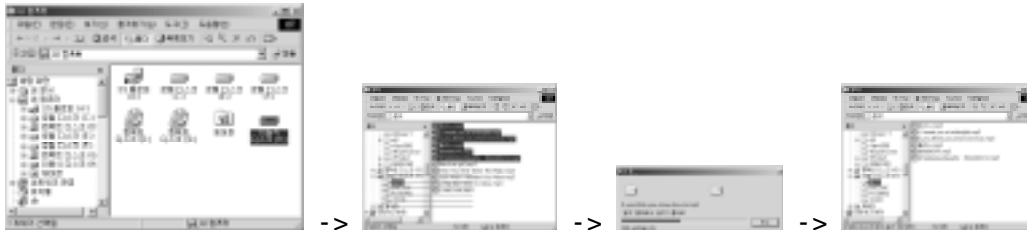

!! An illegal download and duplication of MP3 file with copyright is prohibited by law and company isn't responsible for any items related to the copyright.

8. Disconnecting the player from a computer

!! The followings are recommended for safe disconnection. Please follow the procedure to present any data loss or damage on both player and PC.

Locate the mouse on the icon for removal and disconnection of Task Tray and click the right button of the mouse.

Select 'Separate or Remove the Hardware' message to display the below screen.

When 'Remove the Hardware Safely' window appears, select 'USB High Capacity Storage' on the Hardware Device window and click the [Stop] button.

When 'Hardware Device Stop' window appears, check the 'USB High Capacity Storage' item and click the [Confirm] button.

When 'Remove the Hardware Safely' window appears, Click the [Confirm] button and disconnect the player from the computer.

!! For Windows 98 / 98 SE computer user

- To prevent the data loss during data transferring, disconnect it when the LCD screen changes as follows.

9. How to use Hold function

Hold On: Press the REW button with the MENU button long clicked.

Hold Off: Press the REW button with the MENU button long clicked.

! In operating a button after hold on, KEY HOLD!! Icon appears and disappears soon.

4. Using the MPIO Player functions

1. Button operation table (Allocations Table - Button and Functions)

* Press (=Short Click): Means pressing a button shortly.

* Press and hold (=Long Click): Means press and holding a button more than 1 second.

KEY		Pause	While playing	MENU
PLAY/STOP	Short Click	Selected music play	Pause	Playing screen
	Long Click	Power Off	Power Off	Power Off
MENU	Short Click	Folder move	Data change/Range repeat	Menu setup
	Long Click	Menu Entry	Menu entry	Menu change
REW	Short Click	Previous music navigation	Previous music play	
	Long Click	Fast navigation	Fast Rewind	
FF	Short Click	Next music navigation	Next music play	Menu change
	Long Click	Fast navigation	Fast Forward	
VOL +	Short Click	Upper folder	Volume UP	Upper menu
	Long Click		Fast Volume UP	
VOL -	Short Click		Volume DOWN	
	Long Click		Fast Volume DOWN	

2. How to operate by functions

!! If you click the Volume + button in setting all menu states, you can move to the upper menu without saving the set value.

(1) Listening to music

- 1 **Press and hold** the Play/Pause button to **turn** on the player.
- 2 Find the next or previous music by using the FF or REW button and then click the PLAY/PAUSE button to play.



(2) Navigation

- 1 **Press and hold** the MENU button while playing to enter the MENU and then select NAVIGATION icon.
- 2 Find music by using the FF or REW button and click the PLAY/PAUSE button to play.



(3) REPEAT Setup (Play Repeat)

- 1 **Press and hold** the MENU button to enter the MENU and select the REPEAT icon.
- 2 **Press** the MENU button to enter the lower MENU and select a PLAY REPEAT state.



Repeat Normal-Sequential play
 Repeat one -repeat One music
 Repeat All -Infinite sequential play
 Random -Random play
 Directory Normal- Sequential play of music in folder
 Directory All- Infinite sequential play of music in folder
 Directory Random- Random play of music in folder

(4) Clock function

< Clock figure while playing >

Press the MENU button while playing to check the bit rate and playing time and **Press** once again to display the time on the LCD screen.

 
(Refer to Page 11 for details.)

(5) A<->B Range

Repeat Setup

(Useful in studying a foreign language)


1 **Press and hold** the MENU button to enter the MENU and then select the SYSTEM icon.



2 **Press** the Menu button to enter the lower menu and then select A<->B icon.




 3 Change A<->B from OFF to ON.




4 When A<->B is ON, the MENU button is operated as Range Repeat button of a file being played.

 5 **Press** the MENU button while playing to set the starting point (A) of Range Repeat.



 6 **Press** the MENU button again at the moment to set the ending point (B) of Range Repeat. Then, the range between A and B is played repeatedly.



7 **Press** the MENU button again to clear the Range Repeat between A and B.



(6) VOICE RECORDER

(* But, FL330 model doesn't support this function)

 
1 **Press and hold** the MENU button to enter the MENU and then select the VOICE RECORDER icon.



2 **Press** the Menu button to enter the lower menu and then select the recording quality.



3 Select LOW (general quality) or HIGH (high quality) and press the MENU button to start recording.



- LOW Recording Time : 396 minutes(in 128MB)
- HIGH Recording Time : 200 minutes(in 128 MB)

4 Press the PLAY/PAUSE button while recoding to pause and then Press once again to resume recoding.

 
5 Click the MENU button while recording to finish the voice recording and save the file in RECORD folder.

6 The recorded voice files are saved in the form of VOICE001.MP3, VOICE002.MP3... in RECORD folder.
< >

7 Find and select a recorded voice file in the RECORD folder through list search in Navigation or Pause state and then play.

1 Press and hold the MENU button to enter the MENU screen and then select the EQUALIZER icon.

FL300 Model



FL330 Model



2 Press the Menu button to enter the lower menu and then set the PRESET EQ.

(NORMAL/POP/ROCK/JAZZ/CLASSIC/VOCAL)



(7) EQUALIZER Setup

(8) SOUND EFFECT Setup

Setup

(* But, FL330 model doesn't support this function)

1 **Press and hold** the MENU button to enter the MENU screen and then select the SOUND EFFECT icon.



2 **Press** the Menu button to enter the lower menu and then set the SOUND EFFECT. (OFF/PURE STUDIO /CONCERT SOUND/ GROOVE/DYNAMIC BASS)



(9) LANGUAGE Setup

1 **Press and hold** the MENU button to enter the MENU screen and then select the LANGUAGE icon.



2 **Press** the Menu button to enter the lower menu and then set the language. (55 ID3 Tag languages support setup)



In selecting an alphabet of saved language, the cursor moves onto the language. Otherwise, the cursor moves onto the **first** language initiated by the alphabet.



 
(10) WATCH Setup

1 **Press and hold** the MENU button to enter the MENU screen and then select the WATCH icon.



2 **Press** the Menu button to enter the lower menu and then select the WATCH SET UP icon





3 Use FF, REW button and **Press** the MENU button to setting time. Then, the value is saved and the cursor moves to the next setup. (Move in the order of Year, Month, Day, Time and Minute.

 
! At this time, when the year is set and the month is changed, the date is automatically changed into 1. Therefore, be sure to check the date in setting the month.

(11) ALARM Setup

1 Select the ALARM icon in **watch mode** and set ALARM ON or OFF.




2 Select the ALARM SET UP icon under WATCH and set as the same method as time setup.



ONE DAY/EVERYDAY - Alarm Interval

Hour/Minute - Alarm time setup

 When ALARM is set to ON, ALARM icon appears on the clock screen.



3. DISPLAY/SYSTEM Setup

- 1 **Press and hold** the MENU button to enter the MENU screen.
- 2 Select the DISPLAY or SYSTEM icon by using the FF, REW button and **Press** the MENU button to enter the lower menu of DISPLAY or SYSTEM.
- 3 In the same method as mentioned above, enter the menu either DISPLAY or System.
And select the option by using the FF, REW button and **Press** the MENU button to save the settings.

DISPLAY

 
= BACKLIGHT, CONTRAST, FILE INFO

SYSTEM

= AUTO PLAY, A<->B, RESUME, SLEEP, AUTO POWER OFF, FADE, INFO

1. DISPLAY(Backlight, Contrast, File Info) Setup

- * **Press and hold** the MENU button to enter the MENU and then select the DISPLAY icon.



FL300 Model



 
FL330 Model


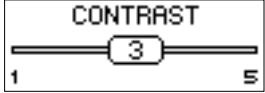






BACKLIGHT





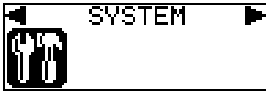



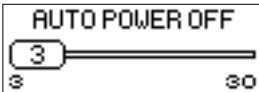




Sets the backlight time.

0 ~ 30 sec.

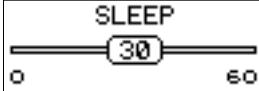

<p style="text-align: center;">CONTRAST</p> 	<p style="text-align: center;">Adjusts the LCD contrast.</p> <p style="text-align: center;">1 ~ 5 steps</p> 
<p style="text-align: center;">FILE INFO</p> 	<p>Selects the file information to be displayed at 2 Line LCD while playing a file.</p>  <p>* Displays TAG INFO=ID3 TAG information. * Displays FILE NAME.</p>
<p>2. SYSTEM (AUTO PLAY, A<->B, RESUME, SLEEP, AUTO POWER OFF, FADE, INFO)</p>	
<p>* Press and hold the MENU button to enter the MENU and then select the SYSTEM icon.</p> <div style="display: flex; justify-content: space-around;"> <div data-bbox="309 1032 724 1124">  <p style="text-align: right;">FL300 Model</p> </div> <div data-bbox="780 1039 1177 1126">  <p style="text-align: right;">FL330 Model</p> </div> </div>	
<p style="text-align: center;">AUTO PLAY</p> 	<p><Auto Play setup at power on></p> <p>OFF: Power on and click the PLAY button to play a file.</p> <p>ON: When you power on, a file is automatically played.</p>  <p>The last file which was played before power off is automatically played. If the last file is lost, Auto Play isn't performed.</p>

<p style="text-align: center;">A<->B</p> 	<p style="color: red;">Dual function of "Menu" Button in playing music</p> <p>OFF</p>  <p>Press the MENU button while playing to display the bit rate and playing time on the LCD screen and short click once again to display a clock on the LCD screen.</p> <p>ON</p> <p>Press the MENU button while playing to set Range Repeat.</p>
<p>RESUME</p> <p style="color: red;">Turn on and select to resume the music that was being played before Turn off.</p> 	
<p style="text-align: center;">INITIAL</p> <p>Plays the file that was being played before turn off from the first track.</p> 	<p style="text-align: center;">STOPPED</p> <p>Remember and play the stopped location of the file that was being played before turn off.</p> 
<p style="text-align: center;">SLEEP</p> 	<p><Power Off time reservation></p> <p>(0 ~ 60 minutes)</p> 
<p style="text-align: center;">Auto Power OFF</p> 	<p><Auto Power Off time reservation></p> <p>When there is no operation of a button in Pause state, the player turns off automatically after standby time goes by. (0 ~ 30 minutes)</p> 
<p style="text-align: center;">FADE</p> 	<p><Slow increase of volume in playing music></p> <p>OFF: Play a file in the set volume.</p> <p>ON: Increase or decrease the volume slowly to the set volume in playing music.</p>

	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>FADE</p> <p>OFF ON</p> </div> <div style="text-align: center;"> <p>FADE</p> <p>OFF ON</p> </div> </div>
<p>INFO</p> 	<p><Display of player Information></p> <p>Displays the data on Firmware Version, Used Memory and Total Memory.</p> <div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 10px auto;"> <p>FIRMWARE : V 1.0 MEMORY : 035 / 256 MB</p> </div>

5. Using the MPIO UTILITY

1. Recovery to the initial setup state after format

- (1) Connect the player with a computer.
- (2) Find a MPIO Utility from the supplied CD and install to the user's computer.
- (3) Execute the MPIO Utility.



- (4) Click the Format & Config. Then It will format the set and download files to backup initial states.
- (5) Format must be only done with FAT (FAT16) as in below figure.



- (6) Click the Setup Config button to download files to backup initial states.
 In this Case, Format will not happen.

2. Firmware upgrade

- (1) Turn on the player and connect with a computer via the supplied USB cable.
- (2) Execute the MPIO Utility.
- (3) Click the Firmware Upgrade button to transmit a new firmware to the MPIO Player.
- (4) Separate the USB cable after the transmission is completed. Then, the player progresses the firmware upgrade.
- (5) At this time, the progress of firmware upgrade can be checked on the LCD screen of the player.

But, the user's computer should be linked with Internet.

3. WMP (Windows Media Player) Plug-In Installation

- (1) Power on the PC and insert a MPIO Install CD into the CD-ROM Driver.
- (2) Double click the CD-ROM icon and then the Plug-In Installer icon in the folder.
- (3) When 'WMP Plug-In for MPIO Read Me' window appears, click [CONTINUE] button.
- (4) When 'WMP Plug-In Installer' window appears, click [INSTALL] button.
- (5) When 'Installation was successful' message appears, click [Quit] button.

Note:

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will

not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

****CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**