

# DIGITALWAY

# DIGITAL COOL mpio

## Service Locator

### (IN USA)

ADDRESS 6440 Lusk Blvd, Suite D105 San Diego, CA 92121, U.S.A

E-MAIL [customerservice@digitalwayinc.com](mailto:customerservice@digitalwayinc.com)

[www.digitalway.co.kr](http://www.digitalway.co.kr)

TEL Customer Service & Tech Support : +1-858-455-6775

Sales : +1-858-554-1300

HOME PAGE <http://www.mpio.com>

### (Head Office)

ADDRESS 5F Korea Design Center, 344-1, Yatap 1 dong, Bundang-gu, Seongnam City, Gyunggi-do Zip 463-828 Korea.

E-MAIL [networker@digitalway.co.kr](mailto:networker@digitalway.co.kr)

TEL +82-31-788-7230

HOME PAGE <http://www.mpio.co.kr>

### (IN EUROPE)

ADDRESS E-92521 Schwarzenfeld, Am Gleis 1, Germany

E-MAIL [support@mpio.de](mailto:support@mpio.de)

TEL +49-9435-5407

HOME PAGE <http://www.mpio.de>

### (IN CHINA)

ADDRESS E-23F Huadu Mantion, No838 Zhang Yang Road Pudong, Shanghai, China P.C : 200122

E-MAIL [zjq@mpio-digitalway.com.cn](mailto:zjq@mpio-digitalway.com.cn)

TEL +86-21-5058-6018

HOME PAGE <http://www.mpio.cn>

Code No. 408-000-0000

## FY400

User's Guide

Gebruikershandleiding

Guide de l'utilisateur

Benutzerhandbuch

Manuale d'uso

Manual del Usuario

Руководство  
пользователя

This document is intended for informational and instructional purposes only.  
Digitalway reserves the right to make changes in the specifications  
and other information contained in this document without prior notification.  
Digitalway disclaims any obligation to update the information contained herein.

 
# 1. Overview

mpio

Thank you for purchasing the MPIO PLAYER.

This QUICK GUIDE offers basic information for using this player.  
Refer to USER'S GUIDE in utility CD for details. ([www.mpio.com](http://www.mpio.com))

DIGITALWAY

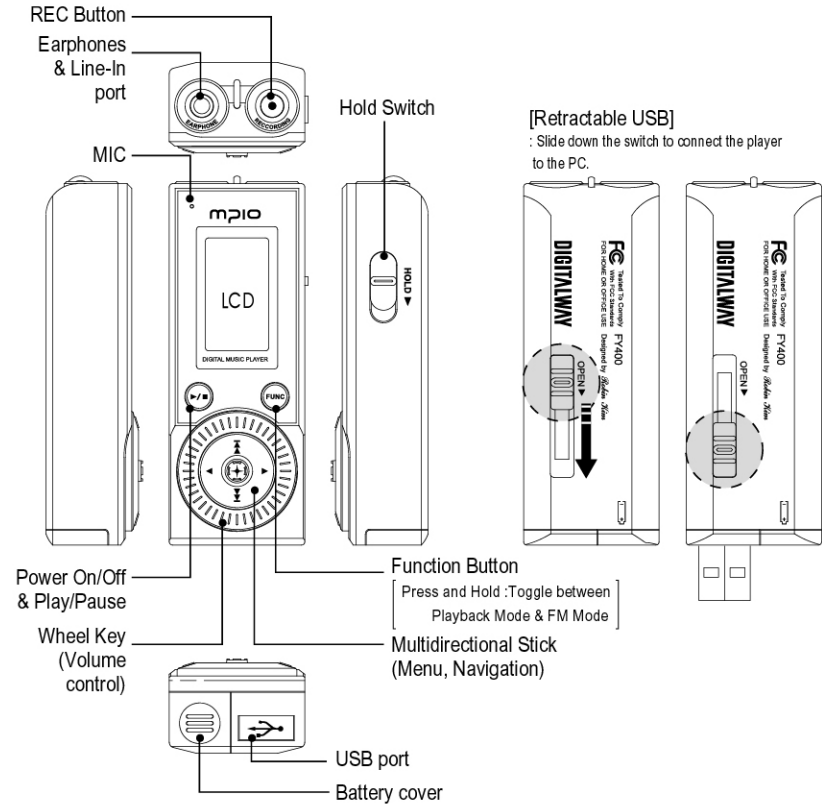

## 2. Basic operation method

### 1 Installing a Driver

 


Windows ME/2000/XP user does not have to install a driver.  
However, if a driver needs to be installed, install it before connecting to the PC.

- 1 Insert the utility CD into the CD-ROM drive in the PC.
- 2 Select the [Driver] from the utility menu and proceed to install the driver according to the shown instruction.

### 2 Power On/Off

- 1 Press and hold the ►/■ button.

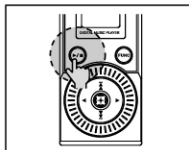

### 3 Saving the Music File in the Player

- 1 Connect the player to the PC using the USB cable.
- 2 Click the [Windows Explorer] icon on the desktop screen.  
The PC will recognize FY400 as a removable disk. Therefore, you can save/delete the data, or create a folder, using the same method as you use the normal hard disk in the PC.
- a Copy & Paste: "Copy" the data and "Paste" it in the removable disk (FY400).

- b Drag & Drop: Select the data and then, drag the mouse pointer to the removable disk (FY400) and drop it.
- 3 If you save all files you want, disconnect the player from the PC according to the steps described in "Disconnecting the Player from the PC".

### 4 Disconnecting the Player from the PC



Take the following steps to disconnect the player from the PC safely.  
Please be kindly noted that data loss or player function may occur, if you fail to comply with the instructions. PC.

- 1 Move the mouse pointer on the Hot Plug icon on the Windows Task Bar and click the right mouse button.
- 2 When the "Safely Remove Hardware" message appears, click it.  
Hardware disconnecting command can vary depending on the Windows OS version.
- 3 When "Safely Remove Hardware" window appears, select the "USB Mass Storage Device" from the hardware device list window and click the [Stop] button.
- 4 When the "Stop a Hardware Device" window appears, select the "USB Mass Storage Device" and click the [OK] button.
- 5 When the "Safely Remove Hardware" window appears, click the [OK] button and disconnect the player from the PC.



Windows 98 user  
Windows 98 does not provide any command that enables to disconnect the player from the PC safely. Therefore, check the "Mass Storage" Message on the LCD display before disconnecting the player from the PC. Wait if the "Data Transferring" Message appears on the LCD display before disconnecting the player.

## 5 Listening to Music

 
### 1 Play/Pause

Press the ►/■ button.



### 2 Volume control

Turn the wheel key to control volume (Volume level: 0~40)

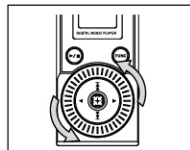

Press the [FUNC] button during playback to change EQ setting.

### 3 Navigation

- ① Press the stick button during music file playback.
- ② Push the stick button to the ▲, ▼ direction to select the music file you want.
- ③ Press the stick button to play back the selected music file.



< Moving into/out of the folder >

- \* Moving into the folder : Select a folder and press the stick button. Or, push the stick button to the ► direction.
- \* Moving out of the folder : Pres the [FUNC] button to move to the upper folder. Or push the stick button to the ◀ direction.

## 6 Listening to the FM

- ① Pause file playback if the file is being played back.
- ② Press and hold the [FUNC] button to directly switch to the FM tuner mode.

 


### 1 Adjusting Frequency

- ① Push the stick button to the ◀, ▶ direction to adjust the frequency.
- ② Push and hold the stick button to the ◀, ▶ direction for automatic scanning of the available frequencies.

### 2 Saving the FM radio frequency

- ① To save the frequency currently selected, press the [REC] button while listening to the FM.
- ② Select the station number you want by pushing the stick button to the ▲, ▼ direction. Then press the stick button to save the channel.

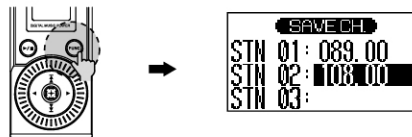

**< Channel mode & Station mode > \* Press the [FUNC] button to switch between two modes.**

 
 
\* Channel mode : You can push the stick button to the **◀▶▶▶** direction to move to the receiving frequency.

\* Station mode : You can push the stick button to the **◀▶▶▶** direction to move to the saved channel only.

Saved Station

## 7 Recording Voice

- 1 Pause file playback if the file is being played back.
- 2 Press and hold the [REC] button to start voice recording.

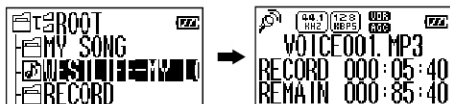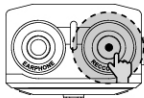

- 3 Press the **▶/■** button again to pause recording. To resume recording, press the **▶/■** button again.
- 4 Press and hold the [REC] button to stop recording.

MEMO

DIGITAL COOL  
mp3

**Note:**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will

not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna

-Increase the separation between the equipment and receiver

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

-Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**\*\*CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**