


FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:


Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

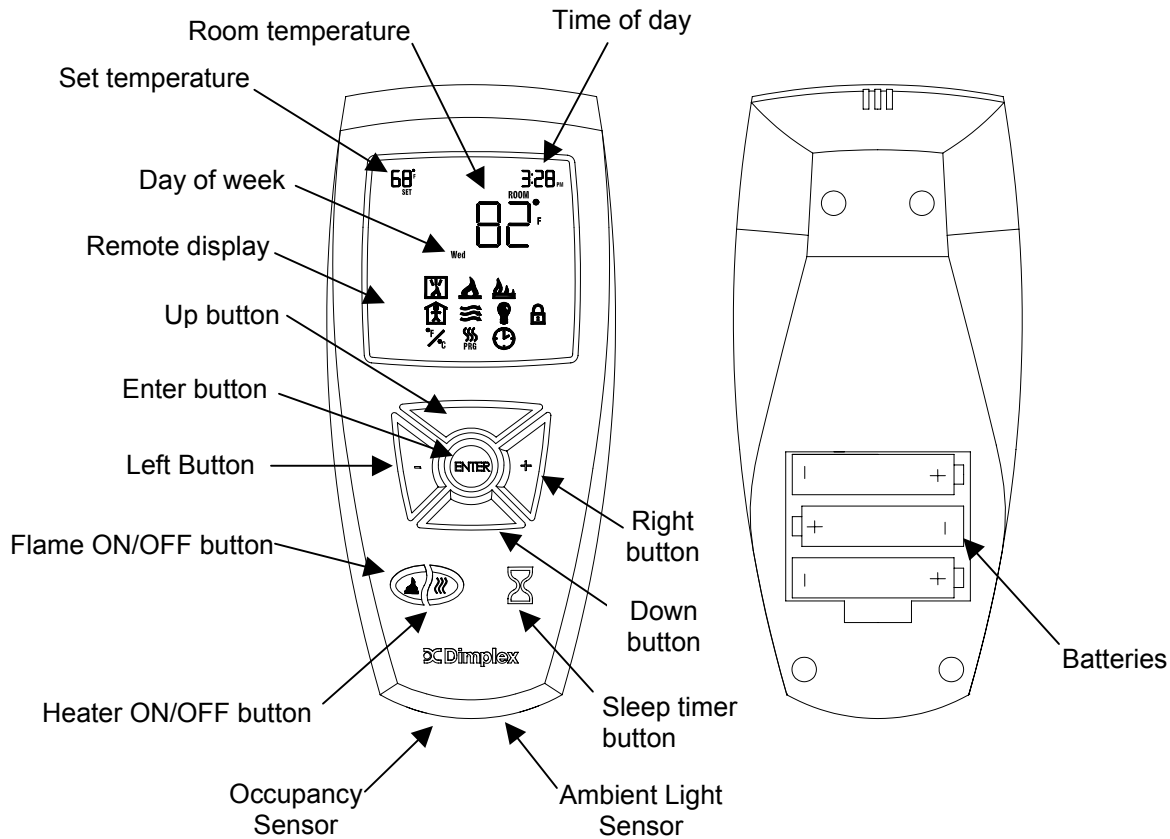

FLAME ON/OFF BUTTON

Press the Flame On/Off button  to turn the flame ON.



HEATER ON/OFF BUTTON

Press the Heater On/Off button  to turn the heater


NOTE

A red indicator light will illuminate on the fireplace to indicate that the heater is ON.

NOTE




When the flame and/or the heater are ON, the unit will turn OFF when both control buttons   are pressed at the same time.

SLEEP TIMER



1. Set the sleep timer to the length of time you want the unit to operate by pressing the sleep timer  button.

NOTE

The sleep timer can be set from 30 minutes to 8 hours.



2. Pressing the sleep timer button repeatedly will increase the sleep timer by 30 minute increments.
3. Press the flame  button and/or the heater  button to turn the unit ON.
4. The fireplace will automatically turn OFF when the sleep timer reaches 0 minutes.
5. The sleep timer can be reset by pressing the sleep timer  button repeatedly until the sleep timer display disappears and the room temperature display is shown.

SET CLOCK




1. Press the ENTER button until the middle display  flashes.
2. Use the direction buttons on the hand held remote to move the cursor to the  clock and press the ENTER button.
3. A day of the week will flash.
4. Use the left or right button to set the day of the week.

5. Press the up button and the hour display will flash.
6. Use the left or right button to set the hour.
7. Press the up button and the minute display will flash.
8. Use the left or right button to set the minute.
9. Press ENTER to return to the main menu.

SET °F OR °C

1. Press the ENTER button until the middle display  flashes.
2. Use the direction buttons on the hand held remote to move the cursor to  and press ENTER.
3. Use the left or right button to toggle between °F and °C.
4. Press ENTER to select °F or °C.




FLICKERING FIRELIGHT

1. Press the flame button  to turn the flame ON.
2. Press the ENTER button until the middle display  flashes.
3. Use the direction buttons on the hand held remote to move the cursor to  and press ENTER.
4. Press the up button to turn the flickering top lights ON.
5. Press ENTER to return to the main menu.

NOTE

To turn the flickering lights OFF repeat steps 1 to 3 and then press the down button.

FLAME SPEED




1. Press the flame button  to turn the flame ON.
2. Press the ENTER button until the middle display  flashes.
3. Use the direction buttons on the hand held remote to move the cursor to  and press ENTER.
4. Repeatedly press the left or right arrow keys to change the flame speed.

NOTE

The bar graph located on the top of the screen displays the speed range of the flame motor.

5. Press ENTER to return to the main menu.

LIGHT DIMMER




1. Press the flame button  to turn the flame ON.
2. Press the ENTER button until the middle display  flashes.
3. Use the direction buttons on the hand held remote to move the cursor to  and press ENTER.
4. Repeatedly press the left or right arrow keys to change the brightness of the upper lights.

NOTE

The bar graph located on the top of the screen displays the upper light brightness range.

AMBIENT LIGHT SENSOR

When the room gets darker the upper lights dim allowing for a more intense and realistic flame effect.



1. Press the flame button  to turn the flame ON.
2. Press the ENTER button until the middle display  flashes.
3. Use the direction buttons on the hand held remote to move the cursor to  and press ENTER.
4. Press the up button to turn the ambient light sensor ON.
5. Press ENTER to return to the main menu.

NOTE

To turn the ambient light sensor OFF repeat steps 1 to 3 and then press the down button.

SLOW START/FADING EMBERS

If the slow start function is being used at start up then the fading embers function will automatically be programmed at shut down.


1. Press the ENTER button until the middle display  flashes.
2. Use the direction buttons on the hand held remote to move the cursor to  and press ENTER.
3. Press the left or right button to select 1, 5, or 10 minutes.

NOTE


When the timer is set to 1, 5, or 10 minutes it determines the length of time over which the embers will fade upon turning the unit OFF.

NOTE

The slow start function timer is automatically programmed for 1 minute. This timer setting cannot be changed.



4. Press the up button to turn the slow start/fading embers function ON.
5. Press ENTER to return to the main menu.
6. Press the flame on/off  button to activate slow start.

NOTE

When turning the unit OFF and the slow start/fading ember function is ON, the slow start/fading ember  indicator will flash.

OCCUPANCY SENSOR




The occupancy sensor function can be programmed to turn the fireplace ON when it detects movement. The occupancy sensor is programmed to turn the fireplace OFF when it doesn't detect movement in 5, 10, or 20 minutes. The occupancy sensor has a range of 10 feet.

1. Press the ENTER button until the middle display  flashes.
2. Use the direction buttons on the hand held remote to move the cursor to  and press ENTER.
3. Press the left or right button to 5, 10, Or 20 minutes.
4. Press the up button to turn the occupancy sensor ON.
5. Press ENTER to return to the main menu.



NOTE

To turn the occupancy sensor OFF repeat steps 1 to 3 and then press the down button.

CHILD LOCK

1. Press the ENTER button until the middle display  flashes.
2. Use the direction buttons on the hand held remote to move the cursor to  and press ENTER.
3. Press and hold the up button for 4 – 5 seconds. The  will flash when the child lock function has been turned ON.
4. To turn the child proof function OFF, hold the down arrow key for 4 – 5 seconds.

PURIFIRE

1. Press the ENTER button until the middle display  flashes.
2. Press the ENTER button on the  purifire function.
3. Press the left of right button to select LOW or HIGH.
4. Press the up button to turn the purifire ON.
5. Press ENTER to return to the main menu.

NOTE

To turn the purifire OFF repeat steps 1 to 3 and then press the down button.