

DRAFT

Disney INFINITY Start Up Guide for Xbox One™ video game and entertainment system.

*****ALL IMAGERY IS PLACEHOLDER/PRELIMINARY*****

DISNEY INFINITY

[2.0]

Xbox One™

WARNING Before playing this game, read the Xbox One™ system, and accessory manuals for important safety and health information. www.xbox.com/support.

Important Health Warning: Photosensitive Seizures

A very small percentage of people may experience a seizure when exposed to certain visual images, including flashing lights or patterns that may appear in video games. Even people with no history of seizures or epilepsy may have an undiagnosed condition that can cause “photosensitive epileptic seizures” while watching video games. Symptoms can include light-headedness, altered vision, eye or face twitching, jerking or shaking of arms or legs, disorientation, confusion, momentary loss of awareness, and loss of consciousness or convulsions that can lead to injury from falling down or striking nearby objects. **Immediately stop playing and consult a doctor if you experience any of these symptoms.** Parents, watch for or ask children about these symptoms—children and teenagers are more likely to experience these seizures. The risk may be reduced by being farther from the screen; using a smaller screen; playing in a well-lit room, and not playing when drowsy or fatigued. If you or any relatives have a history of seizures or epilepsy, consult a doctor before playing.

TABLE OF CONTENTS

QUICK START GUIDE
CONTROLS
SAFETY PRECAUTIONS
CUSTOMER SUPPORT INFORMATION
TROUBLESHOOTING
LIMITED WARRANTY

QUICK START GUIDE

Setting Up the Disney Infinity Base

1 Once removed from the packaging, the Disney Infinity Base (pictured below) needs to be placed on a stable, secure and even surface near the Xbox One console. Do not place on metal surfaces, or have metallic objects nearby.



2 Plug the USB cable from the Disney Infinity Base into an available USB connector on the front of your Xbox One console.

3 Use the power button on the front of the Xbox One console to power ON the system. This will also power up the Disney Infinity Base.

4 Insert the Disney Infinity game software disc into the Xbox One console in order to launch the game.

Using the Disney Infinity Base

When a player enters the game, they will be prompted to place a Disney Infinity Figure on the Base. Be sure the Disney Infinity Figure is placed on one of the two circular spots of the Base.

The Disney Infinity Play Set Piece will need to be placed on the hexagonal spot **C** in order to enter a Play Set. In Toy Box, place one or two Disney Infinity Figures on the circular spots (**A** and/or **B**) to begin your Toy Box adventure.

Using the Disney Infinity Figures and Play Set Piece

Place the Disney Infinity Figure on the circular spots (**A** or **B**) on the Base to unlock the character in the game. The Disney Infinity Figure, along with the Play Set piece placed on the hexagonal spot (**C**), will unlock the corresponding play set in the game.

In Toy Box, place one or two Disney Infinity Figures on the circular spots (**A** and/or **B**) to begin your Toy Box adventure.

Using the Disney Infinity Power Discs

Expand your adventure with the Disney Infinity Power Discs.

In Play Sets, place up to two circular power discs under a Disney Infinity Figure on the **A** and/or **B** spots to power up character abilities.

In Toy Box, place up to two circular power discs under a Disney Infinity Figure on the **A** and/or **B** spots to power up character abilities. You can also unleash new gadgets and customize your Toy Box by placing up to three hexagonal power discs on the **C** spot.

Using the Disney Infinity Webcode Card

Use the Disney Infinity webcode at Disney.com/infinity to unlock new content on the web. Just enter the webcode provided in the Disney Infinity Starter Pack.

CONTROLS

[Controls need to be verified for final manual]

Biped/Wheeled Vehicles

(Character as Vehicle or Character as Driver)/Animal Mount

Action	Control
Jump	A Button
Pick Up/Interact	X Button
Drop Item	B Button
Enter Vehicle	X Button
Exit Vehicle	B Button
Run/Steer	Left Thumbstick
Camera Rotate	Right Thumbstick
Item Select	Right Bumper
Quick Select	Directional Pad
Build Mode	View button
Pause Menu	Menu button

Build Controls

Action	Control
Select/Place Item	A Button
Exit Build Mode	B Button
Delete Selected Item	B Button
Rotate Item	Y Button + Directional Pad Left/Right
Camera Rotate	Right Thumbstick
Pause Menu	Menu button
Item Scroll Left/Right	Left Trigger/Right Trigger
Move Item	Left Thumbstick
Raise/Lower Item	Directional Pad

TROUBLESHOOTING

Disney Infinity Figure is not appearing in-game

Be sure the Base is on a flat surface and the Disney Infinity Figure is placed completely flush with the circular spot with nothing in between the Base and the Disney Infinity Figure (unless a Power Disc is being used). If a Power Disc or Power Discs are being used, be sure no more than two are used in each spot. Do not place Base on metal surfaces, or have metallic objects nearby.

SAFETY PRECAUTIONS

WARNING! CHOKING HAZARD Small parts. Not suitable for children under 3 years. For your safety and the safety of others, please read the following product care information and the game manual before using this product. Keep all game manuals because they contain important information about using and caring for the product.

Product Care

(1) Only use the products with the gaming system for which they are designed. (2) Keep the products dry and away from open flames or other heat sources. (3) Do not modify or take apart the products. (4) Use a dry cloth to clean the products

Questions or issues when setting up your new products? Please refer to the game manual in your Disney Infinity Starter Pack for Customer Support details.

CUSTOMER SUPPORT INFORMATION

Internet Support

To access support for Disney Interactive Studios on the World Wide Web, point your browser to **Disney.com/videogames/support**.

Game Hints and Tips

Game hints and tips are available on our Customer Support website. To access Game Hints and Tips on the World Wide Web, point your browser to **Disney.com/videogames/support**.

Mailing Address

If you wish to write us, our address is: Disney Interactive Studios Customer Support, 1200 Grand Central Avenue, Glendale, CA 91201-8823

Phone Support

1-866-252-8108

International charges may apply.

LIMITED WARRANTY

IN ADDITION TO DISNEY INTERACTIVE'S GENERAL TERMS OF USE GOVERNING ITS PRODUCTS AND SERVICES, INCLUDING DISNEY INFINITY, WHICH IS AVAILABLE AT WWW.DISNEYTERMSOFUSE.COM, DISNEY INTERACTIVE PROVIDES THE FOLLOWING LIMITED WARRANTY.

DISNEY INTERACTIVE WARRANTS THE RECORDING MEDIUM ON WHICH THE SOFTWARE IS RECORDED TO BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP UNDER NORMAL USE FOR A PERIOD OF NINETY (90) DAYS FROM THE DATE OF PURCHASE AS EVIDENCED BY A COPY OF THE SALES RECEIPT OR PACKING SLIP. DISNEY INTERACTIVE'S ENTIRE LIABILITY AND YOUR EXCLUSIVE REMEDY WILL BE REPLACEMENT OF THE DEFECTIVE RECORDING MEDIUM(S) OR REFUND OF THE PURCHASE PRICE (AT DISNEY INTERACTIVE'S ELECTION) UPON RETURN OF THE SOFTWARE TO DISNEY INTERACTIVE WITH A COPY OF YOUR PROOF OF PURCHASE. DISNEY INTERACTIVE WILL HAVE NO RESPONSIBILITY TO REPLACE A RECORDING MEDIUM DAMAGED BY ACCIDENT, ABUSE OR MISAPPLICATION. ANY IMPLIED WARRANTIES AND/OR CONDITIONS ON THE RECORDING MEDIUM, INCLUDING THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO NINETY (90) DAYS FROM THE DATE OF PURCHASE OR DELIVERY. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION. YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF THE SOFTWARE IS AT YOUR SOLE RISK. DISNEY INTERACTIVE EXPRESSLY DISCLAIMS ALL WARRANTIES AND/OR CONDITIONS, EXPRESS OR IMPLIED, WITH RESPECT TO THE SOFTWARE AND RELATED DOCUMENTATION, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. DISNEY INTERACTIVE DOES NOT WARRANT THAT THE FUNCTIONS CONTAINED IN THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE SOFTWARE WILL BE CORRECTED. NO ORAL OR WRITTEN INFORMATION OR ADVICE BY DISNEY INTERACTIVE OR AN AUTHORIZED REPRESENTATIVE OF DISNEY INTERACTIVE SHALL CREATE WARRANTIES AND/OR CONDITIONS OR IN ANY WAY INCREASE THE SCOPE OF THIS LIMITED WARRANTY. YOU (AND NOT DISNEY INTERACTIVE) ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. IF YOU NEED TO REPLACE A GAME DISC UNDER THIS LIMITED WARRANTY OR A USER-DAMAGED GAME DISC, PLEASE FOLLOW THE STEPS LISTED AT DISNEY.COM/INFINITY/HELP. THERE IS A \$20.00 FEE TO REPLACE A USER-DAMAGED GAME DISC.

Model No.: INF-8037059

CE0890

FCC INFORMATION

FCC ID: QOF-8037059

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC INFORMATION

IC: 10749A-8037059

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas causer d'interférences, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Legal

© Disney.

DRAFT