

Tablet PC

Model: DIT-D7005

Contents

1 Safety Precautions	3
2 Overview	5
3 Charging	6
4 Inserting a Memory Card	6
5 Power on / Power off	7
6 Android Home Screen Guides	8
7 Changing Language & Time	9
8 Connecting to Wi-Fi	10
9 Transferring Contents from PC	10
10 Troubleshooting	11
11 Technical Specifications	12
12. CE Mark	13

Notice

The device' pictures, as well as data on the device' appearance, color and design features found in the manual are for reference only. We reserve the right to change the appearance and technical parameters of the product without prior notice.

1 Safety Precautions

- Keep the device away from extreme heat, cold, moisture and dust.
- Do not spill any liquids on the device as it may damage the device or cause a fire.
- Do not use liquids and chemical cleaners for cleaning the device.
- Do not insert any objects into the device, or it may result in short circuit or it might damage the circuit.
- Do not keep the device near magnetic sources, heaters, microwave ovens, heating up kitchen appliances, or in high pressure containers, as it may cause the battery leaking, the device overheating and inflammation.
- Power off the device if you want to install or remove some external devices which do not support hot-plug.
- Do not disassemble the device. Only a certified service technician should perform repairs on your device.
- Use only the AC adapters, power cords and batteries that are approved for use with this device. Use of another type of battery or AC adapter may cause fire or explosion.
- To prevent possible hearing damage, do not listen at high volume levels for long

 


periods.

- The adapter shall be installed near the equipment and shall be easily accessible.
- If an equipment is provided with a replaceable battery, and if replacement by an incorrect type could result in an explosion (for example, with some lithium batteries).

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS

2 Overview

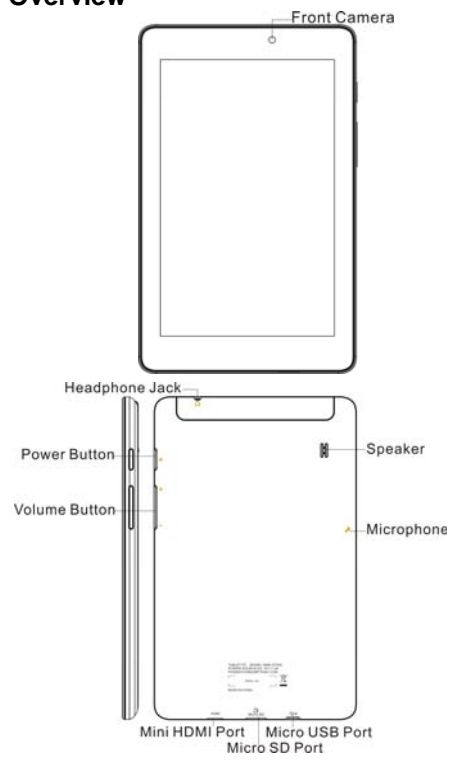

3 Charging

- Plug the DC end of adapter to the power jack or USB port (if there is no power jack) of the device and plug the AC end to the wall socket for charging.
- Normally it takes approximately 5 hours to fully charge the device. Operating the device during charging with the AC adapter may extend the time of full charging.
- The connection to USB interfaces has to be limited to USB 2.0 version or higher. The connection to so called power USB is prohibited.
- Use only the AC adapters, power cords and batteries that are approved for use with this device. Use of another type of battery or AC adapter may cause fire or explosion.

4 Inserting a Memory Card

- The device supports micro SD/SDHC cards.
- To insert a micro SD card, place the card connector towards the front side of the device and the printing side of the card towards the rear side of the device.

- To remove the micro SD card, gently press the edge of the card to release the safety lock and pull the card out of the slot.

Notice

Don't remove the micro SD card while viewing the file inside, or the device could fail to operate correctly.

5 Power on / Power off

 
- 1) To turn on the device, press and hold the **Power** button until you see the start-up screen then release, it will automatically enter the Home screen. **If it is the first time to use it, it will enter set-up guide menu. Please follow the on-screen instructions.**
- 2) Press the **Power** button once to enter sleep mode and press it again to open the device.
- 3) Press and hold the **Power** button, and then tap on **OK** to power off the device.

Notice

If the system halts, press and hold the **Power** button until it is turned off completely.


6 Android Home Screen Guides

 
Web Information
search

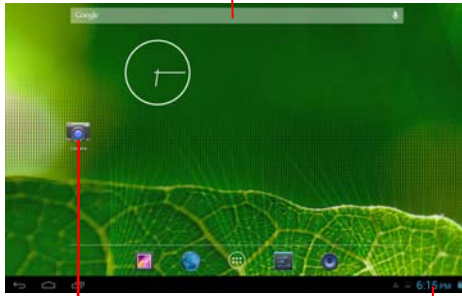



Shortcuts: touch to open;
touch&hold to move.

Status Bar: Drag up
to open quick settings
menu and see more
information.

 tap to enter Home screen.

 tap to return to the previous page.


 tap to open recent APPs list menu.

 tap to enter APPs Menu.

Home Screen

Your Home screen is the starting point to access all of the tablet's features. The Home screen can have multiple panels. To view other panels, slide left or right.


Add an app icon to home screen

On the Home screen, tap  to open APPs list menu, tap and hold an application icon, and then drag it into a panel preview.

Set wallpaper

Tap and hold the blank area on the Home screen. Tap on **Gallery**, **Live Wallpaper** or **Wallpaper** and select one of them, then tap **OK** or **Set wallpaper** to set it as wallpaper.


7 Changing Language & System Time

On the home screen tap  and select **Settings** icon to access the list of options.

- Select **Settings**---**Language & input**---**Language** to change OSD language.


- Select **Settings**---**Date & time** to change system time.

8 Connecting to Wi-Fi

- On the home screen tap  and select **Settings** icon to access the list of options. Select **Wi-Fi**.
- If the **Wi-Fi** is off, tap on the Wi-Fi line to turn it on.
- The device will scan for available Wi-Fi networks and display them on the screen.
- Tap on the network you want to connect to. Then tap on the wireless password field to enter the required network information and tap on **Connect**.
- Your device will now attempt to establish a connection to the Wi-Fi access point with the network parameters you entered.

9 Transferring Contents from PC

- Connect the device to your PC/Notebook via USB cable.
- Select the contents you want to transfer from your PC/Notebook.
- Drag the contents from the PC/Notebook to the device.

- Please do not disconnect the USB cable during loading. It may cause malfunction of the device and files.
- Left click on  to disconnect the device from PC/Notebook safely.

10 Troubleshooting

Q1: What if water enters the device?

A2:

- DO NOT turn on the device.
- Disconnect the outlet cable in order to turn it off instead of pressing the power button. Disconnect all external devices and then send to the service center for advice.

Q2: How to check the device if it won't turn on?

A2:

- If the power is low, connect the adapter to charge.
- Remove the micro-SD card and any other external device.

Q3: How to restore the factory default settings?

A3: Go to **Settings---Backup & reset---Factory data reset** to recover the system to the default status.

Q4: How to prolong the usage time of the battery?

A4:

- Adjust the brightness of the touch screen to proper level on **Settings---Display---Brightness** menu.
- Turn down the volume.
- Set the sleep time to proper level on **Settings---Display---Sleep** menu.

Q5: What to do if the SD card can't be read?

A5: Please turn off the device and re-insert the card.

11 Technical Specifications

Processor	RK3188
RAM (#)	1GB DDR3
Storage capacity(#)	8G MLC
Display	7" TFT Capacitive Multi-touch panel
Resolution	800X1280 pixels
Interfaces	Micro USB, Micro SD, Mini HDMI, 3.5mm Headphone
Descriptions	Front: 2M pixel;
Communications	Wi-Fi (802.11 b/g/n)
Operating Temperature	5-35°C
Operating Humidity	35%-85%

Storage Temperature	-20-55°C
Storage Humidity	20%-93%
Adapter	AC 100~240V; DC 5V/2A
Output Power (maximum)	≤10W
Battery	3800mAh Li-Poly battery
Weight	About 310g
Dimension	191mm x119mm x9.4mm

Notice

The # symbol means that the item is optional.

12. CE Mark

CE 0700

For warranty work, technical support, or information contact:

Diversionary Therapy Technologies Pty. Ltd.

Diversionary Therapy Technologies, Level 11 / 39 Sherwood Road, Toowong,

QUEENSLAND, 4066. AUSTRALIA.

Tel: +61 (0) 738703820 Fax: +61 (0) 738760820

mark@dt.t.net.au

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.