


Product Name: Bluetooth Speaker  
Trade Mark:Divoom

## Nice to meet you!

### Divoom-Mocha – Powerful sound all around.

Divoom-Mocha brings the fine audio and elegancy to the outdoor. Equipped with the 40W DSP-Tuned speakers, it is also capable of sending powerful sound to the 360°direction. Powered by a 10000mAh battery, it offers 25 hours non-stop music play.

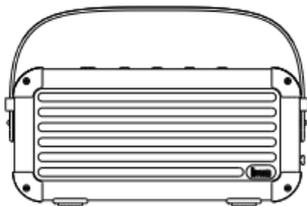

#### What's included?

- Divoom-Mocha
- User manual
- USB Type C
- AUX cable

Thank you for purchasing a Divoom product! Please read this manual carefully. You can also visit [divoom.com](http://divoom.com) to learn more about our other products!

Due to the nature of the technology product, the instructions on this manual are subject to change without prior notice. If you have any questions, please feel free to contact the Divoom customer support.


### Product details

#### TOP

- 1.Power button
2. Volume - button
3. Volume + button
4. Bluetooth button
5. Play button

#### SIDE

- 6.Power indicator light
- 7.AUX port
- 8.USB Type C charging port

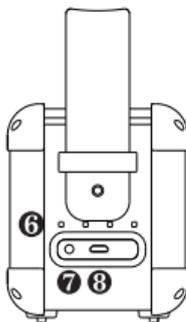


### Button functions

#### TOP


- 1.Power:  
Swipe: ON/OFF
2. Volume -:  
Press:Decrease volume  
Hold:Previous track
3. Volume +:  
Press: Increase volume  
Hold: Next track
4. Bluetooth:  
Press:Enter/Exit TWS pairing mode  
Hold:Disconnect Bluetooth
5. Play:  
Press:Play/Pause/Answer/End call  
Hold: Reject call / Reset speaker (8 seconds)

## English

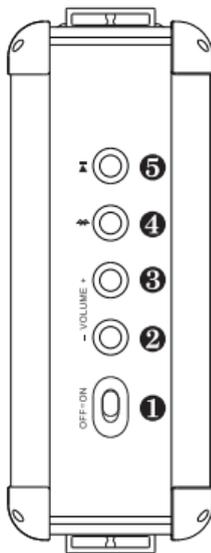

## How to connect in Bluetooth?


1. Power on the speaker.
2. In the phone's Settings, please turn on the Bluetooth.
3. Search and connect with the 'Divoom Mocha'.
4. Once paired, you can start to play music.

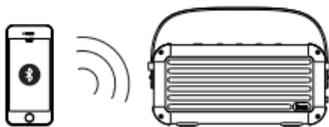

## How to setup TwS stereo mode with another Divoom speaker?

1. Power on one of the Divoom Mocha
2. Press the Bluetooth button to enter the TwS stereo pairing mode
3. Power on the other Divoom speaker (make sure not connected with phone)
4. The two speakers will paired together automatically
5. Search and connect with the Divoom Mocha

- \* TwS function is only available on selected Divoom speakers.
- \* TwS function is only available under Bluetooth mode.
- \* While the first speaker is in the TwS pairing mode, please make sure the other speaker is not connected with a phone.

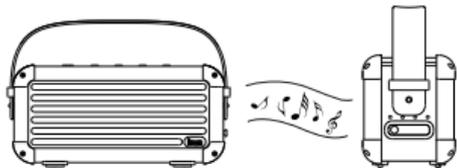

## How to attach/detach the leather strap?

1. Insert one of the leather strap head into the speaker side handle.
2. Line up and push the leather strap into the speaker side molding.
3. Repeat the same steps for the other end of the leather strap.

- \* To detach, please reverse the above steps.

## How to play music via AUX mode?

1. Insert the AUX cable between the speaker and music player.
2. Press play/pause to play music.

- \* The skip/previous track button functions are not supported.


## More set up information

### How to charge the Mocha?

1. Insert the USB cable into the side of the speaker.  
You can continue to listen to music while charging.
2. The charging time may vary by the type of USB charger.  
We recommend using the 9V/2.0A charger for optimal charging time.

### How to make call with hands-free mode?

1. Press the play button to pick up an incoming call, and press the play button to end call.
2. Hold the play button to reject the incoming call.

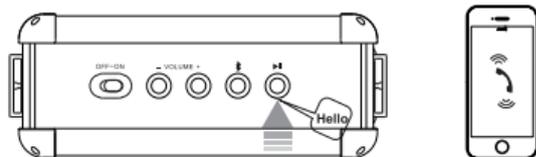

## Product specification

Dimension (mm): 216.5L x 82W x 98.5H  
Weight: 1293.5g  
Speaker size: 55mm  
Output power: 40W  
Frequency response: 20-20KHz  
Signal-to-noise ratio:  $\geq 80$ dB  
Playback time: up to 25hrs  
Battery capacity: 5000mAh  
Battery voltage: 7.4V  
Wireless range: up to 10 meters/33 feet  
Bluetooth compliant: V5.0

## Safety guide

### Please read the following instructions carefully:

- Please follow our product installation and operation instructions.
- Always place the speaker on a smooth and stable surface.
- Please place the speaker on an open area for the best sound quality.  
Do not block the surroundings of the speaker.
- Do not push any objects into speaker vents or slots.  
Do not apply any great force on the speaker.
- Please keep the speaker in a room temperature environment.  
Do not place the speaker near any heat sources (such as radiators, heat registers, stoves, fire place, or direct sunlight). Do not place the speaker near any open flame source.
- Do not attempt to service the speaker by yourself. Always refer to the instructions by qualified service personnel.
- To avoid the risk of electrical hazard, do not expose this speaker to wet surface.

## DECLARATION OF CONFORMITY:



This device meets the essential requirements of the following Directive 2014/53/EU of the European parliament of the council of 16 April 2014.



The waste container symbol with the X through it on the device indicates that the device must be disposed of separately from normal domestic waste at an appropriate waste disposal facility at the end of its useful service life.

## Limited Warranty

1. If within 12 months of purchase this device or any part thereof is proven to be defective by reason of faulty workmanship or defects in materials, we will at our option repair or replace the same free of charge of labor or materials on condition that:
2. The original invoice or sales receipt with the date of purchase, or stamp from the dealer is presented together with the defective unit.
3. The warranty does not cover product failures which have been caused by use of accessories other peripheral devices which are not DIVOOM branded original accessories intended for use with the product.
4. The warranty does not cover product failures caused by:  
Modification, repaired, and disassembled by any person who is not authorized by the manufacturer. Any defective unit or part shall become property of the manufacturer. The warranty does not cover any damage caused by misuse, drop, hit or neglect.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are redesigned to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

**RF warning statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Product name: Bluetooth Speaker

Product model: MOCHA

Manufacturer: Shenzhen Divoom Technology Co.,LTD.

Frequency Range: 2.4GHZ-2.48GHZ,

Max. Transmit Power: BT5.0 : 2.067 dBm Max (BDR+EDR)

**SIMPLIFIED EU DECLARATION OF CONFORMITY**

The simplified EU declaration of conformity referred to in Article 10(9) shall be provided as follows:

Hereby, Shenzhen Divoom Technology Co.,LTD. declares that radio equipment type MOCHA is in compliance with Directive 2014/53/EU, and this product is allowed to be used in all EU member states.

The full text of the EU declaration of conformity is available at following company website:<http://www.divoom.com>

This product can be used across EU member states.

**BATTERY Warning: CAUTION:RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS**

EUT Operating temperature: -10~40 C

The Product shall only be connected to a USB interface of version USB 3.0

Casa Innovations Inc  
address:155 Bay Ridge Ave, Brooklyn, NY

11220  
phone: 718-812-6678  
Contact:Aron Abramson  
mail: [aron@casa-innovations.com](mailto:aron@casa-innovations.com)