

## NICE TO MEET YOU!

I'm Timoo, your most adorable pixel art speaker from Divoom.

I have 256 programmable LED and a DSP-tuned speaker, and I can be set with custom settings through my mobile application – Divoom Smart. Together, we will explore all the world of music and pixel art.

### What's included?

- Timoo
- User manual
- Micro USB charging cable




Thank you for purchasing a Divoom product! Due to the nature of the technology product, the information on this manual is subject to change without prior notice. If you have any questions, please contact the Divoom customer support.

### Product details

1. Rotate : Change menu functions  
Press : Select function/Changing Channels  
Hold : Adjust brightness/Exit manual alarm
2. Rotate : Adjust volume  
Press : Play/pause music playAnswerend call  
Hold : Record voice message Reject incoming call

3. Press : Exit menu/manual alarm
4. Microphone port
5. Press : Check battery level  
Hold : Power ON/OFF  
Double click : Disconnect Bluetooth connection
7. TF card slot
8. Charging indicator

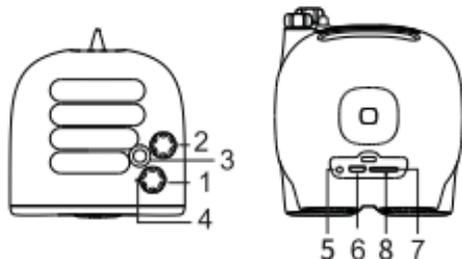

### **How to operate Timoo on-screen menu:**

1. Press MENU button to activate menu system, press MENU button to exit.
2. Rotate between AUDIO / GAME / ALARM / TOOLS
3. Press LIGHTING Button the confirm selection

### **In AUDIO, rotate between: Bluetooth/SD**

1. Press LIGHTING Button to confirm selection

### **In GAME, rotate between Tetris/Slot machine/Dice/Flap Bird/Anipop / Pixel racing**

1. Press lighting button to confirm selection

\* New game will be available through software updates

- a. Tetris: rotate lighting button to move left/right, press LIGHTING button to rotate, and press volume button to free fall.
- b. Slot machine: press lighting button to start the play.
- c. Dice:press lighting button to start the play.
- d. Flap Bird: press lighting button to fly up
- e. Anipop: rotate lighting button to move left/right, press LIGHTING button to match block
- f. Pixel racing: rotate lighting button to move left/right

**In ALARM, rotate to adjust alarm time, press LIGHTING button to confirm**

1. Press MENU button to delete and exit the manual alarm

\*Manual alarm is an one time only alarm. If you need a repeating alarm, please use the APP.

**In TOOLS, rotate between Scoreboard/Stopwatch/Noise Meter/Timer**

1.Press lighting button to confirm selection

a.Scoreboard: rotate lighting button to adjust score, and press lighting button to change team

b.Stopwatch: press lighting button to start, press again to pause/resume. Rotate to startover

c.Noise meter: Start automatically

d.Timer: rotate lighting button to adjust timer, press lighting button to start. Press lighting button to mute alarm

## How to connect?

How to connect with the mobile application?

### Download mobile application

Search 'Divoom Smart' application for both iOS and Android systems.

- \* Please grant all privilege requests prompted by the APP.
- \* Please note: iOS and Android connecting procedures are different



### • For Apple iOS system

1. Search and connect the 'Timoo-audio' in Bluetooth settings
2. In the Divoom Smart APP, search and connect with the 'Timoo-light'.


- **For Android System**

1. In the Divoom Smart APP, search and connect the 'Timoo-light' and 'Timoo-audio'.
2. If there's no audio, please make sure 'Timoo-audio' is connected in Bluetooth settings.



## How to record a voice memo (up to 60 seconds)?


1. Hold the volume button to start recording a voice memo
2. Press volume button end the recording, press again to play the voice memo
3. The message will be erased after being played.

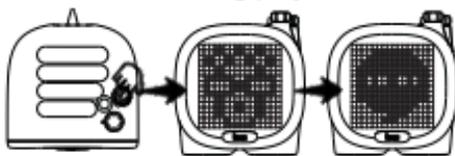

## How to setup a manual alarm?

1. Hold the menu button to activate manual alarm
2. Rotate the button to adjust time, press the button to confirm alarm settings.
3. If you need to disable or delete alarm, just press the menu button and exit.

\* Only one manual alarm available for the device. For more, please access the mobile App.

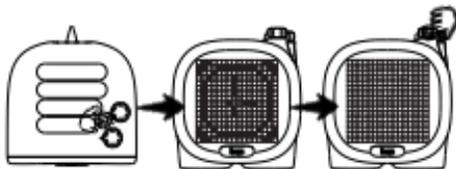

## How to play the TF card audio?

1. Insert the TF card into the TF card slot.
2. Press the menu button, and select TF card. Use volume and play buttons to play music.
3. For the TF card, the supported file format is .mp3, and the recommend capacity is 32GB.



## How to charge?

1. Lift the rear flap, and insert the Micro USB cable into the speaker.
2. Press the power button if you want to check the battery percentage.
3. When charging, the indicator light will lit. Upon 100% charged, the indicator will turn off.
4. For the optimal charging time, please use a 5V-2A charger.



## PRODUCT SPECIFICATION

Dimension (mm) : 82.5x90x86mm  
Weight : 282g  
Speaker size : 45mm  
Output power : 6W  
Frequency response : 20Hz-20KHz  
Signal-to-noise ratio :  $\geq 72$

Playback time : up to 6hrs  
Battery capacity : 2500mAh  
Battery voltage : 3.6v  
Battery charge time : 3 hours  
Charge : 5V-2A  
Wireless range : 10M/33ft  
Bluetooth compliant : 5.0

## **SAFETY GUIDE**

**Please read the following instructions careful:**

- Please follow our product installation and operation instructions.
- Always place the speaker on a smooth and stable surface.
- Please place the speaker on an open area for the best sound quality. Do not block the surroundings of the speaker.
- Do not push any objects into speaker vents or slots. Do not apply any great force on the speaker.
- Please keep the speaker at a room temperature environment. Do not place the speaker near any heat sources (such as radiators, heat registers, stoves, fire place, or direct sunlight). Do not place the speaker near any open flame source.
- Do not attempt to service the speaker by yourself. Always refer to the instructions by qualified service personnel.
- To avoid the risk of electrical hazard, do not expose this speaker to wet surface.

## **DECLARATION OF CONFORMITY:**

 This device meets the essential requirements of the following Directive 2014/53/EU of the European parliament of the council of 16 April 2014.



The waste container symbol with the X through it on the device indicates that the device must be disposed of separately from normal domestic waste at an appropriate waste disposal facility at the end of its useful service life.

## Limited Warranty

1. If within 12 months of purchase this device or any part thereof is proven to be defective by reason of faulty workmanship or defects in materials, we will at our option repair or replace the same free of charge of labor or materials on condition that the original invoice or sales receipt with the date of purchase, or stamp from the dealer is presented together with the defective unit.
2. The warranty does not cover product failures which have been caused by use of accessories other peripheral devices which are not DIVOOM branded original accessories intended for use with the product.
3. The warranty does not cover product failures caused by: Modification, repaired, and disassembled by any person who is not authorized by the manufacturer. Any defective unit or part shall become property of the manufacturer. The warranty does not cover any damage caused by misuse, drop, hit or neglect.

**This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:**

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation. changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help

**RF warning statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Casa Innovations Inc  
address: 155 Bay Ridge Ave, Brooklyn, NY 11220  
phone: 718-812-6676  
Contact: Aron Abramson  
mail: aron@casa-innovations.com