

SE-0105 DOOR CHIME SECURITY SET

PRODUCT INCLUDES:

- Main Unit (Receiver) 1 pc
- Door Chime Unit (Transmitter) 1 pc
- Screw 3 pcs

SETTING THE CODE:

- Four dipswitches are located inside of the battery compartment. Open the battery cover, take out the decoration piece, then slide the 4 dipswitches in accordance to Main and Door Chime unit
- Use the four dipswitches inside of the Main unit and Door chime unit to set an ID code for the two units.
- The Door Chime unit can be extended to 8 different transmitters

OPERATION:

- Install one 9V battery (not included) into the Main unit, or plug in the AC adaptor (output DC9V/300mA, not included).
- Install 2 x AAA batteries (not included) into the Door Chime unit
- Switch the Main unit to LOW or HIGH to activate the system. LOW/HIGH indicates the alarm's volume
- Press the Door Chime unit. If the red LED light flashes and a tone sounds from the Main unit, the ID code has been set successfully.
- Press the small black button inside the Door Chime unit to change its tone. You'll hear a demo tone to verify the sound is the one you decided upon.

NOTES:

- Make sure the Main unit is OFF before installing batteries or plugging in the AC adaptor.
- Always press the black button after the tone stops. The Main unit will ignore the tone changes if you press the button when the unit sounds.

DISCLAIMER:

All Doberman Security items are strenuously tested by our experienced R&D teams. Doberman, however, does not guarantee that this item will prevent all theft and/or attacks from occurring. This item is only meant to act as an alarm and alert the user of an entry opening inside your home.

LIMITED WARRANTY:

Doberman Security Products, Inc. warrants to the original purchaser of the Door Chime Security Set that all components will be free of any defects in materials and labor for one year from the date of purchase.

This limited warranty does not cover defects created by improper usage, or units that have been purposefully or accidentally disassembled; and does not cover parts that become defective due to mishandling.

The warranty is limited to repair or replacement of the original unit.

This limited warranty is made only to the original purchaser of the Door Chime Security Set.

There are no warranties which extend beyond the description on the face hereof.

©2005, Doberman Security Products, Inc.

700 Flower Street, Suite #1100

Los Angeles, CA 90017

Email: customerservice@dobermanproducts.com

Internet: www.dobermanproducts.com



When an entryway, protected by the Wireless Window Sensor (SE-0107) is opened, the sensor will wirelessly alert Doberman's Door Chime Security Set's Main Unit (SE-0105) to either sound an alarm or door chime sound. 15+ Wireless Window Sensors can work in combination with the same Door Chime Security Set Main Unit enabling you to protect all entryways to your home.

Warning:

Changes or modifications are not expressly approved by the manufacturer could void the user's authority to operate the equipment. Changes or modifications to the device may void FCC and CE compliance. Infrequently used radio links should be tested regularly to protect against undetected interference or fault.