

SE-0107 WIRELESS WINDOW SENSOR

FEATURES:

- The additional Wireless Window Sensor will work in tandem with our Doberman Door Chime Security Set's Main Unit (SE-0105).
- 3 selectable tones available (alarm, chime & bell sound).

PRODUCT INCLUDES:

- Wireless Window Sensor Transmitter 1pc
- Magnet Sensor..... 1pc
- 12V alkaline battery.....1pc



HOW TO SET YOUR ID CODES:

- Use the 4 dipswitches inside of the Wireless Window Sensor to set your ID code.
- Open the battery cover and slide the 4 dipswitches in accordance with the Main Unit of Doberman Door Chime Security Set (SE-0105) (see drawing)

BATTERY INSTALLATION:

Install 1 x 12V battery (included) into the Wireless Window Sensor.

INSTALLATION & OPERATION:

- Attach the Wireless Window Sensor and Magnet to the door or window using the double-sided foam tape (included).
- Affix the Magnet as close possible to the Wireless Window Sensor.
- Keep the "▷" marking on the Magnet aligned with the "▷" marking on the Wireless Window Sensor.
- For best performance, please keep the distance between the Magnet and the Wireless Window Sensor no wider than 0.5 inches.
- Switch the SE-0105 Main unit to LOW or HIGH to activate the system. LOW/HIGH indicates the chime/alarm sound's volume.
- Switch the Wireless Window Sensor to ON. If the red LED light flashes and a tone is heard from the SE-0105 Main unit, the ID code has been set successfully.
- Slide the tone switch inside the Wireless Window Sensor to change its tone. (see drawing) You will hear a demo tone to verify the sound is the one you selected.

NOTES:

- Make sure the Main unit is "OFF" before installing batteries or plugging in the AC adaptor (not included).
- Always slide the tone switch only after the tone stops. The Main unit will ignore the tone changes if you press the button when the unit sounds.

DISCLAIMER:

All Doberman Security items are strenuously tested by our experienced R&D teams. Doberman, however, does not guarantee that this item will prevent all theft and/or attacks from occurring. This item is only meant to act as an alarm and alert the user of an entry opening inside your home.

LIMITED WARRANTY:

Doberman Security Products, Inc. warrants to the original purchaser of the Wireless Window Sensor that all components will be free of any defects in materials and labor for one year from the date of purchase.

This limited warranty does not cover defects created by improper usage, or unites that have been purposefully or accidentally disassembles; and does not cover parts that become defective due to mishandling.

The warranty is limited to repair or replacement of the original unit.

This limited warranty is made only to the original purchaser of the Wireless Window Sensor.

There are no warranties which extend beyond the description on the face hereof.

©2005, Doberman Security Products, Inc.

700 Flower Street, Suite #1100

Los Angeles, CA 90017

Email: customerservice@dobermanproducts.com

Internet: www.dobermanproducts.com



When an entryway, protected by the Wireless Window Sensor (SE-0107) is opened, the sensor will wirelessly alert Doberman's Door Chime Security Set's Main Unit (SE-0105) to either sound an alarm or door chime sound. 15+ Wireless Window Sensors can work in combination with the same Door Chime Security Set Main Unit enabling you to protect all entryways to your home.

Warning:

Changes or modifications are not expressly approved by the manufacturer could void the user's authority to operate the equipment. Changes or modifications to the device may void FCC and CE compliance. Infrequently used radio links should be tested regularly to protect against undetected interference or fault.