

# SE-0119 WIRELESS DOOR ALARM W/REMOTE

Magnetically Triggered Door Alarm And Remote Control

## PACKAGE INCLUDES:

- Main Unit ... 1PC
- Magnetic Sensor ... 1PC
- Remote Control ... 1PC

## INSTALLATION:

- Simply peel and stick the alarm to the door or any other place you wish to protect.
- For best performance, keep the distance between the Main Unit and Magnetic Sensor no larger than half an inch.
- The Magnetic Sensor can be installed on either side of the Main Unit. (see drawing below)

## BATTERY INSTALLATION/ REPLACEMENT:

### Main Unit :


- Set the switch to OFF and slide down the battery cover.
- Follow the polarity instructions to insert 3 AAA Alkaline batteries (not included).
- The red LED light will flash once if the batteries are installed correctly.
- Put the battery cover back on.

### Remote Control :


- Unscrew the back cover to insert or replace 1 fresh CR2032 battery. Follow the polarity instructions.
- Press any button on the remote Control. The red LED will light if the battery is installed correctly.

## OPERATION:

### Remote Mode :

- Make sure the Magnetic Sensors are aligned and batteries are installed correctly.
- After installing the batteries, slide the switch to , and the red LED will flash once.
- Slide down the battery cover and press the small button beside the battery compartment once. A beep will sound, and the red LED will flash for 5 seconds. The Main Unit is now waiting for the Remote Control to learn the code.
- Press any button on the Remote Control and you'll hear a Bi-Bi sound. This indicates the code has been learned successfully.
- Press the ON button on the Remote Control, a Beep will sound, and the Main Unit will be armed in three seconds. The red LED will flash three times.
- Press the OFF button on the Remote Control, a Bi-Bi will sound, accompanied by a flashing red LED. The device is now disarmed.
- Under ARM status, once the door is opened, the alarm will go off continuously for 30 seconds.
- Turn off the alarm by pressing the OFF button on the Remote Control or slide the switch to OFF on the Main Unit.

### Manual Mode :

- Make sure the Magnetic Sensors are aligned and that the batteries are installed correctly.
- Slide the switch to , and the Main Unit will be armed in three seconds and the red LED will flash three times.
- Once the door is opened, the alarm will go off continuously for 30 seconds.
- Turn off the alarm by sliding the switch to OFF.

## NOTES:

- The Magnetic Sensor can be installed on either side of the Main Unit, to allow for doors that open from the left or the right.
- Please replace with new batteries if the red LED on the Main Unit flashes at 10 second intervals, or the Remote Control range becomes obviously shorter.

## WARNING:

The high pitched alarm sound may injure hearing if in close proximity to the ears. This alarm contains small parts and is not suitable for children.

## DISCLAIMER:

All Doberman Security items are strenuously tested by our experienced R&D teams. Doberman, however, does not guarantee that this item will prevent all theft and/or attacks from occurring. This item is only meant to act as an alarm in emergency situations.

## LIMITED WARRANTY COVERAGE:

If your product does not work properly because of a defect in materials or workmanship, Doberman will, for the length of the period as follows, which starts with the date of original purchase ("warranty period"), replace it with a new or a refurbished product.

Product	Parts	Services
All Doberman Brand Products	Ninety (90) Days	Mail-in

During the parts warranty period, there will be no charge for Parts. You must first email acquiring a RMA number, and then mail-in your product during the warranty period. This warranty only applies to products purchased and serviced in U.S.A./CANADA

The warranty is extended only to the original purchaser of a new product, which was not sold "as is". A purchase receipt or other proof of the original purchase is required for warranty service.

For assistance in U.S.A./CANADA, please visit our Website at: <http://www.dobermanproducts.com> or, send your request by E-Mail to: [sales@dobermanproducts.com](mailto:sales@dobermanproducts.com)

#### **LIMITED WARRANTY LIMITS AND EXCLUSIONS:**

The Warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by Doberman, or failures which result from accidents, misuse, abuse, neglect, mishandling, misapplication, alteration, faulty installation, set-up adjustments, miss-adjustment of consumer controls, improper maintenance, power line surge, lighting damage, modification, rental use of the product, serviced by anyone other than a factory service center or other unauthorized service, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE". DOBERMAN IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING WITHOUT LIMITATION, LOSS OF GOODWILL, PROFITS OR REVENUE, LOSS OF USE OF THIS PRODUCT OR ANY ASSOCIATED EQUIPMENT, COST OF SUBSTITUTE EQUIPMENT, DOWNTIME COSTS, OR CLAIMS OF ANY PARTY DEALING WITH BUYER FOR SUCH DAMAGES.

(As examples, this excludes damages for lost time, cost of having someone remove or re-install an installed unit if applicable, travel to and from the service provider. The items listed are not exclusive, but are for illustration only.)

ALL EXPRESSED AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states and/or provinces do not allow the exclusions or limitations of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have others rights which vary from state to state and from province to province. If a problem with this product develops during or after the warranty period, you may contact your dealer or service center. If the problem is not handled to your satisfaction, then write to Doberman's Customer Services Department

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.

©2010, Doberman Security Products, Inc.  
3002 Dow Avenue, Suite #408  
Tustin, CA 92780 USA  
Email: [customerservice@dobermanproducts.com](mailto:customerservice@dobermanproducts.com)  
Internet: [www.dobermanproducts.com](http://www.dobermanproducts.com)



#### **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

(Example - use only shielded interface cables when connecting to computer or peripheral devices).