


Cub Cadet

Parts Manual

SERIES 1000

Hydrostatic Lawn Tractor

 Models LT1024

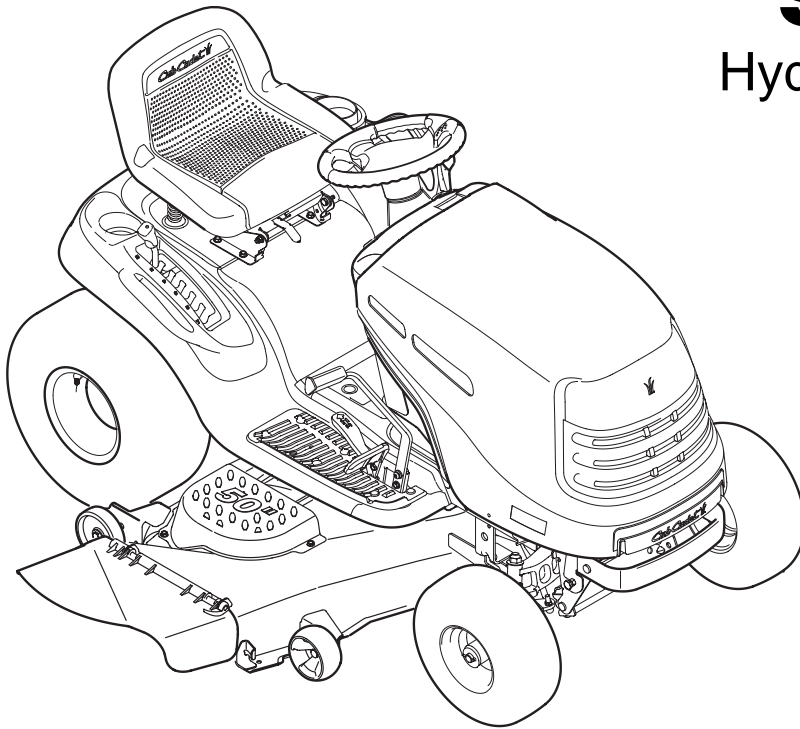

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

PRINTED IN U.S.A.

FORM NO. 769-01022.

1/16/04

MODEL LT1024


TABLE OF CONTENTS

DESCRIPTION	PAGE	DESCRIPTION	PAGE
Axle, Front	6	Fender	10
Battery	16	Frame	8
Brake Pedal	12	Fuel Tank	10
Head Lamp	18	Grille	18
Mower Deck, 50-inch.....	21	Hood	18
Pedal Controls	12	Deck Lift Handle/Linkage	11
Dash Panel	16	Muffler	15
Drive System	4	PTO Clutch	20
Electrical Sysytem	19	Seat	14
Engines	23	Steering	6
Engine Accessories	15	Wheels, Front & Rear	3

NOTE, For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part, numbered 700-xxxx, is painted Cub Yellow, the part number to order would be 700-xxxx-0716.


Cub Yellow: 0716
Cub Beige: 0499
Powder Black: 0637

 WHEELS

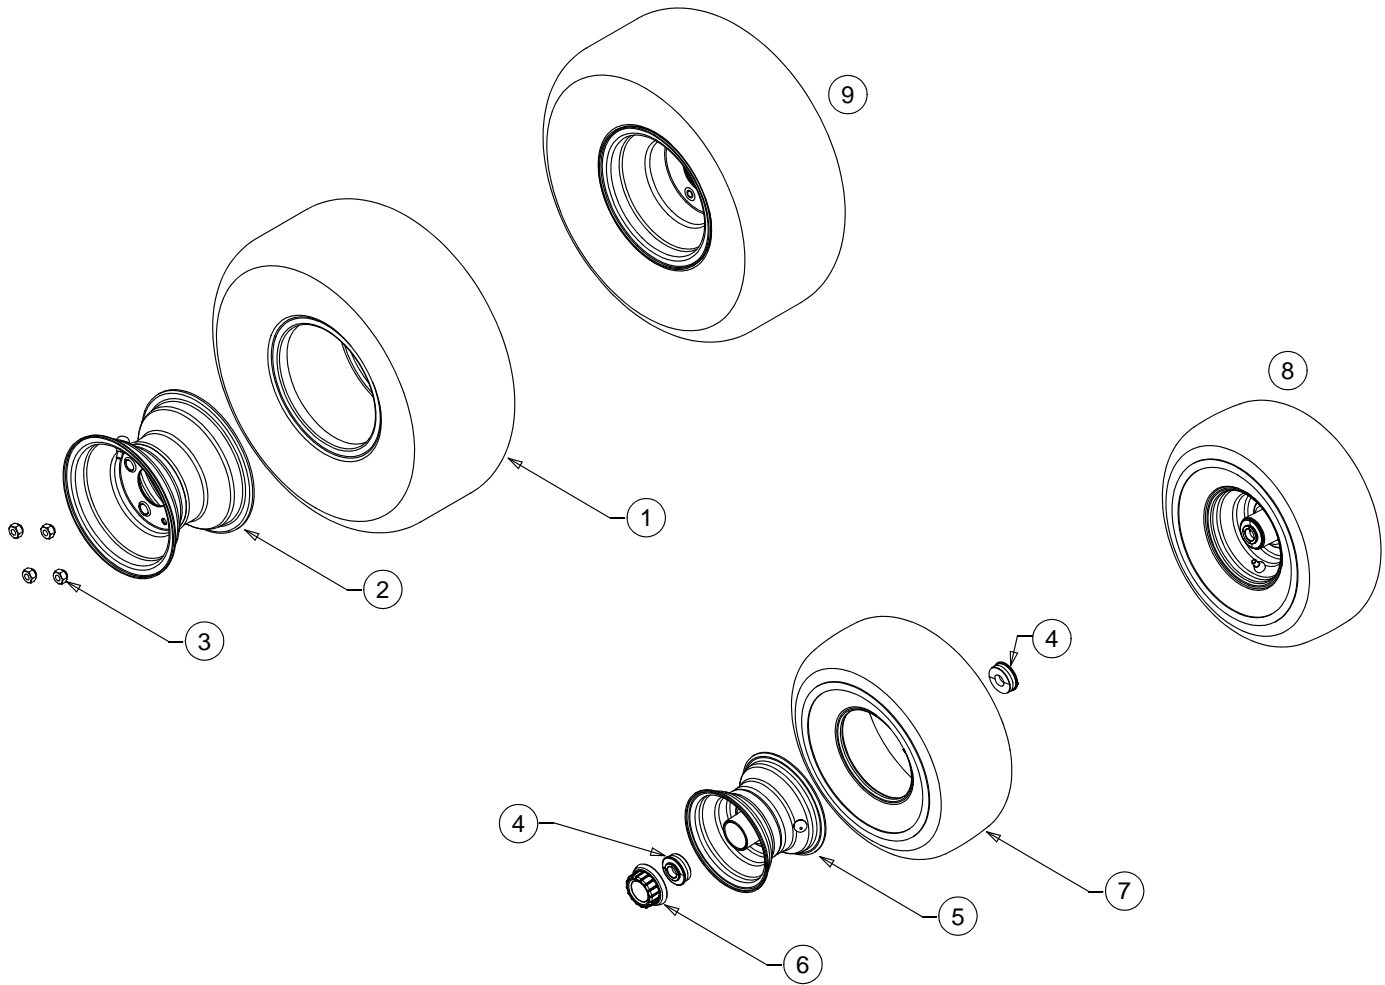

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	734-3189	Tire, Turf, <i>Cub Cadet</i> 20 x 9 x 8	2
2	634-0246A	Rim Assembly, 8.0 x 6.19 (4-Lug)	2
3	712-3050	Lug Nut, 7/16-14	8
4	741-3032	Bearing, Ball, .75 ID x 1.75 OD	4
5	634-04104	Rim Assembly, 6 x 4.5 (Included, Bearings, Spacer and Valve)	2
6	731-3020	Hub Cap	2
7	734-3186	Tire, Turf, <i>Cub Cadet</i> 15 x 6 x 6	2
8	634-04094	Wheel Assembly, <i>Cub Cadet</i> 15 x 6 x 6 (Includes Rim Ass'y, Tire and Fitting)	2
9	634-0245A	Wheel Assembly, <i>Cub Cadet</i> 20 x 9 x 8 (Includes Rim Ass'y, Tire and Valve)	2
—	737-0224	Gease Fitting	2
—	734-0255	Valve, Tubeless Air	4

 
DRIVE SYSTEM

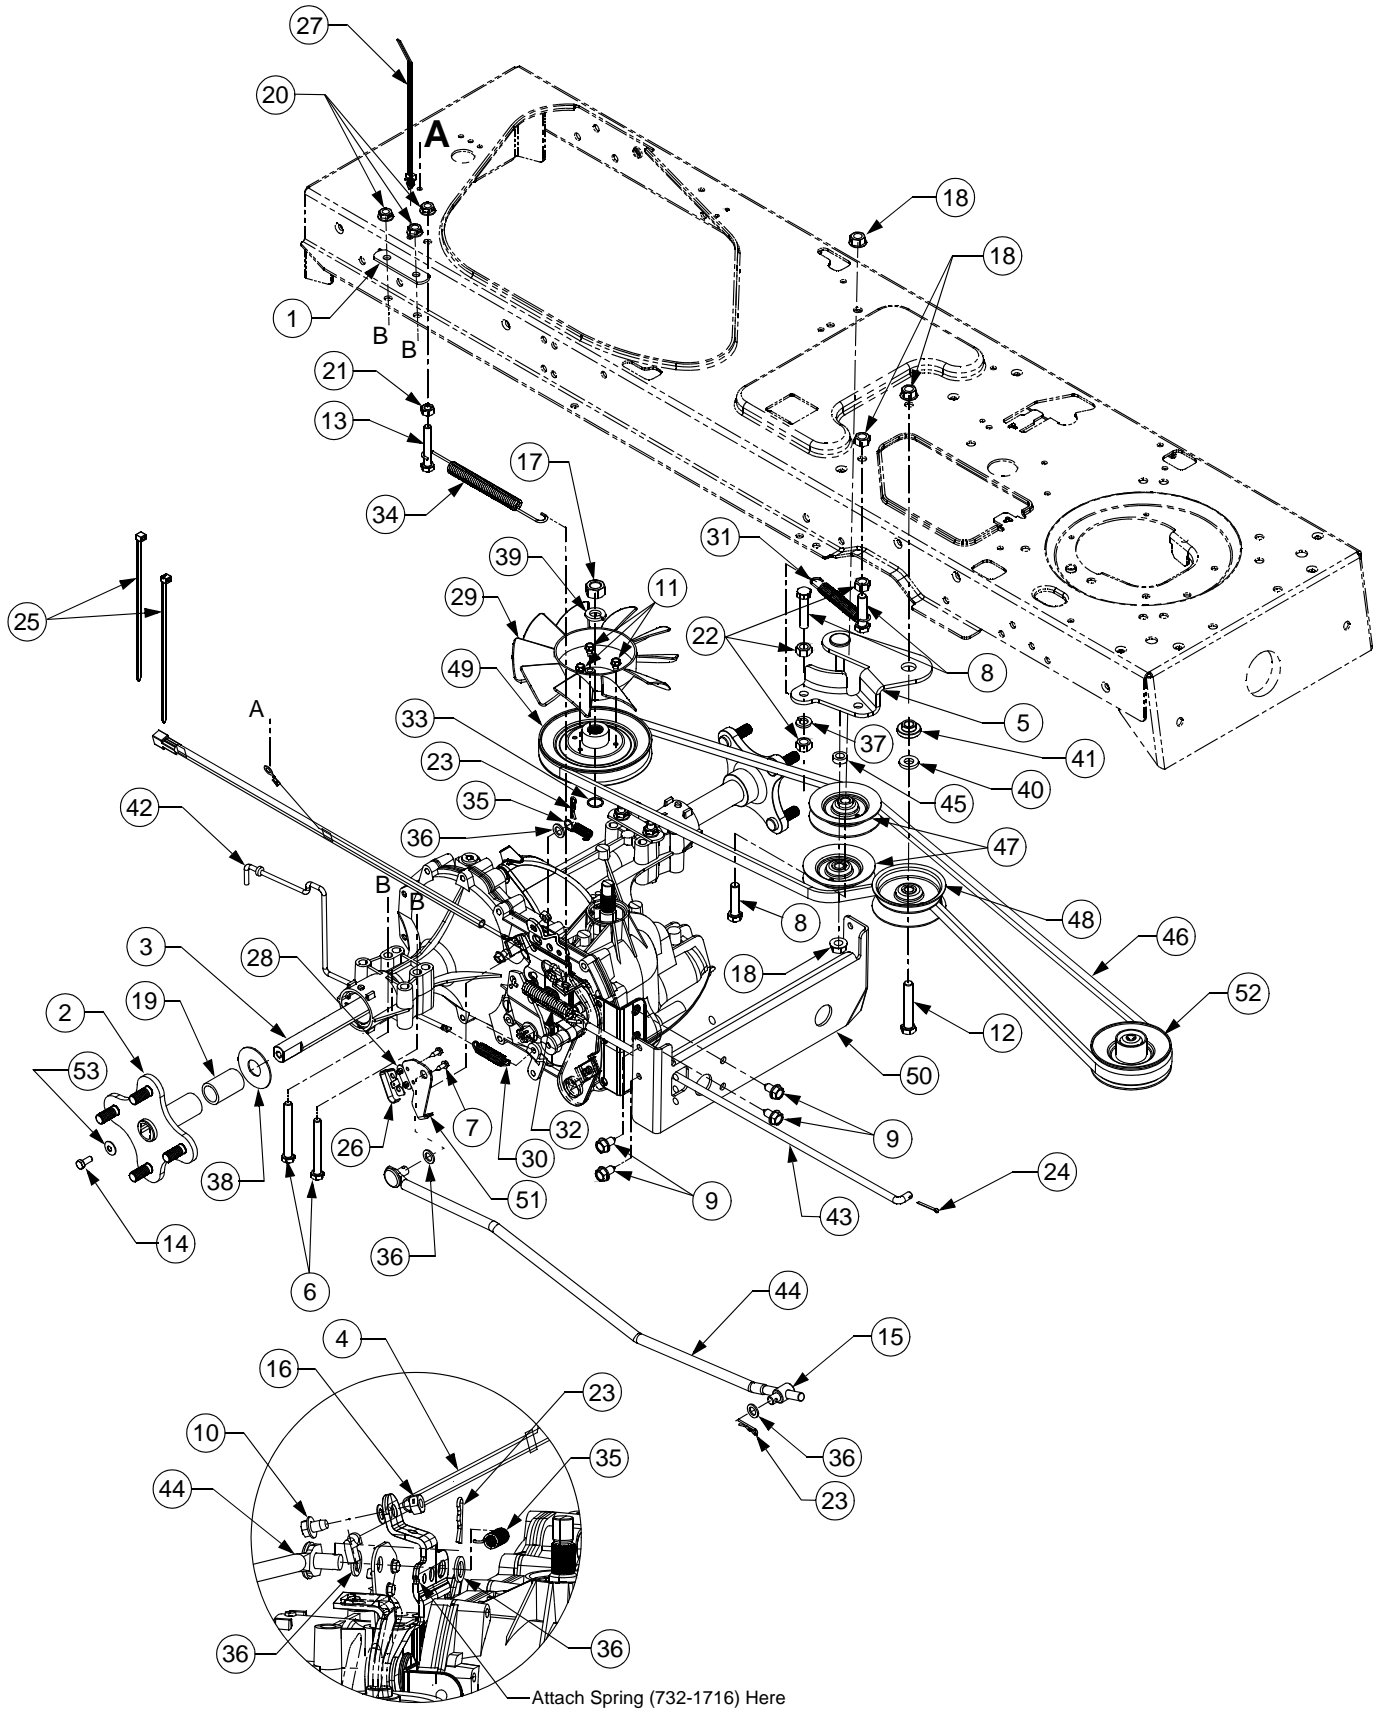

DRIVE SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	17840	Bracket, Mounting, Transaxle	2
2	618-04154	Hub Assembly, Wheel	2
3	618-0319	Transmission, Hydrostatic	1
4	629-0949A	Harness Assembly, Ground & Reverse	1
5	783-04442	Bracket Assembly, Idler, Center Dbl	1
6	710-1266	Hex Cap Screw, 5/16-18,3.5, Gr5	4
7	710-0227	Screw, #8-18, 0.500	2
8	710-0344	Hex Cap Screw, 3/8-16, 1.50, Gr5	3
9	710-0726	Screw, 5/16-12, 0.75	6
10	710-0599	Screw, 1/4-20, 0.5	1
11	710-3007	Screw, #12-24, 0.375	3
12	710-3011	Hex Cap Screw, 3/8-16, 2.25, Gr5	1
13	710-3103	Hex Cap Screw, 5/16-18, 2.00, Gr5	1
14	710-0627	Hex Cap Screw, 5/16-24 x .750	2
15	711-0832	Ferrule, 3/8-24 x .375 Dia	1
16	712-0291	Nut, Hex Lock, 1/4-20	1
17	712-0333	Nut, Hex, 1/2-20, Gr2	1
18	712-0130	Nut, Nylon Lock, 3/8-16	4
19	731-04675	Sleeve, 1.5"	2
20	712-0429	Nut, Nylon Lock, 5/16-18, Gr5	5
21	712-3010	Nut, Hex, 5/16-18, Gr5	1
22	712-3017	Nut, Hex, 3/8-16, Gr8	3
23	714-0104	Pin, Cotter, .072 Dia. x 1.13 Lg	2
24	714-0111	Pin, Cotter, 3/32, 1.0	1
25	725-0157	Cable, Tie, 3/16 x .05 x 7.4	2
26	725-1644	Switch, Spring, Short	1
27	726-0154	Tie, Cable, Push Mount 7.5 Lg	1
28	726-0320	Plate, Insulator Nut	1
29	731-1449A	Fan, Blade, 10"	1
30	732-0209	Spring, .48 OD x 2.03 Extension	1
31	732-0429A	Spring, Extension, .50 Dia x 3.97 Lg	1
32	732-0716	Spring, Extension, .59 OD x 4.00 Lg	1
33	732-0729	Ring, Wire	1
34	732-0994	Spring, Extension, .500 Dia x 7.0 Lg	1
35	732-3118	Spring, Extension, 3/8 OD x 1.44 Lg	1
36	736-0140	Washer, Flat, .385 x .62 x .063	3
37	736-0169	Washer, Lock, 3/8 , Regular Duty	1
38	736-0866	Washer, Flat, .755 x 1.92 x .060	2
39	736-0921	Washer, Lock, 1/2 , Regular Duty	1
40	736-3010	Washer, Flat, .407 x .812 x .135 Hdn	1
41	738-0372B	Spacer, Shoulder, 1.00 x .38 x .38	1
42	747-1149	Rod, Hydro Bypass	1
43	747-1150	Rod, Brake, Hydro	1
44	747-1151	Rod, Control, Hydro	1
45	750-0535	Spacer, .376 ID x .625 OD x .22	1
46	754-0640	Belt, V Type, Poly (Use w/ 756-1166)	1
	754-0461	Belt, V Type, Poly (Use w/ 756-04111)	1
47	756-0116	Pulley, Idler, V Type x 3.06 Dia	2
48	756-0981A	Pulley, Idler, Flat 2.75 OD	1
49	756-1166	Pulley, Input, 5.0 Dia	1
	756-04111	Pulley, Engine, 4.11Dia.	1
50	783-0810	Bracket, Transmission, Torque Hydro	1
51	783-1019	Bracket, Actuator, Switch	1
52	756-0978A	Pulley, Engine, 3.56 Dia.	1
53	736-0242	Belle Washer	2

 
STEERING

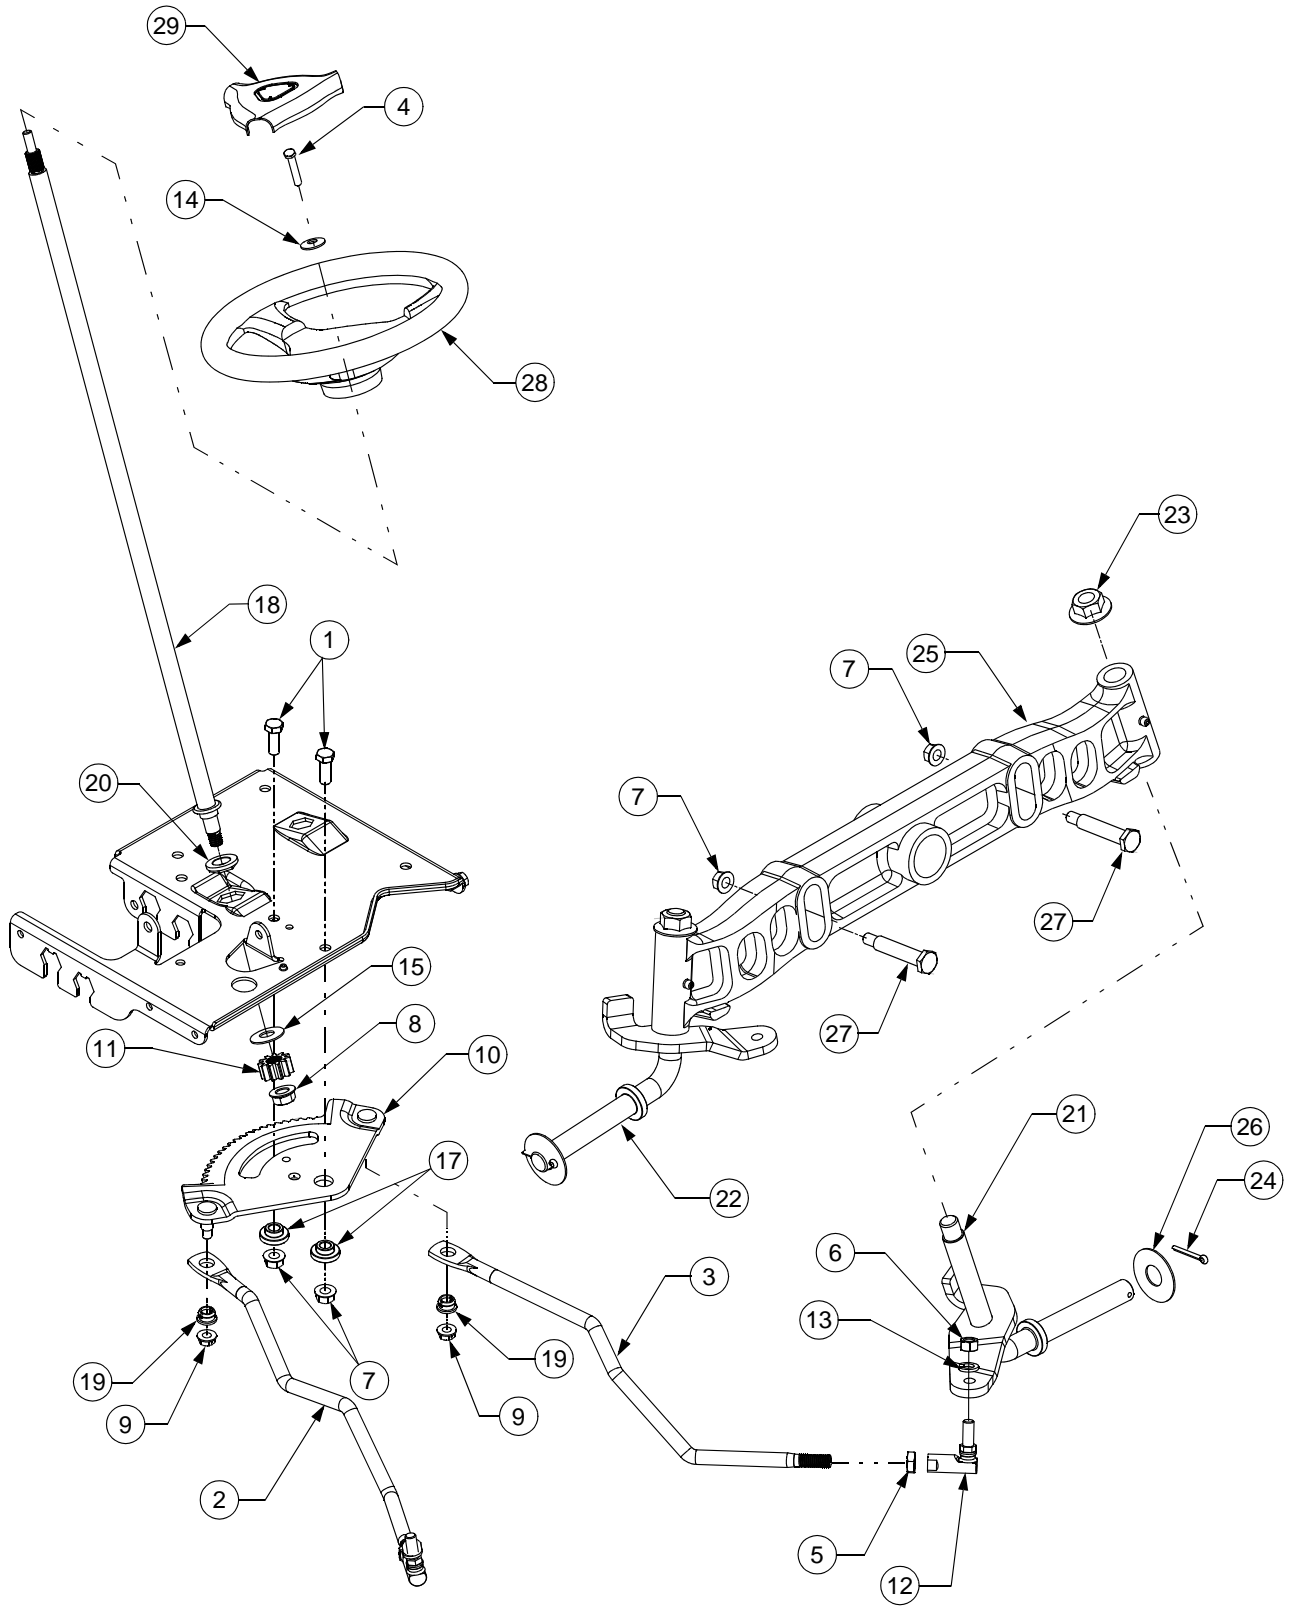

STEERING

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	710-0514	Hex Cap Screw, 3/8-16, 1.00, Gr5, Std	2
2	711-1408	Link, Drag, RH	1
3	711-1409A	Link, Drag, LH	1
4	710-1260A	Self-tapping Screw, 5/16-18 x .75	1
5	712-0240	Nut, Jam, 7/16-20, Gr2	2
6	712-0241	Nut, Hex, 3/8-24, Gr5	2
7	712-0130	Nut, Nylon Lock, 3/8-16	4
8	712-0459	Nut, Flange Lock, 7/16-20	1
9	712-0429	Nut, Nylon Lock, 5/16-18	2
10	717-1550E	Gear, Steering, 11/90 Ratio	1
11	717-1554	Gear, Pinion, Steering	1
12	723-0610	Ball Joint, 7/16-20	2
13	736-0169	Washer, Lock, 3/8 , Regular Duty	2
14	736-3004	Washer, Flat, .406 x .875 x .105	1
15	736-3084	Washer, Flat, .510 x 1.120 x .060	1
16	737-3007	Grease, Alvania Ep 2	1
17	738-0372B	Spacer, Shoulder, 1.00 x .38 x .38	2
18	738-04075	Shaft, Steering, .625 OD x 25.00 Lg	1
19	741-0475	Bushing, Plastic, .380 ID	2
20	741-0656	Bearing, Hex Flange, 5/8	1
21	683-04101	Axle Assembly, LH .750 Dia	1
22	683-04102	Axle Assembly, RH .750 Dia	1
23	712-0417A	Nut, Hex, Flange, 5/8-18	2
24	714-0162	Pin, Cot, 5/32, 1.25	2
25	719-0525C	Axle, Pivot, Cast .750 Dia	1
26	736-0866	Washer, Flat, .755 x 1.92 x .060	2
27	738-1011	Spacer, Shoulder, .500 x 2.230, 3/8-16	2
28	731-04008	Wheel, Steering, Three Spoke	1
29	731-04532	Cover, Steering Wheel	1

 
FRAME

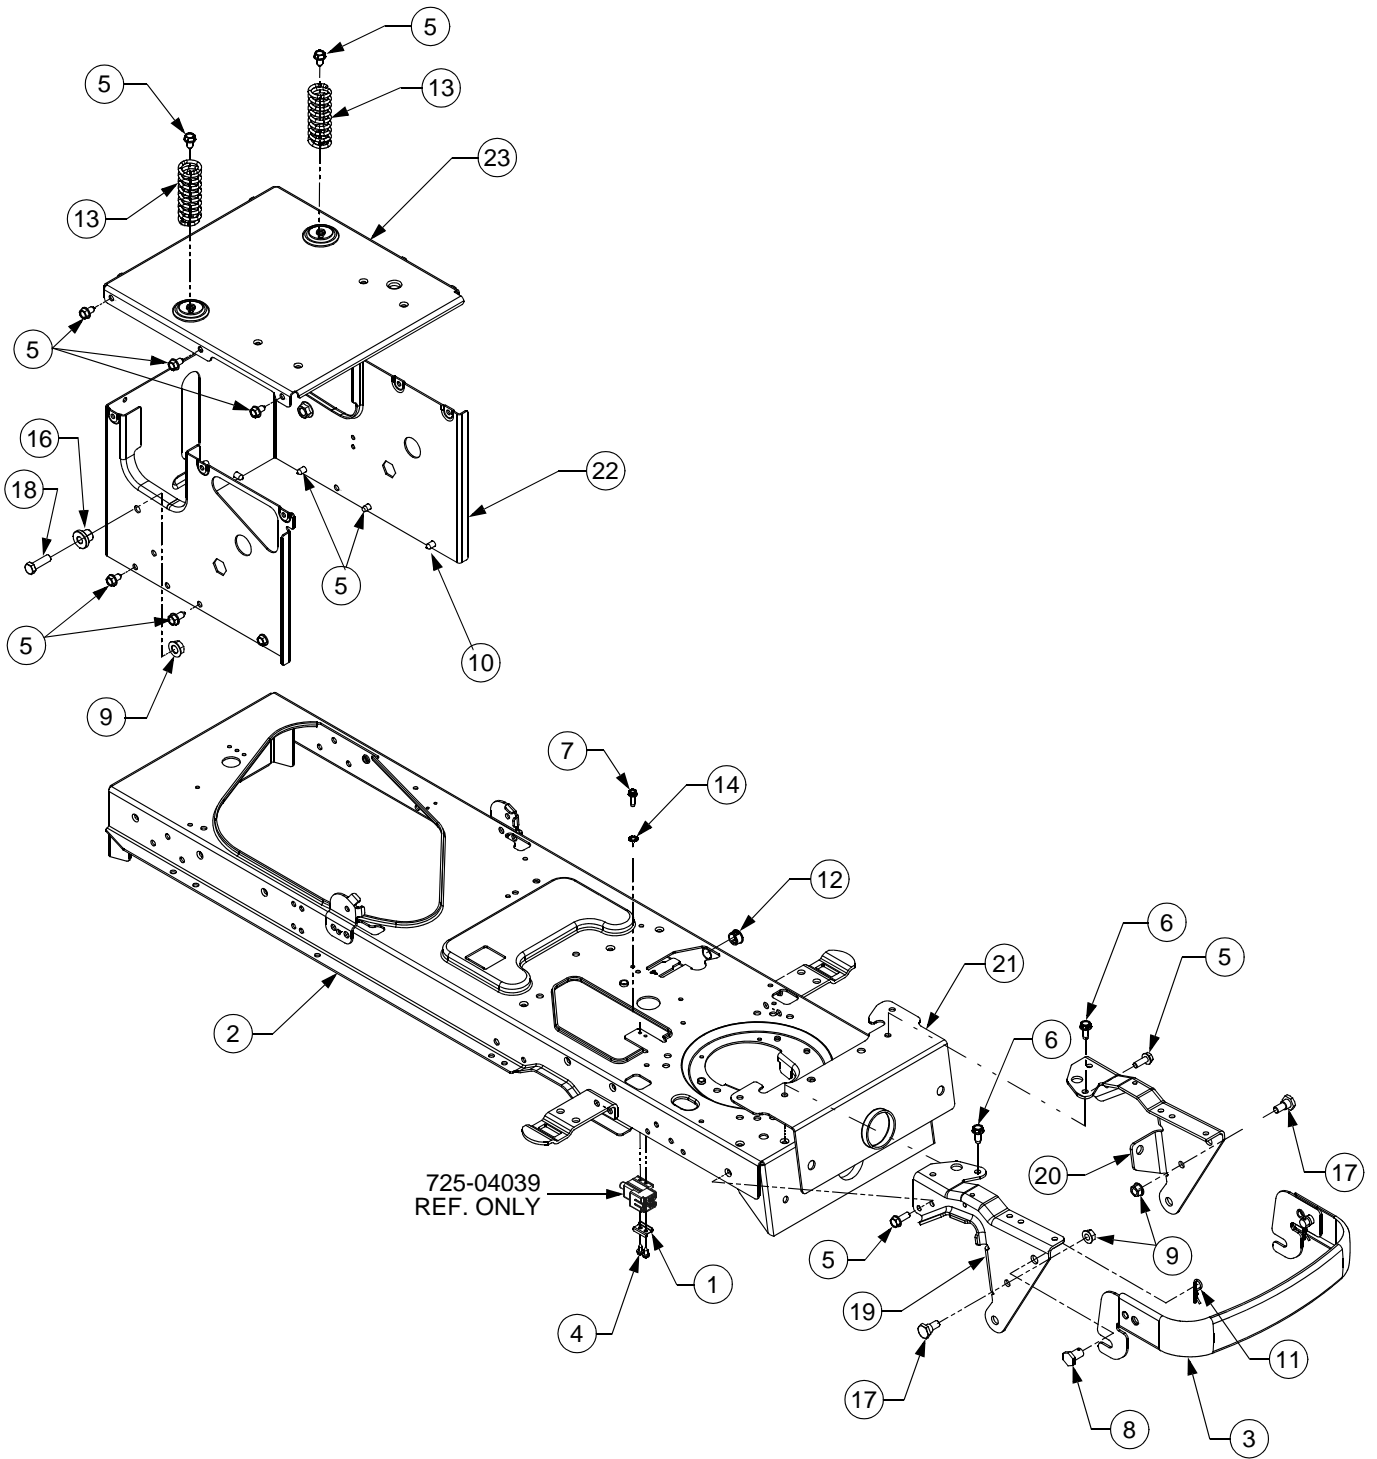

FRAME


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	17962	Plate, Switch	1
2	683-0304A	Frame Assembly, Lower	1
3	683-0612	Bumper Assembly	1
4	710-0224	Screw, Hex Wash. Hd. Tapp, 10-16 x .5	2
5	710-0726	Screw, Self-tapping, 5/16-18, 0.75	15
6	710-1260A	Screw, 5/16-18, 0.750	2
7	710-1652	Screw, Hex Wash. Hd. Tapp, 1/4-20 x 0.625	1
8	711-0332	Pin, Clevis, .50 Dia x .78 Lg	2
9	712-0130	Nut, Nylon Lock, 3/8-16	2
10	710-0607	Screw, Hex Wash. Tapp, 5/16-18 x .5	1
11	714-0145	Pin, Click, .092 x 1.64 Lg	2
12	741-04092	Snap Bushing	1
13	732-04035	Spring, Compression, 1.28 OD x 3.125 Lg	2
14	736-0222	Washer, Lock, Ext 1/4	2
16	738-04058	Shoulder Spacer	2
17	738-0143	Shoulder Screw, 3/8-16	2
18	710-3005	Hex Screw 3/8-16 x 1.25	2
19	783-0726C	Bracket, Pivot, Support RH	1
20	783-0727B	Bracket, Pivot, Support LH	1
21	783-0728	Bracket, Pivot, Bar	1
22	783-04330	Frame, Upper, Cub 1500	1
23	783-04329	Bracket, Frame, Seat	1

 FENDER & FUEL TANK

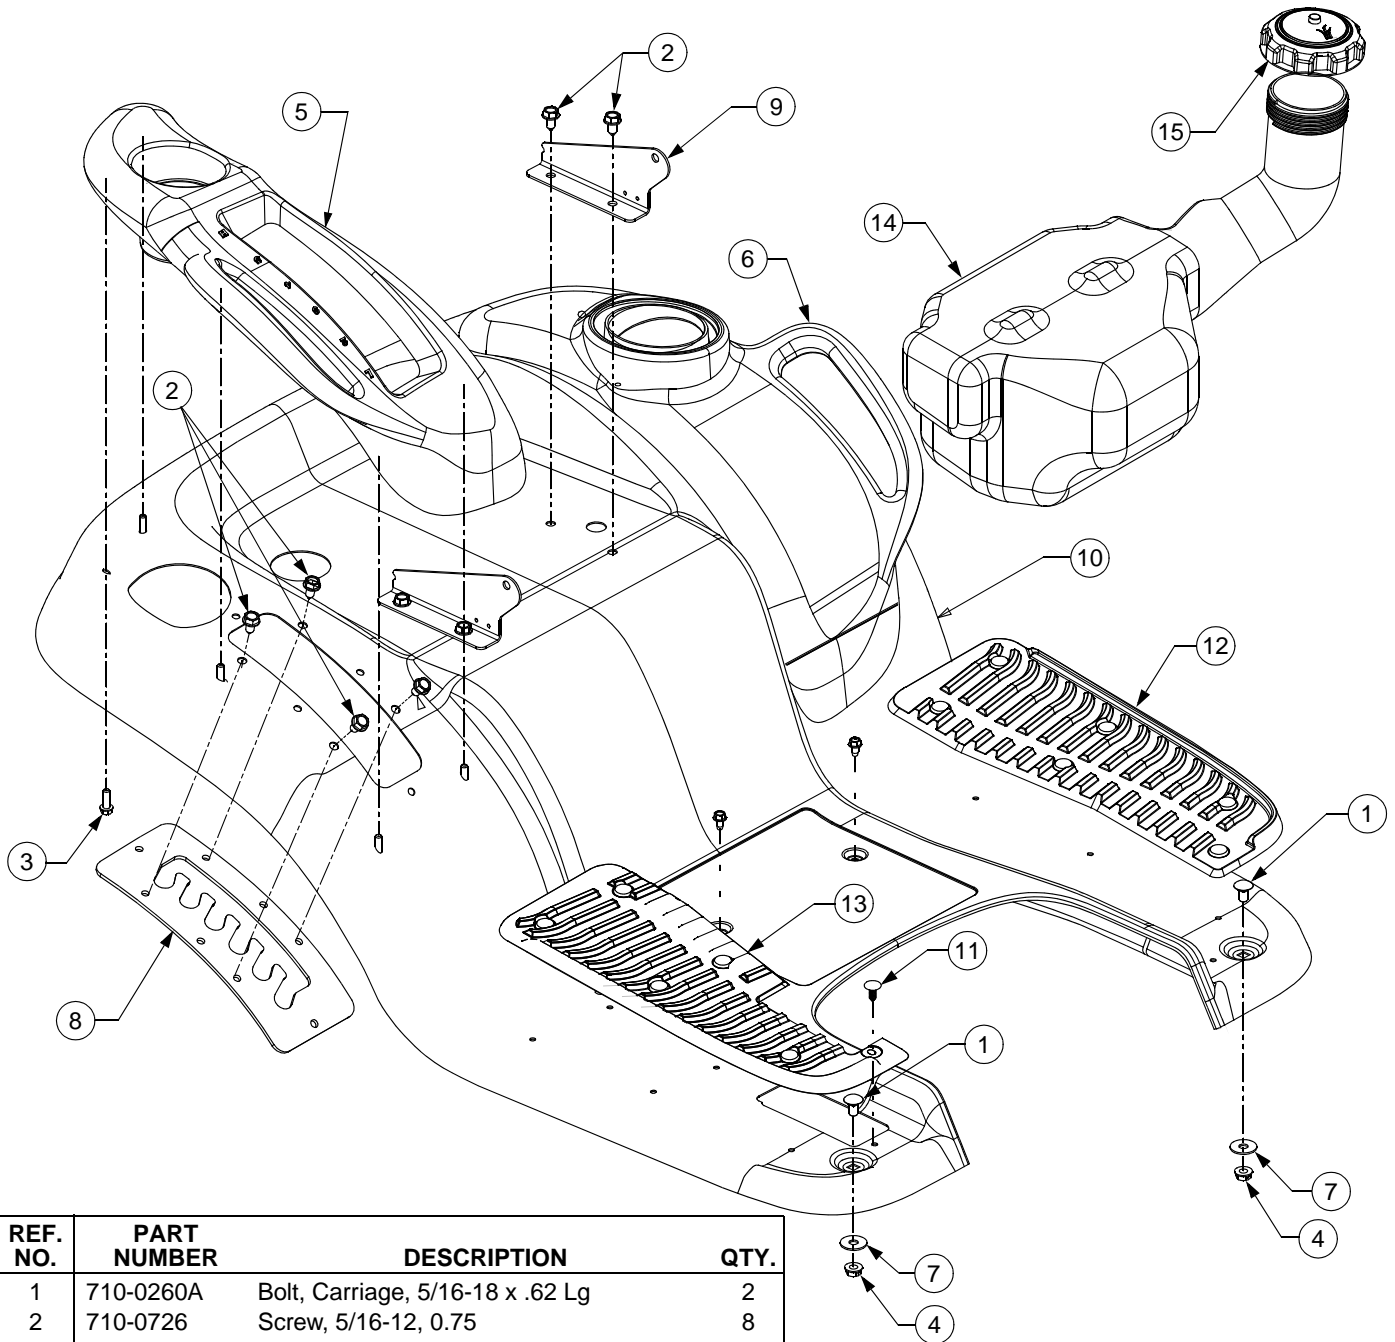


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	710-0260A	Bolt, Carriage, 5/16-18 x .62 Lg	2
2	710-0726	Screw, 5/16-12, 0.75	8
3	710-0895	Screw, 1/4-15, 0.750	9
4	712-0429	Nut, Nylon Lock, 5/16-18	2
5	731-2616A	Cover, Fender, RH	1
6	731-2617	Cover, Fender, LH	1
7	736-3078	Washer, Flat, .349 x 1.00 x .063	2
8	783-0677	Bracket, Lift, Adjustment	1
9	783-0715B	Bracket, Seat, Mount	2
10	783-04398	Fender	1
11	726-3046	Clip, Ratchet, .250 Dia	12
12	735-0697	Pad, Foot, LH	1
13	735-0698A	Pad, Foot, RH	1
14	751-0819A	Tank, Fuel	1
15	751-3124B	Cap, Fuel	1
16	710-0599	Screw, Self-tapping, 1/4-20, 0.500	2

 LIFT ASSEMBLY

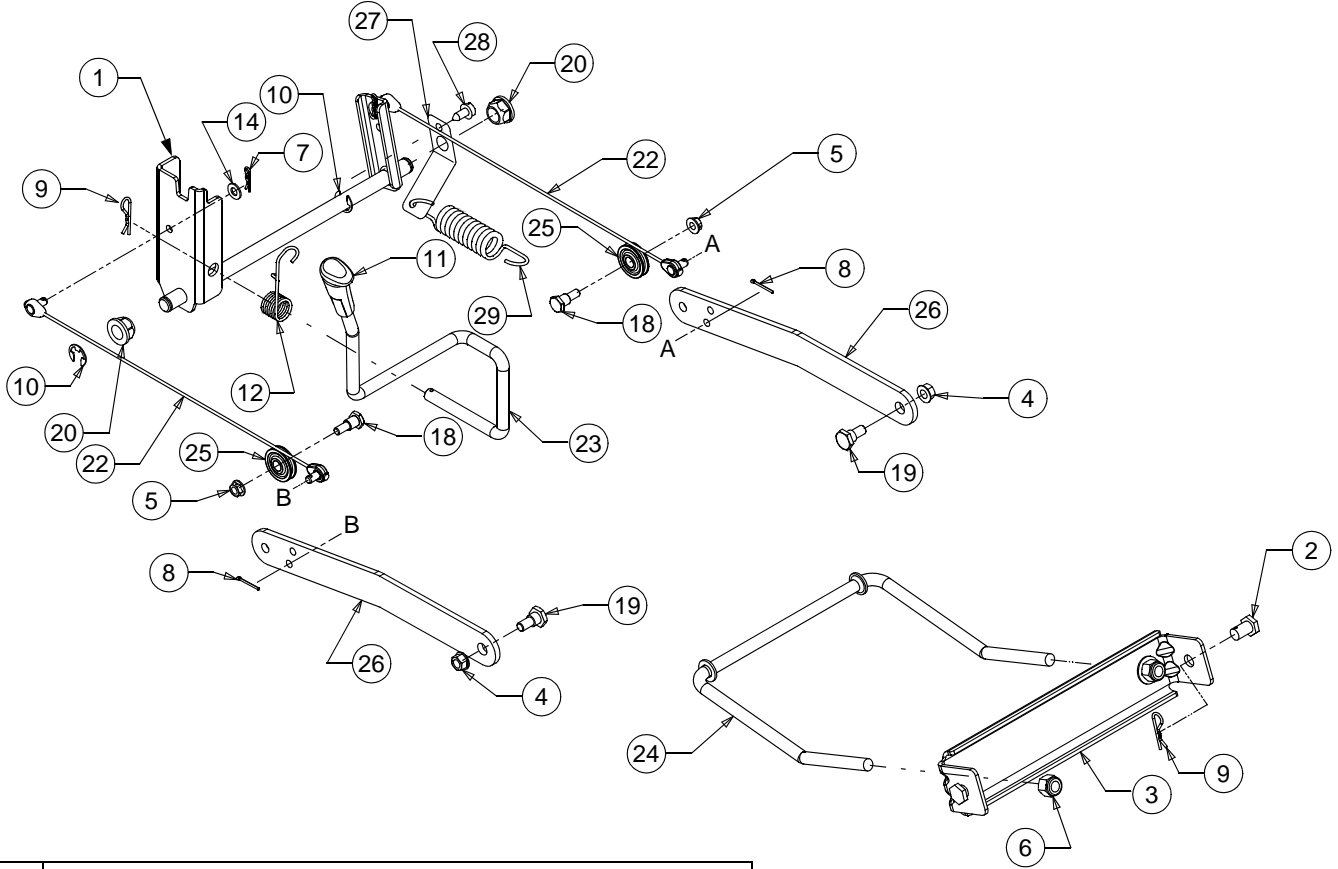

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	683-04079	Shaft Assembly, Lift	1
2	711-0332	Pin, Clevis, .50 Dia x .78 Lg	2
3	783-0720A	Bracket, Adjustment, Front Deck Rod	1
4	712-0130	Nut, Nylon Lock, 3/8-16	2
5	712-0429	Nut, Nylon Lock, 5/16-18, Gr5	2
6	712-3083	Nut, Hex Lock, 1/2-13, Gr8, Nylon	2
7	714-0104	Pin, Cotter, .072 Dia. x 1.13 Lg	2
8	714-0111	Pin, Cotter, 3/32, 1.0	2
9	714-04023	Pin, Click, .092 x 1.64 Lg	2
10	716-0106A	E-ring, .625 Dia. Shaft	2
11	720-0311	Grip, Handle	1
12	732-0874	Spring, Torsion	1
18	738-0138A	Screw, Hex Cap, 5/16-18x.620 Gr2	2
19	738-0143	Shoulder Screw, 3/8-16	2
20	741-0225	Bearing, Hex Flange	2
22	746-0968	Cable, Lift, 16.16 Lg	2
23	747-04155	Handle, Lift	1
24	747-1324	Rod, Deck, Front Adjustment .5" Dia	1
25	756-1154	Pulley, Roller	2
26	783-0678A	Lift, Arm	2
27	783-04462	Lift Bracket	1
28	710-0726	Screw, Self-tapping, 5/16-18 x.625	1
29	732-0934	Spring, Extension, 1.15 x 5.99	1

 
PEDAL ASSEMBLY

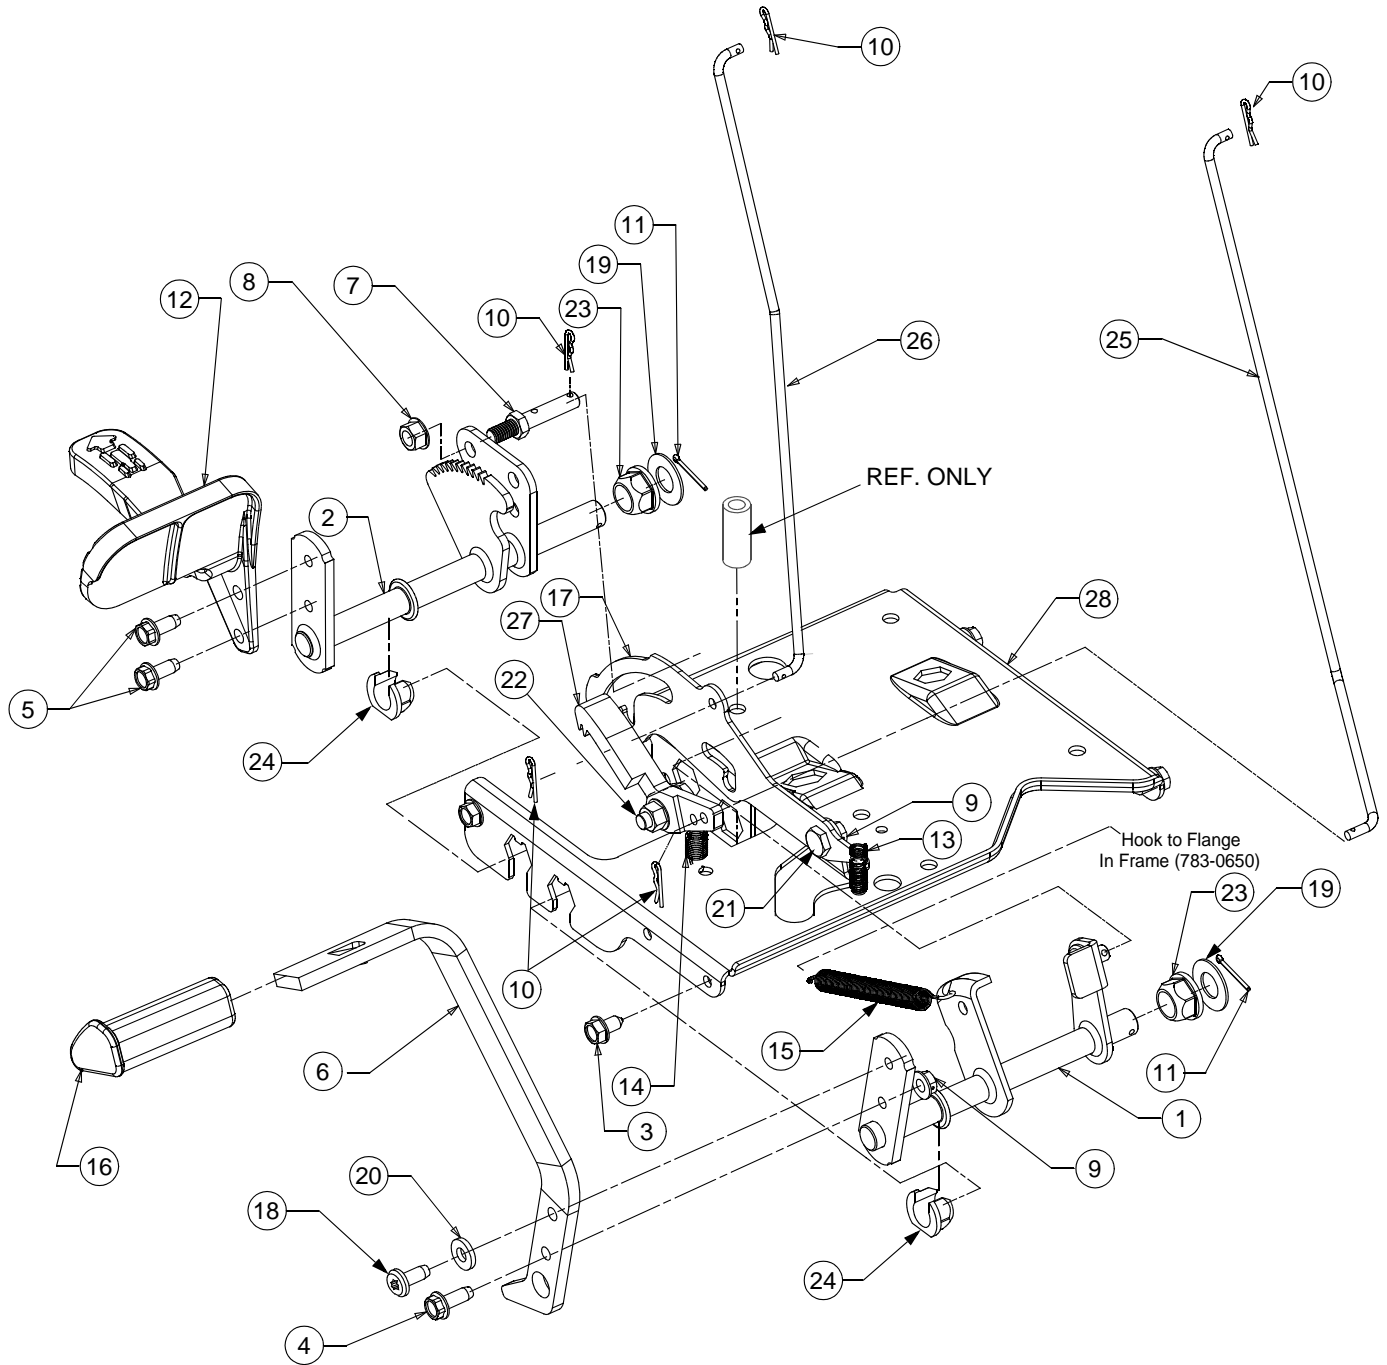

PEDAL ASSEMBLY


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	647-0031B	Control Assembly, Brake	1
2	647-0049A	Control Assembly, Hydro	1
3	710-0726	Screw, Self-tapping, 5/16-12, 0.75	4
4	710-0650	Screw, Self-tapping, 5/16-18, 0.875	1
5	710-1260A	Screw, 5/16-18, 0.750	2
6	783-0773A	Pedal, Brake	1
7	711-1363	Pin, 3/8-16, 3/8 x 2.43 Lg	1
8	712-0130	Nut, Nylon Lock, 3/8-16	2
9	712-0429	Nut, Nylon Lock, 5/16-18, Gr5	2
10	714-0104	Pin, Cotter, .072 Dia. x 1.13 Lg	5
11	714-0111	Pin, Cotter, 3/32, 1.0	2
12	719-0584A	Pedal, Hydro Control	1
13	732-0335	Spring, Compression, .405 x 1.17	1
14	732-0955	Spring, Extension, .50 OD x 1.41 Lg	1
15	732-0963	Spring, Extension, .50 Dia x 6.37 Lg	1
16	735-3049	Pad, Brake, Control	1
17	783-0663C	Bracket, Lockout, Hydro	1
18	710-1611B	Screw, Torx Hd. Tapp. 5/16-18 x .75	1
19	736-0187	Washer, Flat .64 ID x 1.24 x .06	2
20	736-3008	Washer, Flat, .344 x .750 x .120	1
21	738-0155	Shoulder, Screw .437 x 1.62 Lg	1
22	738-0507B	Screw, Shoulder, .500 Dia x .434	1
23	741-0225	Bearing, Hex Flange	2
24	741-3065B	Bearing, Hex Flange, .628 ID, Split	2
25	747-04096	Rod, Control, Cruise	1
26	747-04093	Rod, Control, Brake Lock	1
27	748-04039B	Latch, Cruise	1
28	783-0653F	Bracket, Support, Stearing	1

 ADJUSTABLE SEAT

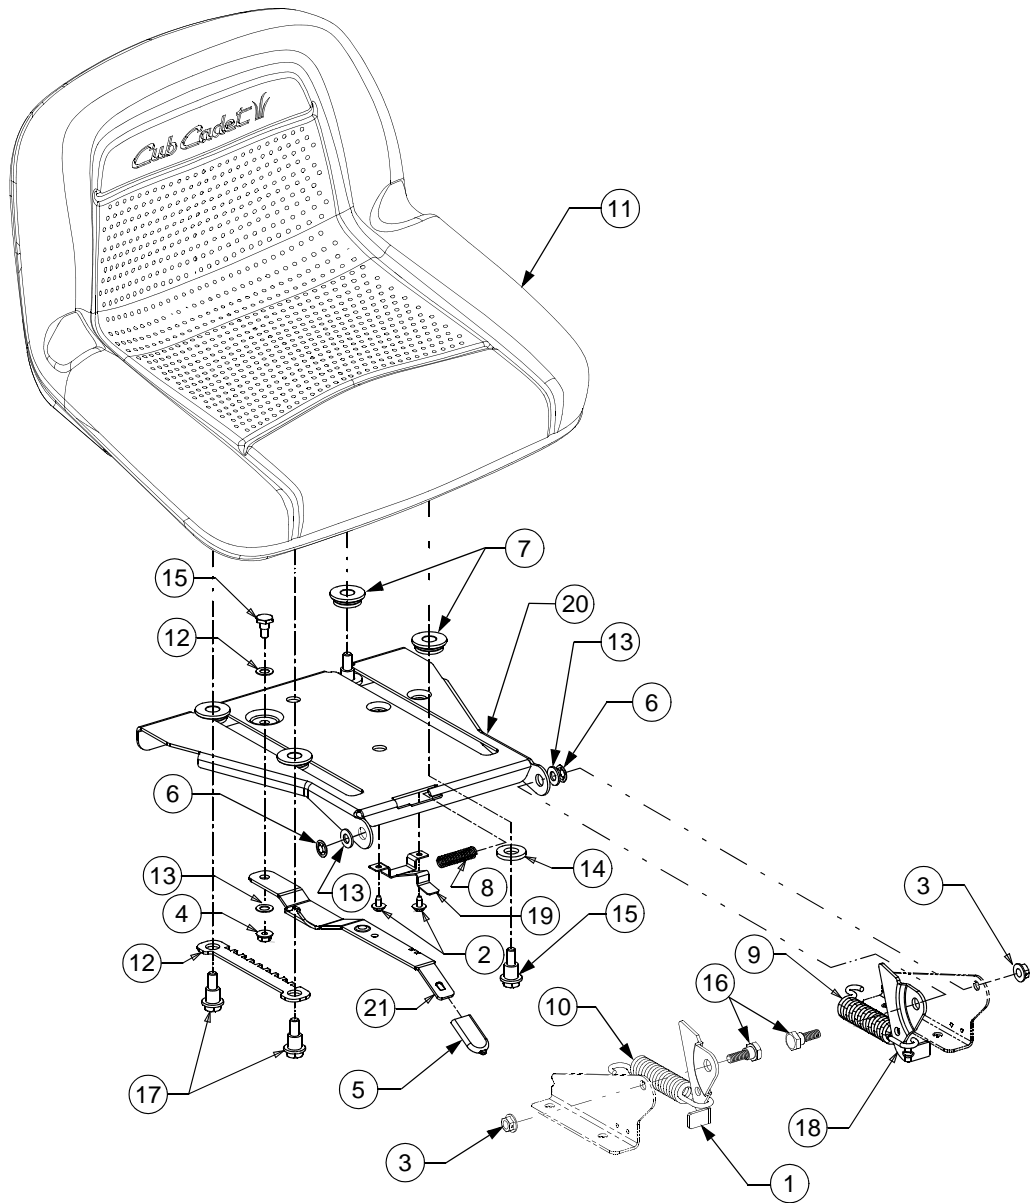


REF. NO.	PART NUMBER	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	17239C	Bracket, Seat Lift		13	736-0275	Washer, Flat, .344 x .688 x .065	2
2	710-1268	Screw, #10-16, 0.375	2	14	736-3019	Washer, Flat, .531 x 1.062 x .134	2
3	712-0429	Nut, Nylon Lock, 5/16-18, Gr5	2	15	738-0137A	Screw, Shoulder, .340 x .285, 1/4-20	1
4	712-0324	Nut, Nylon Lock, 1/4-20	1	16	738-0296	Shoulder, Screw .437 x .286 Lg	2
5	720-0433	Grip, Seat, Adjustment (Yellow)	1	17	738-0966	Screw, Shoulder, .50 x.925, 3/8-16	4
6	726-0201	Nut, Speed, .3125 ID	2	18	783-0209C	Bracket, Seat Lift	1
7	731-04074	Spacer, Seat, Adjustment	4	19	783-0611	Stop, Seat, Adjustment	1
8	732-0499	Spring, Compression .41 OD x 1.50	1	20	783-0738A	Bracket, Pivot, Seat	1
9	732-1027	Spring, Extension, .80 Dia x 4.2 Lg.	1	21	783-0739A	Lever, Seat, Adjustment	1
10	732-1175	Spring, Extension, .815 Dia x 4.4 Lg.	1				
11	757-04004	Seat, Mid-back, V-1480	1				
12	783-0753	Selector, Seat, Adjustment	1				

 ENGINE ACCESSORIES

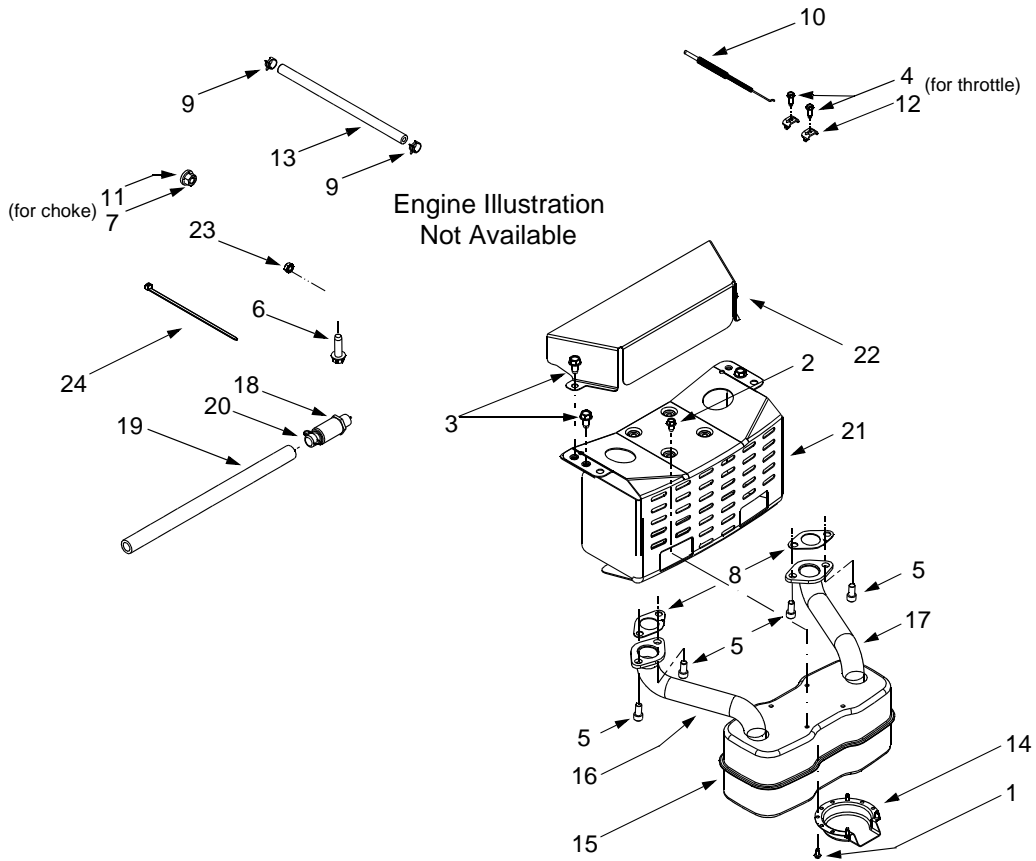

REF. NO.	PART NO.	DESCRIPTION
1	710-0227	Self-tapping Screw, #8-18 x.50
2	710-0599	Self-tapping Screw, 1/4-20 x.50
3	710-0726	Self-tapping Screw, 5/16-18 x.625
4	710-1237	Screw, #10-32 x.625 (OHV V-Twin)
5	710-1314A	Socket Cap Screw, 5/16-18 x.625
6	710-1315	Self-tapping Screw, 3/8-16 x 1.25
7	712-3017	Hex Nut, 3/8-16
8	721-0460	Exhaust Gasket (OHV V-Twin)
9	726-0205	Hose Clamp
10	746-1086	Throttle Cable (OHV V-Twin)
11	736-0300	Lock Washer,.406 x.875 x.059
12	751B221535	Casing Clamp (OHV V-Twin)
13	751-0535	Fuel Line Hose
14	751-0564A	Muffler Deflector
15	751-0616A	Muffler, Twin Inlet (OHV V-Twin)
16	751-0650A	RH Exhaust Pipe (OHV V-Twin)
17	751-0651A	LH Exhaust Pipe (OHV V-Twin)
18	751-3140	Oil Drain Valve
19	751-3141	Oil Drain Hose
20	751-3142	Oil Drain Cap
21	783-0615C	Muffler Heat Shield
22	783-0625C	Engine Heat Shield (OHV V-Twin)
23	712-0271	Hex Sems Nut, 1/4-20 (OHV V-Twin)
24	725-0157	Cable Tie

 
DASH PANEL

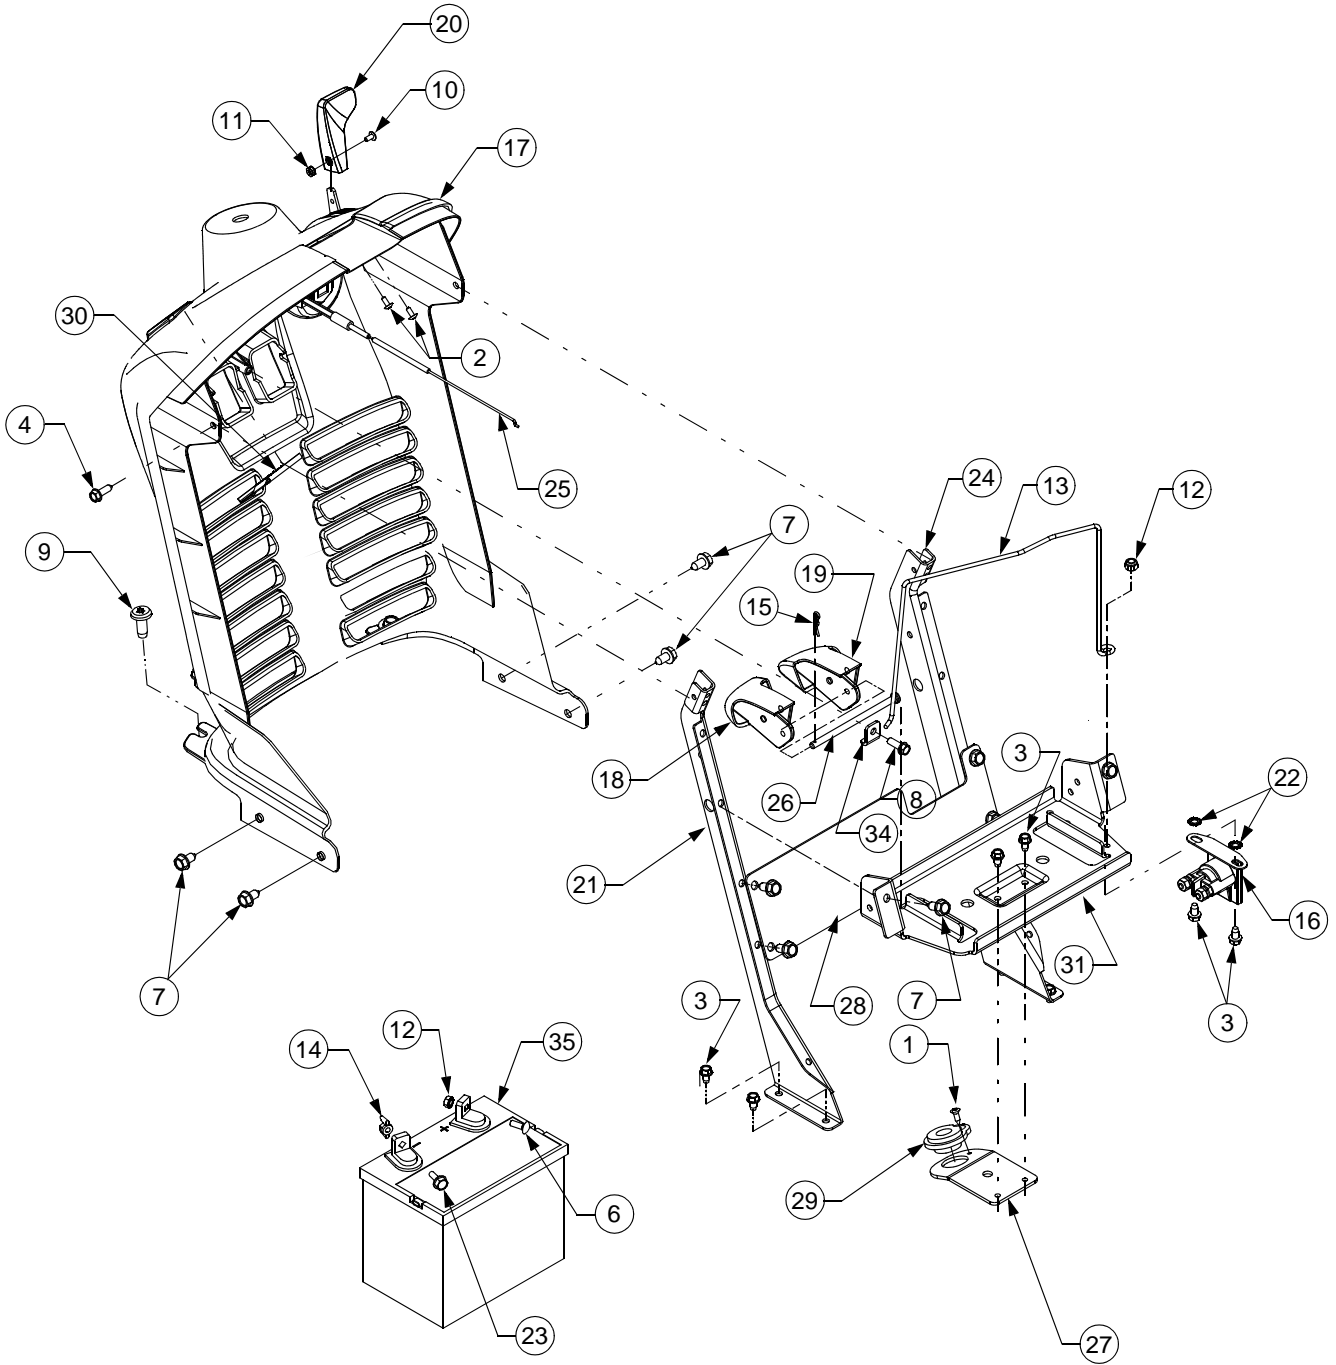

DASH PANEL

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	710-0837	Screw, #10-16 x .625	1
2	710-0192	Screw, #10-24 x .375	2
3	710-0599	Screw, Self-tapping, 1/4-20, 0.500	6
4	710-0642	Screw, Hx. Wash. Hd, Tapp. 1/4-20 x .75	2
5	710-0650	Screw, Hx. Wash. Hd, Tapp, 5/16-18, .875	4
6	710-0703	Screw, Carriage, 1/4-20, .75,	1
7	710-0726	Screw, Hx. Wash. Hd, Tapp, 5/16-12 x .75	6
8	710-0895	Screw, 1/4-15, 0.750	1
9	710-1611B	Screw, Torx Hd. Tapp. 5/16-18 x .75	2
10	710-3217	Screw, Machine, #8-32, 0.375, Trus Phillips	1
11	712-0142	Nut, 8-32	1
12	712-0324	Nut, Nylon Lock, 1/4-20	1
13	747-04215	Strap, Battery	1
14	712-3087	Nut, Wing, 1/4-20	1
15	714-0104	Internal Cotter Pin, .072 x 1.13	1
16	725-1426	Solenoid, 12V, 100 Amp	1
17	731-04668	Dash	1
18	731-04294A	Lever, Dash, Cruise	1
19	731-04293A	Lever, Dash, Brake	1
20	731-3161	Knob, Throttle Control	1
21	783-04285	Dash Support, RH	1
22	736-0222	Washer, External Lock, 1/4	2
23	738-1132	Screw, Shoulder, 1/4-20, .25 x .15	1
24	783-04323	Dash Support, LH	1
25	746-04120	Control, Choke, 40.5	1
26	747-1323A	Rod, .250 Dia x 4.25 Lg.	1
27	783-04475	Bracket, Steering Support	1
28	783-04506	Plate, Dash Support	1
29	741-0587	Steering Colume Bearing	1
30	783-0462	Bracket, PTO Switch Retainer	1
31	783-1447A	Bracket, Support, Battery	1
34	783-1499	Bracket, Rod, Dash	1
35	725-1706A	Battery, 270 CCA	1

 
HOOD & GRILLE

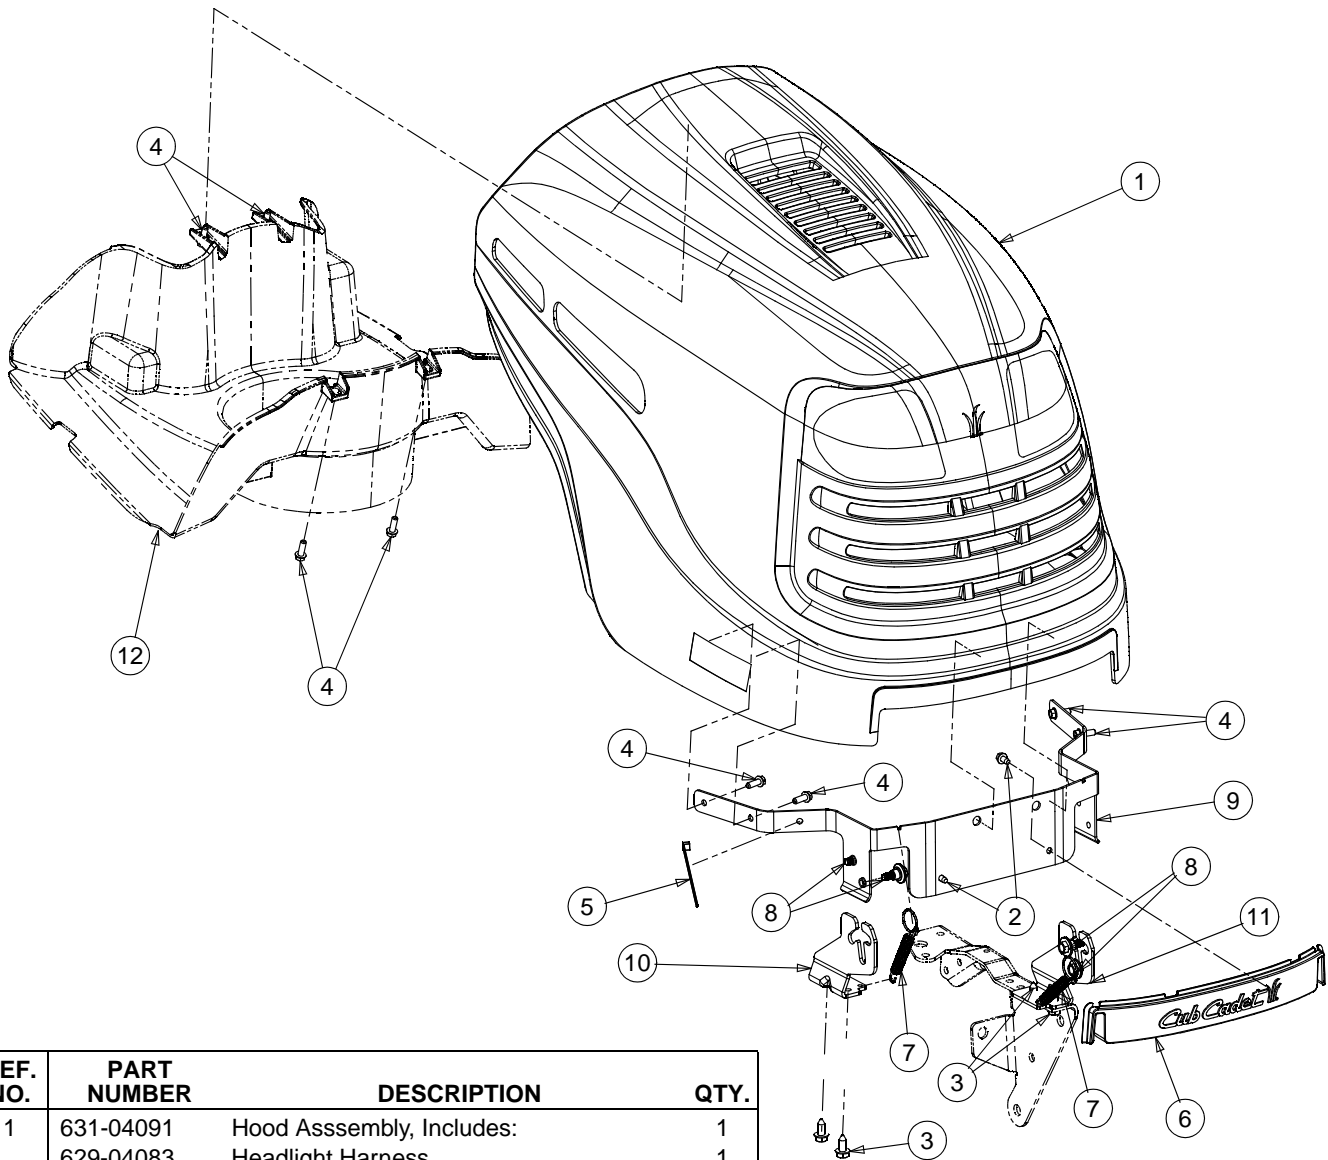


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	631-04091	Hood Assembly, Includes:	1
	629-04083	Headlight Harness	1
	725-0963	Minirature Lamp, 12 V	2
	725-1649	Lamp Socket	2
	731-04567	Hood	1
	731-04577	Headlight Lens	1
	777X41562	Headlight Lens Reflector, RH	1
	777X41563	Headlight Lens Reflector, RH	1
2	710-0599	Screw, Hx. Wash, Hd,Tapp 1/4-20 x .5	2
3	710-0726	Self-tapping Screw, 5/16-18 x.625	4
4	710-0895	Screw, 1/4-15 x .75	8
5	725-0157	Cable Tie	1
6	731-04687A	Cover, Front Hood	1
7	732-04189B	Spring, .46 x 4.12	2
8	738-04091	Shoulder Screw, .43 x .29 x 5/16-18	4
9	783-04428	Pivot Bracket	1
10	783-04464A	Pivot Bracket, Hood, RH	1
11	783-04465A	Pivot Bracket, Hood, LH	1
12	731-04579	Hood Plenum	1

ELECTRICAL SYSTEM

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	17962	Plate, Switch	1
2	736-0329	Washer, Lock, 1/4	2
3	629-04083	Harness Assembly, Headlight	1
4	629-04079	Harness Assembly	1
5	629-04082	Harness Assembly, Safety, Reverse	1
6	710-0224	Screw, Hx. Wash. Hd. Tapp, 10-16 x .5	2
7	710-0227	Screw, Hx. Wash. Hd. Tapp, 8-18 x .5	2
8	710-0642	Screw, Hx. Wash. Hd. Tapp, 1/4-20, 0.75	2
9	712-3006	Nut, Hex, 1/4-20, Gr5	2
10	725-04022	Indicator/ Meter Hour	1
11	725-04039	Switch, Interlock	1
12	725-1303	Switch, Outer Seat Spring	1
13	725-1426	Solenoid, Starter, 12V	1
14	725-1439	Switch, Inner Seat Spring	1
15	725-1741	Switch, Key, 4-Position	1
16	725-2054	Key, Switch, Plastic	2
17	725-04175	Switch, Electric PTO, Yellow Knob	1
18	726-0278	Plate, Insulator Boss	1
19	726-0279	Plate, Insulator	2
20	736-0222	Washer, Lock, Ext 1/4	2

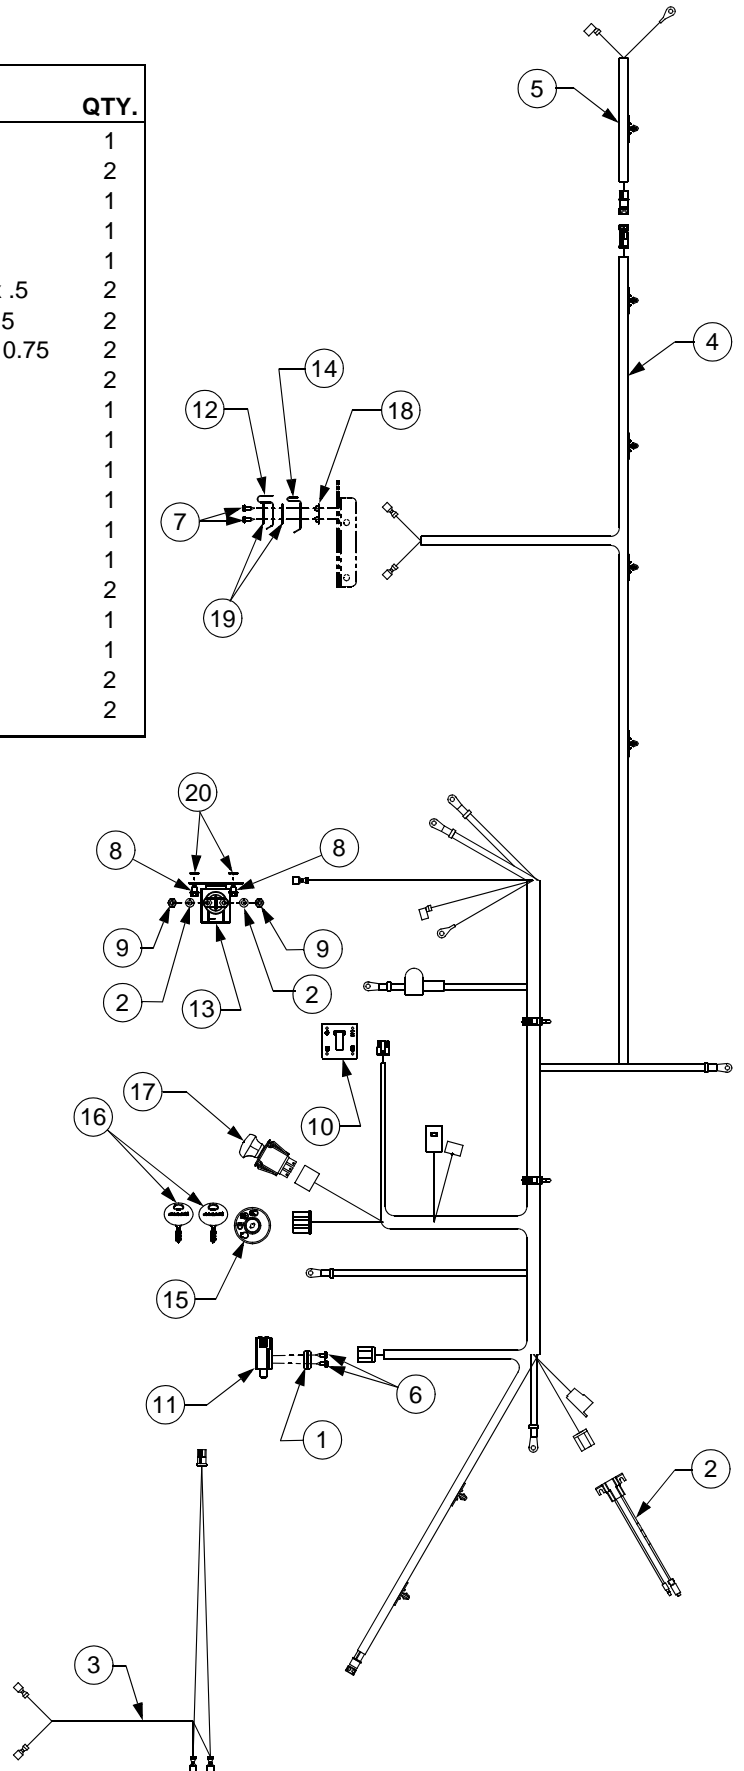 


POWER TAKE-OFF (PTO) SYSTEM

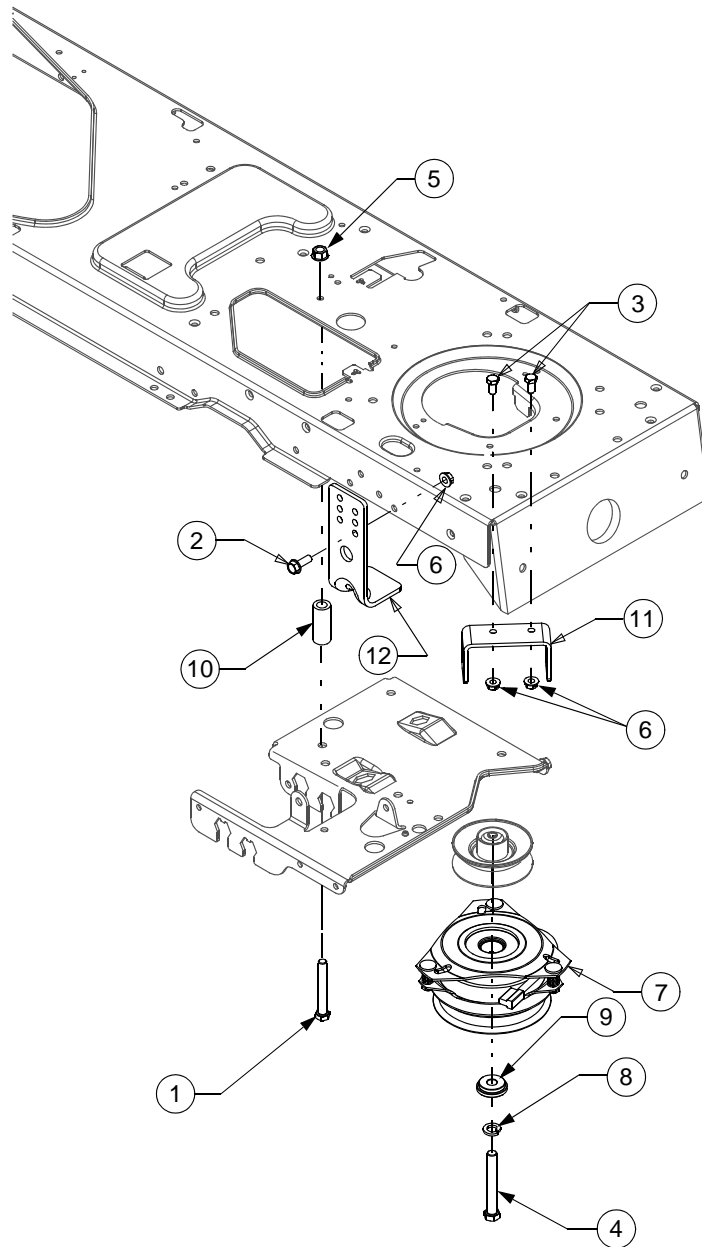 

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	710-0859	Screw, 3/8-16 x 2.5 GR5	1
2	710-0276	Screw, 5/16-12, .75 GR5	1
3	710-3025	Screw, 5/16-18, .625 GR5	2
4	710-0561	Screw, Hex Cap, 7/16-20 x 2.5 GR5	1
5	712-0130	Nut, Nylon Lock, 3/8-16	2
6	712-0429	Nut, Nylon Lock, 5/16-18	3
7	717-04080	Clutch, Electric PTO	1
8	736-0171	Washer, Lock, 7/16, Regular Duty	1
9	738-0785	Spacer, Shoulder, 1.38 x .445 x .36	1
10	748-0415B	Spacer, 3/8 x 1.54	1
11	783-1003	Bracket, Clutch	1
12	783-04467	Deck Stop	1

 
50-INCH MOWER DECK

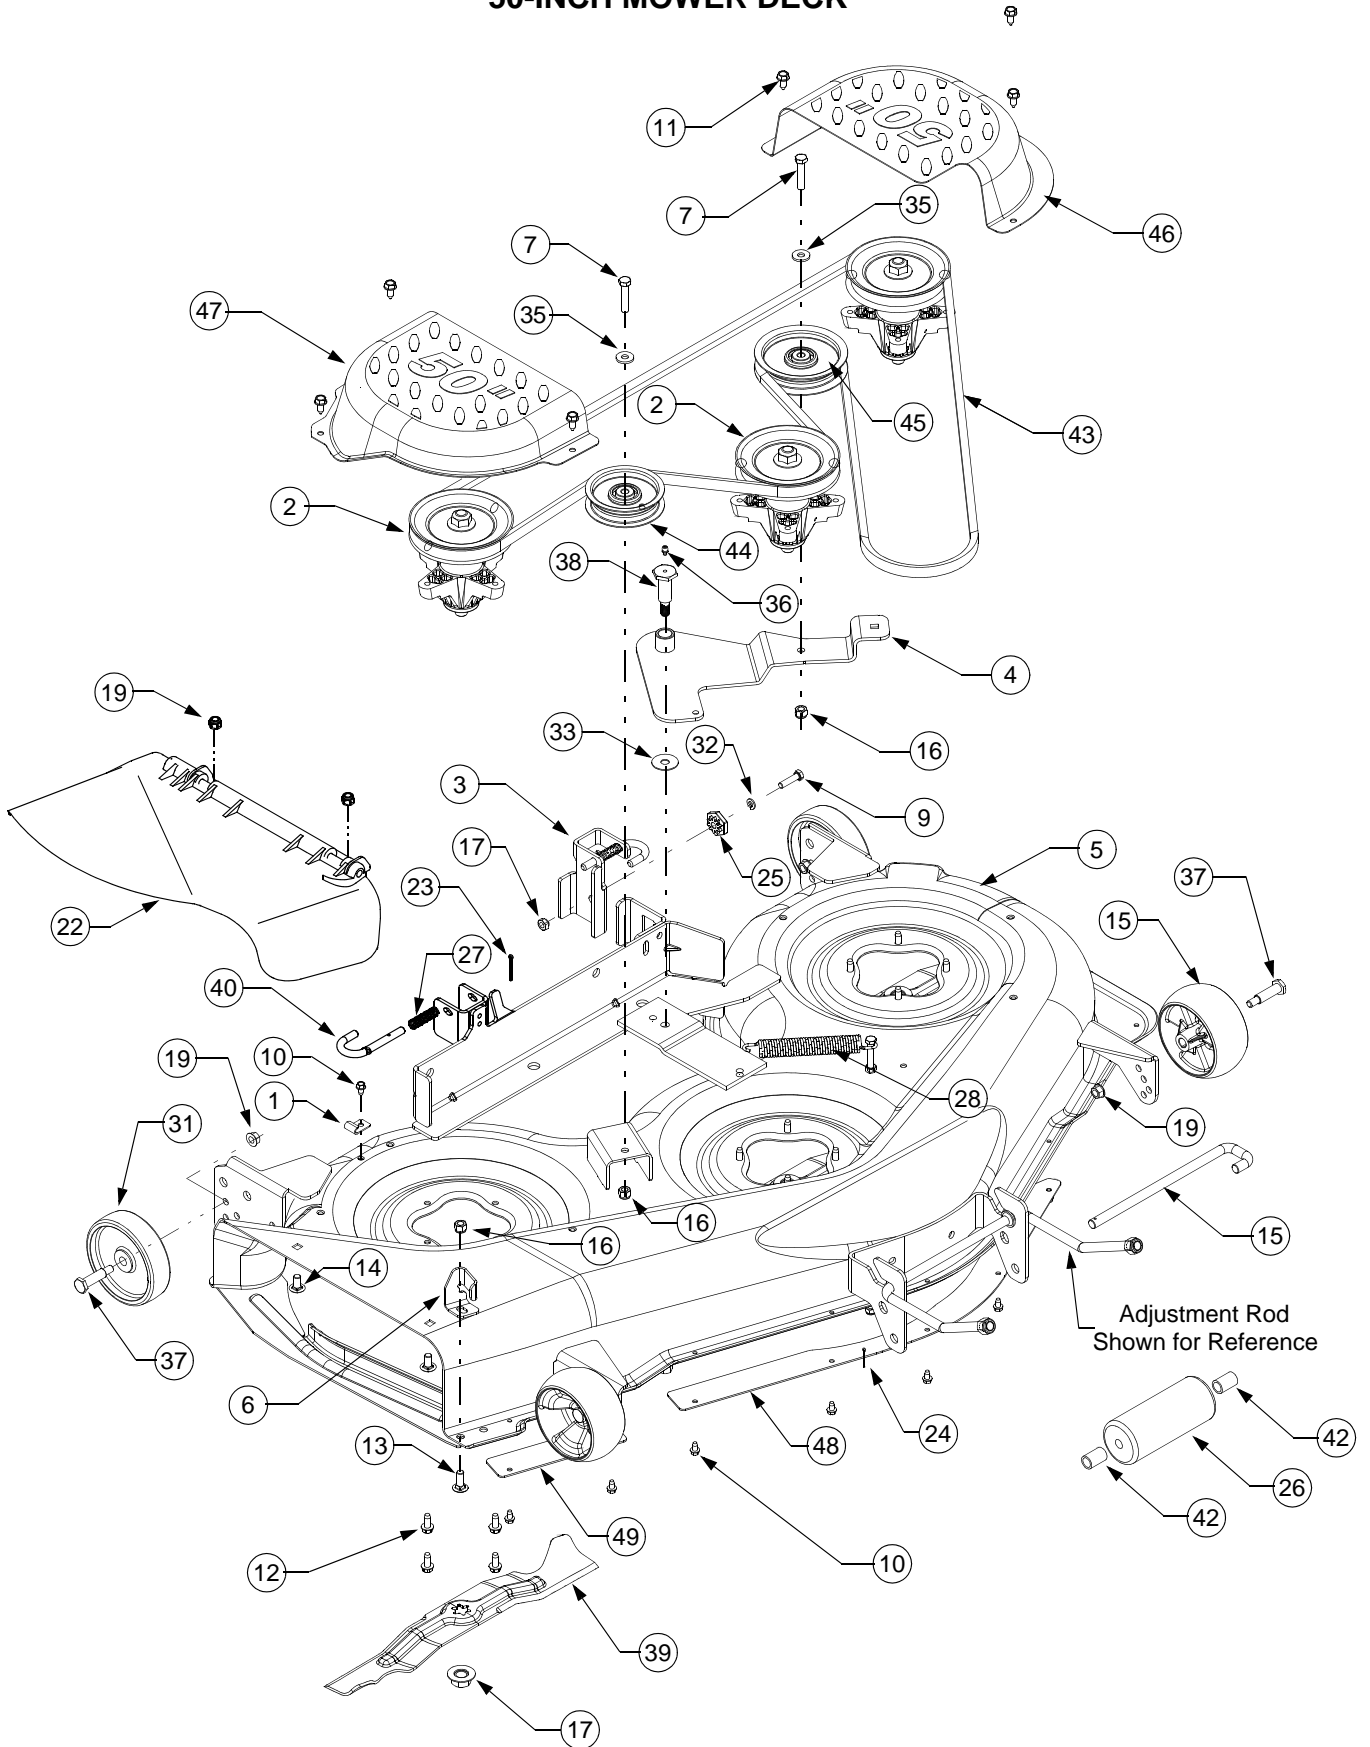

50-INCH MOWER DECK

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	16606	Hook, Retainer	1
2	618-04129	Spindle Assembly	3
3	683-0254	Hanger Bracket Assembly	1
4	683-04098	Idler Bracket	1
5	683-04120	Weldment, 50-inch Deck	1
6	703-3279	Chute Stop	1
7	710-0347	Screw, 3/8-16, 1.75	2
8	710-0395	Screw, 5/16-18 x 2.25	1
9	710-0528	Screw, 5/16-18, 1.25, Gr5	1
10	710-0599	Screw, Self-tapping, 1/4-20 x 0.5	8
11	710-0726	Screw, Self-tapping, 5/16-18 x .625	6
12	710-1260A	Screw, Self-tapping, 5/16-18 x .75	12
13	710-3168	Screw, Carriage, 3/8-16 x 1.0	1
14	710-3178	Screw, Carriage, 3/8-16 x .75	2
15	711-1737	Pin, Roller, 10.06	1
16	712-0130	Nut, Nylon Lock, 3/8-16	5
17	712-0417A	Nut, Hex, Flange, 5/8-18	3
18	712-0429	Nut, Nylon Lock, 5/16-18	1
19	712-0431	Nut, Flange Lock, 3/8-16	4
20	712-3010	Nut, Hex, 5/16-18, Gr5	1
21	712-3019	Nut, 7/16-14	1
22	631-04070	Chute Assembly, Side Discharge	1
23	714-0470	Pin, Cotter, 1/8 x 1.25	2
24	714-3004	Pin, Cotter, 3/32 x 1.25	1
25	717-04074	Deck Adjustment Gear	1
26	731-3005	Roller, Front	1
27	732-0306A	Spring, Compression, .531 x 1.75	2
28	732-0459	Spring, Extension, .94 x 6.74	1
30	734-04039	Deck Wheel, 5.0	2
31	734-0973	Deck Wheel, 5.0	2
32	736-0119	Washer, Lock, 5/16, Regular Duty	2
34	736-0407	Washer, Bell, .45 x 1.0 x .062	1
35	736-3072	Washer, Flat, .38 x .93 x .110	2
36	737-3000	Fitting, Lube, 3/16	1
37	738-0373	Shoulder Screw	4
38	738-3005	Screw, Shoulder, .68 x 1.59	1
39	742-04068	Blade (2-n-1), 17.9"	3
40	747-1116	Rod, Handle, Deck Release .375 Dia	2
42	750-0151	Spacer, .550 x .755 x 1.1	2
43	754-04048	Belt, V-Type, Aramid	1
44	756-0627B	Pulley, Idler, 3.5"	1
45	756-1229	Pulley, Idler, 4.06"	1
46	783-04399	LH Belt Cover	1
47	783-04400	RH Belt Cover	1
48	783-04414	Deck Skirt, Center	1
49	783-04415	Deck Skirt, RH	1











 
ENGINE (LT1024)

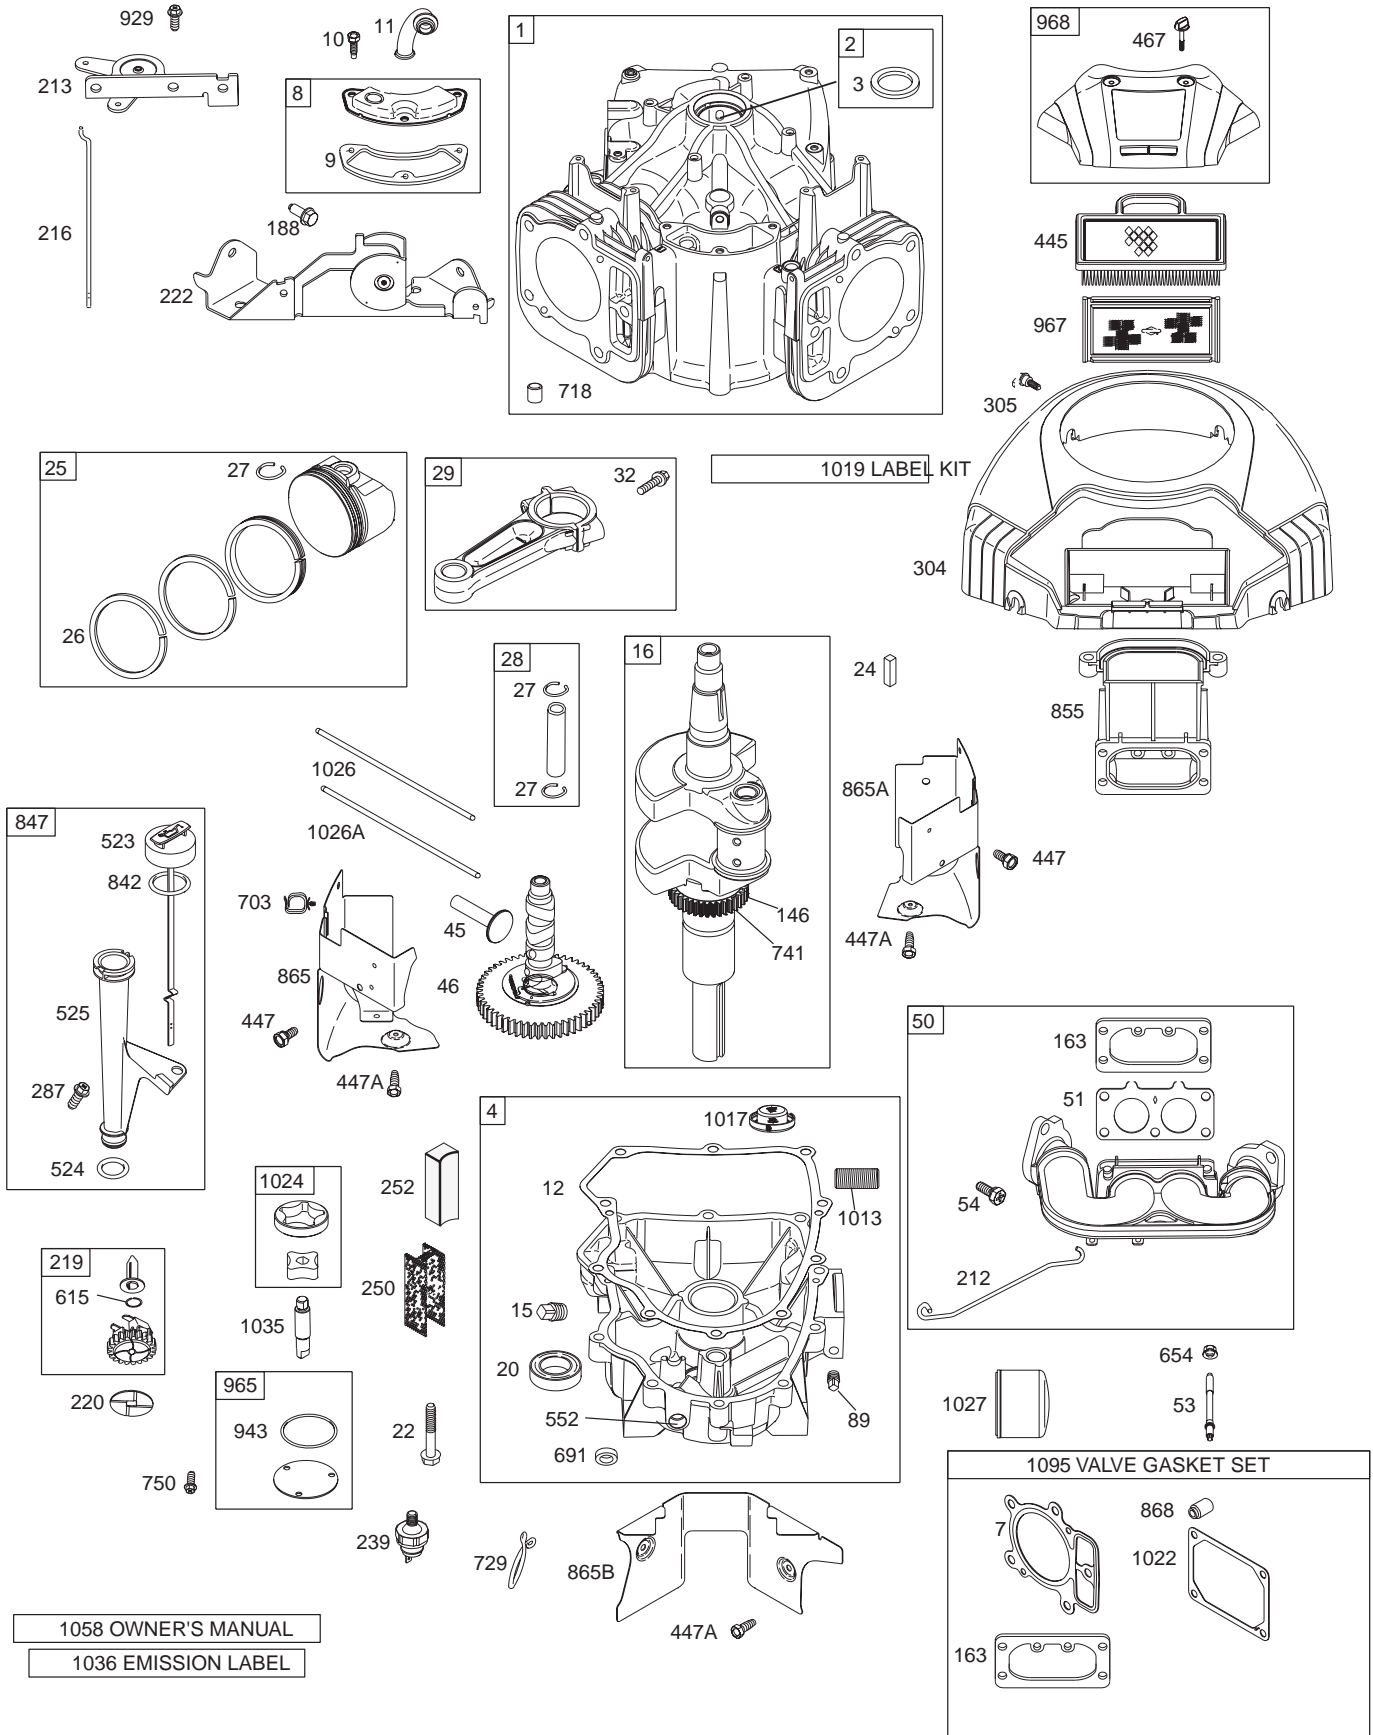




1058 OWNER'S MANUAL

1036 EMISSION LABEL

           ENGINE (LT1024)

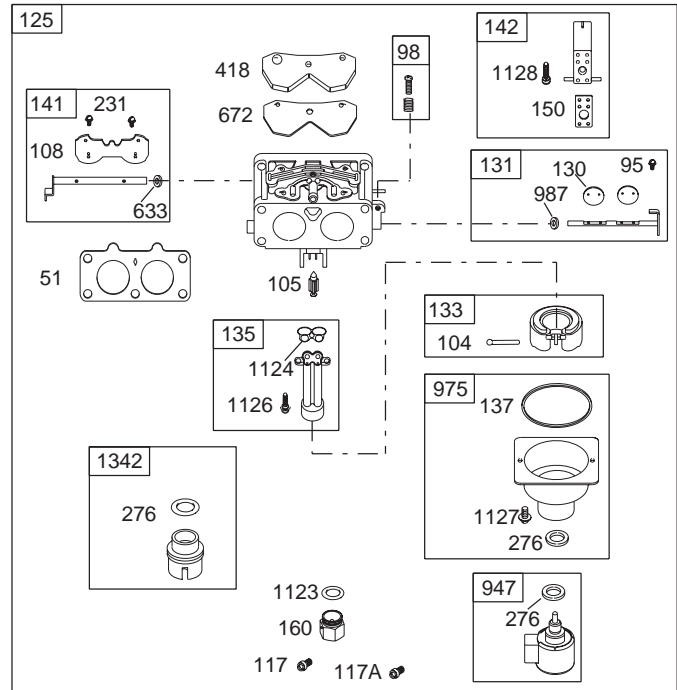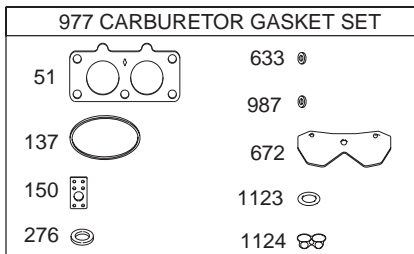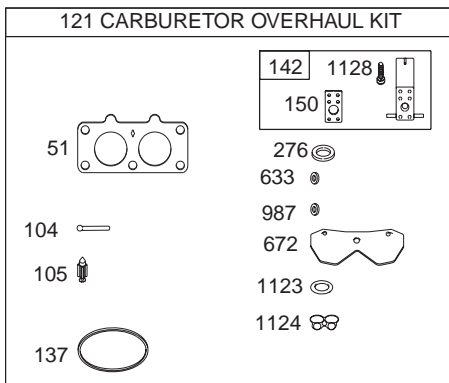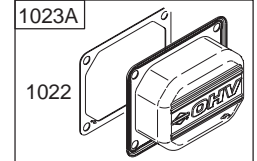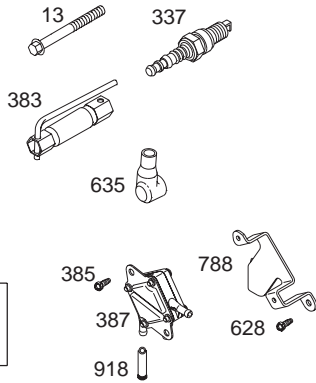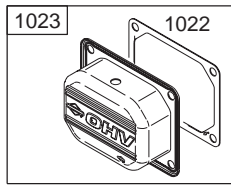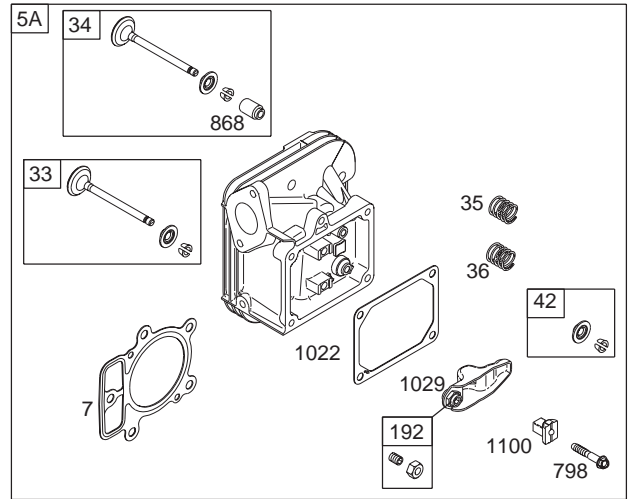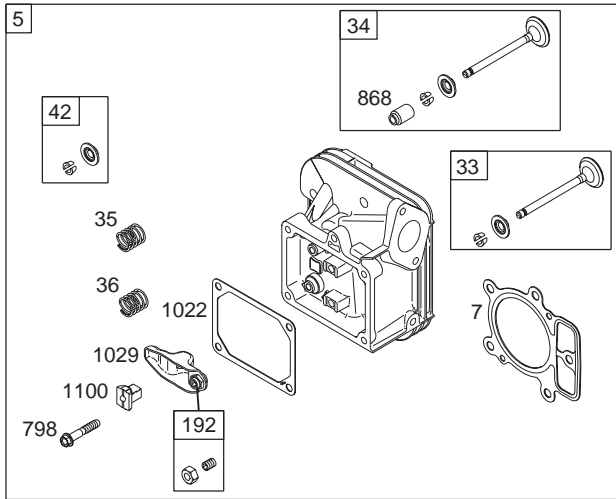

ENGINE (LT1024)

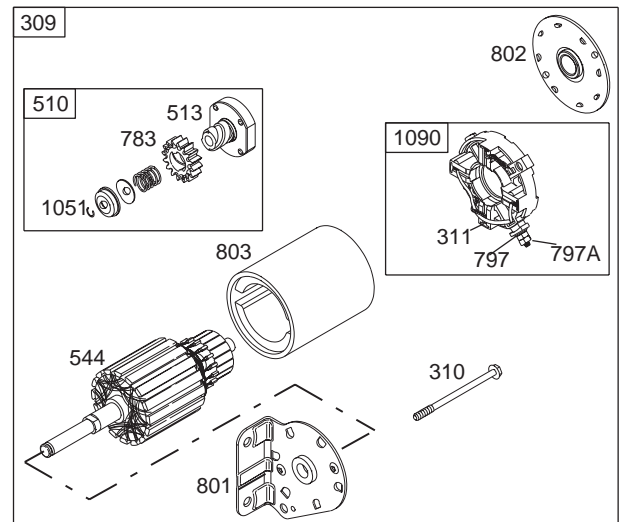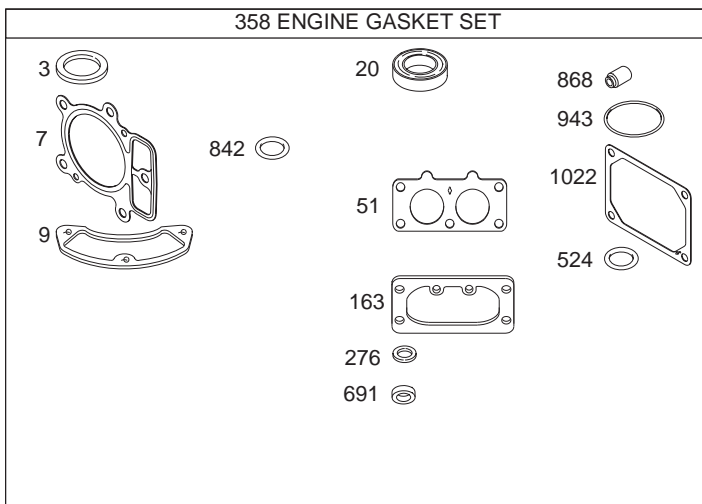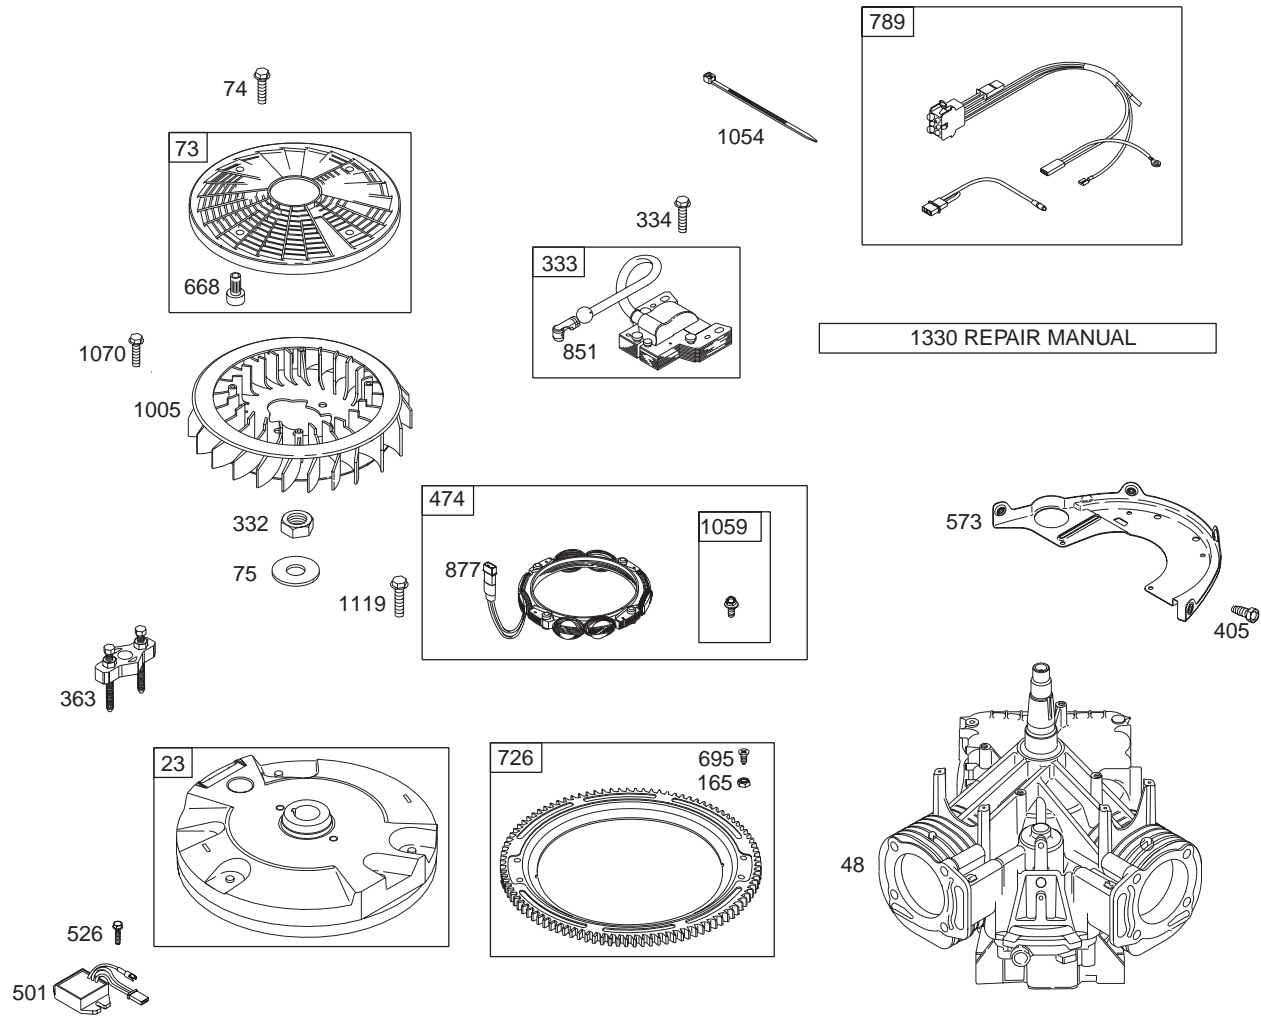   

- Included in Engine Gasket Set, Key. No. 358
- ∅ Included in Carburetor Overhaul Kit, Key. No. 121
- ‡ Included in Carburetor Gasket Set, Key. No. 977
- + Included in Valve Gasket Set, Key. No. 1095

ENGINE (LT1024)

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
1	699753	Cylinder Assembly	121	699734	Kit-Carburetor Overhaul
2	499585	Kit-Bushing/Seal (Magneto Side)	125	699709	Carburetor
3	391086•	Seal-Oil (Magneto Side)	130	690993	Valve-Throttle
4	699747	Sump-Engine	131	499805	Kit-Throttle Shaft
5	697580	Head-Cylinder (Cylinder 1)	133	699724	Float-Carburetor
5A	697581	Head-Cylinder (Cylinder 2)	135	699729	Tube-Fuel Transfer
7	693997•+	Gasket-Cylinder Head	137	690994Ø‡	Gasket-Float Bowl
8	499601	Breather Assembly	141	699722	Kit-Choke Shaft
9	690937•	Gasket-Breather	142	699726Ø	Nozzle-Carburetor
10	690960	Screw (Breather Assembly)	146	690979	Key-Timing
11	690942	Tube-Breather	150	690995Ø‡	Gasket-Nozzle
12	697227•	Gasket-Crankcase	160	699727	Retainer-Solenoid
13	690360	Screw (Cylinder Head)	163	691001•+	Gasket-Air Cleaner
15	690946	Plug-Oil Drain	165	693148	Nut (Ring Gear)
16	691046	Crankshaft	187	691050	Line-Fuel
20	690947•	Seal-Oil (PTO Side)	187A	691049	Line-Fuel (Molded)
22	694966	Screw (Engine Sump)	188	690960	Screw (Control Bracket)
23	691053	Flywheel	192	690083	Adjuster-Rocker Arm
24	222698	Key-Flywheel	209	697674	Spring-Governor
25	697679	Piston Assembly (Standard)	211	691019	Spring-Governed Idle
25	697681	Piston Assembly(.020")	212	695238	Link-Throttle
26	697683	Ring Set-Piston (Standard)	213	691021	Bracket-Choke Control
26	697685	Ring Set-Piston (.020")	216	691022	Link-Choke
27	690975	Lock-Piston Pin	219	698231	Gear-Governor
28	690229	Pin-Piston	220	690412	Washer (Governor Lever)
29	499583	Rod-Connecting	222	698761	Bracket-Control
32	690976	Screw (Connecting Rod)	227	691048	Lever-Governor Control
33	697576	Valve-Exhaust	231	690718	Screw (Choke Valve)
34	499597	Valve-Intake	239	491657	Switch-Oil Pressure
35	690963	Spring-Valve (Intake)	240	695666	Filter-Fuel
36	690963	Spring-Valve (Exhaust)	250	690957	Retainer-Breather
42	499586	Keeper-Valve	252	690956	Collector-Oil
45	690977	Tappet-Valve	276	690997•Ø+	Washer-Sealing
46	699748	Camshaft	287	690960	Screw (Dipstick Tube)
48	698172	Short Block	304	695277	Housing-Blower
50	695241	Manifold-Intake	305	691005	Screw (Blower Housing)
51	690950• Ø‡	Gasket-Intake	309	691262	Motor-Starter
53	690951	Stud (Carburetor)	310	691263	Bolt (Starter Motor)
54	695240	Screw (Intake Manifold)	311	497608	Brush Set
73	691055	Screen-Rotating	332	691059	Nut (Flywheel)
74	698425	Screw (Rotating Screen)	333	691060	Armature-Magneto
75	691056	Washer (Flywheel)	334	691061	Screw (Magneto Armature)
89	690283	Plug-Oil	337	491055	Plug-Spark
95	690718	Screw (Throttle Valve)	358	694012	Set-Engine Gasket
98	699721	Kit-Idle Speed	363	691062	Flywheel Puller
104	694918Ø	Pin-Float Hinge	383	690966	Wrench-Spark Plug
105	698537Ø	Valve-Float Needle	385	690960	Screw (Fuel Pump)
108	699723	Valve-Choke	387	808656	Pump-Fuel
117	699494	Jet-Main (Standard)	404	690442	Washer (Governor Crank)
117A	699495	Jet-Main (Standard)	405	697820	Screw (Back Plate)

ENGINE (LT1024)

REF. NO.	PART NUMBER	DESCRIPTION	REF. NO.	PART NUMBER	DESCRIPTION
418	690999	Plate-Carburetor	847	499602	Dipstick/Tube Assembly
445	698754	Filter-Air Cleaner Cartridge	851	493880	Terminal-Sparkplug
447	691003	Screw (Air Guide Cover)	855	691011	Adapter-Air
447A	690960	Screw (Air Guide Cover)	865	691012	Cover-Air Guide
467	691008	Knob, Air Cleaner	865A	691014	Cover-Air Guide
474	696458	Alternator	865B	691015	Cover-Air Guide
501	691185	Regulator	868	690968•+	Seal-Valve
505	691029	Nut (Governor Control Lever)	877	399916	Wire/Connector- Alternator
510	497606	Drive-Starter	914	691127	Screw (Rocker Cover)
513	692024	Clutch-Drive	918	694000	Hose-Vacuum
523	691036	Dipstick	929	695239	Screw (Choke Control Bracket)
524	691032	Seal-Dipstick Tube	943	690589•	Seal-O Ring (Oil Pump Cover)
525	691037	Tube-Dipstick	947	699728	Solenoid-Fuel
526	690960	Screw (Regulator)	965	499613	Cover-Oil Pump
544		Armature-Starter (Service with 691262 Starter Motor)	967	273638	Filter-Pre Cleaner
			968	499788	Cover-Air Cleaner
552	690552	Bushing-Governor Crank	975	499810	Bowl-Float
552A	690553	Bushing-Governor Crank	977	699735	Gasket Set-Carburetor
562	690311	Bolt (Governor Control Lever)	987	691000Ø‡	Seal-Throttle Shaft
573	691009	Plate-Back	1005	499603	Fan-Flywheel
601	691038	Clamp-Hose	1013	690954	Nipple-Oil Filter
615	698290	Retainer-Governor Shaft	1017	690770	Screen-Oil Pump
616	691045	Crank-Governor	1019	690103	Kit-Label
628	690960	Screw (Fuel Pump Bracket)	1022	690971	Gasket-Rocker Cover
633	690998Ø‡	Seal-Choke/Throttle Shaft	1023	499599	Cover-Rocker (Cylinder 1)
635	66538	Boot-Spark Plug	1023A	499600	Cover-Rocker (Cylinder 2)
654	690958	Nut (Carburetor)	1024	499054	Pump-Oil
668	691215	Spacer	1026	690981	Rod-Push (Steel)
672	690234Ø‡	Gasket-Carburetor Plate	1026	690982	Rod-Push (Aluminum)
691	690657•	Seal-Governor Shaft	1027	696854	Filter-Oil
695	693149	Screw (Ring Gear)	1029	690972	Arm-Rocker
697	690372	Screw (Drive Cap)	1035	691042	Shaft-Pump
703	691010	Clip	1036	695704	Label-Emission
718	690959	Pin-Locating	1051	691265	Ring-Retaining
726	499612	Gear-Ring	1054	280275	Cable-Tie
729	694123	Clip-Wire	1058	275475	Owner's Manual
741	690980	Gear-Timing	1059	698516	Kit-Screw/Washer
742	690328	Retainer-E Ring	1070	691058	Screw (Flywheel Fan)
750	696999	Screw (Oil Pump Cover)	1090	691293	Retainer-Brush
783	693058	Gear-Pinion	1095	699735	Gasket Set-Valve
788	691039	Bracket-Fuel Pump	1100	690973	Pivot-Rocker Arm
789	698330	Harness-Wiring	1119	691183	Screw (Alternator)
797	691029	Nut (Brush Retainer)	1123	699725Ø ‡	Seal-O Ring (Solenoid Retainer)
797A	693167	Nut (Brush Retainer)	1124	690988Ø ‡	Seal-O Ring (Fuel Transfer Tube)
798	690967	Screw (Rocker Arm)			
801	691283	Cap-Drive	1126	690991	Screw (Fuel Transfer Tube)
802	691286	Cap-End	1127	690992	Screw (Float Bowl)
803		Housing-Starter (Service with 691262 Starter Motor)	1128	690990Ø	Screw (Carburetor Nozzle)
			1330	273521	Repair Manual
842	691031•	Seal-Dipstick/Tube	1342	699731	Expansion-Fuel Transfer Tube

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019