

Program Entry Guide



Notice

The material and instructions in this document have been carefully checked for accuracy and are presumed to be reliable. However, Bosch Security Systems assumes no responsibility for inaccuracies and reserves the right to modify and revise this document without notice.

It is our goal at Bosch Security Systems to always supply accurate and reliable documentation. If a discrepancy is found in this documentation, please mail a photocopy of the corrected material to:

Bosch Security Systems
c/o Technical Writing Department
130 Perinton Parkway
Fairport, NY 14450

About This Document

This document describes the parameters available to the security panel for programming the D9210B Access Control Interface. For a description of the theory of operation and the actual operation of the unit, please refer to the *D9210B Operation and Installation Guide* (P/N:33206).

This document follows the organization of the RADXAXS handler in the D5200 Programmer or D5400 Remote Access Manager. Use the *ACCESS Program Record Training Sheet* (P/N:32208) to choose your entries prior to programming the device. Each programming section, program item, and its page number are listed in the table of contents on the following page.

Throughout this document, programming prompts are shown in bold italic letters when they are used in a sentence. For example, *Door #* is the first programming prompt in the *DOOR PROFILE* section of the program. Reference to handlers, modules, categories and sections of the program are shown in italic, capital letters.

For a more complete understanding of the panel and the D9210B Access Control Interface, read the following in addition to this program entry guide:

D9210B Operation and Installation Guide (P/N: 32206)
Security System Owner's Manual
Security System User Guide

Other Lettering Conventions used in this document

D6500 Security Receiver and local printer reports are shown in "typewriter style" letters. For example: ACCESS GRANTED indicates the report sent when the Access Control Interface detects a valid card read.

Generally, words shown in all capital letters with brackets indicate command center displays and command center keys. For example, [ESC] is a key on the command center. Depending on the context of the sentence, all capital letters may also indicate a recommended programming selection.

Table of contents

Notice 2
About This Document..... 2
DOOR PROFILE..... 4
Door #..... 4
D# Entry Area #..... 4
D# CC# Scope..... 4
D# Door Point..... 5
D# Interlock Point..... 5
D# Auto Door?..... 6
D# Fire Unlock?..... 6
D# Disarm On Open? 6
STRIKE PROFILE 7
Door #..... 7
D# Strike Time..... 7
D# Shunt Time 7
D# Buzz Time..... 7
D# Extend Time..... 8
D# Deact On Open?..... 8
D# RTEShunt Only?..... 9
D# REXShunt Only?..... 9
Door #..... 10
D# Access Granted? 10
D# No Entry?..... 10
D# Enter Request?..... 11
D# Exit Request?..... 11

DOOR PROFILE

This programming category is used to:

- Assign an area which also activates the D9210B
- Assign a point to the door
- Program the door state to change when the arm state changes
- Allow for the strike relay to activate upon a fire alarm

Door

Default: 1

Selections: 1 - 8

Enter the number of the door you are about to program.

Note: The D9412 supports 8 doors; the D7412 supports 2 doors.

D# Entry Area

Default: Blank

Selections: Blank, 1 - 8

Assign an area to the door controller. This entry allows the D9210B to be polled activating communication to the panel. This also is the area a user will exit when initiating a *Request to Exit* [REX].

1 - 8 The area assigned to the door controller to which the reader will allow access.

Blank Door controller will not function.

Note: All SDI devices, regardless of area assigned, will report to Area 1, Account 1 by default upon SDI failure. If a D9210B becomes disconnected, SDI Fail ## and MISSING POINT ### events will be created.



Programming Tip

9210 NOT READY will appear at this command center when you press the [ENTER] key if the D9210B is not programmed with a D# Entry Area.

D# CC# Scope

Default: Blank

Selections: Blank, 1 - 8

Enter the Command Center number [CC#] which determines the scope of the user ID's disarming rights. Areas will disarm on the basis of this Command Center's scope and the Authority Level of the user.

1 - 8 This *CC# Scope* determines disarming rights. The user's access level in conjunction with the *CC # Scope* will determine which areas will be disarmed.

Blank Only the area assigned to the *D# Entry Area* will disarm for this door.

D# Door Point

Default: Blank

Selections: Blank, 1 - 127, 129 - 247

Enter the point number that will be assigned to this door. This point cannot be used for any other point assignments.

Note: *Door Points must be programmed as Perimeter Points. If a 24 hour point type is required for the Door Point, you may use a Perimeter Point Type with a Point Response of 9 - C. Also, the Debounce Count must be set to 4 in Point Assignments.*

1 - 127, 129 - 247 The point number assigned to this door. Points 128 and 248 are reserved by the panel for internal use.

Blank There is no point number assigned to this door.



When assigning points 18 (panel zones), the end of line resistors must be removed from the panel. In addition to this, do not enable any POPIT points (or OctoPOPIT points) sharing the same point number as the Door Point. Failure to do so will result in Extra Point trouble conditions upon reboot.

D# Interlock Point

Default: Blank

Selections: Blank, 1 - 127, 129 - 247

Enter the interlock point number. This point, when faulted, will prevent the door controller from allowing access upon a valid ID read or door request.

Do not assign this point to another door point. You may assign it to another controller thereby having one interlock point prevent multiple controllers from activating.

1 - 127, 129 - 247 The point number assigned to the interlock point. Points 128 and 248 are reserved by the panel for internal use.

Blank There is no point number assigned to the interlock point.



The interlock point will be considered in a normal state if it is bypassed swinger bypassed or forced armed. This will result in normal operation of access even if the door is left open.

D# Auto Door?

Default: No

Selections: Yes or No

Use this program item to unlock the door (latched shunt and strike) automatically when the entry area is disarmed. The door will re-lock upon Master or Perimeter Arming the area.

Yes When the area assigned in *D# Entry Area #* is disarmed, the door will be in the Unlocked state. When that area is armed, the door will return to the Locked state.

No Door state will not be affected by the armed state of the area.



The Unlocked state cannot be overridden manually.

Note: *Doors that are activated by Fire Unlock must be returned to normal using the Door Control function on the control center.*

D# Fire Unlock?

Default: No

Selections: Yes or No

Use this program item to activate the relay for the door strike and shunt the door zone automatically upon a Fire Alarm. This feature will override a Secure Door state, Locked Door state, Auto Door, and an Interlock faulted point. The relay will activate for all doors with this prompt programmed [YES] when a Fire Alarm occurs in any area. Relays that are activated by Fire Unlock can only be returned to normal through the Command Center using the *Door Control* function.

Yes Relay will activate and shunt will be applied for the door contact automatically upon a Fire Alarm.

No Door will remain in its current mode upon a Fire Alarm.



This will unlock the door regardless of the armed state.

D# Disarm On Open?

Default: No

Selections: Yes or No

Use this program item to determine whether the door needs to be physically opened prior to disarming the area upon a valid access request. The user initiating the access request must have access levels that allow disarming with ID.

Yes The area will disarm only after the door has been opened for a user with a valid disarm level.

No The area will disarm whether or not the door has been opened as soon as a user with a valid disarm level has presented a valid token/card.

STRIKE PROFILE

This programming category is used to create a specific door profile on:

- Strike and shunt times.
- Extending strike and shunt times if a door is left open.
- Resetting the strike when the door opens.
- Programming the interlock point.

Door

Default: 1

Selections: 1 - 8

Enter the door you are programming.

D# Strike Time

Default: 10

Selections: 1 - 240 seconds

Enter the amount of time the relay output for the strike will activate to allow a user to open the door. The strike will activate upon a valid token, *Request to Enter* [RTE], *Request to Exit* [REX], and the *Command Center* [CYCLE DOOR?] function.

Blank Strike Time is not programmed for this door.

1 - 240 The strike will activate for the amount of time programmed.

D# Shunt Time

Default: 10

Selections: Blank, 1 - 240 seconds

Enter the amount of time that the door point will be shunted to allow a user to open the door without causing the point to go into Trouble, Alarm or a faulted condition.

Blank Shunt Time is not programmed for this door.

1 - 240 The shunt will activate for the amount of time programmed.

D# Buzz Time

Default: 2

Selections: Blank, 1 - 240 seconds

Enter the amount of time that the buzzer output will activate to notify the user that the strike has been activated and the door is ready to open. The buzzer will stop as soon as the door is opened.

Note: A separate buzzer is required. Many readers have an internal buzzer that is not affected by Buzz Time.

Blank Buzz Time is not programmed for this door.

1 - 240 The buzzer will sound for the amount of time programmed.

D# Extend Time

Default: 10

Selections: Blank, 1 - 30 Seconds

Enter the amount of time that strike, buzz and shunt activation will be prolonged if a door is left open and the shunt time expires. At the end of the programmed extend time, the buzzer will continue to buzz until the door is closed. In addition, if programmed, the point assigned to the door will indicate a Trouble, Alarm or Fault at the command center.

Note: CLOSE DOOR # *display on Command Center will not activate if no time (blank) is programmed.*



Application
Tip

Regardless of how the door point is programmed, the system will generate a Trouble Door Left Open event while the system is disarmed and an Alarm Door Left Open event if the system is armed and the door is held open beyond Extend Time. Door Closed Restoral events are generated after the door is held open past Extend Time and the door has returned to normal.

D# Deact On Open?

Default: Yes

Selections: Yes or No

This program item determines whether the strike will deactivate immediately upon physically opening the door.

Yes Strike will deactivate when the door is opened after a valid access granted request.

No Strike will remain activated for the amount of the programmed strike time whether door is opened or closed.



Programming
Tip

In order for this function to work a point needs to be assigned to the door.

TO REDUCE FALSE ALARMS: We recommend that you maintain this programming item as defaulted [YES]. This will help prevent the door from “bouncing” open and causing a false alarm.

D# RTEShunt Only?

Default: No

Selections: Yes or No

Use this program item to disable the strike, but still activate the programmed shunt time upon a *Request to Enter* an area.

Yes Programmed shunt time will activate so door can be manually opened.

No *Request to Enter* [RTE] automatically activates the programmed strike and shunt time.

Application
Tip

Use this parameter when a user can open a door manually without relying on a token/card to activate the strike (such as with a “push bar”).

Note: When RTEShunt Only is [Yes,] Request To Enter events are not logged, reported, or printed.

D# REXShunt Only?

Default: No

Selections: Yes or No

Use this program item to disable the strike, but still activate the programmed shunt time upon a *Request to Exit* an area.

Yes Programmed shunt time will activate so door can be manually opened.

No *Request to Exit* [REX] automatically activates the programmed strike and shunt time.

Application
Tip

Use this parameter when a user can open a door manually without relying on a token/card to activate the strike (such as with a “push bar”).

Note: When REXShunt Only is [YES], Request To Exit events are not logged, reported, or printed.

EVENT PROFILE

This programming category is used to determine if events are created for:

- Access Granted and Access Denied
- Door Requests
- Door state changes due to manual (command center) or automatic scheduled or armed state changes (skeds/hold open on disarm, normal on armed) operation.

Door

Default: 1

Selections: 1 - 8

Enter the door you are about to program.



RTE events require Access Granted to be programmed [YES].

D# Access Granted?

Default: No

Selections: Yes or No

This program item determines if ACCESS GRANTED and DOOR REQUEST events are sent to the panel for processing memory, printing, and remote reporting.

A successful access event can be initiated by a:

valid user ID

valid door state changed at the command center

automatically scheduled or armed state changes that hold a door open

request to enter/exit [RTE/REX].

Yes Access events from this door controller will be sent to the panel for processing.

No Access events from this door controller will not be sent to the panel for processing.

D# No Entry?

Default: No

Selections: Yes or No

This program item determines if NO ENTRY events are sent to the panel for processing memory, printing, and remote reporting.

A *No Entry* event may be caused by:

invalid or unknown user ID, interlock or secured door, or incorrect authority level

request to enter/exit [RTE/REX] for door in interlock or secured door.

Yes Access denied events from this door controller will be sent to the panel for processing.

No Access denied events from this door controller will not be sent to the panel for processing.

D# Enter Request?

Default: No

Selections: Yes or No

This program item determines if *Request to Enter* [RTE] events are sent to the panel for processing memory, printing, and remote reporting.

Yes A DOOR REQUEST TO ENTER event from this door controller is sent to the panel for processing.

No A DOOR REQUEST TO ENTER event from this door controller is not sent to the panel for processing.



RTE events require D# Access Granted to be programmed [YES].

D# Exit Request?

Default: No

Selections: Yes or No

This program item determines if *Request to Exit* [REX] events are sent to the panel for processing memory, printing, and remote reporting.

Yes A DOOR REQUEST TO EXIT event from this door controller is sent to the panel for processing.

No A DOOR REQUEST TO EXIT event from this door controller is not sent to the panel for processing.



REX events require D# Access Granted to be programmed [YES].

