



098900

Illustrated Parts List

Model Series

098900

TYPE NUMBERS
0101 through 2254.

TABLE OF CONTENTS


Air Cleaner	5
Blower Housing/Shrouds	7
Brake	6
Camshaft	3
Carburetor	4
Controls	5
Crankcase Cover/Sump	3
Crankshaft	3
Cylinder	2
Cylinder Head	2
Exhaust System	6
Flywheel	7
Fuel Supply	4
Gasket Set - Engine	2
Gasket Set - Valve	2
Governor Spring	5
Ignition	5
Lubrication	2
Operator's Manual	2
Piston/Rings/Connecting Rod	3
Rewind Starter	7
Warning Label	2




PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

1058 OPERATOR'S MANUAL

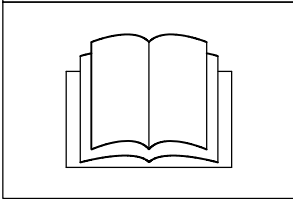

1330 REPAIR MANUAL

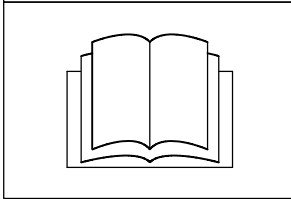


1319 WARNING LABEL




WARNING	
	Read and follow Operating Instructions before running engine.
	Gasoline is flammable. Allow engine to cool at least 2 minutes before refueling.
	Engines emit carbon monoxide, DO NOT run in enclosed area.
	Muffler area temperature may exceed 150°F. Do not touch hot parts.


REQUIRED when replacing parts with warning labels affixed.



358 ENGINE GASKET SET

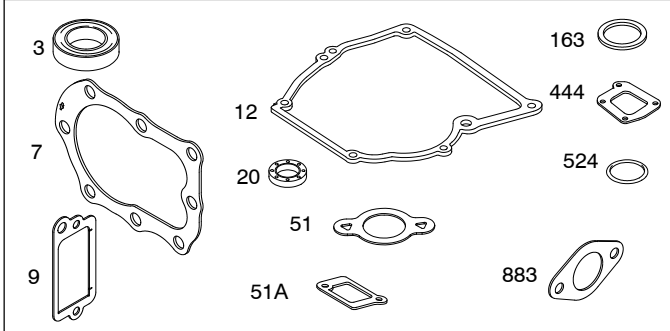



1095 VALVE GASKET SET

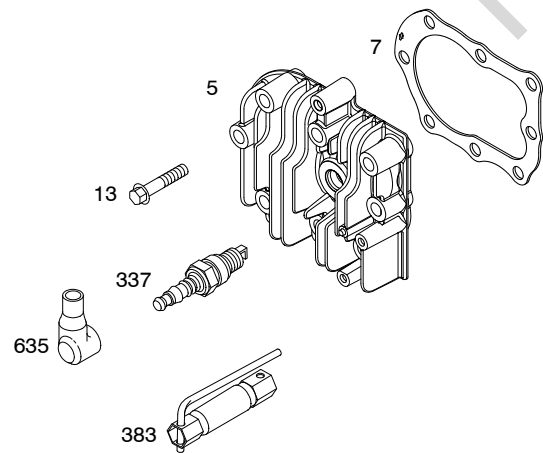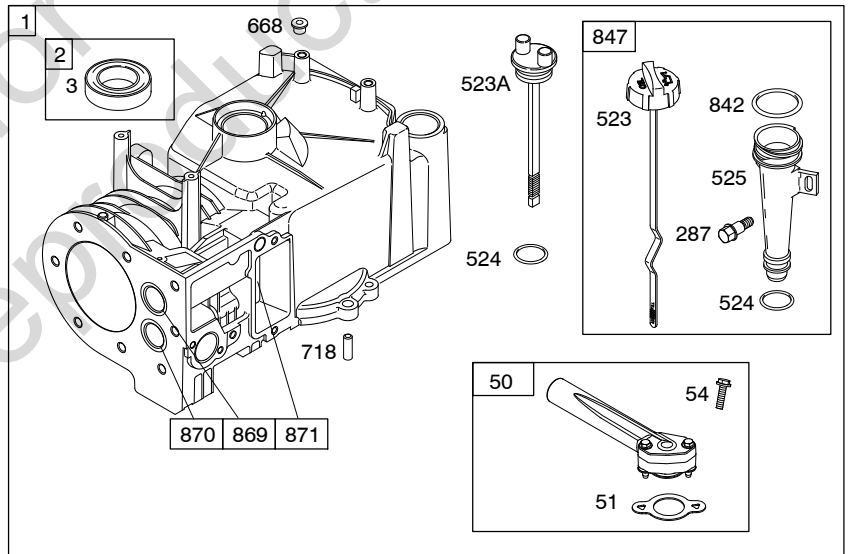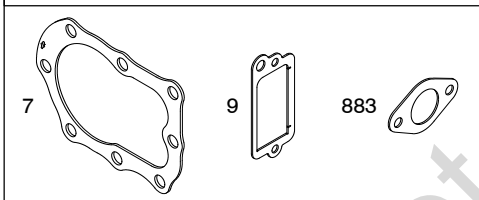


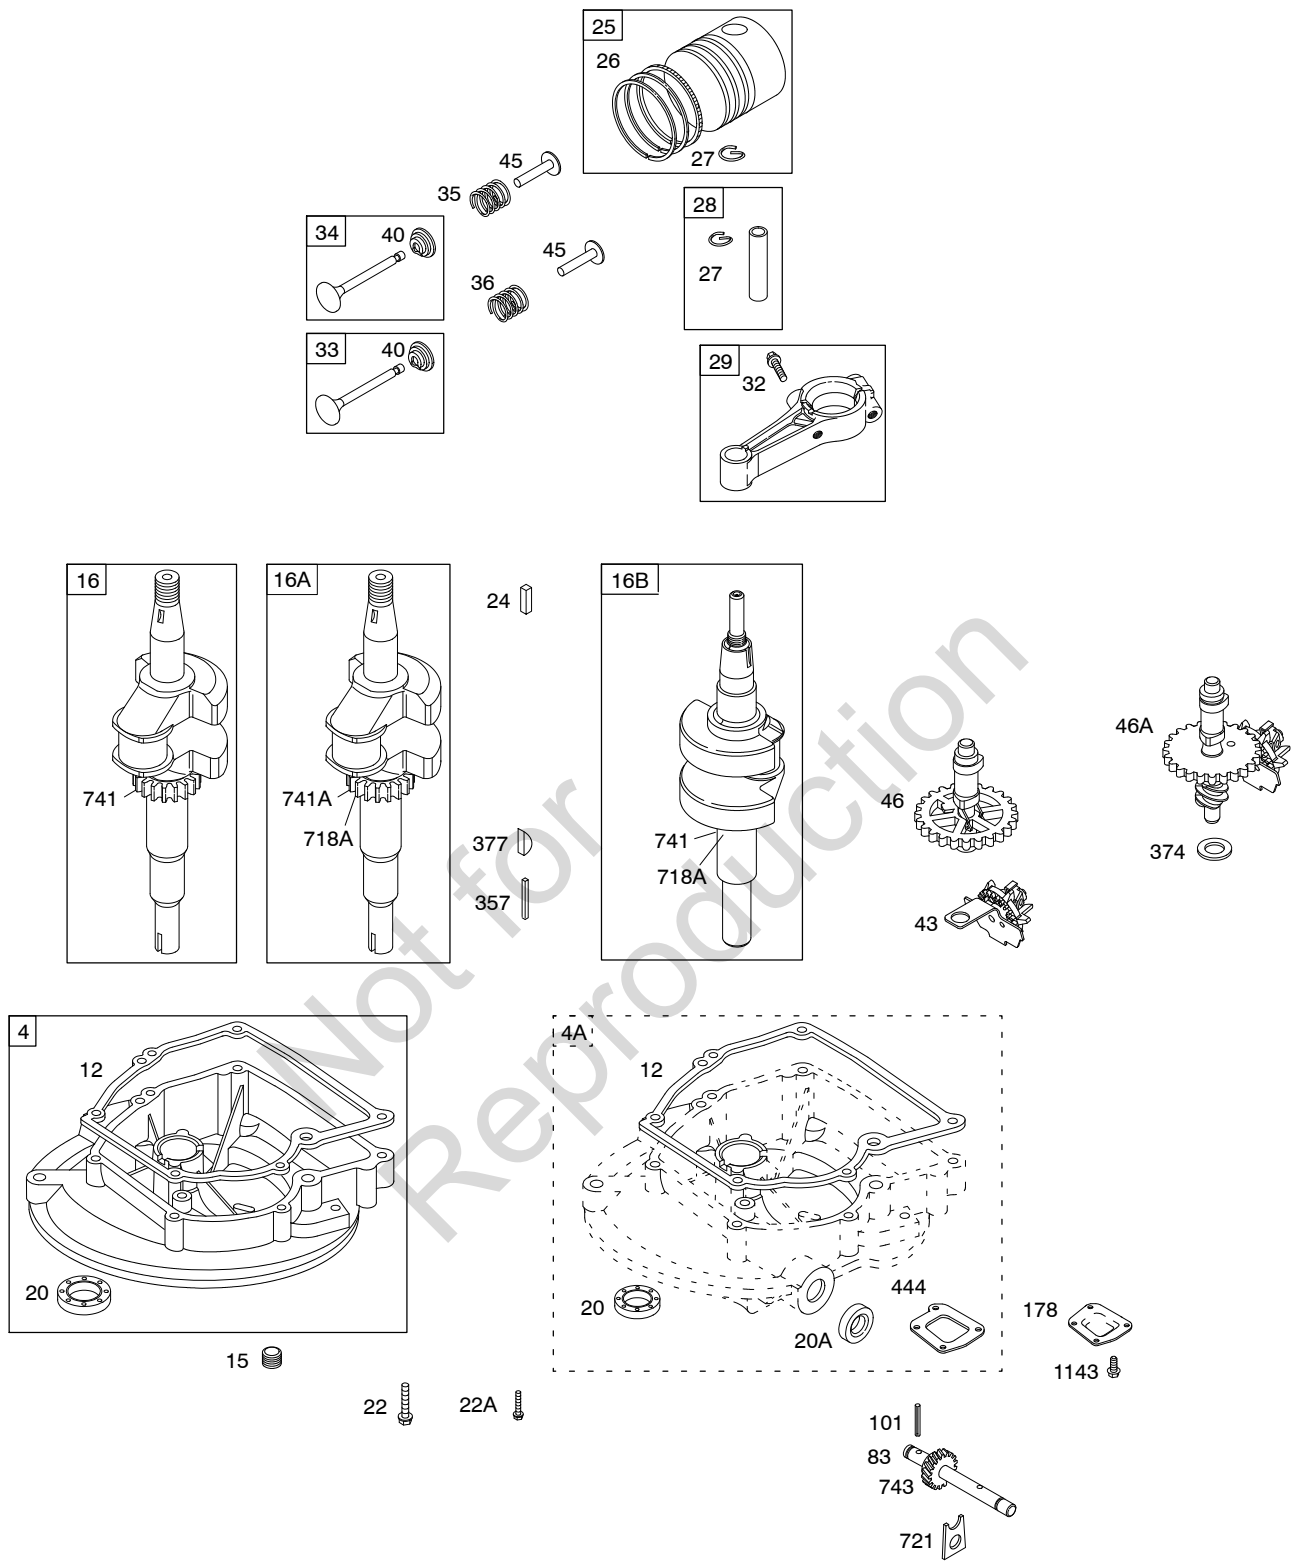

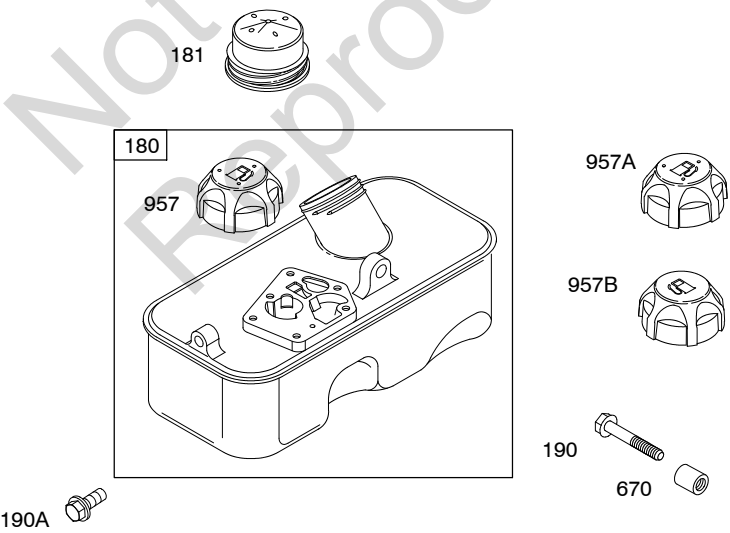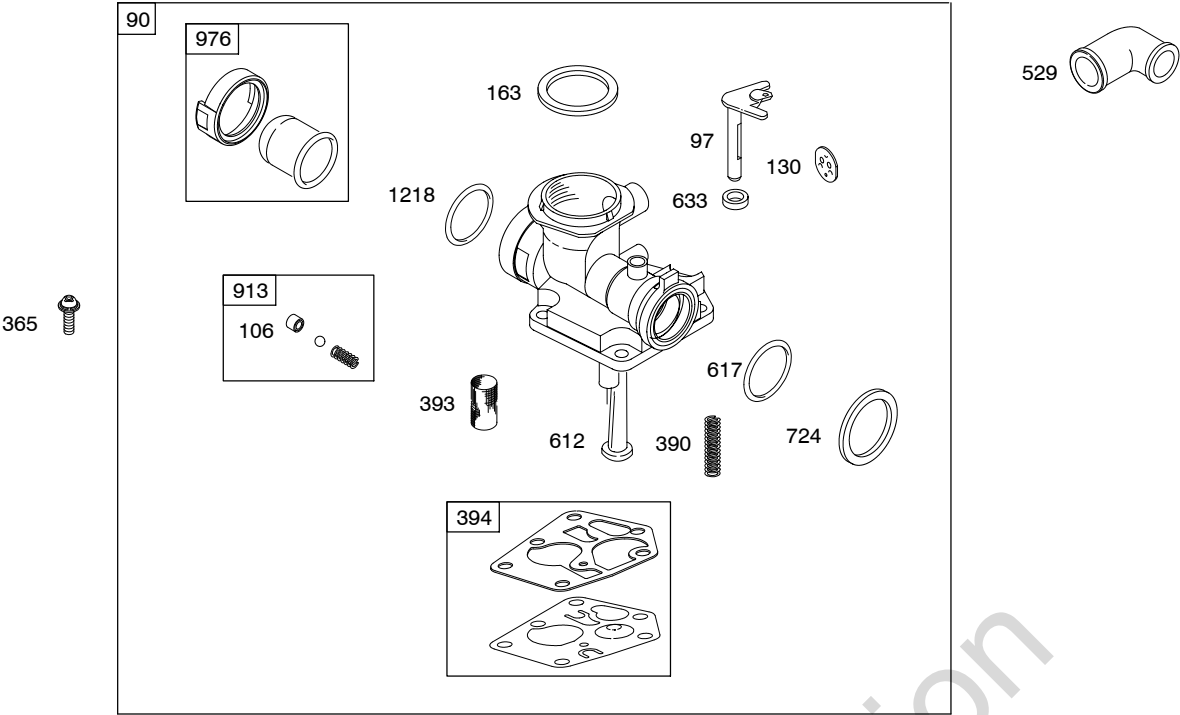

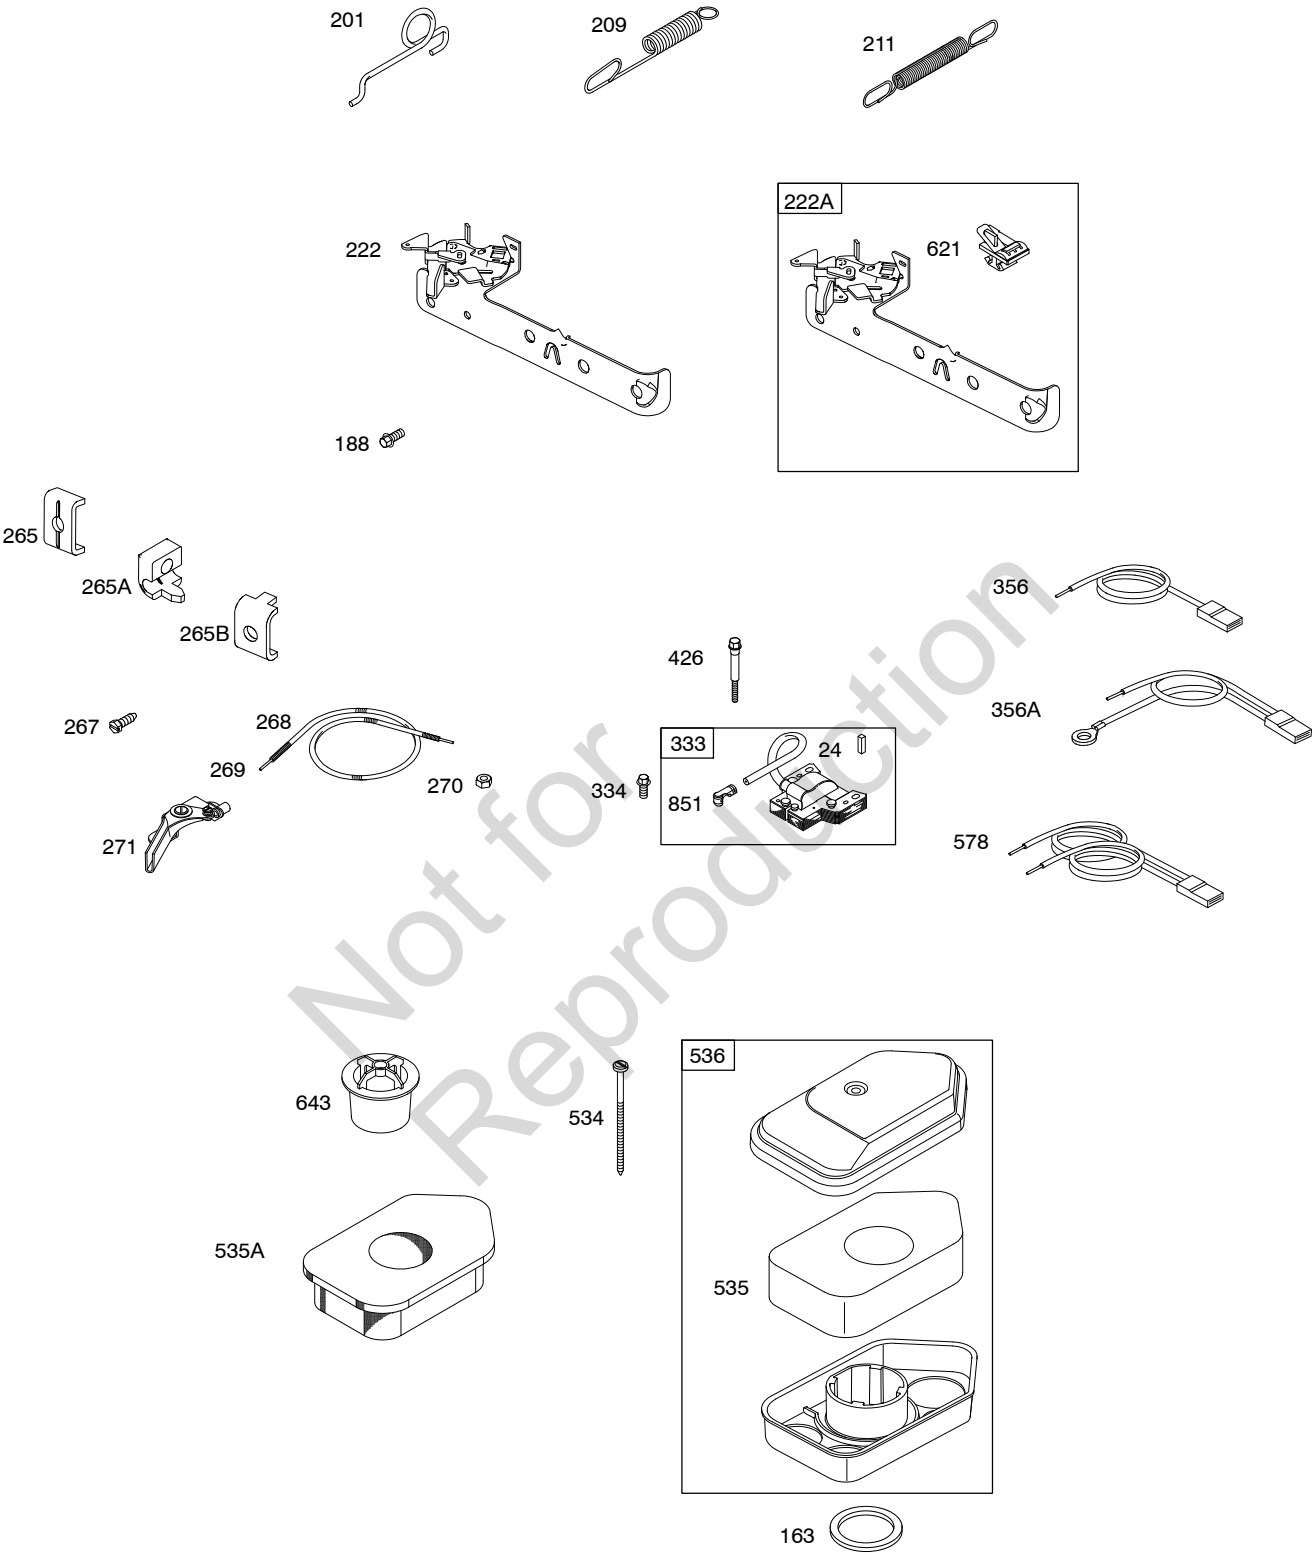

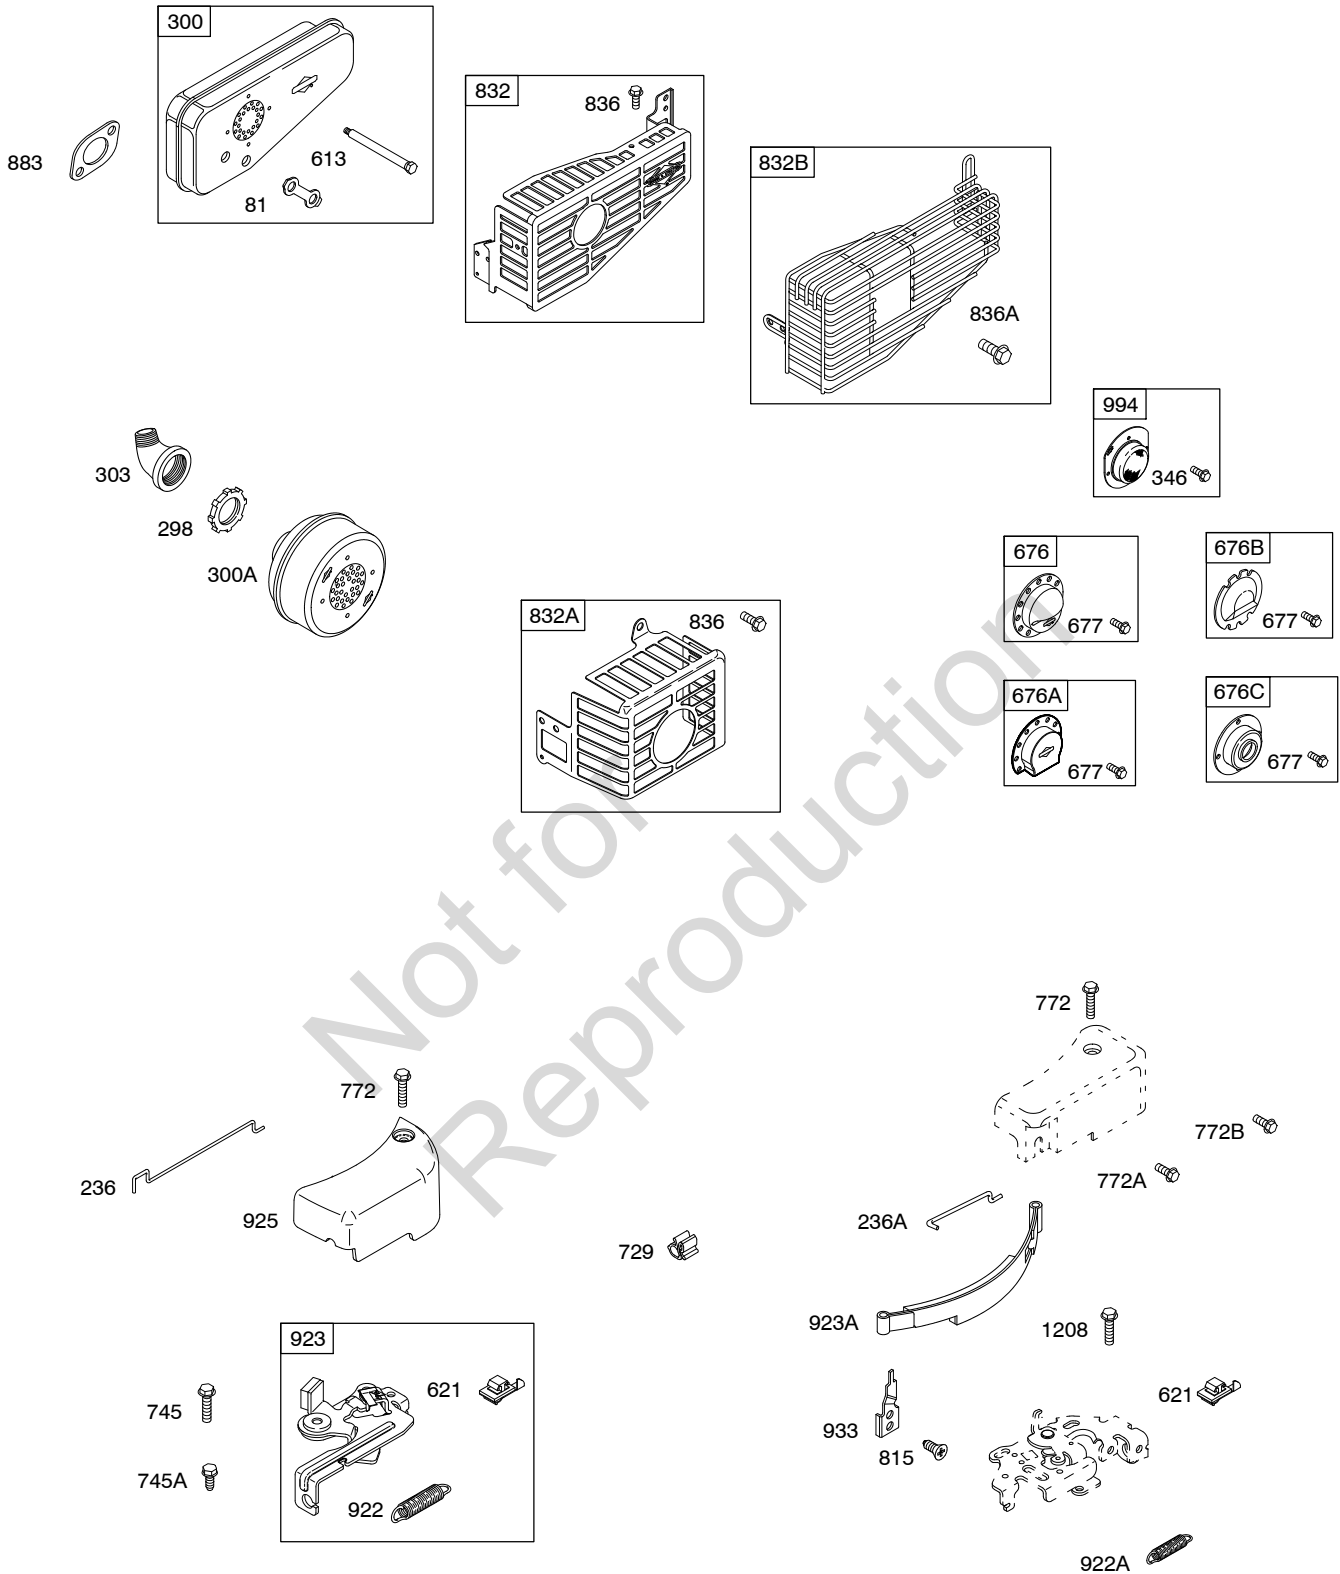 



098900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	699653	Cylinder Assembly			----- Note -----			793062 Crankshaft
2	399269	Kit-Bushing/Seal (Magneto Side)			796211 Crankshaft (Used After Code Date 08071300).			Used on Type No(s). 0115, 0120, 0123, 0128, 0129, 0131, 0132, 0144, 0145, 0151, 0197, 0198, 0306, 0308, 0312, 0313, 0320, 0321, 0323, 0326, 0337, 0338, 0344, 0347, 0350, 0353, 0354, 0358, 0366, 0371, 0373, 0374, 0378, 0380, 0381, 0383, 0386, 0388, 0389, 0395, 0401, 0837, 1144, 1316, 1516, 1644, 2023, 2044, 2045, 2047, 2064, 2098, 2137, 2144, 2147, 2181, 2186, 2213, 2216, 2227, 2232, 2235, 2236, 2238, 2240.
3	299819S	Seal-Oil (Magneto Side)			Used on Type No(s). 1616, 2013, 2032, 2065, 2078, 2086, 2087, 2100, 2101, 2166, 2178, 2180, 2250, 2251, 2253, 2254.			793062 Crankshaft (Used Before Code Date 08071400).
4	698691	Sump-Engine (Used After Code Date 02111200).			----- Note -----			Used on Type No(s). 1616, 2013, 2032, 2065, 2078, 2086, 2087, 2100, 2101, 2166, 2178, 2180, 2250, 2251, 2253, 2254.
		----- Note -----			395384 Sump-Engine (Used Before Code Date 02111300).			796213 Crankshaft (Used After Code Date 08071300).
4A		Sump-Engine (NO LONGER AVAILABLE)			Used on Type No(s). 1618.			Used on Type No(s). 1616, 2013, 2032, 2065, 2078, 2086, 2087, 2100, 2101, 2166, 2178, 2180, 2250, 2251, 2253, 2254.
5	790169	Head-Cylinder	16A	692990	Crankshaft			793062 Crankshaft (Used Before Code Date 08071400).
7	698717	Gasket-Cylinder Head			Used on Type No(s). 0899, 1110, 2026, 2027, 2028, 2029, 2066, 2077, 2085, 2093, 2097, 2099, 2109, 2125, 2163, 2179, 2192, 2194, 2198, 2203, 2207, 2209, 2215, 2229, 2231, 2242, 2243, 2244, 2246.			Used on Type No(s). 1616, 2013, 2032, 2065, 2078, 2086, 2087, 2100, 2101, 2166, 2178, 2180, 2250, 2251, 2253, 2254.
8	791781	Breather Assembly			----- Note -----			692991 Crankshaft (Used Before Code Date 08071400).
9	695890	Gasket-Breather			692990 Crankshaft (Used Before Code Date 08071400).			Used on Type No(s). 1602, 1615, 1650, 1651, 2000, 2001, 2002, 2011, 2012, 2030, 2031, 2033, 2063, 2069, 2070, 2139, 2210, 2239, 2249, 2252.
10	691666	Screw (Breather Assembly)			Used on Type No(s). 1602, 1615, 1650, 1651, 2000, 2001, 2002, 2011, 2012, 2030, 2031, 2033, 2063, 2069, 2070, 2139, 2210, 2239, 2249, 2252.			Used on Type No(s). 1602, 1615, 1650, 1651, 2000, 2001, 2002, 2011, 2012, 2030, 2031, 2033, 2063, 2069, 2070, 2139, 2210, 2239, 2249, 2252.
11	691245	Tube-Breather			----- Note -----			692991 Crankshaft (Used Before Code Date 08071400).
12	692218	Gasket-Crankcase (Standard) (.015" Thick)			692990 Crankshaft (Used Before Code Date 08071400).			Used on Type No(s). 1602, 1615, 1650, 1651, 2000, 2001, 2002, 2011, 2012, 2030, 2031, 2033, 2063, 2069, 2070, 2139, 2210, 2239, 2249, 2252.
		----- Note -----			----- Note -----			Used on Type No(s). 1602, 1615, 1650, 1651, 2000, 2001, 2002, 2011, 2012, 2030, 2031, 2033, 2063, 2069, 2070, 2139, 2210, 2239, 2249, 2252.
		270895 Gasket-Crankcase (.005" Thick)			692990 Crankshaft (Used Before Code Date 08071400).			Used on Type No(s). 1602, 1615, 1650, 1651, 2000, 2001, 2002, 2011, 2012, 2030, 2031, 2033, 2063, 2069, 2070, 2139, 2210, 2239, 2249, 2252.
		270896 Gasket-Crankcase (.009" Thick)			Used on Type No(s). 1602, 1615, 1650, 1651, 2000, 2001, 2002, 2011, 2012, 2030, 2031, 2033, 2063, 2069, 2070, 2139, 2210, 2239, 2249, 2252.			Used on Type No(s). 1602, 1615, 1650, 1651, 2000, 2001, 2002, 2011, 2012, 2030, 2031, 2033, 2063, 2069, 2070, 2139, 2210, 2239, 2249, 2252.
13	691640	Screw (Cylinder Head)			----- Note -----			692991 Crankshaft (Used Before Code Date 08071400).
15	691680	Plug-Oil Drain			692990 Crankshaft (Used Before Code Date 08071400).			Used on Type No(s). 1602, 1615, 1650, 1651, 2000, 2001, 2002, 2011, 2012, 2030, 2031, 2033, 2063, 2069, 2070, 2139, 2210, 2239, 2249, 2252.
16	796212	Crankshaft (Used After Code Date 08071300).			Used on Type No(s). 1602, 1615, 1650, 1651, 2000, 2001, 2002, 2011, 2012, 2030, 2031, 2033, 2063, 2069, 2070, 2139, 2210, 2239, 2249, 2252.			Used on Type No(s). 1602, 1615, 1650, 1651, 2000, 2001, 2002, 2011, 2012, 2030, 2031, 2033, 2063, 2069, 2070, 2139, 2210, 2239, 2249, 2252.
		Used on Type No(s). 1602, 1615, 1650, 1651, 2000, 2001, 2002, 2011, 2012, 2030, 2031, 2033, 2063, 2069, 2070, 2139, 2210, 2239, 2249, 2252.			----- Note -----			Used on Type No(s). 1602, 1615, 1650, 1

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
0235-8 Assemblies include all parts shown in frames. 02/03/2010

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
16B	492748	Crankshaft ----- Note ----- 496069 Crankshaft Used on Type No(s). 0130, 2030. 690805 Crankshaft Used on Type No(s). 0125, 0139, 0140, 0143, 0148, 0167, 0322, 0328, 0364, 0402, 0866, 0891, 1303, 1304, 1305, 1318, 1518, 2043. 493618 Crankshaft Used on Type No(s). 0119, 0137, 0141, 0341, 0359, 0382.	23	795549	Flywheel ----- Note ----- 795695 Flywheel (Used After Code Date 08012900). Used on Type No(s). 1602, 1603, 2069, 2250, 2251. 690843 Flywheel (Used Before Code Date 08013000). Used on Type No(s). 1602, 1603, 2069, 2250, 2251. 690843 Flywheel Used on Type No(s). 0115, 0132, 0137, 0138, 0139, 0141, 0143, 0145, 0328, 0345, 0346, 0347, 0358, 0364, 0369, 0382, 0386, 0395, 0890, 1302, 1303, 1304, 1305, 1446, 2043, 2044, 2045, 2047, 2050, 2146, 2147, 2186, 2222, 2224, 2228.			792532 Piston Assembly (.020" Oversize) (Used After Code Date 04111400). 298906 Piston Assembly (.020" Oversize) (Used Before Code Date 96020600).
20	391483S	Seal-Oil (PTO Side)	24	222698S	Key-Flywheel	26	795132	Ring Set (Standard) (Used After Code Date 04111400). ----- Note ----- 699658 Ring Set (Standard) (Used After Code Date 030803000 and Before Code Date 04111500). 498680 Ring Set (Standard) (Used After Code Date 96020500 and Before Code Date 03080400). 298982 Ring Set (Standard) (Used Before Code Date 96020600).
20A	691952	Seal-Oil (PTO Side) (Auxiliary PTO)	25	790908	Piston Assembly (Standard) (Used After Code Date 04111400). ----- Note ----- 699657 Piston Assembly (Standard) (Used After Code Date 030803000 and Before Code Date 04111500). 790908 Piston Assembly (Standard) (Used After Code Date 96020500 and Before Code Date 03080400). 793214 Piston Assembly (Standard) (Used Before Code Date 96020600).			795134 Ring Set (.020" Oversize) (Used After Code Date 04111400). 498682 Ring Set (.020" Oversize) (Used After Code Date 96020500 and Before Code Date 04111500). 298984 Ring Set (.020" Oversize) (Used Before Code Date 96020600).
22	692551	Screw (Crankcase Cover/Sump) (1 3/16" Long)				27	691588	Lock-Piston Pin
22A	691108	Screw (Crankcase Cover/Sump) (3/4" Long)				28	699659	Pin-Piston (Standard) (Used After Code Date 03080300). ----- Note ----- 298909 Pin-Piston (Standard) (Used Before Code Date 03080400).

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

098900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION		
29	699655	Rod-Connecting (Standard)	50A	693446	Manifold-Intake (Used Before Code Date 03080400).	78	692198	Screw (Flywheel Guard)		
32	691664	Screw (Connecting Rod)	51	699649	Gasket-Intake (Used After Code Date 03080300).	81	691179	Lock-Muffler Screw		
33	296676	Valve-Exhaust	51A	270345S	Gasket-Intake (Used Before Code Date 03080400).	83	691240	Shaft-Auxiliary Drive		
34	296677	Valve-Intake	54	691111	Screw (Intake Manifold)	----- Note -----				
35	690520	Spring-Valve (Intake)	55	692144	Housing-Rewind Starter	690506 Shaft-Auxiliary Drive				
36	690520	Spring-Valve (Exhaust)	56	281336S	Pulley-Starter	Used on Type No(s). 0396, 1350, 1650, 2196.				
37	690482	Guard-Flywheel (Carburetor Side)	57	490179	Spring-Rewind Starter	690514 Shaft-Auxiliary Drive				
37A	691209	Guard-Flywheel (Muffler Side)	58	697316	Rope-Starter (88 5/8" Long)	Used on Type No(s). 0147, 0317, 0319, 0390, 0399, 0407, 2207.				
40	692194	Retainer-Valve	58A	691921	Rope-Starter (70" Long)	691249 Shaft-Auxiliary Drive				
43	698690	Slinger-Governor/Oil (Used After Code Date 02110400).	59	396892	Insert-Grip	Used on Type No(s). 0117, 0133, 0149, 0371, 0373, 0374, 0378, 0849, 2049, 2178, 2211.				
----- Note -----			60	691915	Grip-Starter Rope	90	498809	Carburetor (Used After Code Date 96051900).		
691983 Slinger-Governor/Oil (Used Before Code Date 02110500).			60A	393152	Grip-Starter Rope				----- Note -----	
45	691762	Tappet-Valve	65	690837	Screw (Rewind Starter)				494775 Carburetor (Used Before Code Date 96052000).	
46	691998	Camshaft	66	399671	Clutch-Starter (Used Before Code Date 97060600).				97 691931 Shaft-Throttle	
46A	690645	Camshaft (Clockwise) Used on Type No(s). 0123, 0165, 0371, 0373, 0374, 0378, 0865, 1351, 1551, 1651, 2065, 2178.	67	394897	Housing-Clutch (Used Before Code Date 97060600).	101	691623	Pin-Shaft		
----- Note -----			68	691604	Ball-Clutch (Used Before Code Date 97060600).	106	691901	Seat-Inlet		
690644 Camshaft (Counterclockwise) Used on Type No(s). 0114, 0117, 0121, 0126, 0127, 0133, 0147, 0149, 0166, 0317, 0319, 0390, 0394, 0396, 0399, 0407, 0849, 1350, 1650, 2026, 2027, 2049, 2066, 2194, 2196, 2207, 2211.			70	691945	Ratchet-Clutch	130	691190	Valve-Throttle		
50	699644	Manifold-Intake (Used After Code Date 03080300).	71	691359	Cover-Ratchet (Used Before Code Date 97060600).	163	271139S	Gasket-Air Cleaner		
			73	699850	Screen-Rotating (Used After Code Date 97060500).	178	690398	Cover-Drive Gear		
			73B	691725	Screen-Rotating (Used Before Code Date 97060600).	180	494406	Tank-Fuel		
			74	690345	Screw (Rotating Screen)	181	493982S	Cap-Fuel Tank		
			75	691736	Washer (Flywheel)	188	692198	Screw (Control Bracket)		
						190	691640	Screw (Fuel Tank) (1 3/4" Long)		
						190A	691108	Screw (Fuel Tank) (9/16" Long)		
						200	691912	Blade-Governor		
						201	690347	Link-Air Vane		

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
209	691297	Spring-Governor (Used After Code Date 96051900). ----- Note ----- 262760 Spring-Governor (Used Before Code Date 96052000). 690251 Spring-Governor (Used After Code Date 96051900). Used on Type No(s). 0120, 0121, 0123, 0125, 0126, 0127, 0128, 0131, 0140, 0141, 0144, 0147, 0148, 0150, 0151, 0166, 0167, 0197, 0312, 0313, 0314, 0317, 0319, 0320, 0325, 0347, 0353, 0366, 0367, 0370, 0379, 0380, 0382, 0383, 0386, 0388, 0390, 0392, 0393, 0396, 0397, 0398, 0399, 0401, 0891, 1144, 1315, 1316, 1318, 1350, 1351, 1515, 1516, 1518, 1551, 1612, 1615, 1616, 1618, 1644, 1650, 1651, 2002, 2012, 2023, 2024, 2025, 2026, 2027, 2044, 2066, 2078, 2086, 2087, 2093, 2097, 2100, 2101, 2125, 2139, 2147, 2166, 2179, 2180, 2181, 2186, 2192, 2193, 2194, 2196, 2197, 2198, 2209, 2212, 2214, 2227, 2229, 2231, 2232, 2234, 2235, 2243, 2253.		692211 Spring-Governor (Used Before Code Date 96052000). Used on Type No(s). 0120, 0121, 0123, 0125, 0126, 0127, 0128, 0131, 0140, 0147, 0148, 0150, 0151, 0166, 0167, 0197, 0312, 0313, 0314, 0317, 0319, 0320, 0325, 0353, 0358, 0362, 0366, 0367, 0370, 0371, 0373, 0379, 0380, 0383, 0388, 0390, 0392, 0393, 0394, 0396, 0397, 0398, 0399, 0401, 1144, 1305, 1315, 1316, 1318, 1350, 1351, 2222. 690252 Spring-Governor (Used After Code Date 96051900). Used on Type No(s). 0115, 0129, 0132, 0137, 0138, 0139, 0143, 0145, 0307, 0322, 0328, 0345, 0346, 0352, 0363, 0364, 0368, 0369, 0372, 0377, 0381, 0395, 0402, 0890, 1302, 1303, 1304, 1446, 1472, 1477, 2043, 2050, 2146, 2168, 2224. 262942 Spring-Governor (Used Before Code Date 96052000). Used on Type No(s). 0115, 0132, 0137, 0139, 0143, 0307, 0322, 0328, 0352, 0363, 0364, 0368, 0372, 0377, 0381, 0395, 0402, 1304.		262943 Spring-Governor (Used Before Code Date 96052000). Used on Type No(s). 0129, 0138, 0345, 0346, 0369, 1302, 1303. 690254 Spring-Governor (Used After Code Date 96051900). Used on Type No(s). 0358, 0362, 0371, 0394, 1305, 2013, 2045, 2047, 2147, 2178, 2250, 2251. 692531 Spring-Governor (Used Before Code Date 96052000). Used on Type No(s). 0141, 0309, 0376, 0385, 0403. 691861 Spring-Governor (Used After Code Date 96051900). Used on Type No(s). 0373, 0374, 0378, 2238. 690253 Spring-Governor (Used Before Code Date 96052000). Used on Type No(s). 0373, 0374, 0378. 690250 Spring-Governor Used on Type No(s). 1602, 1603, 2032, 2063, 2069, 2077, 2163E1, 2202, 2210, 2215, 2225, 2246. 692698 Spring-Governor Used on Type No(s). 2222, 2228. 691862 Spring-Governor Used on Type No(s). 0145, 2163B1.		

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

098900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
211	691859	Spring-Governed Idle	236	691867	Link-Lockout	304A	694051	Housing-Blower
222	691446	Bracket-Control			(Used After Code Date			(Non Compliance
		Used on Type No(s).			97071300).			Engines)
		0101, 0110, 0114,	236A	691826	Link-Lockout			Used on Type No(s).
		0117, 0119, 0121,			(Used Before Code			2013.
		0123, 0125, 0126,			Date 97071400).	305	692198	Screw
		0127, 0128, 0129,	257	691660	Screw			(Blower Housing)
		0130, 0131, 0133,			(Starter Clutch)	332	690662	Nut
		0134, 0140, 0142,	265	692179	Clamp-Casing			(Flywheel)
		0147, 0148, 0149,	265A	690798	Clamp-Casing	333	793281	Armature-Magneto
		0150, 0151, 0165,	265B	691024	Clamp-Casing	334	691061	Screw
		0166, 0167, 0168,	267	691044	Screw			(Magneto Armature)
		0197, 0198, 0199,			(Casing Clamp)	337	802592S	Plug-Spark
		0300, 0310, 0312,	268	691025	Casing-Control Wire			----- Note -----
		0313, 0314, 0317,			(Cut To Required			697451 Plug-Spark
		0319, 0320, 0321,			Length)			Used on Type No(s).
		0323, 0325, 0330,	269	691026	Wire-Control			1615, 1650, 1651,
		0334, 0337, 0341,			(Cut To Required			2002, 2011, 2012,
		0350, 0355, 0360,			Length)			2013, 2023, 2024,
		0361, 0362, 0365,	270	691027	Nut			2031, 2032, 2033,
		0370, 0371, 0376,			(Control Wire Casing)			2063, 2064, 2065,
		0379, 0380, 0383,	271	691028	Lever-Control			2069, 2070, 2085,
		0388, 0390, 0391,	287	691002	Screw			2086, 2087, 2093,
		0392, 0393, 0394,			(Dipstick Tube)			2097, 2101, 2103,
		0396, 0397, 0398,	298	691720	Locknut-Muffler/Elbow			2137, 2139, 2163,
		0399, 0404, 0407,	300	692307	Muffler			2166, 2178, 2180,
		0810, 0837, 0849,			(Super Lo Tone)			2181, 2186, 2192,
		0865, 0866, 0891,	300A	394569S	Muffler			2194, 2210, 2216,
		0899, 1110, 1607,			(Round Lo Tone)			2225, 2232, 2246,
		2000, 2001, 2002,	303	690291	Elbow-Exhaust			2248, 2249, 2251,
		2010, 2023, 2024,	304	691484	Housing-Blower			2253.
		2025, 2026, 2027,			(Compliance Engines)	346	690661	Screw
		2029, 2030, 2031,			----- Note -----			(Spark Arrestor)
		2032, 2042, 2049,			692536 Housing-	356	692390	Wire-Stop
		2065, 2066, 2068,			Blower	356A	398808	Wire-Stop
		2093, 2097, 2098,			(Non Compliance	357	692191	Key-Drive Pulley
		2099, 2100, 2103,			Engines)	358	794209	Gasket Set-Engine
		2110, 2125, 2137,			Used on Type No(s).	363	19069	Puller-Flywheel
		2139, 2179, 2180,			1602, 1603, 2011,	365	790029	Screw
		2181, 2191, 2192,			2012, 2028, 2033,			(Carburetor)
		2193, 2194, 2196,			2044, 2045, 2047,	374	691074	Washer
		2197, 2198, 2204,			2050, 2063, 2064,			(Camshaft)
		2207, 2209, 2211,			2065, 2069, 2070,	377	692193	Key-Woodruff
		2212, 2213, 2217,			2077, 2078, 2085,	383	89838S	Wrench-Spark Plug
		2229, 2234, 2235,			2086, 2087, 2101,	390	691839	Spring-Choke
		2236, 2237, 2238,			2109, 2144, 2147,			Diaphragm
		2240, 2244, 2247,			2163, 2178, 2186,	393	691837	Screen-Carburetor
		2248, 2253, 2254.			2202, 2203, 2210,	394	795083	Diaphragm-Carburetor
222A	691445	Bracket-Control			2214, 2215, 2216,	426	691107	Screw
					2222, 2224, 2225,			(Governor Blade)
					2227, 2228, 2232,			
					2239, 2242, 2243,			
					2246, 2249, 2250,			
					2251, 2252.			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
444	691868	Gasket-Drive Gear Cover	670	691633	Spacer-Fuel Tank (Non Compliance Engines) (13/16" Long) (Used After Code Date 97071300).	729	690586	Clip-Wire
455	691236	Cup-Flywheel				741	796210	Gear-Timing (Used After Code Date 08071300).
456	692299	Plate-Pawl Friction				741A	691805	Gear-Timing (Used Before Code Date 08071400).
459	281505S	Pawl-Ratchet				743	690516	Gear-Drive
523	692040	Dipstick						----- Note -----
523A	691913	Dipstick						691772 Gear-Drive (Counterclockwise) Used on Type No(s). 0114, 0117, 0121, 0126, 0127, 0133, 0147, 0149, 0166, 0317, 0319, 0390, 0394, 0396, 0399, 0407, 0849, 1350, 1650, 2026, 2027, 2049, 2066, 2194, 2196, 2207, 2211.
524	691876	Seal-Dipstick Tube						
525	691320	Tube-Dipstick						
529	692189	Grommet						
534	691417	Screw (Air Cleaner)						
535	698369	Filter-Air Cleaner Foam (Used After Code Date 02101000).	676	396548	Deflector-Muffler Used on Type No(s). 0132, 0319, 0328, 0369, 2069.			
535A	272235S	Filter-Air Cleaner Foam (Used Before Code Date 02101100).	676A	393760	Deflector-Muffler Used on Type No(s). 0317, 0341, 0346, 0402, 0890, 1446, 2027, 2146, 2202, 2225, 2231.	745	691146	Screw (Brake) (7/8" Long)
536	698472	Cleaner-Air				745A	690859	Screw (Brake) (1/2" Long)
578	398153	Wire Assembly				772	691183	Screw (Linkage Cover) (3/4" Long) (Top)
592	690800	Nut (Rewind Starter)	676B	393756	Deflector-Muffler Used on Type No(s). 0147, 0322, 0341, 0345, 0359, 0381, 0382, 1315, 1316, 1318, 1350, 1351, 1515, 1516, 1518, 1612, 1615, 1616, 1618, 1650, 1651, 2027, 2045, 2214.	772A	690345	Screw (Linkage Cover) (7/16" Long) (Front)
597	691696	Screw (Pawl Friction Plate)				772B	691111	Screw (Linkage Cover) (1 1/8" Long) (Front)
608	690101	Starter-Rewind (70" Rope) ----- Note ----- 499706 Starter-Rope (88 5/8" Rope) 499925 Starter-Rewind (88 5/8" Rope) Used on Type No(s). 0890.	676C	397931	Deflector-Muffler Used on Type No(s). 0374, 0378, 2178, 2211.			
612	496046S	Tube-Pick Up	677	690661	Screw (Muffler Deflector)			
613	691413	Screw (Muffler)	678	691924	Spacer-Rewind			
617	270344S	Seal-O Ring (Intake Manifold)	689	691855	Spring-Friction	815	690324	Screw (Band Brake Pivot)
621	692310	Switch-Stop	718	690959	Pin-Locating (Cylinder)	832	699299	Guard-Muffler
633	691321	Seal-Choke/Throttle Shaft (Throttle)	718A	499047	Pin-Locating (Crankshaft) (Used Before Code Date 08071400).	832A	699670	Guard-Muffler
635	66538S	Boot-Spark Plug				832B	790743	Guard-Muffler
643	691911	Retainer-Air Filter	721	690397	Stop-Shaft	836	690664	Screw (Muffler Guard) (13/32" Long)
668	692889	Spacer (Cylinder)	724	697478	Retainer-Seal			

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

098900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
836A	790745	Screw (Muffler Guard) (1/2" Long)	883	691880	Gasket-Exhaust	969	694046	Screw (Blower Housing Cover)
842	691870	Seal-O Ring (Dipstick Tube)	913	494409	Seat-Check Valve			(2 1/3" Long)
847	691440	Dipstick/Tube Assembly	921	694044	Cover-Blower Housing Used on Type No(s). 2013.			Used on Type No(s). 2013.
851	493880S	Terminal-Spark Plug	922	692135	Spring-Brake (Used After Code Date 97071300).	976	694394	Primer-Carburetor
869	699641	Seat-Valve (Intake) (Used After Code Date 03080300).	922A	691809	Spring-Brake (Used Before Code Date 97071400).	994	398067	Arrestor-Spark
		----- Note -----	923	691487	Brake	1036		Label-Emissions (Available From A Briggs & Stratton Authorized Dealer)
		691701 Seat-Valve (Intake) (Used Before Code Date 03080400).	923A	394867	Brake	1058	277038	Operator's Manual
			925	691349	Cover-Linkage (Used After Code Date 97071300).	1095	498526	Gasket Set-Valve
870	699642	Seat-Valve (Exhaust) (Used After Code Date 03080300).	930	691330	Guard-Rewind	1143	691141	Screw (Drive Gear Cover)
		----- Note -----	930A	690601	Guard-Rewind	1208	691146	Screw (Brake Bracket)
		691702 Seat-Valve (Exhaust) (Used Before Code Date 03080400).	930B	691348	Guard-Rewind	1210	499901	Pulley/Spring Assembly (Pulley)
871	699643	Bushing-Valve Guide (Exhaust Valve) (Used After Code Date 03080300).	933	690428	Pivot-Band Brake	1211	499901	Pulley/Spring Assembly (Spring)
		----- Note -----	957	497929S	Cap-Fuel Tank (Black)	1218	695866	Seal-O Ring (Carburetor)
		231348 Bushing-Valve Guide (Exhaust Valve) (Used Before Code Date 03080400).	957A	692050	Cap-Fuel Tank (Red) Used on Type No(s). 0149, 0165, 0849, 1110, 2049, 2065.	1319	794467	Label-Warning
		63709 Bushing-Valve Guide (Intake Valve)	957B	791129	Cap-Fuel Tank (Black) Used on Type No(s). 2011, 2050, 2224, 2228.	1330	270962	Repair Manual

Not for
Reproduction

Not for
Reproduction

