


2009
QUICK REFERENCE GUIDE

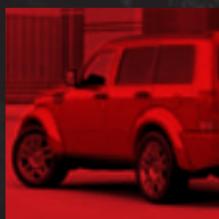

NITRO



DODGE



MANUAL CLIMATE CONTROLS

AIR RECIRCULATION

- Use recirculation for maximum A/C operation.
- For window defogging turn the recirculation off.
- Recirculation is not allowed in defrost, floor, defrost/floor (mix) modes.

DRIVER POWER SEAT ADJUSTMENT

- This switch, located on the outboard side of the seat, controls the forward/backward and up/down movement of the seat.



DRIVER MANUAL RECLINE ADJUSTMENT

- Lift the rear lever, located on the outboard side of the seat, lean back and release at the desired position.



REAR FOLD FLAT SEATS

- Pull the strap, located on the outboard side of the seatback, forward to fold the seat flat.



ELECTRONIC VEHICLE INFORMATION CENTER (EVIC) CONTROLS

- The EVIC features a driver interactive display that is located in the instrument cluster. Pressing the controls on the steering wheel allows the driver to select vehicle information and Personal Settings.
- Press the MENU/SCROLL button  up to scroll through the menu options.
- Press the MENU/SCROLL button  down to enter the selected menu option.
- Where applicable, to change/reset the selected option, press the COMPASS/FUNCTION  button down.
- Refer to Owner's Manual for further details.

REMOTE SOUND SYSTEM CONTROLS

- Two control switches, located on the rear surface of the steering wheel, allow control of the audio system without removing your hands from the steering wheel.
- Press the right switch up to increase the volume and down to decrease the volume. Press the button in the center of the right switch to change modes (AM, FM, Satellite, or CD Player).
- Press the left switch up to SEEK forward (Radio) or to go to the next track (CD Player). Press the left switch down to SEEK backward (Radio) or to go to the previous track (CD Player).
- Press the button in the center of the left switch to tune to the next preset station (Radio) or to change CDs if equipped with a CD Changer.
- Refer to Owner's Manual for further details.

FUEL CAP



LOOSE GAS CAP MESSAGE

- If a “gas cap” message (shown as gASCAP or CHECK GASCAP) appears, tighten the gas cap until a “clicking” sound is heard.
- Press the odometer reset button to turn the message off.
- If the message continues to appear for more than three days after tightening the gas cap, see your dealer.



TIRE PRESSURE MONITORING SYSTEM (TPMS)

- If one or more of the four road tire pressures are low, the Tire Pressure Monitoring Light will illuminate and an audible chime will sound.
- Check the inflation pressure of each road tire on your vehicle and inflate to the recommended cold pressure value, shown on the placard located in the driver’s door opening. The TPMS display should not be used as a tire pressure gauge when adjusting your tire pressure.
- The light will turn off once the updated tire pressure has been recognized. The vehicle may need to be driven for up to 20 minutes above 15 mph (25 km/h) before the light will turn off.
- **Temperature changes can affect tire pressures causing the TPMS light to turn on.** Colder temperatures will decrease tire pressure and warmer temperatures will increase tire pressure.
- If your spare tire pressure is low, or in use on the vehicle, the TPMS light may turn on. Refer to your Owner’s Manual.

OIL CHANGE INDICATOR

MESSAGE

- If an “oil change” message (shown as CHAngE Oil or Oil Change Required) appears and a single chime sounds, it is time for your next required oil change.

RESETTING LIGHT AFTER SERVICING

- Turn the ignition switch to the ON/RUN position (do not start engine).
- Fully depress the accelerator pedal three times within 10 seconds.
- Turn the ignition switch to the OFF/LOCK position.

ICLE FEATURES

CLOCK SETTING

NON-TOUCH-SCREEN RADIOS

- Press and hold the TIME button until the hours blink; turn the TUNE/SCROLL control knob to set the hours.
- Press the TUNE/SCROLL control knob until the minutes begin to blink; turn the TUNE/SCROLL control knob to set the minutes.
- Press the TUNE/SCROLL control knob to save the time change.

TOUCH-SCREEN RADIOS

- Turn the radio ON.
- Touch the screen where the time is displayed.
- Touch the screen where “User Clock” is displayed (Navigation Radio Only).
- To adjust the hours, touch either the hour forward button or the hour backward button.
- To adjust the minutes, touch either the minute forward button or the minute backward button.
- To save the new time setting, touch the screen where the word “Save” is displayed.
- Refer to your Navigation Radio User Manual for additional clock setting procedures.


uconnect® phone

- uconnect® phone is a voice-activated, hands-free, in-vehicle, communications system. uconnect® phone allows you to dial a phone number with your cellular phone using voice commands.
- uconnect® phone requires a cellular phone equipped with the Bluetooth® Hands-Free Profile, Version 0.96 or higher. See the www.dodge.com/uconnect website for supported phones. Refer to your Owner’s Manual for further information.

WIND BUFFETING

- Wind buffeting can be described as a helicopter-type percussion sound. If buffeting occurs with the rear windows open, adjust the front and rear windows together.
- If buffeting occurs with the sunroof open, adjust the sunroof opening, or adjust any window. This will minimize the buffeting.

INSTRUMENT

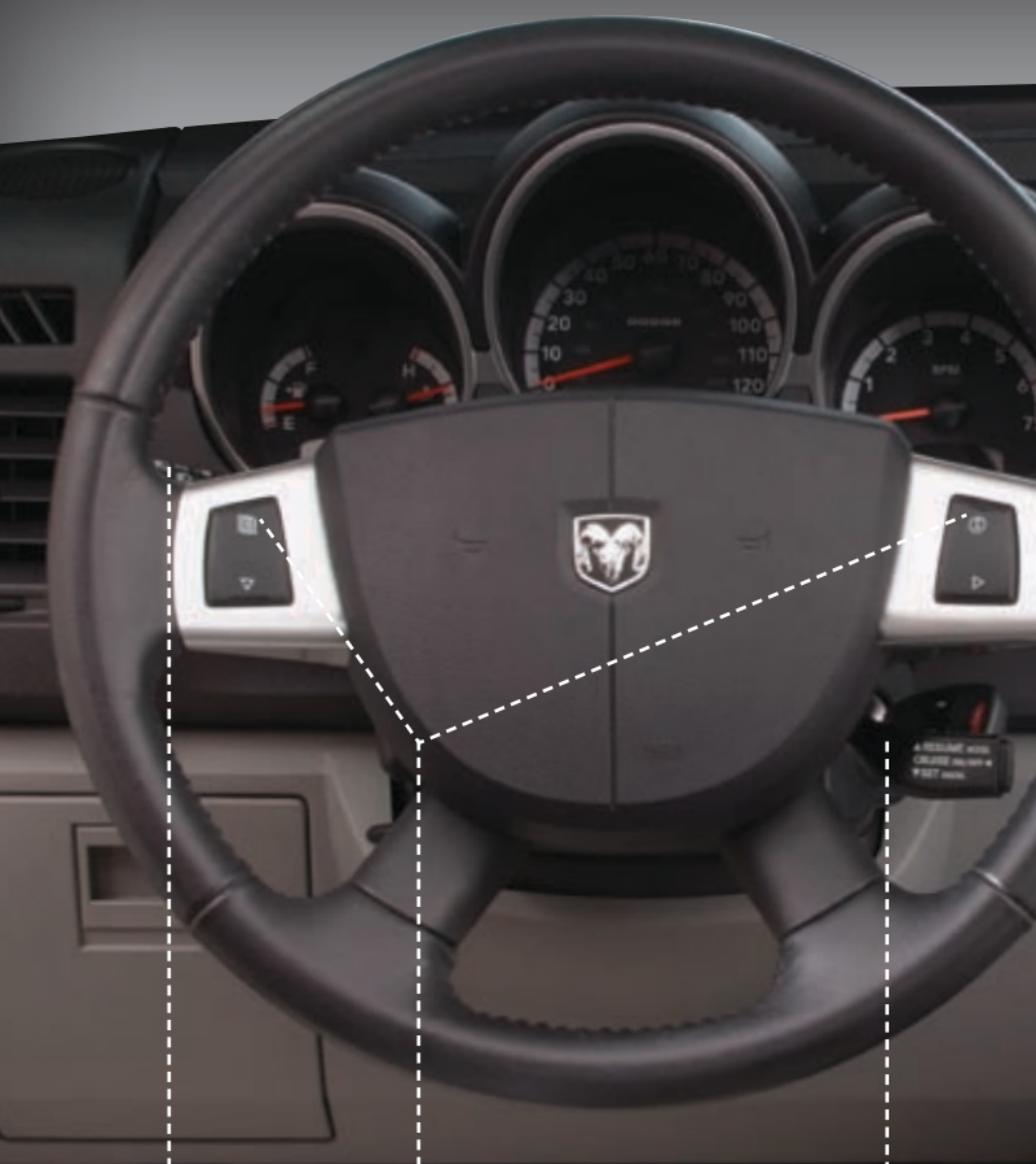

● Turn Signal/
Lights Lever
(Behind Steering
Wheel)

● Electronic Vehicle
Information Center
(EVIC) Controls

● Speed
Control
Lever

INSTRUMENT PANEL



Wiper/Washer
Lever (Behind
Steering Wheel)

Climate
Controls

Lower Switch Panel
Heated Seats
Electronic Stability Control/
Traction Control
110v Power Outlet Switch
Hazard Warning Flasher

Audio System
(Non-Touch-Screen
Radio Shown)



KEY FOB

LOCKING AND UNLOCKING THE DOORS/LIFTGATE

- Press the LOCK button once to lock all the doors and liftgate.
- Press the UNLOCK button once to unlock the driver's door only and twice within five seconds to unlock all the doors and liftgate.
- All doors can be programmed to unlock on the first press of the UNLOCK button.
- Refer to the Owner's Manual for programming.

EXPRESS DOWN WINDOW FEATURE

- Press the UNLOCK button once and release, then immediately press and hold the UNLOCK button again to lower the driver and passenger front windows to the desired level.


REMOTE START

- Press the REMOTE START button  twice within five seconds.
- To drive the vehicle, press the UNLOCK button, insert the key in the ignition and turn to the ON/RUN position.
- With remote start, the engine will only run for 15 minutes (timeout) unless the ignition key is placed in the ON/RUN position.
- The vehicle must be started with the key after two consecutive timeouts.

PANIC ALARM

- Press the PANIC button once to turn the panic alarm on.
- Wait approximately three seconds and press the button a second time to turn the panic alarm off.

LE FEATURES

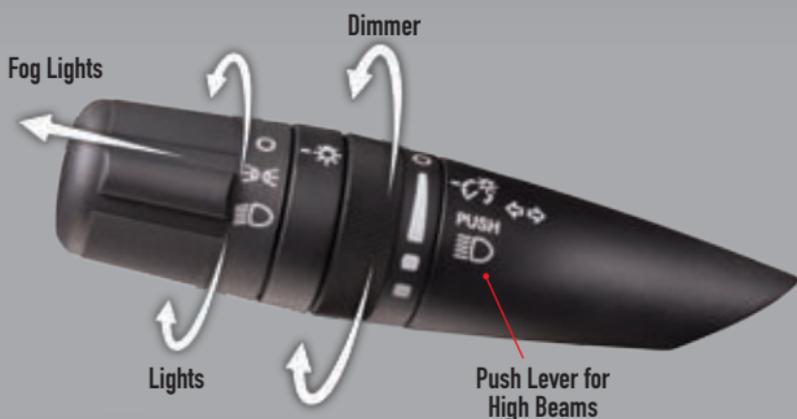

TURN SIGNAL/LIGHTS LEVER

HEADLIGHTS/PARKING LIGHTS

- Rotate the end of the lever to the first detent for parking lights and the second detent for headlights.

INSTRUMENT PANEL DIMMER

- Rotate the center portion of the lever to the extreme bottom position to turn off the interior lighting. In this position, the interior lights will not turn on when a door is opened.
- Rotate the center portion of the lever up to increase the brightness of the instrument panel lights when the parking lights or headlights are on.
- Rotate the center portion of the lever upward to the next detent position to fully brighten the odometer and radio displays when the parking lights or headlights are on.
- Rotate the center portion of the lever upward to the last detent to turn on the interior lighting.

HIGH BEAM OPERATION

- Push the lever forward to activate the high beams.

FOG LIGHTS

- Pull out the end of the lever. Fog lights only operate with parking lights or low beam headlights.

TURN SIGNALS/LANE CHANGE ASSIST

- Tap the lever up or down once and the turn signal (right or left) will flash three times then automatically turn off.



SPEED CONTROL LEVER

CRUISE ON/OFF

- Push the ON/OFF button to activate the Speed Control.
- CRUISE will appear on the instrument cluster to indicate the Speed Control is on.
- Push the ON/OFF button a second time to turn the system off.

SET

- With Speed Control on, press down and release the lever to set a desired speed.

ACCEL/DECEL

- Press and hold the lever up to accelerate or down to decelerate the vehicle; release the lever to save the new set speed.
- Once a speed is set, tapping the lever up or down will increase or decrease the set speed approximately 1 mph (2 km/h).

CANCEL

- Pull the lever toward you, or apply the brakes to cancel the set speed and maintain the set speed memory.
- Push the ON/OFF button to turn the system off and erase the set speed memory.

RESUME

- To resume a previously selected set speed in memory, push the lever up and release.



WIPER/WASHER LEVER

FRONT WIPERS

Intermittent, Low and High Operation

- Rotate the end of the lever to the first detent position for one of five intermittent settings, the second detent for low wiper operation and the third detent for high wiper operation.

Mist

- Pull down on the lever and release when a single wipe is desired.

Washer Operation

- Pull the lever towards you and hold for as long as spray is desired.

REAR WIPER

Wiper Operation

- Rotate the center portion of the lever forward to the first detent for rear wiper operation.

Washer Operation

- Rotate the center portion of the lever past the first detent to activate the rear washer.

110V POWER OUTLET

- A 110 volt (150 watt) AC power outlet is located on the front of the center console, just below the center armrest.
- Press the power outlet switch located on the center of the Instrument Panel once to turn the outlet on and a second time to turn it off.
- The Power Outlet will shut down if the 110 volt (150 watt) power rating is exceeded. This will require replacing the fuse protecting the system. Refer to Owner's Manual.

81-316-0986



Nitro
First Printing
Quick Reference Guide

This guide has been prepared to help you get quickly acquainted with your new Dodge and to provide a convenient reference source for common questions. However, it is not a substitute for your Owner's Manual.

For complete operational instructions, maintenance procedures and important safety messages, please consult your Owner's Manual, Navigation Radio User Manual, Multimedia User Manual and other Warning Labels in your vehicle.

Not all features shown in this guide may apply to your vehicle. For additional information on accessories to help personalize your vehicle, visit www.mopar.com or your local Dodge dealer.

www.DODGE.com

Dodge is a registered trademark of Chrysler LLC.

