









MP3300/MP3400/MP3500 8 pcs Standard DC plug

DC Plug No.	Specification	Application	
DC No. 03 (PA-L23)	2.35*0.7*10.5	Moblile phone, digital cameras, camcoders.	
DC No. Z (PA-L34)	3.4*1.3*10.5	Digital cameras, camcoders.	
DC No. V (PA-L40)	4.0*1.7*10.5	Digital cameras, camcoders, portable DVD players, CD/MPs players.	
DC No. A (PA-L47)	4.75*1.7*10.5	Digital cameras, camcoders, notebook computers.	
DC No. B (PA-L5D)	5.5*2.1*10.5	Notebook computers.	
DC No. C (PA-L5F)	5.5*2.5*10.5	Notebook computers.	
DC No. D (PA-L63)	6.3*3.0*10.5	Notebook computers.	
DC No. E (PA-L65)	6.5*4.3*1.35*10.5	Notebook computers.	

Application Tips list for portable device

Manufacturer	Type	Models	Tip Part#
Acer	Notebooks	AcerNote 350, 355, 356, 367D, 367T, 370C, 374, 390, 850C	DC No. B
		AcerNoteLight 350, 360, 370, 370C, 370P, 372, 373, 373+, 380, P100	
		Extensa 355, 365, 366D, 367D, 368D, 390, 390C, 393, 500, 501D, 501T, 502D, 503DX	
		505DX, 506DX, 515, 600, 610, 610CD, 610CDT	
		TravelMate 505DX, 506T, 507DX, 507T, 512DX, 524TX, 524TXW, 524TXV	
		Anywhere 1100LX, 1200LX	DC No. C
Extensa 900, ESS3-391T			
AGFA	Digital Cameras	307, 780, 780C, 1280, 1680, CL-18, CL-30, CL-50	DC No. Z
Aiwa	CD/MP3 Players	XP-K3, XP-R210	DC No. Z
Armada	Notebook	100,1100,1120,1125,1130	DC No. C
Apex	Portable DVD Players	PD-450, PD-510	DC No. Z
Apple	Notebook	Apple Notebook G4	DC No.Q
		Apple Notebook G3	DC No.G
	MP3 Players	FOR Apple ipod white (Charge voltage 9 ~ 20V) (Use for iPod G3~vedio)	GAM-01
		FOR Apple iPod white (Charge voltage 5V) (Use for iPod G4~vedio)	GAM-05
Archos	CD/MP3 Players	Jukebox Multimedia 10, 20, Gmini120, 220, 400	DC No. Z
	AV Jukeboxes	AV120, AV140, AV320, AV340, AV380, AV420, AV480	DC No. V

HP	Notebooks	HPDV9233CL,DV9000 series notebooks	DC No. T
ASTn Acscentia	Notebooks	A Series,J Series,M Series	DC No. E
Asus	Notebooks	A3Fp,A3Fc,A3H,A3Ac,A3Vp,A3Vc,A3E,A3G,A3N/L,A6Jc,A6Ja,A6J,A6Vm,A6R,A6Vc,A6Va,A6K,A6U	DC No. C
AudioPhase	CD/MP3 Players	CDM357, CDT320, DM9132	DC No. Z
Audiovox	Portable DVD Players	1700, 1705, DV-1680	DC No. Z
	Mobile Phones	8400, 8410, 8610, 8900 USB 5P/6700	DC No. Q MOB-22
Averatec	Notebooks	3120V, 3150HS, 3150HW, 3150P,	DC No. A
		3200, 3220H, 3220H1, 3225HS, 3250H1, 3250HX, 5100, 5110H, 5110P, 5110HX	
Blackberry	Mobile Phones	210/6230/6280/3510/7210/7230/7250/7280/7290/7100g/7100t/7510/7520/ BLACKBERRY 6710/6720/7270/7730/7750	MOB-01 MOB-02
BenQ		Joybook2000,2100,2100E,3000,3000M,5000,5000G	DC No. C
Camedia	Digital Cameras	C-8080, D-395, D-540, D-580	DC No. Z
Canon	Digital Cameras	PowerShot A10, A20, A30, A40, A60, A70, A75, A100, A200, A300, IXUS V,S30,S100,S110,S200,S230,S300,S330,S400	DC No. Z
	Camcorders	ZR-70MC, ZR-65MC, ZR-60 ES8600 Hi8	DC No. V PA-L30
Casio	Digital Cameras	EX-S1, Exilim EX-Z40, QV-10A, QV-11, QV-70, QV-100, QV-120, QV-200, QV-300, QV-700, QV-770, QV-780, QV-2000UX, QV-2300UX, QV-2800UX, QV-2900UX, QV-3000EX, QV-3000EX+, QV-3500EX, QV-4000, QV-4000EX, QV-5000SX, QV-5500SX, QV-5700, QV-7000SX, QV-8000SX, QV-R3, QV-R4	DC No. Z
	PDA's	EM-125, EM500 Cassiopeia E105	DC No. Z DC No. Z
Classic	CD/MP3 Players	CL157, CL413, CL450, CM544	DC No. Z
Coby	CD/MP3 Players	CX-CD10, CX-CD303, CX-CD307	DC No. Z
Connections	CD/MP3 Players	HD003	DC No. Z
Creative	Portable Media	Zen PMC	DC No. Z
Curtis	CD/MP3 Players	CD048e	DC No. Z
Cyber Home	Portable DVD Players	CH-LDV700B, CH-LDV712	DC No. Z
	PDA's	Axim X3, X5, x51, x51v	DC No. Z
Dell	PDA's	Dell-x30/x50/X50v	PDA-08
	Notebooks	Dell Notebook Inspiron 1100/2500/2600/2650/3700/3800/4000/4100/4150/5000/C410/C500/C540/C600	DC No.F
		Dell Notebook Inspiron 8500 /500m/ 6000/ 600m/ 700m/ 8500/ 8600/9200/9300 Dell Latitude D400, D500, D600, D800 X300 D400 D410 D500 D505 D510 D600 D610 D800 D810 Dell Precision M20 M60 M70	DC No.K1
		Dell Notebook Inspiron 1150/300M Dell Notebook Latitude 2000/2100/L400/L600/L800/LS	DC No.K DC No.O

Dopod	PDAs	i-Mate Jam/SP3i/SP5/SP5m/K-jam	PDA-05
		O2 XDAII Dopod818/Dopod828	
		Dopod696	PDA-06
		Dopod686	PDA-07
Eddie Bauer	Portable DVD Players	PE802, PE702	DC No. Z
Epson	Digital Cameras	PhotoPC 550, 600, 650, 700, 750Z, 850Z, 3000Z, 3100Z	DC No. A
FujiFilm	Digital Cameras	DX-10, MX500, MX600Z, MX700, MX1200, MX1400, MX1500, MX1700, MX2700, MX2900, MX2900Z	DC No. Z
		FinePix 1200, 1300, 1400, 1700, 2300, 2400, 2600, 2600Z, 2650, 2700, 2800, 2900, 3800, 4700, 4700Z, 4800, 4900, 6800, 6900, A330, E500, E510, F401, F601, F700, S602,	DC No. Z
		FinePix 30i, 40i, 50i, A101, A200, A201, A203, A303	DC No. 03
Fujitsu	Notebooks	LifeBook: A1010, C2010, C2110, C2111, C2210, C2220, C2230, C2240	DC No. C
		LifeBook: 200, 400, 500, 600, 700, 900, 270Dx, 280Dx, 420Dx, 435Dx,	DC No. E
		531T, 535T, 555Tx, 565Tx, 585Tx, 585Tx1, 635T, 635Tx, 635Tx1, 655Tx, 656Tx1, 675Tx, 690Tx, 735Dx, 755TX, 756Dx, 765Tx, 770Tx, 790Tx, 985Tx, 990Tx2,	
		A4170, B112, B142, B2, B2130, B2131, B2175, B-2545, B-2562, B-2566, B2610, B2620, B2630, B3010D, B3020, B3020D,	
		C340, C350, C352, C353, C360, C-4120, C-4235, C-5130, C-5235, C-6177, C-6320, C-6330, C-6525, C-6535, C-6537, C-6547, C-6556, C-6557, C-6577, C-6581, C-6591, C-6611, C-6631, C-6651, C-7631, C-7651, C-7661	
		Celsius Mobile H, E330, E340, E342, E350, E351, E360, E362, E370, E380, E-5140, E-5320, E-5520, E-6150, E-6520,	DC No. E
		E-6530, E-6540, E-6541, E-6550, E-6555, E-6556, E-6557, E-6570, E-6571, E-6575, E-6595, L440, L470, P-1000, P-1032, P-1035, P-1110, P-1120, P-2000, P-2040, P-2046, P-2110, P-2120, P-5010,	
		P-5010D, P-5020, P-5020D, P-7010, P-7010D, S-2010, S-2020, S-4510, S-4542, S-5582, S6010, S6110, S6120, S6120D	
		Stylistic CT2020, Stylistic 3400,	
		Stylistic 3500, Stylistic LT C-500,	DC No. E
Stylistic LT P-600, Stylistic ST4110, Stylistic ST4110P, Stylistic ST4120, Stylistic ST4120P, Stylistic ST4121,			
T3010, T3010D, Stylistic ST5010 Stylistic ST5010D			
GamePlayer	Games	Gameboy Advance SP, DS	GAM-02
		Nintond Lite NDS	GAM-03
		Nintendo Gameboy	GAM-04
Garmin	PDAs	iQue 3600	PDA-03
Gateway	Notebooks	Solo: 1100, 1150, 1200, 1400, 1450, 2150, 2500, 2550, 3100, 3150, 3300, 3350, 5150, 5300, 5350, 9100, 9150, 9300, 9500, 9550 400SD4, 400VTX, 450ROG, 450SX4, 600YG2,	DC No. C
		M305, M500	

HHB	Portable MiniDisc Recorder	MDP500	PA-L55
Hitachi	Notebooks	Vision Book E & MX series, Pro,Elite,Plus	DC No. C
	DVD Camcorders	DZMV200A	PA-L30
HP/Compaq	Digital Cameras	HP Photosmart C200, C200xi, 215, 215xi, 312, 315, 315xi, 318, 320, 433, 435, 612, 618, 620, 635, 715, 720, 850, 945, R707	DC No. Z
	Notebooks (Compaq)	Armada: 110, E500, E500S, E700, M300, M700, V300	DC No. A
		Evo: N110, N150, N200, N400c, N410c, N600c, N610c, N620C, N800c, N800v, N1000v, N1015v, N1020v, NC4000, NC6000, NC8000, NW8000, NX7000	
		Presario: 300, 2800 series, 2900 series, V1000 Series, V1100 Series, X1000 Series, X1200 Series, X1300 Series, X1460, X1480	
		Prosignia: 170, 190	
		Evo: N115, N160, N180	
		Presario: 700 series, 800 series, 1000 series, 1200 series, 1400 series, 1600 series, 1700 series, 1800 series, 2700 series, 12XL, 14XL, 1600i, 16XL, 17XL, 1800t, 18XL, 2700xx, X1001 Prosignia: 150	
	Notebooks (HP)	Tablet: TC1000, TC1100	DC No. A
		Desktop Notebooks: NW8000, NC8000	
		Business Notebooks: NC4000, NC4010, NC6000, NX7000, NX7010	
		Pavilion: ZT3000LA, ZT3010	DC No. C
		Omnibook: 300, 425, 430, 500, 510, 530, 900, 2000, 2100, 2103, 2105, 3000, 3100, 3101, 4000, 4100, 4101, 4103, 4105, 4150, 5000, 5500, 5700, 6000, 6100, 7100, 7103, 7150, 600c, 600ct, 900b, vt6200, Xe, xe2, xe3, xe4100, xe4200, xe4400, xe4500 Xt1000, xt1500, xt6050, xt6200	
		Pavilion: 2105, 3101, 4101, 4103, 4105, 5159, N3100 series, N3200 series, N3300 series, N3400 series, N5100 series, N5200 series, N5300 series, N5400 series, N6190, N6195, N6300 series, N6400 series, xf series, xh series, xt series, xu155, xz series, zt series, (ze5400 and zd8000 series compatible with MP3400 only)	
HP Notebook computers NC6400/NC8430/NC6140/NC6320/NC4400/NC6120/NC2400 NX7300/7400/6115/6125/6110 NW9440/8440		DC No.K	
PDAs	Mitac Mie 168/336/338/339/558 HP IPOQ h1700/1910/1915/1920/1930/1935/1937/1940/1945/2210/2215 HP IPOQ 3800/O2	PDA-09	
	iPAQ H1900, H1910, H3100, H3600, H3630, H3635, H3650, H3670, H3800, H3900, H3950, H3955, H5400, H5450, H5455, H5555	DC No. Z	

IBM	Notebooks	ThinkPad: 355, 600E, 600X, 700, 755, 760, 765, 770E, 770ED, 770X, 770Z,2645,2611	DC No. C		
		A series, R series, T series, X series, Transnote			
		i series, 1400 2611-xxx, 1500 2611-xxx			
				ThinkPad : 310, 310D, 310E, 310ED	DC No. B
				IBM Notebook	DC No.H
				Lenovo & IBM Notebook computers	DC No.L
				LENOVO IBM Thinkpad X60 X60S X60T SERIES	
Initial	Portable DVD Players	IDM-1731	DC No. Z		
Ittronix	Notebooks	Gobook series	DC No. C		
JAP	Mobile Phones	Panasonic P901is/P901i/P901iv/P701i/X800	MOB-23		
		NEC N901is/N901ic/N901G/N901i/N901is/N700i/N8/802N			
		FUJITSU F901is/F901ic/F901it/F901ies/F880ies/F700is			
		SHARP SH901is/SH901ic/SH851i/SH700is/SH700i/903SH/703SH/802SH/902SH/sx			
		MITSUBISHI D901is/D901i/D900i			
		TOSHIBA 902T			
		WCDMA/FOMA/GX33/900i/880i/70			
		AU/CDMA-1/TG200/CDMA	MOB-24		
		DOCOMO/PDC/P101/Digital/2100/S3/GX10/GX20/GX30	MOB-25		
three Mobile phone plug (DOCOMO/CDMA/FOMA) to USB	MOB-26				
JVC	Camcorders	GR-D30US, GR-D70US, GR-D90US, GR-D500US, GR-DVL520U, GR-DVL820U	DC No. V		
		GR-DV3000U	DC No. Z		
	Digital Cameras	GR-DF570AC/470AC/430AC/D290AC/D270AC/750AC/GR-X5AC/D278/D238	DSC-05		
	CD/MP3 Players	EX CDMP3, XL-PM30	DC No. Z		
Kodak	Digital Cameras	EasyShare CX4200, CX4230, DX4330, DX6340	DC No. 03		
		EasyShare DC200, DC200+, DC210, DC210+, DC215, DC220, DC240, DC260, DC265, DC280, DC290, DC2500, DC3200, DC3400, DC3400, DC4800, DC5000	DC No. A		
		EasyShare CX7330, CX7430	DC No. Z		
		EasyShare DX6490, DX7590, DX7630			
		EasyShare LS443, LS743			
Konica Minolta	Digital Cameras	DiIMAGE 5, 7, 2300, 2330, E201, EX1500, S304, S404, S414, X	DC No. Z		
		DiIMAGE A1, E223, X31, Z1	DC No. 03		

Kyocera	Digital Cameras	Finecam S3	DC No. Z
	Mobile Phones	1100, 1135	DC No. 03
		2000, 2100, 2200, 2235, 2300	
		3200, 3225, 7135, 4NE1	
		Blade, Phantom, Rave KE400	
LG	Mobile Phones	1010, 1200	DC No. 03
		VX2000/LX1200/4NE1/1010/110/111/510/520/525/VX1/VX10/VX3100/VX4400/TP1100/5200/5250/VX4400/	MOB-06
		G4010/G4011/G4015/G4050/G4020/C1300/L1100/L1150/L1200/L1400/VX4600	MOB-07
		VX6000/LX5450/LX5550/LG5400/F9100/VI5225/VX4500/G263/G282/232/262/C	MOB-08
		LG3020/VX3200/VX4650/VC4700/VX5200/VX6100/VX7000/VX8000/VX8100/VX9800	
		Chocolate KG800 / KG808 / MG800C / KG90 / LX150 / Chocolate VX8500 / VX9900	MOB-27
		LEO	Notebooks
LTE3	Notebooks	5000 series, 6000 series	DC No. C
Magnavox	CD/MP3 Players	MPC220SL, MPC225SL	DC No. Z
	Portable DVD Players	MPD700/17	DC No. Z
Memorex	Portable DVD Players	MM5000, MM7000, MM8000	DC No. Z
Micron	Notebooks	Trek Transport II , Trek 2, NX, LT,MD 9326, MD 90777	DC No. C
Mintek	Portable DVD Players	1710, 1720, 1770, 1815, 5810, 5830, 5860	DC No. Z
Motorola	Mobile Phones	V66/V60/V65p/V70/V120/V710/MPX200/MPX220/T300p/T72x/T73x/series/V26	MOB-03
		V330/A760/A768i/A860/T730/T720/T120/T343./I80/I85/I90/I95/I60/I70/V262/V260/	
		CD92, CD928, L2000, P7689, P8088, V2088, V3688, V8088	MOB-04
		StarTAC 2188, 3188, 6188 328/Timeport270c/280/V200/A388/Startac/Talkabout/V998/V3688/CD928/L2000	
		A630, A840, C331 (TDMA with antenna versions), C332 (TDMA version), C333 (CDMA with antenna), C341, C343, C353 (TDMA), E310, T720, T720i, T721, T722i, T730, T731, V60 Series, V70, V120c, V200, V300, V400, V500, V600, 120t, 120x, Timeport? 270c, Timeport 280 and V200 Personal Communicator	MOB-05
		Razr V3,V3c,V3i,V3x,V6, V8, V235, V360, PEBL U6, Q, SLVR L6,SLVR L7,V190,V195	
		V3/A630/A840/A845C330/C331g/c332g/T193/C331t/C333c/C343/C353t/C350/V810/T193/T22xx/V2200/V300/V400/V500/V505/V525/V551/V600/6510/7510/7520/E310/C650/V180/V188/V325/V220/	
		Mustek	DVD Player
NEC	Notebooks	Ready 220T,330T,340T,360 series	DC No. C
		Versa 550 series	

Nextel	Mobile Phones	i30, i50, i55, i58, i60, i80, i85, i88, i90, i95, i99	MOB-05
		i500, i550, i700	DC No. 03
		I205/i215/i265/i285/i305/i315/i530/i710/i730/i733/i830/i860/i930/i275/i325/i325ls/i355/i560/i605/	MOB-21
Nikon	Digital Cameras	Coolpix 100, 300, 600, 700, 750, 775, 800, 880, 885, 900, 950, 990, 995, 2000, 2100, 2200, 2500, 3100, 3200, 3700, 4100, 4300, 4500, 5000, 5200, 5400, 5700, 8700	DC No. Z
Nintendo	Handheld Games	Game BoyR Color	DC No. 03
Nokia	Mobile Phones	252, 282, 650, 3310, 3330, 5110, 5120, 5130, 5160, 5165, 5170, 5180, 5190, 6110, 6120, 6130, 6150, 6160, 6161, 6162, 6185, 6190, 6210, 8210, 8250, 8260, 8290, 8610, 8850,	MOB-16
		1100/1260/1261/2260/3100/3120/3200/3220/3300/3360/3390/3560/3595/NP-GagcO	
		/6100/6190/6200/6230/6340/I6560/6620/6682/6820/I7610/8260/8265/3000	
		3589/5100/6000/6015/3650/5190/6010/6102/N70/N90/N80/82xx/83xx/88xx/6200/6230/6600/6800/6111/6100/6120	MOB-15
Olympus	Digital Cameras	Brio D-100, D-150, D-230	DC No. Z
		Stylus 300, 410	
		C-40, C-40Z, C-211Z, C-320L, C-340L, C-340R, C-50Z, C-700UZ, C-720UZ, C-730UZ, C-740, C-765, C-2000Z, C-2020Z, C-2030, C-2040Z, C-2100UZ, C-2500L, C-25000Z, C-3000, C-3020Z, C-3030Z, C-3040Z, C-4000Z, C-4040Z, C-5050Z, C-5060, C-740UZ, D-40Z, D-200L, D-220L, D-320L, D-340L, D340R, D-360L, D-370, D-380, D-400Z, D-450Z, D-460Z, D-500L, D-510Z, D-520Z, D-550Z, D-560Z, D-600L, D620L, E-10	DC No. A
Packard Bell	Notebooks	K5305 Easynote	DC No. C
Palm	PDAs	LifeDrive	PA-A11
		Tungsten E	DC No. 03
		Tungsten C, W, T, T2, T3	PDA-03
		i705	PDA-03
		V, Vx, VxLE, Zire, 71	PDA-02
		Zire 31, Zire 72	DC No.G
		PalmOne/Treo300/600/	PDA-01
		PalmOne Treo650/700/T5/Tungsten E2	PDA-02
		PalmOne m500/505/515/130/125/i705/Tungsten T/T2/Zire 71	PDA-03
PalmcorderR MultiCam? PV-DV52, PV-DV53, PV-DV103, PV-DV203, PV-DV402, PV-DV701, PV-DV910d, PalmcorderR PV-L353, PV-L452	DC No. Z		
Panasonic	Camcorders	SL-MP70, SL-SV550, SL-SX321C, SL-SX360, SL-SX420	DC No. Z
	CD/MP3 Players	Lumix DMC-FZ10K, DBC-FZ10S	DC No. Z
	Digital Cameras	PV-GS9	DC No. Z
	miniDV Camcorders	Toughbook: CF-R1, CF-T1, CFT2	DC No. C

	Notebooks	Toughbook: CF01, CF11, CF17, CF170, CF270, CF370, CF380, CF25, CF27, CF28, CF33, CF34, CF35, CF37, CF41, CF45, CF47, CF48, CF50, CF61, CF62, CF63, CF71, CF-M34, CF-V25, CF-V41	DC No. E	
		DVD-L10, DVD-L50, DVD-LA85, DVD-LA-95, DVD-LV55, DVD-LV57, DVD-LV60, DVD-LV70, DVD-LV75, DVD-PA65, DVD-PV40, DVD-PV55	DC No. Z	
	Portable DVD Players	Optio 330RS, 430RS	DC No. Z	
Pentax	Digital Cameras	NB470, NB570, Travelmate 570,F76000	DC No. C	
Phillips	Notebooks	PDV-10, PDV-20, PDV-LC10, PDV-LC10SR, PDV-LC20, PDV-LC20BA	DC No. Z	
Pioneer	Portable DVD Players	PDM-0723	DC No. Z	
Polaroid	Portable DVD Players	DC2300, DC3460	DC No. Z	
Premier	Digital Cameras	H, I, T, M series	DC No. C	
Quantex	Notebooks	VMD-52	DC No. Z	
Quasar	Camcorders	Lyra RD2760	PA-L30	
RCA	AV Jukeboxes	Lyra RD2780	DC No. V	
		Lyra RD2201A	DC No. Z	
	CD/MP3 Players	5400P	DC No. Z	
	Portable DVD Players	RDC-2, RDC-2E, RDC-300, RDC-300Z, RDC-4200, RDC-4300, RDC-5000, RDC-5300	DC No. Z	
Ricoh	Digital Cameras	Rio Volt SP50, SP150	DC No. Z	
Rio (by SONICblue)	CD/MP3 Players	Carbon	MOB-16	
		Digimax 350SE	DC No. V	
Samsung	Digital Cameras	I50/I5MPS3/I6PMP	DSC-06	
		Samsung DSC	DSC-07	
		SC-L810	PA-L30	
	Camcorders	DVD-L100	DC No. Z	
	Portable DVD Players	N240, N270, N400	DC No.G	
		A460, A500, A600, A620, A660, A680		
		VGA-1000, VI-660	MOB-09	
	Mobile Phones	SA288/SGH-d410/d415/d418/e315/e316/e317/SGH-r225/r225m/n625/v20x/s30x/3500/6100/8500/SGH-p107/p207/x426/x427/x427m/SGH-s300/s307/s308/SGH-v2V206/n625/s307/x427m/P107/C207/E317/P207/X497/D307/D357/D508/D608		
		SCH-n105/q105/SGH-V205		
		SPH-i300/i300/i500/i700/i600/i730		MOB-10
		D800/D808/D828/D528/D820/P300/T809		MOB-11
		A630/SCH-a850/a950/a970/a890/a790/a650/a670/n330	MOB-12	
	VPC-AZ1, VPC-MZ1	DC No. Z		
Sanyo	Digital Cameras	5400, 5500, 7200, 8100, 8200	DC No.G	
		RL-2000, RL-2500, RL-7300		
	Mobile Phones	VM-4500	MOB-19	
		SCP-4900/5300/8100/RL2000/RL2500/R4920/5400/5500/7300/5600/200/4300/4900		
		7400		
	V801SA	MOB-20		

Sharp	Camcorders	Digital ViewcamR VL-Z7U	DC No. Z
	Notebooks	PC3000, 8000 series, 90000 series, PC3940T	DC No. C
Sony Ericsson	Mobile Phones	P800, P900, T68, T68i, T608, T610, T616, T618, T628, T630, T637, Z600, Z608	MOB-13
		T28/k500i/p800/k700/k700i/s700i/T2xx/T3xx/T6xx/P900/R320/T29/T39/T39d/R300d	
		T60x/T61x/T62u/T68/T68i/z200/z500a/z600/T20/T60/T61/T62/T66/T200/T226/T237/	
		T316/T608/T610/T616/R300/R320SC/R380/R520m/A2218/A2288/P800/Z200/Z500/	
		T637/S710a/K500i/k700i/z500a/R300ix/R300Z/T300/T306/Z600/T630/	
		K750i/z520a/w600i/W800/W550/W900/W500W880/	MOB-14
Siemens	Mobile Phones	s155/s156/a56/c56/ct56/m55/m56/a55/m55/s155/56series/A60/C60/C62/CF62T/MC	MOB-17
		S66/SX1/C55/CF63/A65/S65//S66/C70/C71/C61/CT66/S55	
		C2588/C35/S35/3508/3568/3518/M35/6088/SL45/6688/6688i/3118/3508I/3518I/	MOB-18
		A40/C45/3568I/1118/ME45	
Sony (Not compatible with Sony info-lithium battery.)	Digital Cameras	Cybershot	DSC-03
		DSC-P1, DSC-P2, DSC-P3, DSC-P5, DSC-P7, DSC-P9, DSC-P20, DSC-P30, DSC-P31, DSC-P51, DSC-P71, DSC-D700, DSC-D770, DSC-F55, DSC-F505	
		CD Mavica	
		MVC-CD1000	
		FD Mavica	
		MVC-FD5, MVC-FD7, MVC-FD72, MVC-FD75, MVC-FD83, MVC-FD85, MVC-FD87, MVC-FD88, MVC-FD89, MVC-FD90, MVC-FD91, MVC-FD92, MVC-FD95, MVC-FD97, MVC-FD100, MVC-FD200	
		SONY3	
		Cybershot	
		DSC-F707, DSC-F717, DSC-F828, DSC-S30, DSC-S50, DSC-S70, DSC-S75, DSC-S85	
		CD Mavica	
		MVC-CD200, MVC-CD250, MVC-CD300, MVC-CD350, MVC-CD400, MVC-CD500	
		SONY2	
		Cybershot	
	DSC-F707, DSC-F717, DSC-F828, DSC-S30, DSC-S50, DSC-S70, DSC-S75, DSC-S85		
	CD Mavica		
	MVC-CD200, MVC-CD250, MVC-CD300, MVC-CD350, MVC-CD400, MVC-CD500		
	SONY2		
	Cybershot		
	DSC-P8, DSC-P10, DSC-P12, DSC-P32, DSC-P52, DSC-P72, DSC-P92, DSC-F88, DSC-V1, DSC-P8, DSC-P10, DSC-P12, DSC-P32, DSC-P41, DSC-P43, DSC-P52, DSC-P72, DSC-P92, DSC-P93, DSC-P100, DSC-P100/LJ, DSC-100/R		
	DSC-P150/LJ, DSC-P200, DSC-P200/R, DSC-S40, DSC-S60, DSC-S90, DSC-F88, DSC-H1, DSC-L1, DSC-L1/B, DSC-L1/LJ		
DSC-L1/R, DSC-T7, DSC-V1, DSC-V3, DSC-W1, DSC-W1/B, DSC-W5, DSC-W7			
SONY1/F828/W5/W7/V3/P200/P100/P72	DSC-01		
	DV	SONY-DV PC55E/108E/109E/350E/1000E/HC40E/1000E/85E/21E/33E/43E/90E/20E/30E/	DSC-04
	DVD	DVD7E/602E/653E/703/803E	

	Notebooks	R505TS, R600HEK, R600HEP, R600HFPD, R600HMPD, R600MX, V505AP, X18, X29, X9, XE17, XE7, XG18, XG19, XG28, XG28K, XG29, XG38, XG39, XG39K, XG500, XG700, XG9, Z505, Z505FA, Z505GA, Z505GAH, Z505GAM, Z505HE, Z505HS, Z505HSK, Z505JE, Z505JEK, Z505JS, Z505JSK, Z505LE, Z505LEK, Z505LS, Z505LSK, Z505R, Z505RX, Z505S, Z505SX, Z600HEK, Z600LEK, Z600NE, Z600NEK, Z600RE, Z600TEK	DC No. E
	PDA's	Clie' N790, NX60, NX70V, SJ20, SJ22, SJ33, TG50	PDA-04
Texas Instruments	Notebooks	Extensa 350 series, 3650 series, 390 series, 550 series, 560 series, 570 series, 900 series	DC No. C
Toshiba	Digital Cameras	PDR-M25, PDR-M61, PDR-M65, PDR-M71, PDR-M81, PDR-T10, PDR-2300, PDR-3300, PDR-3310, PDR-4300	DC No. Z
	Notebooks	Portege: 2000, 2010, 4000, 4005, 4010, 3500 Tablet, 3505 Tablet, 7000CT, 7010CT, 7020CT, 7140CT, 7200CT/Cte, 7220Cte, R100, M100, M200, M205 Satellite: 200, 220, 300, 310, 320, 330, 1400, 1405, 1410, 1415, 1555, 1800, 1805, 2060, 2065, 2100 series, 2200 series, 2400, 2405, 2410, 2415, 2500 series, 2600 series, 2700 series, 2800, 2805, 4000 series, 4100, 5005, 5105, 5200, 5205, A10, A15, M20, M30, M35 Satellite Pro: 430, 440, 445, 460, 465, 470, 480, 490, 520, 550, 4200, 4220, 4260, 480, 490, 520, 550, 4200, 4220, 4260, Tecra: 520CDT, 550CDT, TE2000, TE2100, TE2300, 8000, 8100, 8200, 9000, 9100, A1, A2, M1, M2, S1	DC No. D
	Portable DVD Players	SD-P1200, SD-P1400, SD-P1500, SD-P2000, SD-P2500, SD-P2600 SD-P1600, SD-1650, SD-1850	DC No. Z PA-L5B
	PDA's	e310, e550, e740, e755	DC No. Z
UMAX	Notebooks	318T, ActionBook 300C, ActionBook 530T	DC No. C
Viewsonic	PDA's	V35, V37	DC No. Z
Winbook	Notebooks	J1, N, Si, Si2, X1, X2, X4, XL, XLi, XP, XP5, Z, Z1	DC No. C

	Notebooks	R505TS, R600HEK, R600HEP, R600HFPD, R600HMPD, R600MX, V505AP, X18, X29, X9, XE17, XE7, XG18, XG19, XG28, XG28K, XG29, XG38, XG39, XG39K, XG500, XG700, XG9, Z505, Z505FA, Z505GA, Z505GAH, Z505GAM, Z505HE, Z505HS, Z505HSK, Z505JE, Z505JEK, Z505JS, Z505JSK, Z505LE, Z505LEK, Z505LS, Z505LSK, Z505R, Z505RX, Z505S, Z505SX, Z600HEK, Z600LEK, Z600NE, Z600NEK, Z600RE, Z600TEK	DC No. E
	PDA's	Clie' N790, NX60, NX70V, SJ20, SJ22, SJ33, TG50	PDA-04
Texas Instruments	Notebooks	Extensa 350 series, 3650 series, 390 series, 550 series, 560 series, 570 series, 900 series	DC No. C
Toshiba	Digital Cameras	PDR-M25, PDR-M61, PDR-M65, PDR-M71, PDR-M81, PDR-T10, PDR-2300, PDR-3300, PDR-3310, PDR-4300	DC No. Z
	Notebooks	Portege: 2000, 2010, 4000, 4005, 4010, 3500 Tablet, 3505 Tablet, 7000CT, 7010CT, 7020CT, 7140CT, 7200CT/Cte, 7220Cte, R100, M100, M200, M205 Satellite: 200, 220, 300, 310, 320, 330, 1400, 1405, 1410, 1415, 1555, 1800, 1805, 2060, 2065, 2100 series, 2200 series, 2400, 2405, 2410, 2415, 2500 series, 2600 series, 2700 series, 2800, 2805, 4000 series, 4100, 5005, 5105, 5200, 5205, A10, A15, M20, M30, M35 Satellite Pro: 430, 440, 445, 460, 465, 470, 480, 490, 520, 550, 4200, 4220, 4260, 480, 490, 520, 550, 4200, 4220, 4260, Tecra: 520CDT, 550CDT, TE2000, TE2100, TE2300, 8000, 8100, 8200, 9000, 9100, A1, A2, M1, M2, S1	DC No. D
	Portable DVD Players	SD-P1200, SD-P1400, SD-P1500, SD-P2000, SD-P2500, SD-P2600 SD-P1600, SD-1650, SD-1850	DC No. Z PA-L5B
	PDA's	e310, e550, e740, e755	DC No. Z
UMAX	Notebooks	318T, ActionBook 300C, ActionBook 530T	DC No. C
Viewsonic	PDA's	V35, V37	DC No. Z
Winbook	Notebooks	J1, N, Si, Si2, X1, X2, X4, XL, XLi, XP, XP5, Z, Z1	DC No. C