

This Quick Reference Guide is not intended to replace your vehicle Owner's Manual which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Manual carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Manual.

United States
Ford Customer Relationship Center

1-800-392-3673 (FORD)

(TDD for the hearing impaired:
1-800-232-5952)

fordowner.com

Canada
Ford Customer Relationship Centre

1-800-565-3673 (FORD)

ford.ca



April 2014
Third Printing
Quick Reference Guide
Escape
Litho in U.S.A.



Quick Reference Guide

 
2014 **Escape**

EJ5J19G277AA




Commonly Used SYNC® Voice Commands

Pull the voice button  on the steering wheel toward you then say:



Basic Commands

 - What can I say?
- List of commands
- Main menu
- Previous
- Next
- Go back
- Exit
- Help
- Vehicle health report*
- Pair my phone



Phone

- Phone list of commands
 - Dial
 - Call <name> on cell/at home/at work
 - Call voicemail
 - Do not disturb <On/Off>
 - Listen to text messages (phone-dependent feature)



Climate**

- Climate control list of commands
 - Climate <On/Off>
 - Climate temperature

*if equipped

**available only with MyFord Touch



Entertainment

- Audio list of commands:
You can also get detailed lists of commands for radio, USB, *Bluetooth*® audio, SiriusXM and SD card
- Radio
 - <On/Off>
 - FM <87.9-107.9>
 - FM preset <#>
- CD
 - Play track <1-512>
 - Shuffle <On/Off>
- USB
 - Play song <name>
 - Play album <name>
- SiriusXM
 - <Channel name>
 - Preset <#>



Navigation**

- Navigation list of commands
 - Destination street address <number, name, city>
 - Destination home
 - Navigation voice <On/Off>
 - Navigation voice volume <increase/decrease>
 - Repeat instruction
 - Show <map/north-up/heading-up/3D>
- Travel Link list of commands
 - Traffic
 - Weather
 - Movie listings
 - Fuel prices
 - Sports <headlines/scores/schedule>



SYNC Services*

Must say "Services" first and then

- What can I say?
- Traffic
- Directions
- Business search
- Operator (for direction or business search)
- Favorites
- News, sports, weather horoscopes, stock quotes, movies or travel
- Help

Some services may not be available in your area. Refer to your *Owner's Manual*, visit the website or call the toll-free number for more information.

For U.S. customers:

Visit SyncMyRide.com or call **1-800-392-3673** (select Option 1 or 2 for language, then Option 3).

For Canadian customers:

Visit SyncMyRide.ca or call **1-800-565-3673** (select Option 1 or 2 for language, then Option 3).

Table of Contents

- 4 – 5** Instrument Panel
- 6 – 7** SYNC
- 8 – 10** SYNC with MyFord Touch
- 11** Convenience
- 12 – 13** Essential Information
- 14 – 15** Function
- 16 – 17** Liftgate
- 18 – 19** Comfort

WARNING

Driving while distracted can result in loss of vehicle control, crash and injury. We strongly recommend that you use extreme caution when using any device that may take your focus off the road. Your primary responsibility is the safe operation of your vehicle. We recommend against the use of any hand-held device while driving and encourage the use of voice-operated systems when possible. Make sure you are aware of all applicable local laws that may affect the use of electronic devices while driving.

Learn More About Your New Vehicle

Scan the country-appropriate QR code with your smartphone (make sure you have a scanner app installed) and you can access even more information about your vehicle.

fordowner.com (U.S.)/ford.ca (Canada)



Instrument Panel



1 Cruise Control

To Set Your Cruise Control Speed

- Press and release **ON**.
- Accelerate to the desired speed.
- Press and release **SET +**, then take your foot off the accelerator.

After your speed has been set, you can press **SET +** or **SET -** to adjust your cruise speed. To disable, pull the **CAN** (Cancel) control toward you or tap the brake pedal.

2 Service Engine Soon Light

Lights briefly when you switch on the ignition. If it remains on or is blinking after you start the engine, the On-Board Diagnostics (OBD-II) system has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

3 Information Display

Provides information about various systems on your vehicle. Use the left, 5-way controls located on the steering wheel to choose and confirm settings and messages. Refer to the *Information Displays* chapter of your *Owner's Manual* for more information.

4 Tilt/Telescope Steering Column

Unlock the steering wheel by pulling the lever down. Adjust the wheel to the desired position (in, out, up and down). Push the lever back up to lock the steering wheel in place.

5 Media Controls*

Use the right, 5-way controls to adjust entertainment settings such as volume, seek and mode. Highlight and make selections, then press **OK** to confirm your selection.

6 Voice Controls*

- Pull toward you to access voice recognition.
- Press the phone button to answer an incoming call.

Press and hold to exit phone mode or end a call.

Press the home icon at any time to return to your MyFord Touch® home screen.

Press the information icon to access MyFord Touch, SYNC Services®, Sirius® Travel Link™, Alerts, Calender and SYNC Apps.

7 Wiper Controls

Use the rotary control on the lever to adjust the wipe intervals. Pull the lever toward you to wash the windshield.

8 Push Button Start*

Allows you to start your vehicle by pressing the **ENGINE START STOP** button while fully pressing down on the brake pedal. Press the button again to switch off the engine.

Note: Your intelligent access transmitter* must be inside the vehicle to start the ignition.

9 Hazard Control

*if equipped





SYNC®

Getting Started with Your SYNC System

SYNC is a hands-free, voice recognition system used for entertainment, information and communication. SYNC. Say the Word.

Before You Get Started

1. Set up your owner account at SyncMyRide.com (U.S.) or SyncMyRide.ca (Canada). Register by following the on-screen instructions. After registering, you can see what available services you are eligible for.
2. SYNC uses a wireless connection called **Bluetooth®** to communicate with your phone. Switch on **Bluetooth** mode in your phone's menu options. This lets your phone find SYNC. If you need more details on setting up your phone with SYNC, visit SyncMyRide.com (U.S.) or SyncMyRide.ca (Canada), or your phone manufacturer's website.

Pairing Your Phone with SYNC

In order to use many of the features of SYNC, such as making a phone call, receiving a text or using SYNC Services*, you must first pair and connect your phone with SYNC.

To Pair Your Phone for the First Time

1. Make sure that your vehicle is in park (P), you switch the ignition and radio on, and your cellular phone is in the proper mode. See your phone's manual, if necessary.
2. Press the phone button. When the display indicates **No Phone Found**, press **OK**.
3. When **Find SYNC** appears in the display, press **OK**.

Note: If the system prompts you to enter a PIN on your cellular phone, it does not support Secure Simple Pairing. To pair, enter the PIN displayed on the SYNC touchscreen, then skip steps 4 and 5.

4. When prompted on your phone's display, confirm that the PIN provided by SYNC matches the PIN displayed on your cellular phone.

5. When prompted from SYNC, confirm that the PIN provided by SYNC matches the PIN that your cellular phone displayed.
6. The display indicates when the pairing is successful.

Note: The system may prompt you to set your phone as primary or favorite (the primary phone will receive messages and voicemail); download your phone book (a requirement to use the full set of voice commands); and switch on 911 Assist®.

Tips

- Make sure that you accept the request from SYNC to access your phone.
- To pair subsequent phones, please refer to *Pairing Subsequent Phones* in the SYNC chapter of your Owner's Manual.
- If you are experiencing pairing problems, try performing a clean pairing by deleting your services from SYNC and deleting the SYNC connection from your phone, and then repeat the process.

Why Do You Need a SYNC Owner Account?

You need an account if you wish to activate a Vehicle Health Report* or view your reports online. You'll also be able to take advantage of the many SYNC Services* and personalization features, such as saving your Favorites and Points of Interest (POI). You'll receive the latest software updates that add new places, directions and information; and if you have questions, you'll get free customer support.

Note: Your SYNC system may offer advanced features such as SYNC Services* and Vehicle Health Reports*. Visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.

Using Your Phone with SYNC

Note: You must download your phone book to make phone calls with voice commands by name.

Making a Phone Call

Use SYNC to make a phone call to anyone in your phone book by pulling the voice button . When prompted, say a voice command.

For example, you could say "Call Jake Smith at home". When the system confirms the number, say "Dial" again to initiate the call.

Note: You can also make phone calls by pulling the voice button . When prompted, say the voice command "Dial", then verbally say the phone number.

Answering Incoming Calls

Whenever you have an incoming call, you will be able to see the name and number of the person calling in your display. Press the phone button to answer an incoming call. You can hang up at any time by pressing the phone button .

Do Not Disturb Mode

This feature blocks incoming calls and text messages and saves them for later. You still have access to outgoing calls when this feature is active. Say the voice command "Do not disturb on" to enable and "Do not disturb off" to disable.

Using SYNC to Access Digital Media

Plug in your USB media devices such as phones and MP3 players, and use SYNC to play all of your favorite music.

Using Voice Commands to Play Music

1. Plug your media player into your USB port.
2. Pull the voice button . When prompted, say "USB", then follow-up saying a voice command.

*if equipped

SYNC® with MyFord Touch®*

A revolutionary way to connect with your vehicle.



Getting Started, Understanding SYNC with MyFord Touch

Use the four-corner, four-color touchscreen to explore and interact with your vehicle. The touchscreen works the same way traditional controls, knobs and buttons do. Press the various corners on your touchscreen to personalize the many features and settings of your vehicle all in one place. The system provides easy interaction with your cellular phone, multimedia entertainment, climate controls and navigation system*.

Pairing Your Phone with MyFord Touch

Make sure your vehicle is in park (P), your ignition and radio are switched on and your cellular phone is in the proper mode. See your phone's manual, if necessary.

1. Touch **Add Phone** on your touchscreen. **Find SYNC** appears on the screen, and instructs you to begin the pairing process from your device.
2. Select **SYNC** and a six-digit PIN appears on your device. If prompted to enter a PIN on your device, it does not support Secure Simple Pairing. To pair, enter the PIN displayed on the touchscreen, and then skip the next step.
3. When prompted on your phone's display, confirm that the PIN provided by **SYNC** matches the PIN displayed on your cellular phone. The display will indicate when pairing is successful.

Get in Touch Using Your Four-corner Touchscreen

Phone, Navigation*, Climate and Entertainment are the four main operations of SYNC with MyFord Touch. Each feature has its own corner represented by its own color.



Phone

Voice-control your phone for hands-free calling with your phone securely put away. With SYNC, you won't even need to know the phone number. Just say the name of the person you want from your contacts.

Your Phone Connects You with Many Other Features and SYNC Services*

- Connect to SYNC Services for traffic, directions, business searches and information favorites.
- Connect to Operator Assist* to help locate a listing or destination.
- Call for a Vehicle Health Report*.
- Automatically connect to a 911 Operator in the event of an accident (feature needs to be activated prior to the event).
- Transfer calls seamlessly from SYNC to phone as you get in or out of your vehicle.

Refer to the **SYNC with MyFord Touch** chapter of your **Owner's Manual** for complete details.



Navigation*

Get started with your navigation system by pressing the upper-right green corner. The available, voice-activated navigation system includes:

- SiriusXM Traffic™
- Sirius Travel Link™
- GPS (Global Positioning System) technology
- 3-D mapping
- Turn-by-turn navigation

Some features require activation. Refer to the **MyFord Touch** chapter of your **Owner's Manual** for complete details.



Set a Destination

You can use the touchscreen to set a destination in many ways, like a street address, a city center, a place on the map or a point of interest (POI). The easiest way is by voice.

1. Pull the voice button  . When prompted, say "Destination street address".
2. The system will ask you to say the full address and will display an example on-screen.
3. You can then speak the address naturally, such as: "One two three Main Street, Anytown".

You can also use the touchscreen to enter a destination and narrow your choices by city or street as you type.

You can choose from up to three different types of routes:

- **Fastest:** Uses the fastest moving roads possible.
- **Shortest:** Uses the shortest distance possible.
- **Eco (EcoRoute):** Uses the most fuel efficient route.

SYNC® with MyFord Touch®*

continued

Climate

SYNC with MyFord Touch controls the temperature, airflow direction and fan speed.

To use voice commands to operate the climate controls, say a voice command like "Climate temperature 72 degrees" and MyFord Touch will make that adjustment.

Set Your Temperature

- Touch the lower-right blue corner on your touchscreen.
- Set your exact, desired temperature using the + or - buttons.



Entertainment

No matter how you store your music, SYNC makes it yours to enjoy when you're behind the wheel. Just press the lower-left, red corner of the touchscreen. From here, you can easily go between AM/FM, Sirius and other media sources.

Set Your Radio Presets

- Touch the Entertainment corner on the touchscreen.
- Touch **FM**.
- Enter the desired station and touch **Enter**.
- Touch **Presets** and then touch and hold one of the memory preset buttons to save it. You'll hear a brief mute and the sound will return once the system saves the station.

Bring in Your Own Music

Gain access to any audio source by voice and even control how each operates, like changing radio stations, CD tracks or music on one of the following devices:

- USB
- *Bluetooth*® streaming
- SD card
- A/V in

Refer to the *MyFord Touch* chapter in your *Owner's Manual*, visit the website or call the toll-free number for more information. See the inside front cover of this guide for details.



*if equipped

Convenience

Remote Entry Icons

- Press  once to lock all doors. Press again within three seconds to confirm all doors are locked.
- Press  once to unlock the driver's door. Press again within three seconds to unlock all doors.
- Press  to activate the panic alarm. Press again or switch on the ignition to deactivate.
- Press  twice within three seconds to open the liftgate.
- **Car finder:** Press  twice within three seconds to locate your vehicle. The horn will sound and the lamps will flash.

Intelligent Access*



Note: Your transmitter must be within 3 feet (1 meter) of the vehicle for intelligent access to function properly.

To unlock and open the door, pull a front exterior door handle. To lock the doors, press and hold the sensor button on the door handle. To unlock and open the liftgate, press the exterior liftgate release button in the top of the pull cup handle. The intelligent access transmitter also contains a mechanical key blade, which can be used to unlock the driver door, if necessary.

Remote Start*

Remote start allows you to start the engine from outside your vehicle using your transmitter. To start, press  and then press  twice within three seconds. Once inside, apply the brake while pressing the **ENGINE START STOP** button. Shift into drive (D) and go. To switch off the engine from outside the vehicle after using your remote start, press  once.

Universal Garage Door Opener*

Your driver's side visor has a built-in wireless transmitter that replaces the common hand-held garage door opener. This system can also be programmed to security systems,

entry gates and home or office lighting. Refer to the *Universal Garage Door Opener* chapter in your *Owner's Manual* for programming instructions and additional information on how to use this device.

Active Park Assist*

The active park assist system can detect an available parallel parking space and automatically steer the vehicle into that space (hands-free). The system visually and audibly provides you with braking, accelerating and gearshifting instructions to park the vehicle. To initiate active park assist, press the **AUTO |P|** button located on the instrument panel. To stop the parking procedure, grab the steering wheel or press the control again. For complete information, refer to the *Parking Aids* chapter of your *Owner's Manual*.



Note: The driver is always responsible for controlling the vehicle, supervising the system and intervening, if required.

*if equipped

11

Essential Information

Fuel Tank Capacity and Fuel Info

Your vehicle has a 15.4 gallon (58.5L) fuel tank capacity. If your vehicle is not a flexible fuel vehicle, then only use unleaded fuel or unleaded fuel blended with a maximum of 15% ethanol. **Do not use fuel ethanol (E85), diesel, fuel-methanol, leaded fuel or any other fuel because it could damage or impair the emission control system.**

Easy Fuel® System

With this system, you simply open the fuel door, insert the nozzle and begin fueling. It is self-sealing



and therefore protected against dust, dirt, water, snow and ice.

Wait 5–10 seconds from the time the refueling nozzle is shut-off until you remove the nozzle from the vehicle to allow residual fuel in the nozzle to drain into the tank. When using a portable fuel container, slowly insert the fuel funnel (located in the spare tire compartment), and pour the fuel into the funnel.

Note: Do not use aftermarket funnels as they will not work with the Easy Fuel system and may cause damage. Properly clean the funnel after each use.



Location of Spare Tire and Tools

Your spare tire and tools are beneath the carpeted load floor in the rear of your vehicle. The spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details on changing your tire, refer to the *Changing a Road Wheel* section in the *Wheels and Tires* chapter of your *Owner's Manual*.



SOS Post-Crash Alert System™

Provides audible and visual alarms when a crash causes the deployment of an airbag or the activation of the safety belt pretensioners. The direction indicators will flash and the horn will sound. To deactivate, press the hazard flasher control or the panic button (panic button icon) on your remote transmitter.



Essential Information *continued*

Towing Your Escape

Towing your vehicle behind an RV or any other vehicle may be limited. Refer to *Towing the Vehicle on Four Wheels* section in the *Towing* chapter of your *Owner's Manual*.



Tire Pressure Monitoring System

Your vehicle shows a low tire pressure warning light (warning light icon) in your instrument cluster when one or more of your tires are significantly under-inflated. If this happens, stop and check your tires as soon as possible. Inflate them to the proper pressure.



Refer to the *Inflating Your Tires* section in the *Wheels and Tires* chapter of your *Owner's Manual* for more information.

Fuel-efficient Transmission

Your vehicle has been designed to improve fuel economy by reducing fuel usage while coasting or decelerating. This may be perceived as a light to medium braking sensation when removing your foot from the accelerator pedal.

Rear Window Buffeting

You may hear a pulsing noise when just one of the



windows is open. Lower the opposite window slightly to reduce this noise. Press the switch to open the window. Lift the switch to close the window.

Front and Rear Sensing System*

This system sounds an audible warning tone if there is an obstacle near the vehicle's front or rear bumpers. As the vehicle moves closer to the obstacle, the rate of the warning tone increases in frequency. The front sensors are automatically activated when the vehicle is in drive (D) and the vehicle speed is below 6 mph (10 km/h).

The system will detect objects up to 27 inches (70 centimeters) away from the front of the vehicle and about 14 inches (35 centimeters) to the side of the front end.

The rear sensors are active only when the vehicle is in reverse (R), and will detect objects up to 6 feet (1.8 meter) away, with decreased coverage at the outer corners of the bumper). See the *Parking Aids* chapter in your *Owner's Manual* for complete information on your vehicle's sensing systems.

Note: Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your *Owner's Manual* for safety information, more details and limitations.

Roadside Assistance

Your new Ford vehicle comes with the assurance and support of 24-hour emergency roadside assistance. To receive roadside assistance in the United States, call 1-800-241-3673. In Canada, call 1-800-665-2006.

*if equipped

Function

Rear View Camera



This system provides a video image of the area behind the vehicle. The display automatically appears when the vehicle is in reverse (R) and uses green, yellow and red guides to alert you of your proximity to objects.

MyKey®

MyKey allows you to program certain driving restrictions in order to promote good driving habits. You can program things like: speed restrictions, limited volume levels and traction control always on. For complete information, refer to the *MyKey* chapter in your *Owner's Manual*.

SecuriCode™ Keyless Entry Keypad*

Allows you to lock or unlock the doors and arm or disarm the anti-theft alarm. The keypad, located near the driver's window, is invisible until touched and then it lights up so you can see and touch the buttons. To get started, you will need your 5-digit factory code found on your owner's wallet card (located in the glove box).

Entering this code unlocks the driver's door. To lock all of the doors, press and hold **7-8** and **9-0** at the same time. For complete information, including how to set your own passcodes, refer to the *Locks* chapter of your *Owner's Manual*.



SelectShift Automatic® Transmission

To enable, move the SelectShift gearshift lever from drive (D) to sport (S). Sport mode utilizes a unique downshift schedule to keep the transmission in lower gears for enhanced performance and more aggressive engine braking. When the vehicle is in sport mode, it enables a manual gear selection when you use the thumb toggle on the side of the gearshift lever. Press (+) to upshift, press (-) to downshift. Move the gearshift lever to drive (D) to return to automatic control.



Blind Spot Information System (BLIS®) with Cross Traffic Alert*

BLIS is designed to alert you if certain vehicles enter the blind spot zone while driving. Cross traffic alert is designed to warn you of vehicles approaching from the sides when the transmission is in reverse (R). Both systems display a yellow indicator light in your exterior mirrors. Cross traffic alert will also sound tones and display messages to warn you from which direction vehicles are approaching. Refer to the *Driving Aids* chapter in your *Owner's Manual* for more information.



*if equipped

Function *continued*



Wiper Operation

Adjust the wiper lever and its controls to operate the front and rear wipers.

- Single wipe – Pull the lever down.
- Intermittent wipe – Raise the lever upward to position 1.
- Normal wipe – Raise the lever upward to position 2.
- High speed wipe – Raise the lever to position 3, its highest position.

Intermittent Wipe

Putting the wiper lever in intermittent mode allows the driver to set the amount of time between wipes.

Use the rotary control on the wiper lever to adjust the intermittent wipe intervals.

- Rotate the control upward for short wipe intervals.
- Rotate the control downward for long wipe intervals.

Speed Dependent Wipers

When your vehicle speed increases, the interval between wipes decreases.

Autowipers*

The wipers function when the system detects moisture on the windshield, and adjusts the wiper speed automatically. Use the rotary control to adjust the sensitivity of the rain sensor.

- Low sensitivity – The wipers will automatically operate when the sensor detects a large amount of moisture on the windshield.
- High sensitivity – The wipers will automatically operate when the sensor detects a small amount of moisture on the windshield.

automatically operate when the sensor detects a small amount of moisture on the windshield.

Note: Keep the outside of the windshield clean. Dirt, bugs and excessive road debris can prevent it from detecting rain.

To Reduce Smearing, We Recommend the Following

Lower the sensitivity of the autowipers.

- Switch to normal or high-speed wipe.
- Switch the autowipers off.

Note: Make sure you switch off the windshield wipers before entering a car wash.

Washing the Windshield

To operate the windshield washer, pull the wiper lever toward you.

- For a short spray, pull and release.

- For a longer spray, pull and hold the wiper lever toward you. Release the lever once the windshield is clear of dirt or debris.

Rear Window Wiper

To operate, press the rocker switch on the end of the lever to change between off, intermittent and low speed. When you shift into reverse (R), the rear wiper will turn on to intermittent speed when you switch on the front wipers.

Rear Window Washer

To use the rear window washer, push the wiper lever away from you. When you release the lever, the wiper will operate for a short time.

*if equipped

15

Liftgate

Manual Liftgate

To Open the Liftgate

1. Unlock all the vehicle doors.
2. Press the button located inside the liftgate pull-cup handle to unlatch the liftgate.
3. Pull on the outside handle to raise the liftgate.

Power Liftgate*

Note: If the vehicle is running, the liftgate will operate only with the transmission in park (P).

Open or close the liftgate with your remote control by pressing  twice within three seconds. You will hear a tone when the liftgate activates. You can also open or close the liftgate from inside the vehicle by pressing  on the instrument panel.



To Open with the Outside Liftgate Button

1. Unlock the liftgate with the remote control or power door control. If the intelligent access transmitter* is within range (3 feet [1 meter]) of the liftgate, the liftgate will unlock when you press the liftgate release button.
2. Press the button located in the top of the liftgate pull-cup handle.
3. Allow the power system to open the liftgate after pressing the control.
4. To close, press and release the control pictured below.



Setting the Liftgate Open Height

Once you open the power liftgate, you can move it manually to a desired height. If the previously programmed liftgate height is lower than the fully opened position, you can manually push it upward.

To Program a New Height

1. Open the liftgate.
2. Manually move the liftgate to your desired height.
3. Press and hold the control button on the liftgate until you hear a tone, indicating that your programming of the liftgate height is successful.

The next time you use the power feature to open the liftgate, it will open to its newly programmed height.

To change the programmed height, repeat the process above.

*if equipped

Liftgate *continued*

Obstacle Detection

When you use the power open or close feature and the liftgate detects a problem, you will hear a warning tone and the liftgate will stop.

The Liftgate Will Not Power Open or Close When

- It detects an object in its opening or closing path.
- The 12-volt battery does not have enough charge to power the liftgate.
- The ignition is on and the transmission is not in park (P), or
- You are traveling at speeds at or above 3 mph (5 km/h).

Note: Entering the vehicle while the liftgate is closing could cause the vehicle to bounce and activate obstacle detection.

Hands-Free Liftgate Operation*

To Open Your Liftgate Hands-Free While You Are at the Liftgate

1. Make sure you have an intelligent access transmitter* within 3 feet (1 meter) of the liftgate.
2. Move your foot under and away from the rear bumper using a single kicking motion. Do not move your foot sideways or the sensors may not detect the motion.

Note: In vehicles equipped with the towing package and the hands-free power liftgate feature, you must kick your foot **between** the trailer hitch and the exhaust system. Do not kick under the hitch.



*if equipped

Comfort



Ambient Lighting*

Light the interior with a choice of several colors by using the ambient lighting feature. The ambient lighting controls are located on the overhead console.

- ⌚ Color Palette – Press to cycle through the various color choices.
- ⌚ Control Knob – Turn the knob past the first detent to switch ambient lighting on and adjust the brightness.
- ⌚ Search Mode – Press to switch on all interior lamps and ambient lighting. Press again to switch off the interior lamps.

The ambient lighting turns on when you switch on the ignition and the headlamps.

The ambient lighting will remain on until you switch off the ignition and either lock your vehicle, or allow the accessory delay timer to expire.



Heated Front Seats*

The front heated seat controls are on the center console near the gearshift lever. Rotate the dial to select your preferred heat mode.

Rear Reclining Seats*

Pull the lever up to recline the seatback to the desired position. Pull the lever up to fold the seatback forward. You may need to fold the outboard head restraints and lower the center head restraint first.



Cargo Storage*

You can store additional items in the cargo space located underneath the front passenger seat. You can reach the space from the second row.

A cargo storage compartment is underneath the load floor in the rear of the vehicle. Lift the release handle to open it. Vehicles with the standard sized spare tire can adjust the load floor to two positions: high or low.

There are four tie-down anchors in the rear cargo area (one in each corner) to help secure objects.

*if equipped

Comfort *continued*



Panoramic Vista Roof® and Power Sunscreen*

The moonroof and sunscreen controls are on the overhead console. Both features have a "one-touch" opening and closing operation. Press and release the following controls:

- **Sunscreen:** The rear of the control opens the sunshade, while the front of the control closes it.
- **Note:** If the moonroof is open, it will close automatically before the sunscreen.
- **Moonroof:** The rear of the control opens the sunscreen and moonroof. The front of the control closes the moonroof glass panel.



Memory Function*

The memory function allows a "one-touch" recall of personalized memory features like the positions of the driver seat and power mirrors. Use the memory controls located on the driver's door to program and then recall memory positions.

To program position **1**, press and hold the **1** button until you hear a tone. Use this same procedure to set positions **2** and **3** using the respective buttons. You can now use these controls to recall the set memory positions.

Tilting Front-row Head Restraints

Tilt the head restraint forward for additional comfort by gently pulling the top of the head restraint. Once it is in the forward-most position, tilting it forward once more will release it to the upright position.

Note: Do not attempt to force the head restraint backward after it is tilted. Instead, continue tilting it forward until the head restraint releases to the upright position.



*if equipped