



## Getting to Know Your **2016 Silverado**



[www.chevrolet.com](http://www.chevrolet.com)

*Review this Quick Reference Guide for an overview of some important features in your Chevrolet Silverado. More detailed information can be found in your Owner Manual. Some optional equipment described in this guide may not be included in your vehicle. For easy reference, keep this guide with your Owner Manual in your glove box.*

**DEP**  
DEALER E-PROCESS

# Instrument Panel

- Memory Seat Controls
- 4WD Control
- Integrated Trailer Brake Control
- Instrument Panel Illumination Control/ Exterior Lamp Control
- Turn Signal/Windshield Wipers Lever
- Driver Information Center
- Tow/Haul Button



- Power Mirror Control/Door Lock Switch/Window Buttons
- Cruise Control/Collision Alert/Heated Steering Wheel Buttons
- Audio Next/Previous Favorite Station Controls (behind steering wheel)
- Telescoping Steering Wheel Control
- Tilt Steering Wheel Lever
- Audio Volume Controls (behind steering wheel)
- Voice Recognition Buttons/Driver Information Center Controls

## Symbols

- |  |                      |  |                    |  |   |
|--|----------------------|--|--------------------|--|---|
|  | Low Fuel             |  | StabiliTrak Active |  | Hill Descent Control                      |
|  | Traction Control Off |  | StabiliTrak Off    |  | Diesel Exhaust Brake (diesel models only) |
|  | BRAKE Brake System   |  | Security           |  | Lights On Reminder                        |
|  | Cruise Control Set   |  | Tow/Haul Mode      |  | Airbag Readiness                          |

Driver's Heated/  
Vented Seat  
Buttons♦

Infotainment  
System (8-inch\*  
screen shown)♦

Climate  
Controls♦

Passenger's  
Heated/Vented  
Seat Buttons♦

USB Port♦  
(in glove box; LT and LTZ  
bench seat models only)



Adjustable Pedals  
Switch♦/Traction Control  
and StabiliTrak Button/  
Cargo Box Lamp Button

USB  
Ports♦

Accessory  
Power  
Outlets♦

110V  
Outlet♦

Front and Rear Parking Assist♦/  
Lane Keep Assist♦ (LD models)/Lane  
Departure Warning♦ (HD models)/  
Hill Descent Control♦/Diesel Exhaust  
Brake (if equipped) Buttons

*Note: Diesel model shown.*



Check Engine



Antilock Brake System



Low Tire Pressure  
(single rear wheel  
models only)



Door Ajar



Oil Pressure



Charging System



Safety Belt Reminder

*Refer to your Owner Manual  
to learn about the information  
being relayed by the lights,  
gauges and indicators on the  
instrument cluster.*

**See In Brief in your Owner Manual.**

♦ Optional equipment \*Screen measured diagonally

**DEP**  
DEALER E-PROCESS

## Remote Keyless Entry Transmitter (Key Fob)◆

### Unlock

Press to unlock the driver's door. Press again to unlock all doors and tailgate. Press and hold to lower all windows.

### Lock

Press to lock all doors and tailgate.

### Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The turn signal lamps will flash and the horn will sound.

Press and hold to activate the alarm. The turn signal lamps will flash and the horn will sound until the button is pressed again or the ignition is turned on.

**Note:** To change the remote lock, unlock, and remote start settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.



### Remote Vehicle Start◆

Press and release the **Lock** button and then press and hold the **Remote Start** button until the turn signal lamps flash to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.

- During a remote start, the engine will run for 10 minutes.
- Press and hold the **Remote Start** button until the parking lamps turn off to cancel a remote start.

**Note:** If the remote start heated/vented seat option is selected, the heated/vented seat button indicators do not illuminate and the temperature performance of the unoccupied seat may be reduced during the remote start. The heated/vented seat turns off when the ignition is turned on.

See Keys, Doors and Windows in your Owner Manual.

## Door Locks

### Door Locks

- ▶ To lock or unlock all doors, press the power door **Lock/Unlock** button, located on the front doors.

**Note:** To change the lock and unlock settings, go to Power Door Locks in the Vehicle Settings menu.

- ▶ To open a locked door from inside, pull the inside door handle to unlock the door and then pull the door handle again to open the door.
- ▶ To prevent passengers from opening a rear door (if equipped) from the inside or opening a rear window, press the **Rear Door Security Lock/Rear Window Lockout** button located on the driver's door. The button indicator will illuminate.

### Locking Tailgate

- ▶ To lock or unlock the tailgate, use the door key or the key fob◆.

See Keys, Doors and Windows in your Owner Manual.

## Power Mirrors◆

### Power Mirror Adjustment

 
- ▶ Press the **Power Mirror Selector** switch to select the driver's or passenger's mirror; use the four-way control to adjust the mirror.

### Power Folding Mirror

- ▶ Press the **Power Folding Mirror** button to fold or unfold the mirrors.

## Power Seats

### Seat Adjustments

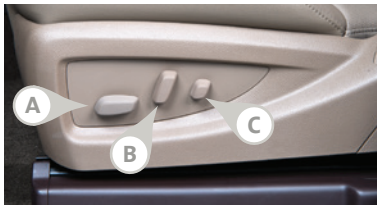

#### A. Seat Cushion Adjustment

Move the front horizontal control to move the seat forward or rearward, or to tilt, raise or lower the seat.

#### B. Seatback Adjustment

Move the vertical control to recline or raise the seatback.

#### C. Lumbar Adjustment

Move the rear control to adjust the lumbar support.

### Set Memory Positions



1. With the vehicle in Park, adjust the driver's seat, power outside mirrors and adjustable pedals to the desired positions.
2. Press and release the **SET** button and then press and hold button **1** on the driver's door until two beeps sound.
3. Repeat the steps using button **2** for a second driver.

### Set Exit Position

1. Adjust the driver's seat and adjustable pedals to the desired positions.
2. Press and release the **SET** button and then press and hold the **Exit** button on the driver's door until two beeps sound.

### Recall Positions

- ▶ With the vehicle in Park and the ignition on, press and release button **1** or **2** or the **Exit** button to recall the stored position.
- ▶ At any time, press and hold button **1** or **2** on the driver's door until the stored position is reached. Releasing the button before the stored position is reached cancels the recall.

The memory/exit positions can be programmed to be recalled automatically when the ignition is turned on/off (for exit recall, the driver's door must be opened).

- ▶ To set the Auto Memory Recall or Easy Exit Options, go to Settings > Vehicle > Comfort and Convenience > Auto Memory Recall or Easy Exit Options.

 
*See Seats and Restraints in your Owner Manual.*

## Head Restraints

- ▶ To raise the head restraint, pull the head restraint up.
- ▶ To lower the head restraint, press the button on top of the seatback and push the head restraint down.

*See Seats and Restraints in your Owner Manual.*

## Tilt/Telescoping ♦ Steering Wheel

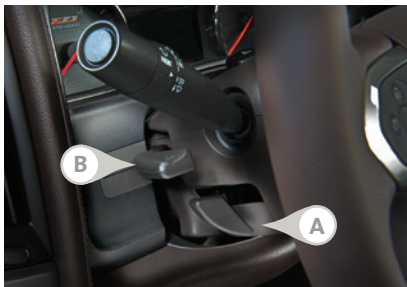


- ▶ With the vehicle in Park, pull the lever (A) on the left side of the steering column to adjust the tilt position of the steering wheel. The steering wheel can then be moved up or down. Release the lever to lock the steering wheel in place.
- ▶ With the vehicle in Park, push down the lever ♦ (B) closer to the instrument panel on the left side of the steering column to move the steering wheel in or out. Pull up the lever to lock the steering wheel in place.

See *Instruments and Controls in your Owner Manual.*

## Lighting
 
### Automatic Headlamp System

Rotate the knob to activate the exterior lights.

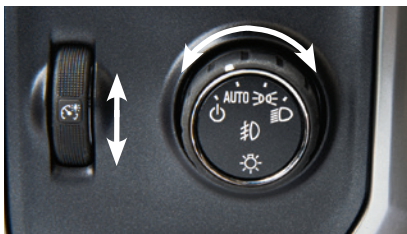

### Off/On

### AUTO Automatic Headlamp System

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions.

### ☾ Parking Lamps

### ☾ Headlamps

### ☾ Fog Lamps ♦

Press to turn the fog lamps on or off.

### Instrument Panel Lighting



### Instrument Panel Brightness

Rotate the thumbwheel to adjust the instrument panel lighting.

See *Lighting in your Owner Manual.*

### Cargo Lamp



### ☾ Cargo Box Lamp

With the vehicle in Park, press to turn the cargo lamp and under-rail pickup box lights ♦ on or off. The button indicator will illuminate when the lights are on.

See *Instruments and Controls in your Owner Manual.*

## Driver Information Center

The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle system information and warning messages.

### 3.5-inch\* Driver Information Center



#### Menu Items

- ▶ Turn the reset stem on the instrument cluster to scroll through the following menu items: Digital Speedometer, Trip Odometer, Fuel Range, Average Fuel Economy, Tire Pressure, Remaining Oil Life, Transmission Fluid Temperature, Trailer Brake, Hourmeter, and Units.

#### Reset an Item

- ▶ Press the reset stem to set a menu item or clear a message. Press and hold the stem to reset a menu item.

### 4.2-inch\* Color Driver Information Center\*

Use the control pad on the right side of the steering wheel to view the Info (includes the trip odometers and fuel information), Audio, Phone, Navigation, and Settings menus.



#### Menu Items

- ▶ Press the ◀ or ▶ button to move between the display zones.
- ▶ Press the ▲ or ▼ button to move through the menus.
- ▶ Press ✓ to open a menu or select/deselect a setting.

#### Reset an Item

1. Use the control pad to display the item.
2. Press and hold ✓ to reset or clear the item.




*See Instruments and Controls in your Owner Manual.*

## Climate Controls



### Recirculation Mode

- ▶ Press  **Recirculation Mode** to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle.

**Note:** When the Recirculation Mode is used without air conditioning, the air humidity increases and the windows may fog.

*See Climate Controls in your Owner Manual.*



## Automatic Climate Controls



### Automatic Operation

1. Press **AUTO**.
2. Set the temperature for the driver and front passenger. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature.

If the air delivery mode or fan speed is manually adjusted, automatic operation is turned off.

### Recirculation Mode

- Press **Recirculation Mode** to quickly cool the air inside the vehicle or prevent outside odors from entering the vehicle.

**Note:** When the Recirculation Mode is used without air conditioning, the air humidity increases and the windows may fog.

### Sync Temperature Settings

- Press **SYNC** to link the passenger's temperature setting to the driver's setting. If the passenger's setting is adjusted, the different passenger's temperature setting is displayed.

See *Climate Controls* in your Owner Manual.

## Windshield Wipers

Rotate the band on the lever to activate the wipers.



 **Fast Wipes**

 **Slow Wipes**

 **INT Intermittent**

Adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

**OFF**

 **Mist**

Single wipe.

 **Washer Fluid**

Push the paddle forward to spray washer fluid on the windshield.

*See Instruments and Controls in your Owner Manual.*

## Audio Steering Wheel Controls



 **Push to Talk**

Press to answer an incoming call or to use natural voice recognition with the audio, Bluetooth, navigation or OnStar system.

 **End Call/Mute**

Press to end or reject a call. Press to mute/unmute the vehicle speakers.

 **Next/Previous**

With the Audio screen displayed on the DIC, press  $\nabla$  or  $\Delta$  to seek the previous or next radio station or track.

**Volume**  
**(behind right side of steering wheel)**

Press the top or bottom button to adjust the volume.

**Next/Previous Favorite Station**  
**(behind left side of steering wheel)**

Press the top or bottom button to go to the next or previous favorite radio station or track.



*Next/Previous Favorite Station button shown. Volume button is located behind the right side of the steering wheel.*

## Chevrolet MyLink Radio with 7-Inch\* Color Screen

Refer to your Owner Manual for important safety information about using the infotainment system while driving.



Applications:  
Touch the screen  
icon to access the  
application



Home  
screen



SEEK  
Previous radio  
station or  
track



Power/  
Volume



SEEK  
Next radio  
station or  
track



Press to view Phone screen  
or answer a call/Press  
and hold to access  
Push to Talk

### Setting the Time

1. Touch **Settings** on the home page.
2. Touch **Time** and **Date**.
3. Touch **Set Time**.
4. Touch the arrows to adjust the hours, minutes and AM or PM.
5. Touch **BACK** to exit the menu.

### Storing Favorites

Up to 25 AM, FM and SiriusXM radio stations can be stored, in any order, on up to five pages.

1. Tune in the desired radio station.
2. Touch the < or > button to display where the station is to be stored.
3. Touch and hold one of the preset screen buttons until a beep is heard.
4. Repeat the steps for each desired station.

For assistance with the MyLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit [www.chevrolet.com/mylink](http://www.chevrolet.com/mylink).

See Infotainment System in your Owner Manual.

## Chevrolet MyLink Radio with 8-Inch\* Color Screen

Refer to your Owner Manual for important safety information about using the infotainment system while driving.



Chevrolet MyLink uses a Bluetooth or USB connection to link to a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®, and features hands-free voice control. For assistance with the MyLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit [www.chevrolet.com/mylink](http://www.chevrolet.com/mylink).

See your Infotainment System Owner Manual.

## Chevrolet MyLink Radio with 8-Inch\* Color Screen

### Setting the Time

1. Touch **Settings** on the home page.
2. Touch **Time and Date**.
3. Touch **Set Time**.
4. Touch the arrows to adjust the hours, minutes and AM or PM.
5. Touch **BACK** to exit the menu.



### Storing Favorites

Up to 60 radio stations from all bands (AM, FM or SiriusXM), media (song, artist, album, and genre when connected to a USB port), phone contacts and navigation destinations can be stored in any order.

1. Select the desired radio station, media favorite, navigation destination or contact.
  2. Touch the **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
  3. Touch and hold one of the favorite screen buttons until a beep is heard, indicating it is stored.
  4. Repeat the steps to store another favorite item.
- To change the number of favorites displayed, go to Radio in the Settings menu.

### Managing Home Page Icons

1. Press the **Home** button.
2. To enter edit mode, touch and hold the home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.
4. Press the **Home** button to exit edit mode.



### Natural Voice Recognition

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the **Push to Talk** button on the steering wheel.
2. The radio will say "Command please," followed by a beep.
3. After the beep, say what you want it to do using natural speech.  
(Example: "Call Amanda" or "Tune FM 104.3." Say "Help" for assistance.)


### PANDORA® Internet Radio


Listen to personalized radio stations based on favorite artists or genres.

- Download the Pandora app to your smartphone and sign in to Pandora.
- Create a station on your phone to listen to a customized song list in the vehicle.
- Connect your smartphone by Bluetooth or, for Apple devices, by a USB cable.
- Touch the **Pandora** icon on the touch screen to access Pandora. A slight delay may occur when loading a song or changing a station.

See your Infotainment System Owner Manual.

## Apple CarPlay™ and Android Auto™

Apple CarPlay or Android Auto\* capability may be available through a compatible smartphone. If available, a  Projection icon will appear on the home page of the infotainment display.


1. No app is required for Apple CarPlay. Download the Android Auto app to your phone from the Google Play store.
2. Connect your Apple iPhone or Android phone by plugging the compatible phone USB cable into a USB data port. Use your device's factory-provided USB cable. Aftermarket cables may not work.
3. The  Projection icon will change to Apple CarPlay or Android Auto, depending on the phone. Apple CarPlay or Android Auto may launch automatically upon USB connection. If not, touch the Apple CarPlay or Android Auto icon on the home page.

For more information on using Apple CarPlay or Android Auto, call 1-855-4-SUPPORT (1-855-478-7767) or visit [my.chevrolet.com/learn](http://my.chevrolet.com/learn).

*See your Infotainment System Owner Manual.*

## Wireless Charging

The Wireless Charging system is located on the storage tray on top of the center console. To check mobile device compatibility, visit [my.chevrolet.com/learn](http://my.chevrolet.com/learn). See your phone retailer for details on required phone accessories.

1. The vehicle must be on or Retained Accessory Power must be active.
2. Remove all objects from the charging pad.
3. Place the device, face up, on the  symbol on the pad, aligned with the rear rib.
4. Move the device slowly until the battery charging symbol displays on the infotainment screen. If not charging, remove the device for 3 seconds, and rotate it 180 degrees.

*See your Infotainment System Owner Manual.*

## OnStar® with 4G LTE and Wi-Fi®

If equipped with OnStar 4G LTE and Wi-Fi, up to seven devices (smartphones, tablets and laptops) can be connected to high-speed Internet through the vehicle's built-in Wi-Fi hotspot.

- ▶ To retrieve the SSID and password for the hotspot, press the OnStar Voice Command button on the overhead console or rearview mirror, wait for the prompt, and then say "Wi-Fi settings." The information will be displayed on the screen.

For assistance, press the blue OnStar button or call 1-888-4-ONSTAR (1-888-466-7827).

**Note:** See [onstar.com](http://onstar.com) for a detailed instruction guide, vehicle availability, details, and system limitations.


*See your Infotainment System Owner Manual.*

## Bluetooth® System ♦

Refer to your Owner Manual for important safety information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Bluetooth streaming audio is available with the MyLink system. ♦ For more information, visit [my.chevrolet.com/learn](http://my.chevrolet.com/learn).

### Pair a Phone

1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair phone," or

Use the **MENU** knob or the touch screen to select the **Phone** icon > **Phones** > **Pair Device**.

2. Start the pairing process on the phone. Locate Chevrolet MyLink on the phone.
3. Enter the four-digit code that appears on the touch screen into the phone or, if a six-digit code appears on the phone, confirm it on the touch screen.
4. If your phone prompts you to accept the connection or phone book download, select Always Accept and Allow.



### Streaming Audio

With a paired device connected via Bluetooth, press the **MEDIA** button until Bluetooth is displayed on the touch screen to stream audio from the device. Control audio operation using the device controls.

*See your Infotainment System Owner Manual.*

## Portable Audio Devices



**Note:** Connect a mobile device USB cord after starting the vehicle for optimum performance.

An accessory power outlet, dual USB ports and auxiliary jack are located in the center seat console (bench seat) or center console storage compartment (bucket seats).

- ▶ An iPod®, iPhone®, MP3 Player, a USB flash drive or a USB mass storage device can be connected to the USB port. Chevrolet MyLink♦ will read the device and build a list of songs. Search for music on-screen or by voice commands.
- ▶ Press the **MEDIA** button to select a portable device as the audio source.

*See your Infotainment System Owner Manual.*

## Vehicle Personalization

Some vehicle features can be customized using the audio controls and menus or the touch screen buttons.



### Changing Vehicle Settings

The Vehicle Settings menu may include Climate and Air Quality, Collision/Detection Systems, Comfort and Convenience, Lighting, Power Door Locks, and Remote Lock/Unlock/Start.

Use the **MENU** knob or the touch screen to:

1. Select **Settings** on the home page.
2. Select **Vehicle**.
3. Select the desired menu item.
4. Select the desired feature and setting. Settings are saved automatically.
5. Select **BACK** to exit each menu.

*See Instruments and Controls in your Owner Manual.*

## Cruise Control

### Setting Cruise Control

1. Press the **On/Off** button. The **Cruise Control** symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button to set the speed. The **Cruise Control** symbol will illuminate in green on the instrument cluster.



### Adjusting Cruise Control

#### RES+ Resume/Accelerate

Press to resume a set speed.

When the system is active, press once to increase speed 1 mph; press and hold to continue increasing the speed.

#### SET- Set/Coast

When the system is active, press once to decrease speed 1 mph; press and hold to continue decreasing the speed.

#### Cancel

Press to cancel the cruise control without erasing the set speed from memory.

Pressing the brake pedal also will cancel the cruise control.



The cruise control set speed is erased when cruise control or the vehicle ignition is turned off.


*See Driving and Operating in your Owner Manual.*






## Driver Assistance Systems


The driver assistance systems use advanced technologies to help avoid collisions by providing visual and audible alerts under some imminent collision conditions.

**Forward Collision Alert**♦ – The  **Vehicle Ahead** indicator will illuminate in green on the instrument cluster when a vehicle is detected and will illuminate in amber when following a vehicle ahead too closely. If your vehicle approaches another vehicle too rapidly, the  will flash, a visual alert will flash on the windshield and the Safety Alert Seat will pulse. See Safety Alert Seat.

- ▶ Press the  **Collision Alert** button on the left side of the steering wheel to set the alert sensitivity to Far, Medium, Near, or Off. The setting is displayed in the Driver Information Center.



**Lane Keep Assist with Lane Departure Warning**♦ (LD Models Only) – The  Lane Keep Assist indicator is green on the instrument cluster when a lane marking is detected. The system may assist by gently turning the steering wheel and display an amber  if the vehicle approaches a detected lane marking without using a turn signal in that direction. It may also provide a Lane Departure Warning alert by flashing an amber  and pulsing the left or right side of the Safety Alert Seat♦ as the lane marking is crossed. See Safety Alert Seat.

- ▶ Press the  **Lane Keep Assist** button on the center of the instrument panel to turn the system on or off.

**Lane Departure Warning**♦ (HD Models Only) – When crossing a detected lane marking without using a turn signal, the system flashes an amber  visual alert on the instrument cluster and pulses the left or right side of the Safety Alert Seat♦. See Safety Alert Seat.

- ▶ Press the  **Lane Departure Warning** button on the center of the instrument panel to turn the system on or off.

**Safety Alert Seat**♦ – The driver's seat pulses, left side, right side, or simultaneously, to alert the driver of potential hazards.

- ▶ Audible notification may be selected instead of Safety Alert Seat pulsing notification. To change the alert setting, go to **Settings > Vehicle > Collision/Detection > Alert Type**.

**Rear Vision Camera**♦ – Provides a view directly behind the vehicle when backing up.

- ▶ To turn the Rear Vision Camera Guidelines or Rear Park Assist Symbols on or off, go to **Settings > Rear Camera**.

**Front and/or Rear Parking Assist**♦ – During low-speed parking maneuvers, the system provides “distance to closest object” information in the Driver Information Center and a caution symbol on the Rear Vision Camera display. When the vehicle should be stopped immediately to avoid a collision, a continuous audible tone sounds or the Safety Alert Seat pulses. See Safety Alert Seat.

- ▶ To turn the system on or off, press the  **Parking Assist** button on the center of the instrument panel.

See *Driving and Operating in your Owner Manual*.

## Automatic Transmission

### Range Selection Mode

Range Selection Mode allows the driver to select the range of gears desired for the current driving conditions.

1. Move the shift lever to the Manual (M) position.
2. Press the **+** (plus) or **-** (minus) button on the shift lever to select a lower or higher gear. An M and the current gear will be displayed on the Driver Information Center.



The transmission will be limited to the gear selected and lower gears. If vehicle speed is too high or too low for the requested gear, the shift will not occur.

### Tow/Haul Mode

The Tow/Haul Mode adjusts the transmission shifts to reduce shift cycling, such as when towing or hauling heavy loads or driving on steep grades.

- ▶ Press the **Tow/Haul Mode** button on the end of the shift lever to turn the system on or off.

*See Driving and Operating in your Owner Manual.*

## Integrated Trailer Brake Control (ITBC)◆

The ITBC system can be used to adjust the amount of power output, or Trailer Gain, available to the trailer brakes. The control panel is located on the left side of the instrument panel. ITBC information is displayed on the Driver Information Center.

- ▶ Adjust the Trailer Gain by pressing the **+/-** adjustment buttons on the control panel.
- ▶ Squeeze the levers together on the control panel (left lever does not move) to manually apply the trailer brakes.



*See Driving and Operating in your Owner Manual.*

## Diesel Exhaust Brake (Diesel Models Only)

The engine exhaust brake enhances the vehicle brake system by using engine braking and automatically downshifting the transmission, depending on the length of time the brakes are applied, to help slow the vehicle on downhill grades.

- ▶ Press the **Diesel Exhaust Brake** button on the center of the instrument panel to turn the system on or off.





*See your Duramax Diesel Owner Manual.*

## Traction Control and StabiliTrak Systems

The traction control system limits wheelspin and the StabiliTrak® stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

### Turn off traction control if the vehicle is stuck and rocking the vehicle is required.



- ▶ Press the  **Traction Control/StabiliTrak Off** button on the center of the instrument panel to turn traction control off or back on. The  Traction Control Off light will illuminate on the instrument cluster when the system is off.



See *Driving and Operating* in your Owner Manual.


## Hill Descent Control (Z71)

Hill Descent Control sets and maintains vehicle speed from 2–14 mph while descending a steep incline in a forward or reverse gear.

1. Press the  **Hill Descent Control** button on the center of the instrument panel. Vehicle speed must be below 31 mph to enable the system. The Hill Descent Control symbol will illuminate on the instrument cluster.
2. Increase or decrease speed by applying the accelerator or brake pedal or use the Cruise Control +/- buttons on the steering wheel. The adjusted speed becomes the new set speed. The  symbol flashes when the system is actively applying the brakes to maintain vehicle speed.

See *Driving and Operating* in your Owner Manual.

## Tire Pressure Monitor (Single Rear Wheel Models Only)

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. **Current tire pressures can be viewed in the Driver Information Center.**

Tire pressure is affected by cold weather and distance driven. If the low tire pressure warning light illuminates when the vehicle is first started in cooler temperatures and then turns off as the vehicle is driven, check for the proper tire pressures.

Refer to your Owner Manual for additional information about normal monthly tire maintenance.

See *Vehicle Care* in your Owner Manual.

## Roadside Assistance

**1-800-CHEV-USA  
(1-800-243-8872)**

**TTY Users: 1-888-889-2438**

As the owner of a new Chevrolet, you are automatically enrolled in the Chevrolet Roadside Assistance program for up to 5 years/60,000 miles, whichever occurs first, at no expense to you. Chevrolet's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest Chevrolet dealer for any repairs.

### Roadside Assistance and OnStar®

If you require roadside service and have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

## myChevrolet and OnStar Mobile Apps



The myChevrolet mobile app connects owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance.



Download the OnStar RemoteLink mobile app and enjoy select features for five years from date of vehicle delivery. With a compatible mobile device, OnStar subscribers can access many services, including remotely starting/stopping the vehicle, locking/unlocking doors, and locating the vehicle on a map (on properly equipped vehicles). To learn more about OnStar services, press the blue OnStar button, call 1-888-4ONSTAR (1-888-466-7827), visit **onstar.com** or refer to your owner manual.

Download the mobile apps from your compatible mobile device's app store.

## Chevrolet Owner Center

Get to know your vehicle inside and out with the Chevrolet Owner Center. Check out personalized information, including an online owner manual and helpful how-to videos, track your service history and warranty status, review your current OnStar Vehicle Diagnostics report (active OnStar account required) and more. Create an account today at **my.chevrolet.com**.

**We recommend always using ACDelco or genuine GM service parts.**

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2015 General Motors. All rights reserved.



23133496 A