

USER MANUAL

CopperLink™ Ethernet Extenders Model 2168 and 2158



PATTON
Electronics Co.



Part# 07M2168-UM
Doc# 05816U2-002
Rev. A
Revised 10/23/06

An ISO-9001 Certified
Company

SALES OFFICE
(301) 975-1000
TECHNICAL SUPPORT
(301) 975-1007

CONTENTS

1.0	Warranty Information	4
1.1	Radio and TV Interference (FCC Part 15)	4
1.2	CE Declaration of Conformity	4
1.3	Service	5
2.0	General Information	7
2.1	Features.....	7
2.2	Description.....	7
3.0	Installation	9
3.1	Standalone unit installation.....	9
3.2	Rack card installation.....	10
3.3	Connecting the Twisted-Pair Line Interface.....	11
3.4	Connecting the 10/100Base-T Ethernet Interface	12
3.5	Connecting Power	13
4.0	Configuration	14
4.1	Configuring the hardware DIP switches.....	14
4.2	Configuring DIP Switch S1	16
	Switch S1-1: Ethernet Auto Sense	16
	Switches S1-2 and S1-4: Data Rate.....	16
5.0	Operation	18
5.1	Power Up	18
5.2	Front Panel LED Status Monitors	18
A		
	Specifications	21
A.1	LAN Connection	21
A.2	Transmission Line	21
A.3	CopperLink Line Rate	21
A.4	CopperLink Distance	21
A.5	CopperLink Surge Suppressor	21
A.6	LED Status Indicators (Standalone)	21
A.7	LED Status Indicators (Rack Card)	22
A.8	Power Supply	22
A.9	Temperature Range	22
A.10	Humidity	22
A.11	Dimensions (Standalone Unit)	22
B		
	Model 2168 and 2158 Series Factory	
	Replacement Parts and Accessories	23
C		
	CopperLink Series Interface Pin Assignment	25
C.1	10/100Base-T Interface	25
	RJ-45	25
C.2	CopperLink Interface	25
	RJ-45	25

Terminal Block.....	25
D	
Distance Chart, Based on 24 AWG (0.5 MM)	26

1.0 WARRANTY INFORMATION

Patton Electronics warrants all CopperLink Ethernet Extender components to be free from defects, and will—at our option—repair or replace the product should it fail within one year from the first date of the shipment.

This warranty is limited to defects in workmanship or materials, and does not cover customer damage, abuse or unauthorized modification. If this product fails or does not perform as warranted, your sole recourse shall be repair or replacement as described above. Under no condition shall **Patton Electronics** be liable for any damages incurred by the use of this product. These damages include, but are not limited to, the following: lost profits, lost savings and incidental or consequential damages arising from the use of or inability to use this product. **Patton Electronics** specifically disclaims all other warranties, expressed or implied, and the installation or use of this product shall be deemed an acceptance of these terms by the user.

Note Conformity documents of all Patton products can be viewed online at www.patton.com under the appropriate product page.

1.1 RADIO AND TV INTERFERENCE (FCC PART 15)

This equipment generates and uses radio frequency energy, and if not installed and used properly—that is, in strict accordance with the manufacturer's instructions—may cause interference to radio and television reception. This equipment has been tested and found to comply with the limits for a Class A computing device in accordance with the specifications in Subpart B of Part 15 of FCC rules, which are designed to provide reasonable protection from such interference in a commercial installation. However, there is no guarantee that interference will not occur in a particular installation. If the equipment causes interference to radio or television reception, which can be determined by disconnecting the cables, try to correct the interference by one or more of the following measures: moving the computing equipment away from the receiver, re-orienting the receiving antenna, and/or plugging the receiving equipment into a different AC outlet (such that the computing equipment and receiver are on different branches).

1.2 CE DECLARATION OF CONFORMITY

We certify that the apparatus identified in this document conforms to the requirements of Council Directive 1999/5/EC on the approximation of the laws of the member states relating to Radio and Telecommunication Terminal Equipment and the mutual recognition of their conformity.

The safety advice in the documentation accompanying this product shall be obeyed. The conformity to the above directive is indicated by the CE sign on the device.



This device is NOT intended nor approved for connection to the PSTN. It is intended only for connection to customer premise equipment.

1.3 SERVICE

All warranty and non-warranty repairs must be returned freight prepaid and insured to Patton Electronics. All returns must have a Return Materials Authorization number on the outside of the shipping container. This number may be obtained from Patton Electronics Technical Services at:

- Tel: **+1 (301) 975-1007**
- Email: **support@patton.com**
- URL: **http://www.patton.com**

Note Packages received without an RMA number will not be accepted.



- **This device contains no user serviceable parts. The equipment shall be returned to Patton Electronics for repairs, or repaired by qualified service personnel.**
- **The external power adapter shall be a listed Limited Power Source. Ensure that the power cable used meets all applicable standards for the country in which it is to be installed, and that it is connected to a wall outlet which has earth ground. The mains outlet that is utilized to power the device shall be within 10 feet (3 meters) of the device, shall be easily accessible, and protected by a circuit breaker.**
- **Do not work on the system or connect or disconnect cables during periods of lightning activity.**



The Interconnecting cables shall be acceptable for external use and shall be rated for the proper application with respect to voltage, current, anticipated temperature, flammability, and mechanical serviceability



In accordance with the requirements of council directive 2002/96/EC on Waste of Electrical and Electronic Equipment (WEEE), ensure that at end-of-life you separate this product from other waste and scrap and deliver to the WEEE collection system in your country for recycling.

2.0 GENERAL INFORMATION

Thank you for your purchase of this Patton Electronics product. This product has been thoroughly inspected and tested and is warranted for one year for parts and labor. If any questions or problems arise during installation or use of this product, contact Patton Electronics Technical Support at +1 (301) 975-1007.

2.1 FEATURES

- Easy to install standalone CopperLink Ethernet Extenders (no configuration required)
- Auto MDIX Ethernet
- Auto-sensing full or half-duplex Ethernet
- Auto-sensing 10/100Base-TX
- Extends network connections up to 6,000 ft (1.83 km) over 2-wire 24-AWG unconditioned lines
- Switch selectable line rates up to 16.67 Mbps
- 7 symmetric or asymmetric settings via DIP switch
- Transparent operation
- LED indicators for Power, Ethernet Link & Activity, CopperLink link & Quality of Line (QOL)
- Surge suppression up to 20 kA (8/20 μ s)
- Available in rack-mount or standalone configurations
- Made in the USA

2.2 DESCRIPTION

The Patton Electronics CopperLink/L and CopperLink/R Ethernet Extenders provide high-speed LAN connections between peered Ethernet LANs, remote PCs, or any other network enabled 10/100Base-T device.

Operating in pairs, a CopperLink/L (local) located at one end of the LAN extension and a CopperLink/R (remote) at the other end, these units can automatically forward LAN broadcasts, multicasts, and frames across a 2-wire voice-grade twisted-pair link. The data is passed transparently (unmodified) through the CopperLink Ethernet Extenders. The CopperLink

Ethernet Extenders automatically add and delete MAC addresses, only passing packets across the CopperLink link that are meant for the remote peered LAN.

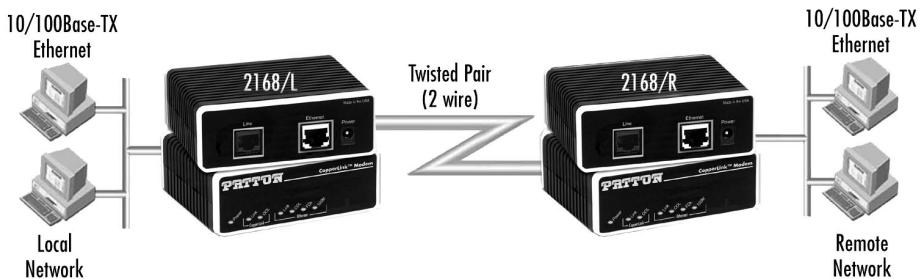


Figure 1. Typical application

The CopperLink/L modem and CopperLink/R modem work together to create a transparent extension between two peered Ethernet LANs. Figure 1 shows a typical point-to-point application.

3.0 INSTALLATION

Because the CopperLink Ethernet Extender requires no configuration, it can be installed quickly. If you are installing a standalone unit, refer to section 3.1 “Standalone unit installation”. Otherwise, refer to section 3.2 “Rack card installation”.

Note If asymmetric transmission or line rates other than 12.5 Mbps are required, refer to section 4.0, “Configuration” on page 14.

3.1 STANDALONE UNIT INSTALLATION

Do the following:

1. Connect the line interface between the units (refer to section 3.3, “Connecting the Twisted-Pair Line Interface” on page 11)
- Note** See Figure 2 for the standalone unit’s rear panel arrangements.
2. Connect the Ethernet interface (refer to section 3.4, “Connecting the 10/100Base-T Ethernet Interface” on page 12).
3. Connect the power plug (refer to section 3.5, “Connecting Power” on page 13).

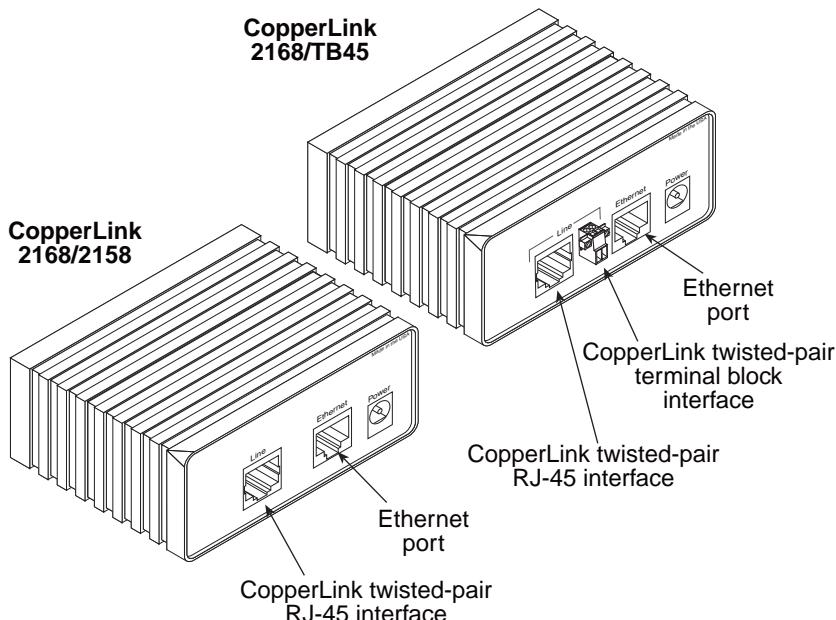


Figure 2. CopperLink Ethernet Extender standalone rear panel

3.2 RACK CARD INSTALLATION

The CopperLink Ethernet Extender rack card comprised a front card and a rear card. Do the following to install the cards into the rack chassis:

1. Slide the rear card into the back of the chassis along the metal rails.
2. Secure the rear card using the supplied metal screws.
3. Slide the front card into the chassis until you feel resistance as the front card engages the rear card. When that happens, *gently* push the front card forward until it is fully seated in the card-edge receptacle of the rear card (it should *click* into place).
4. Secure the front card using the captive fasteners.

Note The Model 1001R14 chassis supports “hot swapping” of cards, so it is not necessary to power down the rack when you install or remove a CopperLink Ethernet Extender rack card.

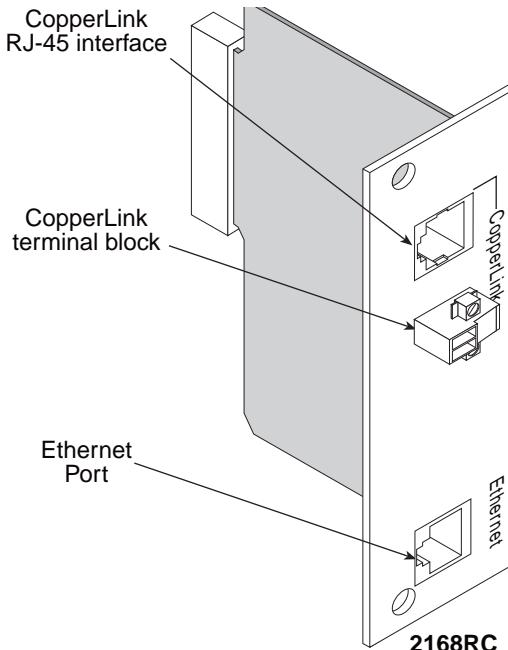


Figure 3. CopperLink Ethernet Extender rack cards

5. Connect the line interface between the units (refer to section 3.3, “Connecting the Twisted-Pair Line Interface” on page 11)

Note See Figure 3 for the rack card’s panel arrangements.

6. Connect the Ethernet interface (refer to section 3.4, “Connecting the 10/100Base-T Ethernet Interface” on page 12).

3.3 CONNECTING THE TWISTED-PAIR LINE INTERFACE

The CopperLink Ethernet Extender supports communication between two peer Ethernet LAN sites over a distance of up to 6,000 ft (1.83 km) over 24 AWG (0.5 mm) twisted-pair wire.

Note Actual distance and link performance may vary depending on the environment and type/gauge of wire used.

Follow the steps below to connect the CopperLink Ethernet Extenders interfaces.

Note The CopperLink units work in pairs. One of the CopperLink units must be an L (local), and the other unit must be an R (remote). It does not matter which end is the L and which is the R. The link is always initiated by the R. As long as the L is powered on, the R can establish a link by being powered on or by having its power reset.

1. To function properly, the two CopperLink Ethernet Extenders must be connected together using twisted-pair, unconditioned, dry, metal wire, between 19 (0.9mm) and 26 AWG (0.4mm). Leased circuits that run through signal equalization equipment are not acceptable.
2. The CopperLink Ethernet Extenders are equipped with two interface jacks that can be used on the CopperLink interface, an RJ-45 or a terminal block. These CopperLink interfaces are a two-wire interface. Observe the signal/pin relationships on the CopperLink Ethernet Extender's CopperLink interface jacks.

The **RJ-45 connector** on the CopperLink Ethernet Extender's twisted pair interface **is polarity insensitive** and is wired for a two-wire interface. The signal/pin relationship is shown in Figure 4.

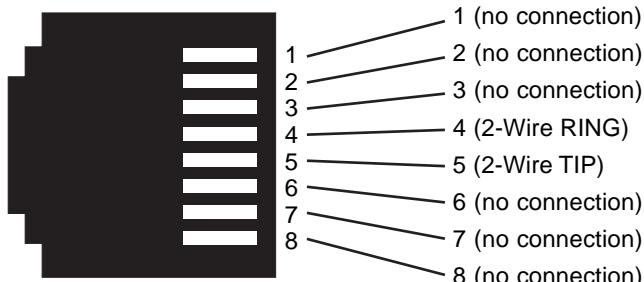


Figure 4. CopperLink Ethernet Extender (RJ-45) twisted pair line interface.

The **terminal block connector** on the CopperLink Ethernet Extender's twisted pair interface is **polarity insensitive** and is wired for a two-wire interface. The signal/pin relationships are shown in Figure 5.

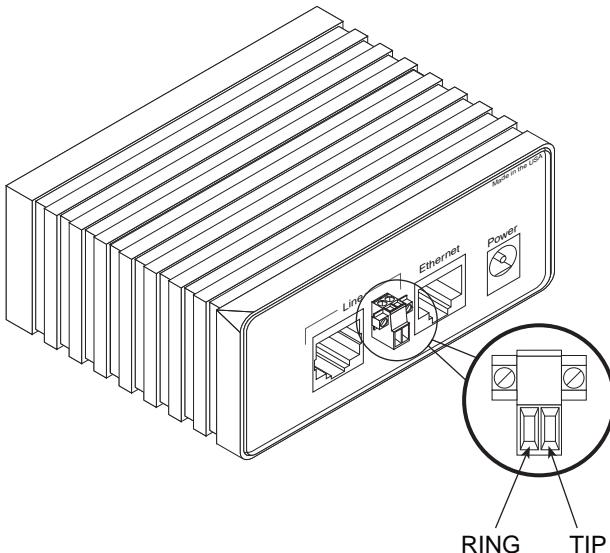


Figure 5. CopperLink Ethernet Extender twisted pair line interface.

3.4 CONNECTING THE 10/100BASE-T ETHERNET INTERFACE

The unshielded RJ-45 port labeled *Ethernet* is the Auto-MDIX10/100Base-T interface. This port is designed to connect directly to a 10/100Base-T network. Figure 6 shows the signal/pin relationships on this interface. You may connect this port to a hub or PC using a straight through or crossover cable that is up to 328 ft long.

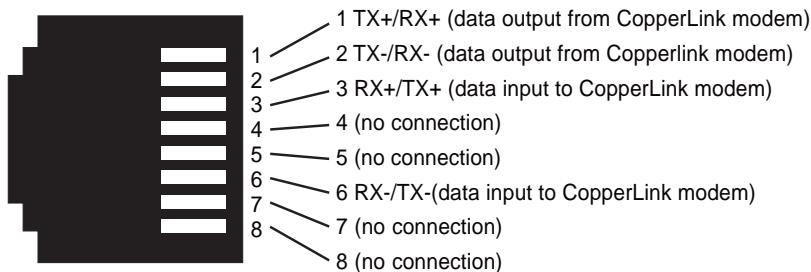


Figure 6. CopperLink Ethernet Extender 10/100Base-T RJ-45 Connector Pinout.

3.5 CONNECTING POWER

An external AC or DC power supply is available separately. This connection is made via the barrel jack on the rear panel of the CopperLink Ethernet Extender. No configuration is necessary for the power supply (See Appendix B for domestic and international power supply and cord options).

DC power (supplied via the power supply jack to the CopperLink Ethernet Extender) must meet the following requirements; DC power supplied must be regulated +5VDC $\pm 5\%$, 1.0A minimum. Center pin is +5V. The barrel type plug has a 2.5/5.5/10mm I.D./O.D./Shaft Length dimensions.

The CopperLink Ethernet Extender does not have a power switch, so it powers up as soon as it is plugged in.



WARNING

There are no user-serviceable parts in the CopperLink Ethernet Extender. Fuse replacement should only be performed by qualified service personnel. Contact Patton Electronics Technical support at (301) 975-1007 for more information.

4.0 CONFIGURATION

The CopperLink Model 2168r has eight DIP switches for configuring the unit for a wide variety of applications. This section describes switch locations and explains the different configurations. The Model 2158 does not include dip switches.

4.1 CONFIGURING THE HARDWARE DIP SWITCHES

Using a small flat-tip screwdriver, remove the protective cover located on the underside of the CopperLink Ethernet Extender (see Figure 7).

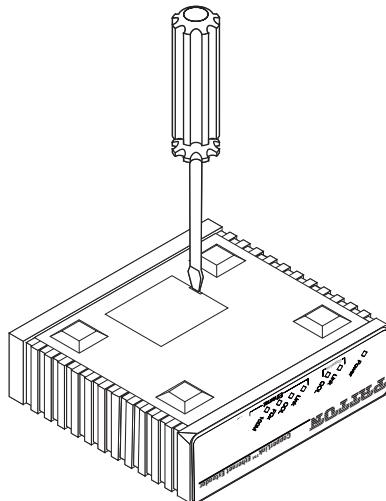


Figure 7. Removing protective cover

Figure 8 and Figure 9 on page 15 show the orientation of the DIP switches in the On and Off positions.

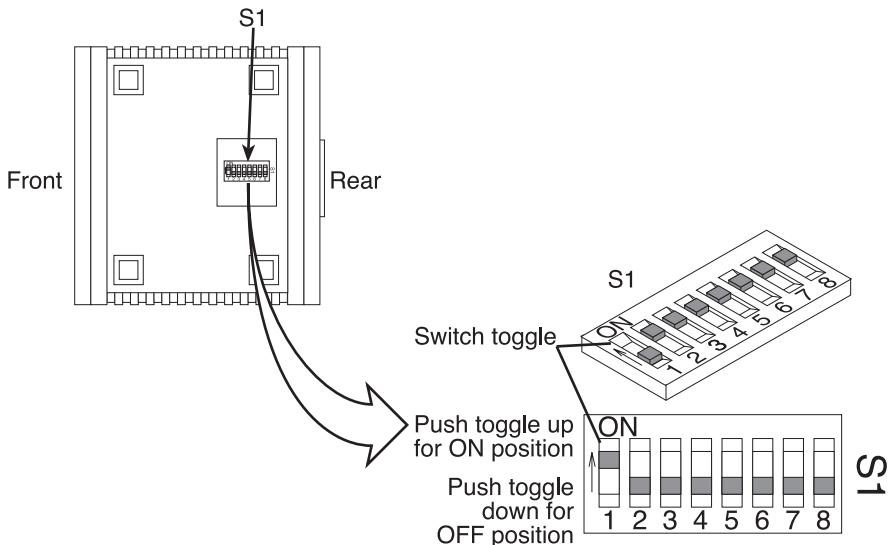


Figure 8. Model 2168 standalone modem DIP switch orientation

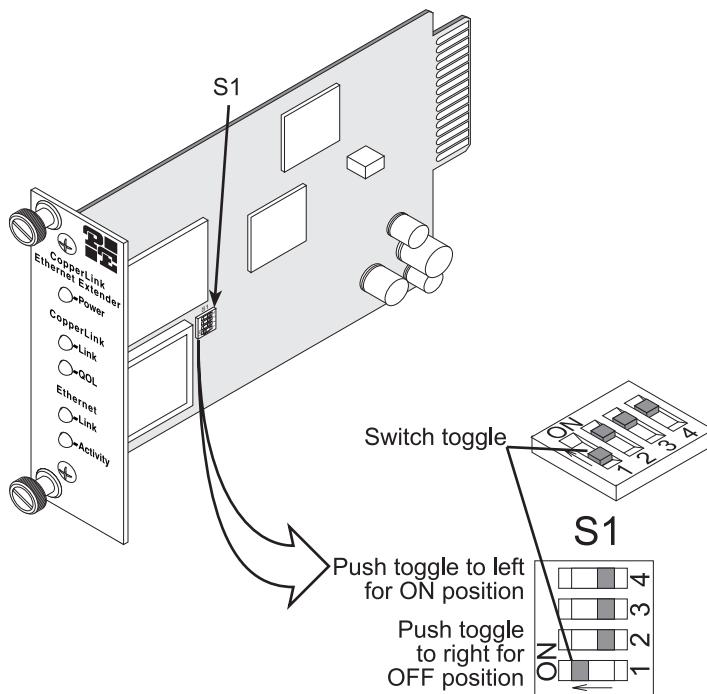


Figure 9. Model 2168 rack card DIP switch orientation

4.2 CONFIGURING DIP SWITCH S1

DIP switch S1 is where you configure the CopperLink line rate, symmetric or asymmetric, Ethernet full auto negotiation capability (100Base-T full or half duplex, 10Base-T full or half duplex) or limited auto sense (only 100Base-T half duplex, 10Base-T full or half duplex).

Switch S1-1: Ethernet Auto Sense

Use switch S1-1 to configure the unit for full auto sense capability or limited auto sense capability. Full Auto sense capability consists of standard Ethernet Auto sensing (100BaseT full duplex, 100BaseT half duplex, 10BaseT full duplex, and 10BaseT half duplex). Limited Auto sensing capability consists on only auto sensing for 100BaseT half duplex, 10BaseT full duplex, and 10BaseT half duplex. The limited auto negotiation feature is used when an Ethernet device does not comply with IEEE 802.3x (back pressure flow control) at 100M full duplex.

Table 1: Ethernet Auto Negotiation Selection Chart

S1-1	Setting
OFF	Full Auto Negotiation (Factory Default) (100 Mbps, Full or Half Duplex) (10 Mbps, Full or Half Duplex)
ON	Limited Auto Negotiation (100 Mbps Half Duplex) 10 Mbps Full or Half Duplex)

Switches S1-2 and S1-4: Data Rate

Use switches S1-2 and S1-4 to configure the CopperLink line rates.

Table 2: Symmetric CopperLink Line Rates Selection Chart

S1-2	S1-3	S1-4	Symmetric Line Rate
ON	ON	ON	6.25 Mbps
ON	ON	OFF	9.38 Mbps
ON	OFF	OFF	12.5 Mbps (Factory Default) [*]
ON	OFF	ON	16.67 Mbps

*. Model 2158 only has one symmetric line rate setting, which is 12.5 Mbps.

Table 3: Model 2168 Asymmetric CopperLink Line Rates Selection Chart

S1-2	S1-3	S1-4	Asymmetric Line Rates DS/US*
OFF	OFF	ON	4.17 Mbps/1.56 Mbps
OFF	ON	ON	9.38 Mbps/1.56 Mbps
OFF	ON	OFF	16.67 Mbps/2.34 Mbps

*. DS = downstream, US = upstream

Note Table 3 only applies to Model 2168.

Table 4: Reserved for future use

S1-5	S1-6	S1-7	S1-8	Reserved for future use
OFF	OFF	OFF	OFF	Reserved (Factory Default)

5.0 OPERATION

Once the CopperLink Ethernet Extenders are properly installed, they should operate transparently. No user settings required. This section describes reading the LED status monitors.

5.1 POWER UP

Before applying power to the CopperLink Ethernet Extender, please review section 3.5, "Connecting Power" on page 13 to verify that the unit is connected to the appropriate power source.



WARNING

There are no user-serviceable parts in the CopperLink Ethernet Extender. Fuse replacement should only be performed by qualified service personnel. Contact Patton Electronics Technical support at (301) 975-1007 for more information.

5.2 FRONT PANEL LED STATUS MONITORS

The CopperLink Ethernet Extender features seven front panel LEDs (five on the rack card) that monitor power, the Ethernet signals, and the CopperLink connection. Figure 10 (standalone version) and Figure 11 on page 20 (rack card version) show the front panel LEDs. Table 5 on page 19 describes the LED functions for the standalone model, Table 6 on page 20 describes the LED functions for the rack card.

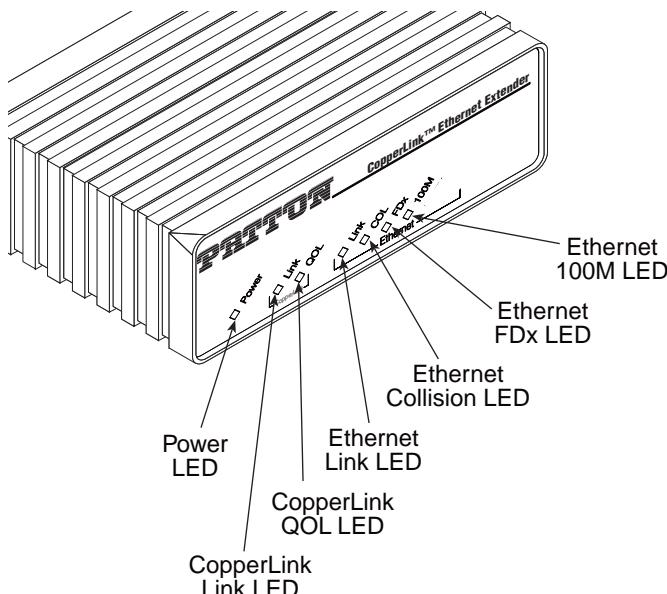


Figure 10. CopperLink Ethernet Extender standalone unit front panel

Table 5: Front panel LED description for standalone modem

LED	Description
Power	On (green) when power is applied to the unit. Off when no power is applied to the unit.
CopperLink - Link	On (green) when the end-to-end CopperLink link between the units is established. Off when the link has not been established or when the link fails
CopperLink - QOL	Flashes yellow at different rates to indicate the amount of error correction taking place on data passing over the CopperLink link. This is a normal operating condition and all data is passing correctly over the link even if the link is solidly yellow . However, if the LED is solid yellow and the CopperLink Link LED is Off , Off when no power is applied to the unit.
Ethernet - Link	On (green) when the 10/100Base-T Ethernet link has been established. Off when the 10/100Base-T Ethernet link has not been established or when the link fails. Flashes when there is Ethernet activity.
Ethernet - COL (Collision)	Flashes yellow to indicate Ethernet collisions are occurring.
Ethernet - FDx (Duplex)	On (yellow) when in full-duplex Ethernet mode. Off when operating in half-duplex Ethernet mode.
Ethernet - 100M	On (yellow) when the link has not been established or when operating in 100-Mbps Ethernet mode. Off when operating in 10-Mbps Ethernet mode.

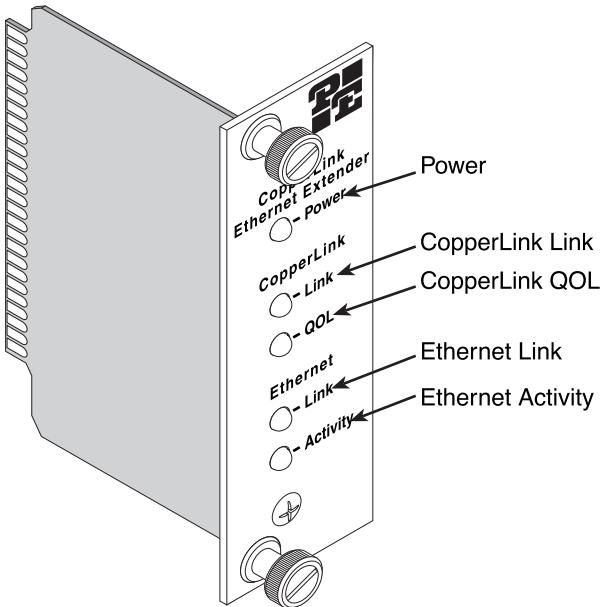


Figure 11. CopperLink Ethernet Extender rack card front panel

Table 6: Front panel LED description for rack card modem

LED	Description
Power	Solid GREEN to indicate the unit is powered on.
CopperLink Ethernet Extender Link	(Active Green) Solid green (ON) to indicate that the end-to-end CopperLink link between the CopperLink Ethernet Extenders is established. The CopperLink Ethernet Extender LED is OFF when the link is down.
CopperLink Ethernet Extender QOL	(Active Yellow) Flashes YELLOW to indicate the processor is correcting an error in the data thus preventing the transmission of corrupted data to the Ethernet port. The more error corrections, the more often the LED blinks. If the light remains lit continuously, it means that the CopperLink line is noisy—although the data at the Ethernet port remains uncorrupted. Further impairment of the line however, risks having the line fail, as indicated by the green CopperLink Ethernet Extender Link LED extinguishing.
Ethernet Link	(Active Green) Solid Green indicates that 10/100Base-T Ethernet link has been established.
Ethernet Activity	(Active Yellow) Flashes yellow to indicate Received data activity on the CopperLink Ethernet Extender's 10/100Base-T Ethernet port.

APPENDIX A

SPECIFICATIONS

A.1 LAN CONNECTION

- Unshielded RJ-45, 10/100Base-T, IEEE 802.3 Ethernet
- CopperLink Connection:
 - 2168/TB45: RJ-45 and Terminal Block
 - 2168/2158: RJ-45 only

A.2 TRANSMISSION LINE

Two-wire unconditioned twisted pair.

A.3 COPPERLINK LINE RATE

16.67 Mbps (Model 2168 only) and 12.55 Mbps (Model 2158) symmetric upstream/downstream. Additional symmetric and asymmetric rates are available via DIP switch settings:

- Model 2158 - Symmetric Line Rate: 12.5 Mbps
- Model 2168 - Symmetric Line Rates:
6.25 Mbps, 9.38 Mbps, 12.5 Mbps, 16.67 Mbps
- Model 2168 - Asymmetric Line Rates:
4.17 Mbps/1.56 Mbps, 9.38 Mbps/1.56 Mbps, 16.67 Mbps/2.34 Mbps

A.4 COPPERLINK DISTANCE

6,000 ft (1.83 km) at 1.56 Mbps upstream/4.17 Mbps downstream

Note Distances depend on selected line rate.

A.5 COPPERLINK SURGE SUPPRESSOR

Gas tube with maximum current surge: 20 kA (8/20 μ s).

A.6 LED STATUS INDICATORS (STANDALONE)

- Power (Green)
- CopperLink: Link (Green) & QOL (Red)
- Ethernet: Link (Green), Collision (Yellow), Duplex (Yellow), 10/100M (Yellow)

A.7 LED STATUS INDICATORS (RACK CARD)

- Power (Green)
- CopperLink: Link (Green), QOL (Yellow)
- Ethernet: Link (Green), Activity (Yellow)

A.8 POWER SUPPLY

Input power: 5 VDC, 1A

Power consumption: 560 mA at 5 VDC (typical)

External AC and DC options:

- AC: 120 VAC, 220 VAC, and UI (120–240 VAC)
- DC: 12 VDC, 24 VDC and 48 VDC

A.9 TEMPERATURE RANGE

32–122°F (0–50°C)

A.10 HUMIDITY

Up to 90% non-condensing.

A.11 DIMENSIONS (STANDALONE UNIT)

1.58H x 4.16W x 3.75D in. (10.6H x 4.1W x 8.8D cm)

APPENDIX B
MODEL 2168 AND 2158 SERIES FACTORY
REPLACEMENT PARTS AND ACCESSORIES

Patton Model #	Description
Base Models	
2168RC/L	Local Multi Rate CopperLink Rack Card
2168RC/R	Remote Multi Rate CopperLink Rack Card
2158RC/L	Local Fixed Rate CopperLink Rack Card
2158RC/R	Remote Fixed Rate CopperLink Rack Card
2168/L/EUI	Local Multi Rate CopperLink Ethernet Extender with RJ-45 connector, 120-240VAC
2168/R/EUI	Remote Multi Rate CopperLink Ethernet Extender with RJ-45 connector, 120-240VAC
2168/L/TB45/EUI	Local Multi Rate CopperLink Ethernet Extender with terminal block, 120-240VAC
2168/R/TB45/EUI	Remote Multi Rate CopperLink Ethernet Extender with terminal block, 120-240VAC
2168/TB45/EUI-2PK	Multi Rate CopperLink Ethernet Extender Kit: includes one local (L) and one remote (R) CopperLink Ethernet Extender, 120-240VAC
2158/L/EUI	Local Fixed Rate CopperLink Ethernet Extender with RJ-45 connector, 120-240VAC
2158/R/EUI	Remote Fixed Rate CopperLink Ethernet Extender with RJ-45 connector, 120-240VAC
2158/L/TB45/EUI	Local Fixed Rate CopperLink Ethernet Extender with terminal block and RJ45, 120-240VAC
2158/R/TB45/EUI	Remote Fixed Rate CopperLink Ethernet Extender with terminal block and RJ45, 120-240VAC
2158/TB45/EUI-2PK	Fixed Rate CopperLink Ethernet Extender Kit: includes one local (L) and one remote (R) CopperLink Ethernet Extender; with terminal block and RJ45; 120-240VAC
07M2168-UM	User Manual
Power Supplies	
08055DCUI	100-240VAC (+5V reg. DC/2A) Universal Input Adapter.
08055-120-5-1	120 VAC (+5V reg. DC/1A) Input Adapter
12V-PSM	12 VDC Input Adapter
24V-PSM	24 VDC Input Adapter
48V-PSM	48 VDC Input Adapter
Power Cords*	
0805US	American Power Cord
0805EUR	European Power Cord CEE 7
0805UK	United Kingdom Power Cord
0805AUS	Australian Power Cord
0805DEN	Denmark Power Cord
0805FR	France/Belgium Power Cord

Patton Model #	Description
0805IN	India Power Cord
0805IS	Israel Power Cord
0805JAP	Japan Power Cord
0805SW	Switzerland Power Cord

*Only required with optional UI power supply (08055DCUI)

APPENDIX C

COPPERLINK SERIES INTERFACE PIN ASSIGNMENT

C.1 10/100BASE-T INTERFACE

RJ-45

- Pin 1: TX+/RX+
- Pin 2: TX-/RX-
- Pin 3: RX+/TX+
- Pin 6: RX-/TX-
- Pins 4, 5, 7, 8: no connection

C.2 COPPERLINK INTERFACE

RJ-45

- Pin 4: RING
- Pin 5: TIP
- Pins 1, 2, 3, 6, 7, 8: no connection

Terminal Block

See Figure 5 on page 12.

APPENDIX D
DISTANCE CHART, BASED ON 24 AWG (0.5 MM)

Symm Line Rate	Distance in feet (km)
6.25 Mbps	4,500 (1.37)
9.38 Mbps	4,150 (1.26)
* 12.5 Mbps	4,000 (1.22)
16.67 Mbps	3,300 (1.00)

*. This is the only option available for Model 2158.

Asymm Line Rate (DS/US)	Distance in feet (km)
4.17 Mbps/1.56 Mbps (Mode 0)	6,000 (1.83)
9.38 Mbps/1.56 Mbps	5,500 (1.68)
16.67 Mbps/2.34 Mbps	5,000 (1.52)

Note DS/US = Downstream/Upstream.

Notes

Notes

Copyright © 2006
Patton Electronics Company
All Rights Reserved.