

## **UPTIME MAINTENANCE PLANNER**

## 318D and 320D

As Required						
Inspect and clean cooling package	Check and clean cab fresh air filter—if equipped					
Check tire pressure	Check and clean cab recirculation air filter—if equipped					
Check wheel lug nut torque	Inspect and clean fuel tank vent tube					
<ul> <li>Add coolant extender as indicated by COOL-GARD™ II test strip</li> </ul>	os .					
Every 10 Hours or Daily						
Check engine oil level	Check and drain water separator fuel filter					
Check hydraulic reservoir oil level	<ul> <li>Check and drain auxiliary fuel filter and water separator—if equippe</li> </ul>					
Check coolant level						
Every 50 Hours						
• Lubricate boom linkage, cylinder pivot points, and Quik-Tatch™ linkage						
Initial Service - 250 Hours <sup>1</sup>						
Change engine oil and replace filter						
Ever	y 250 Hours					
Take engine oil sample						
Every 500 Hours						
Change engine oil and replace filter	Check chain case oil level					
Replace fuel filter and water separator	Lubricate steering linkage—if equipped					
Replace auxiliary fuel filter and water separator—if equipped	Drain fuel tank sump					
Replace in-line fuel filter	Take hydraulic oil sample					
Replace primary engine air filter	Take diesel fuel sample					
Replace hydraulic oil reservoir breather	Take engine coolant sample					
Replace hydraulic oil filter						
Every 1000 Hours						
Check coolant	Change hydraulic reservoir oil					
Replace secondary engine air filter	Change chain case oil					
Every	/ 6000 Hours					
Drain, flush, and refill cooling system						

PRODUCTIVITY I UPTIME I LOW DAILY OPERATING COSTS



## **UPTIME MAINTENANCE PLANNER**

REQUIRED PARTS								
Description	Part Number	Initial Service - 250 Hours <sup>1</sup>	Every 250 Hours	Every 500 Hours	Every 1000 Hours	Every 6000 Hours		
Engine Oil Filter	RE519626	1		1	1	1		
In-Line Fuel Filter	T257865			1	1	1		
Fuel Filter and Water Separator	RE533026			1	1	1		
Auxiliary Fuel Filter and Water Separator—If Equipped	AT365870			1	1	1		
Hydraulic Oil Reservoir Breather	AT101565			1	1	1		
Hydraulic Oil Filter	AT314164			1	1	1		
Primary Engine Air Filter	AT396133			1	1	1		
Secondary Engine Air Filter	RE282287				1	1		
PLUS-50™ II Engine Oil	TY26669 <sup>2</sup>	9.0 L (2.4 gal)		9.0 L (2.4 gal)	9.0 L (2.4 gal)	9.0 L (2.4 gal)		
PLUS-50™ II Hydraulic & Hydrostatic Oil	TY26669 <sup>2</sup>				19.0 L (5.0 gal)	19.0 L (5.0 gal)		
PLUS-50™ II Chain Case Oil (per side)	TY26669 <sup>2</sup>				16.1 L (4.25 gal)	16.1 L (4.25 gal)		
COOL-GARD™ II Pre-Mix	TY26575					9.3 L (2.5 gal)		
Coolant Extender	TY26603	As Required						
Fluid Analysis Kits <sup>3</sup>	•	•		-				
Diesel Engine Oil	AT317904		1	1	1	1		
Hydraulic & Hydrostatic Oil	AT303189			1	1	1		
Diesel Fuel	AT180344			1	1	1		
Engine Coolant	AT183016			1	1	1		
COOL-GARD™ II Test Strips	TY26605				1	1		

<sup>&</sup>lt;sup>1</sup> Perform initial service once after the first 250 hours of operation.

<sup>&</sup>lt;sup>2</sup> See operator's manual for recommended oil type and oil viscosities based on operating temperatures.

<sup>&</sup>lt;sup>3</sup> Based on fluid analysis results, intervals may need to be adjusted for operating conditions. Consult your local John Deere dealer.