



LINEA 2000

Audio entrance panel

342911-342921


Description

2 WIRE system audio pushbutton panel.
Wall mounted. Green LED backlit name plate.
One and two-family version available.

Technical data

Power supply from SCS BUS: 18 - 27 Vdc
Stand by absorption: 30 mA
Max. operating absorption: 65 mA
Operating temperature: (-25) - (+70)°C

Dimensional data

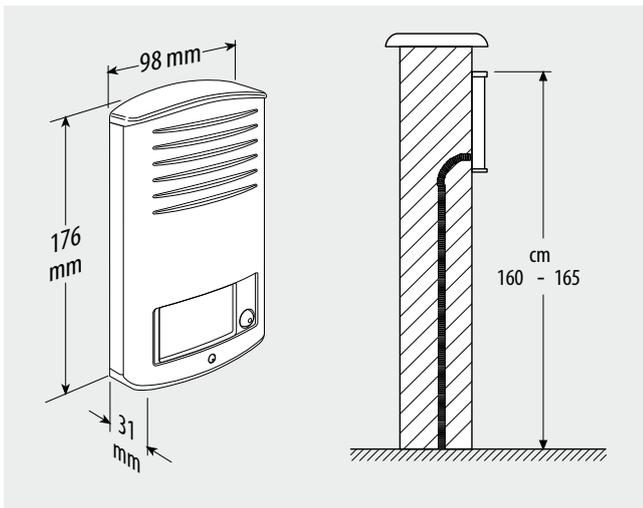

Configuration

The device must be configured (only physically) as follows:


P - entrance panel number

The configurator in socket P of the speaker module assigns to this a recognition number inside the system.

The numbering of the entrance panels must always start from P=0. The entrance panel configured with P=0 must be a common (or main) entrance panel.

N - call number

Assigns the correspondence between the entrance panel pushbuttons and the audio handsets or video handsets.

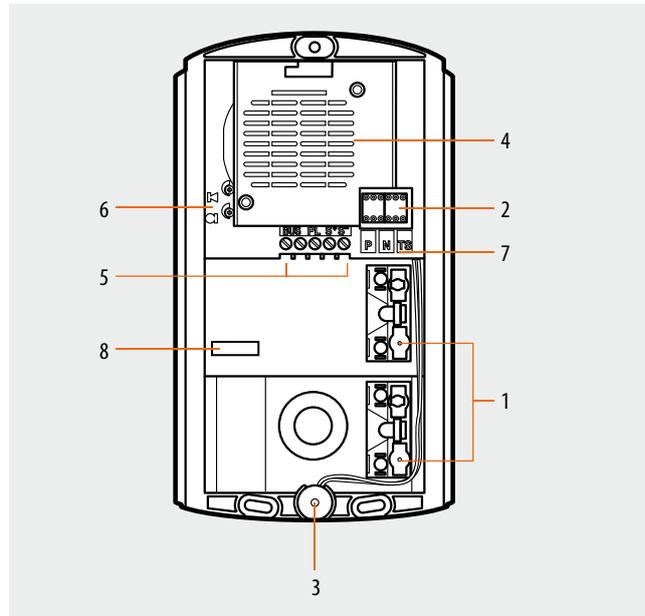

Legend

- 1 - Call keys
- 2 - Configurator socket
- 3 - Microphone
- 4 - Loudspeaker
- 5 - Clamps for BUS and door lock connection: the module allows to control an electric door lock directly connected to the clamps S+ S- (18 V 4 A impulsive - 250 mA holding current 30 Ohm max)
- 6 - Microphone and loudspeaker volume adjustment
- 7 - JUMPER entrance panel call sound exclusion (remove the jumper to enable)

T - Door lock control time delay

Configurator number	1	2	3	4*	5	6	7
0= No configurator							
4 sec.	1 sec.	2 sec.	3 sec.	as pushbutt.	6 sec.	8 sec.	10 sec.

* **Operation as pushbutton for 10 sec. max.**, after which standby mode is activated. To extend operation time over 10 seconds, use actuator item 346200 configured with **MOD=5**.

S - type of call signal

The configuration of S determines the call tone of SPRINT handsets. One can thus differentiate the calls from different entrance panels.

Table for SPRINT handset call signal

Configurator	0	1	2	3
Type of bell	2-tone	2-tone	2-tone	One-tone
	1200Hz	1200Hz	1200Hz	1200Hz
	600Hz	0 Hz	2400Hz	

For the SWING, PIVOT, POLYX and AXOLUTE handsets, the **S configurator** associates the entrance panel to the bell programmed in the same apartment. It is possible to chose between 16 different bells. In one-family systems, **S=9 configures the general call** and the handsets ring, the same as with the S=0.